

BAKERS CART BC1




If you need assistance, please call 1-877-ENCLUME
Enclume Design Products
24 Colwell Street, Port Hadlock, WA 98339

Enclosed you will find everything needed for the assembly and use of your Baker's Cart. Two people make assembly and installation easier.

The parts and hardware included are:

- 2 Rectangular upright supports
- 1 Butcher block work surface
- 1 Butcher block top shelf
- 2 Shelf rims
- 2 Cart handles
- 2 Grid shelves
- 16 $\frac{3}{8}$ " x $\frac{1}{2}$ " Button head screws
- 6 $\frac{3}{8}$ " x $\frac{1}{4}$ " Button head screws
- 4 Caster Wheels
- 1 Utensil Bar
- 1 $\frac{5}{32}$ " Allen wrench (small)
- 1 $\frac{7}{32}$ " Allen wrench
- 4 Utensil hooks
- 10 $\frac{1}{4}$ " x $\frac{7}{8}$ " Button head screws
- 1 Steel trim band
- 2 Sets of upper shelf supports

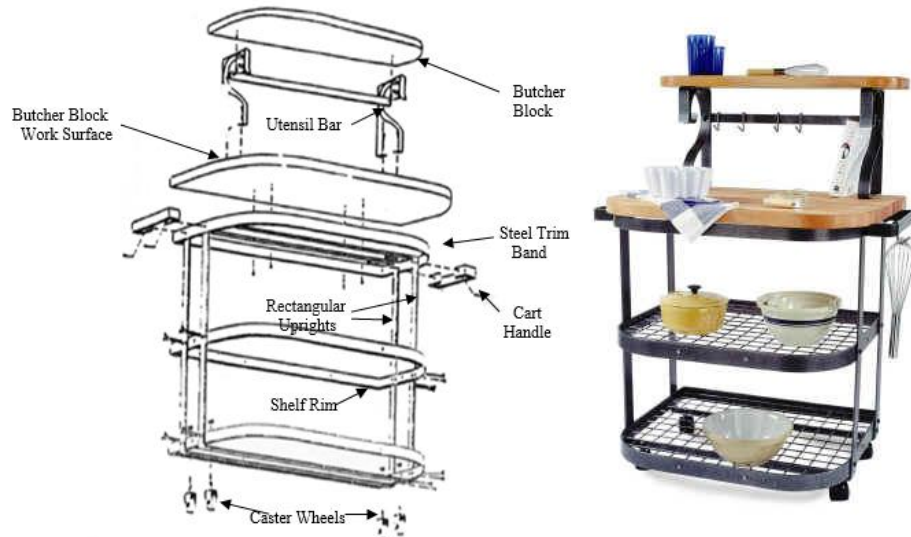

Assembly Instructions

- 1) Stand the rectangular uprights on the floor in the correct relationship to one another, about 11" apart. The tops of the rectangular uprights have slots. The bottoms of the rectangular uprights have round threaded holes.
- 2) Slide one of the shelf rims inside the rectangular uprights. Attach the rim to the uprights using 8 $\frac{1}{2}$ " Button head screws. The button heads should be inserted from the outside to the inside with the head of the screw visible from the outside of the Bakers Cart. **Leave the screws loose.**
- 3) Follow the same procedure as in step 2, using the remaining 8 $\frac{1}{2}$ " button head screws. **Leave the screws loose.**
- 4) The steel trim band has a total of four unthreaded holes along the sides. Place the band OVER the top of the rectangular uprights. Make sure the rounded side of the band is on the front side of the unit. Attach the cart handles and the trim band to the rectangular uprights using 4 of the $\frac{3}{8}$ " button head screws, going from the inside of the cart handle through the outside of the steel trim band and rectangular upright. **Leave the screws loose.**
- 5) Square up the entire unit using a carpenter's square. **Tighten down all screws.**
- 6) Gently tilt unit backwards until it is lying flat on its back. Attach the four caster wheels to the bottom of the rectangular uprights. Make sure the acorn nuts are secured tightly. **Lock the caster wheels** by flipping the tab on each wheel in the down position.
- 7) Gently place the unit back into the upright position.
- 8) Place the butcher block work surface on top of the assembled unit with the rough surface facing down. Line up the mounting holes in the butcher block with the slots in the rectangular uprights. Make sure that the work surface is flush with the steel trim band at the back of the unit. Secure tightly in place with four $\frac{1}{4}$ " x $\frac{7}{8}$ " button head screws and the small Allen wrench.
- 9) Now place the grid shelves into the shelf rims. The grid shelf should rest upon the rivets assembled into each shelf rim.
- 10) Place the utensil bar on the backside of the two sets of shelf supports. Secure in place using two $\frac{3}{8}$ " button head screws. Make sure the button head on the screws are showing from the front of the unit. Leave the screws somewhat loose.
- 11) Place the shelf supports on the top of the work surface, aligning the holes on the bottom of the shelf supports with the holes on the upper surface of the butcher block. Attach the four support pieces with four $\frac{1}{4}$ " x $\frac{7}{8}$ " button head screws using the smaller Allen wrench. **Leave screws loose.**
- 12) Place the butcher block top shelf on top of the shelf supports, aligning the mounting holes with the slots on the top of the shelf supports. Secure in place with the remaining two $\frac{1}{4}$ " x $\frac{7}{8}$ " button head screws. Make sure all pieces are square and flush with the back of the unit. **Tighten all remaining screws.** Your Bakers Cart is now fully assembled. Release the locks on the wheels to move.
- 13) The butcher block surfaces have been penetrated with natural mineral oil. To maintain their finish we recommend a periodic application of mineral oil rubbed into all wooden surfaces.

WARNING: It is important that your Baker's cart is assembled correctly. If the unit is assembled or used incorrectly, it could become unstable and collapse, possibly causing injury.

LIMITED WARRANTY: This product is warranted to be free of material defects, other than that from normal use, for a period of five years from the date of purchase. Customer's exclusive remedy shall be the repair or replacement of the defective product and shall be subject to the following conditions: (1) notice of any defect is received by Enclume within the warranty period and (2) customer returns the defective product to Enclume Design Products, 24 Colwell St., Port Hadlock, WA 98339, postage prepaid within 20 days following a return authorization number (which may be obtained by telephoning the number at the top of this instructions) being provided to the customer by Enclume. There are no other warranties, expressed or implied. THERE ARE NO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ENCLUME SPECIFICALLY DISCLAIMS ANY AND ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE PURCHASE OR USE OF ENCLUME'S PRODUCTS.