 


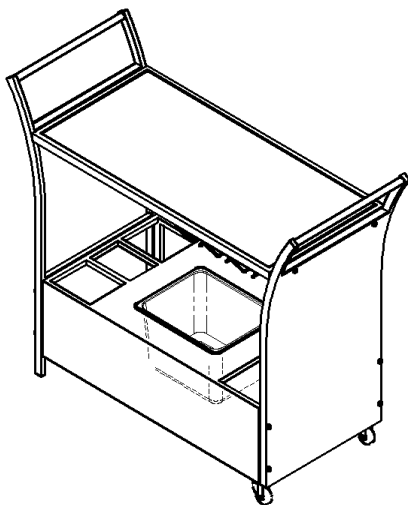







Assembly Instructions

      Caution: You must read this before you proceed


 

 



 
Trolley

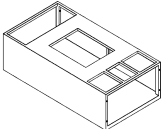

Parts List


Label	Picture	Description	QTY
A		Front Panel	1
B		Back Panel With Legs	1
C		Bottom Basket	1
D		Top Shelf Frame (with preassembled Glass suction cups)	1
E		Glass	1
F		Wheel	2
G		Wine Glass Rack	1
H		Ice Bucket	1

Hardware

Label	Picture	Description	QTY
I		Wrench	1
J		Spring Washer	3
K		Washer (Small)	13
L		Bolt (M6*45mm)	13
M		Allen Key	1
N		Allen Key (With Cross Screwdriver)	1
O		Bolt (M5*20mm)	7
P		Washer (Big)	3

Assembly Preparation

 Before Beginning Assembly:

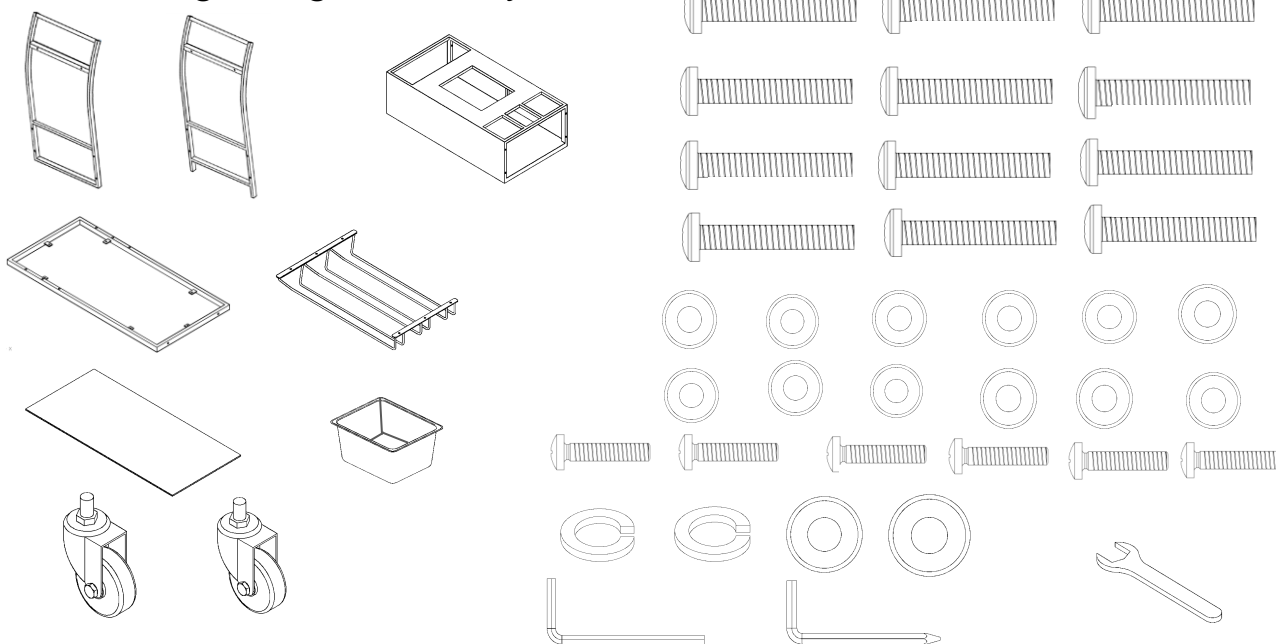

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

Assembly Steps

Parts Introduction

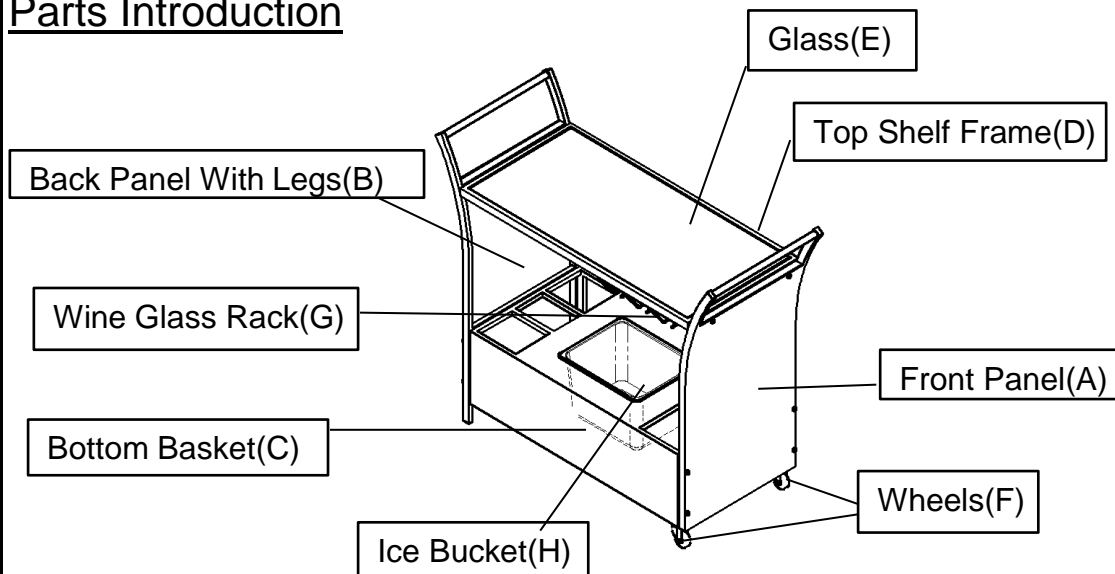


 Step 1

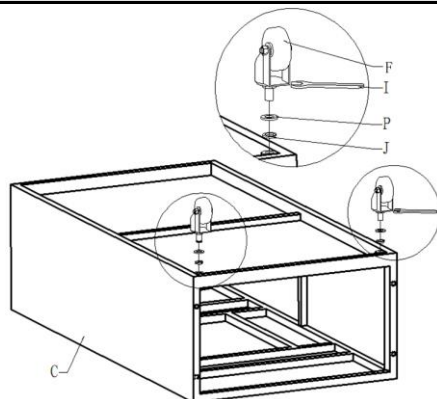

Open the carton and place all the parts onto a clean, non-marring surface.
Put Bottom Basket(C) upside down.
Turn Wheels(F), fully in, into the two mounting positions using Washer(P) and Spring Washer(J) with Wrench(I) as pictured above.

 
Step 2

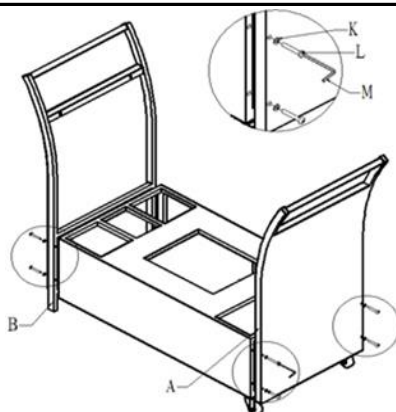

Attach Back Panel With Legs(B) to Bottom Basket(C) using Washers(K) and Bolts(L) with Allen Key(M) as shown in the picture.
Attach Front Panel(A) to Bottom Basket(C) using Washers(K) and Bolts(L) with Allen Key(M) as pictured above.

Note: Please keep Front Panel(A) and the Wheels at the same end.
Loosely tighten the Bolts.

 Step 3

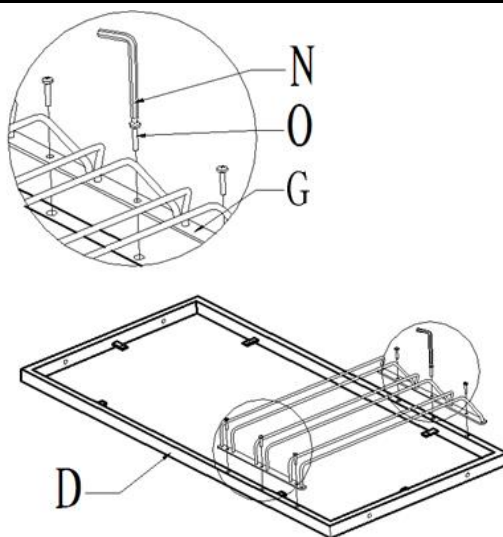

Place the Top Shelf Frame(D) face down.
Attach Wine Glass Rack(G) to Top Shelf Frame(D) using Bolts(O) with Allen Key(N).
Fully and Securely tighten the Bolts of the Glass Rack to the Shelf Frame.

Step 4



Attach Top Shelf Frame(D) between Back Panel With Legs(B) and Front Panel(A) using Washers(K) and Bolts(L) with Allen Key(M) as pictured above.

 
Note: Please keep Wine Glass Rack(G) at the same end with the Front Panel(A).

Test for levelness.

Now in a sequential manner, proceed to tighten all Bolts at all joints.


Note: DO NOT fully tighten a BOLT in one go and then move on to the next. Rather, in a sequential manner, gradually tighten each Bolt until all Bolts are evenly secured. This methodology will ensure maximum evenness once all Bolts are fully tightened.

Step 5

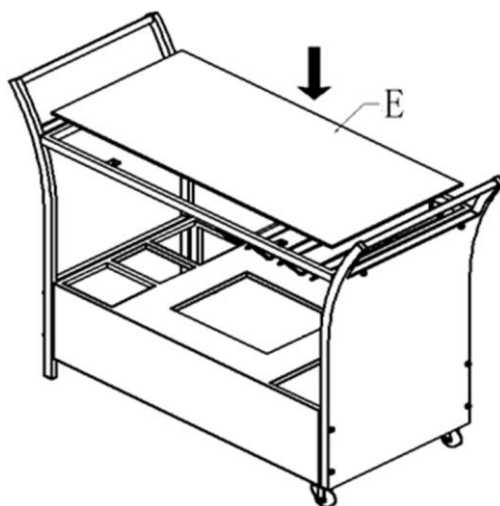


Carefully place Glass(E) on the Top Shelf Frame(D) with preattached suction cups.

  Step 6

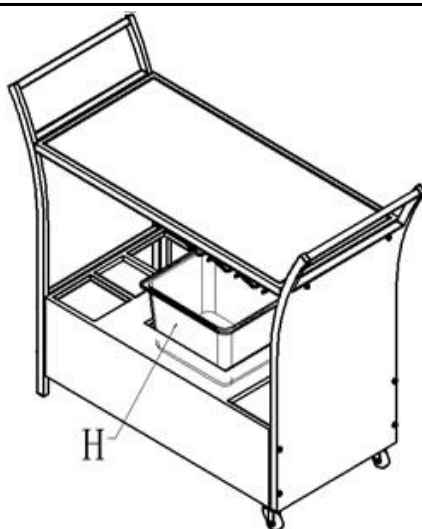





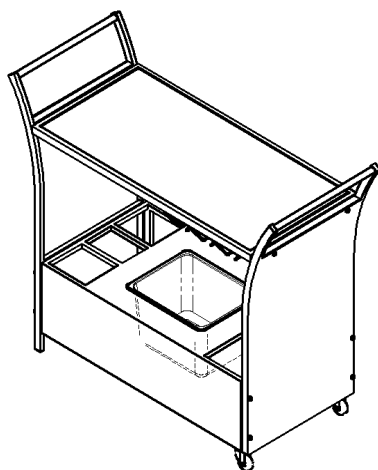















Place Ice Bucket(H) into the Bottom Basket(C).

Step 7



Your Trolley is ready for use.

Care & Maintenance

-   • Do not put hot items directly on furniture surface
 -   • Do not clean furniture with harsh cleansers or polish.
 -   • To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
 -   • Children should not climb or jump on the furniture.
 -   • Do not write on furniture without a padded barrier to protect the surface.
 -   • To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
 -   • Not for commercial use. For residential use only .
 -   • Stains may be removed with mild soap solution and damp cloth.
 -   • Keep away from sources of ignition.
-
-   • Dust and pick-up spills using a clean, non-colored, lint-free cloth .

What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

