

Instruction steps

BAAI012BG




STEP 1

1. Take out the tent and spread it flat on the ground. Secure the four corners and two middle points with six ground nails.



STEP 2


2. Adjust the inflatable valve to the closed state, connect the pump to the air valve, and inflate the first and the second air column to 80%.

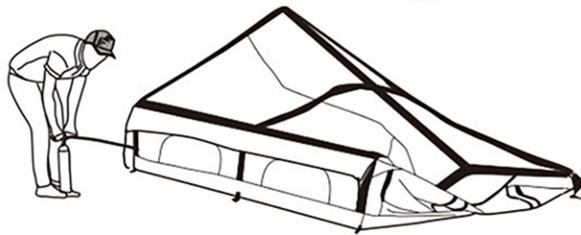

3. Inflate the third column to saturation, then fill the first two column to 100%.



STEP 3

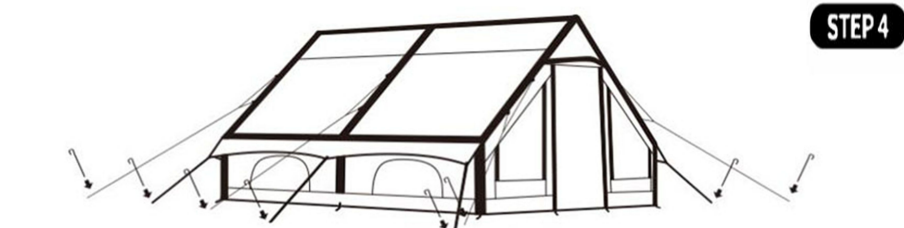

STEP 4

4. Secure the tent with ground nails and windbreak ropes.