


Assembly Instructions

Instructions for remote control

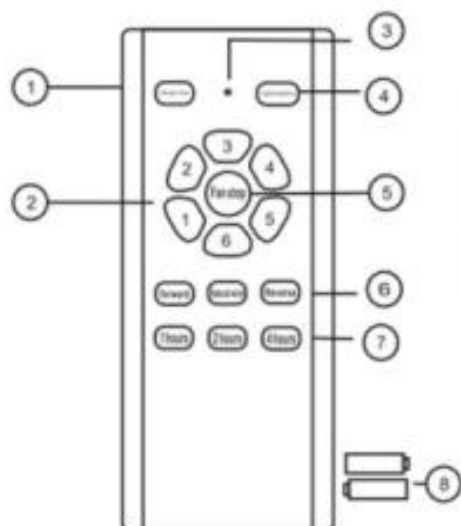

1. Turn off all loads
2. Fan speed control
3. LED indicator light
4. Turn on the light
5. Fan off
6. Fan positive and negative rotation control
7. Fan timing control
8. The remote control USES a pair of 1.5v batteries

Tips

1. The remote control and the receiver are matched for learning codes. Within one minute of this same point of the controller, the remote control is set to the controller; Press the total key About 5 seconds, in the heard a drop, that learning success, can be used normally; (note: power on for more than ---- minutes without learning)
2. If the remote control cannot control the controller, please check whether the battery is loaded correctly;
3. Low battery voltage will affect the remote control distance and may cause the remote control malfunction. Please replace the battery in time
4. When not in use for a long time, please take out the battery of the remote control;
5. The maximum supporting light is 100W;
6. During installation, please do not press the antenna (and other wires) on the ceiling cover of the fan, which may cause wire breakage and short circuit.

Wall lamp remote control instructions



Your fixture is now assembled and ready to use.