


 







# ELEVATED ROUND FIRE PIT BOWL

Read the assembly instructions carefully and follow the care instructions. Save these instructions for future reference.  
**Assemble components on a soft, clean surface to avoid scratching or damaging the finish.**



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

No.	PARTS		QTY.
A		Fire Bowl	1
B		Leg	4
C		Upper Ring (large)	1
D		Lower Ring (small)	1
E		M6x10mm Bolt	4
F		M6x16mm Bolt	4
G		Log Grate	1
H		Spark Screen	1
I		Poker/Screen Lifter	1

## HELPFUL HINTS

TOOLS REQUIRED (not included)	
	Phillips Screwdriver

## WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.



# ASSEMBLY

## STEP 1

B: 4

C: 1

E: 4



Place Upper Ring (C) on the ground. Align four Legs (B) with the upper ring; hand-tighten four M6x10mm Bolts (E). **Hand-tighten only!**

## STEP 2

D: 1

F: 4



Align Lower Ring (D) with the mounting holes in the middle of the legs; hand-tighten four M6x16mm Bolts (F).

## STEP 3



Tighten all bolts using a Phillips screwdriver (not included). Turn the assembled base upright.

## STEP 4

A: 1



Place Fire Bowl (A) onto the assembled base.

## STEP 5

G: 1



Place Log Grate (G) into the fire bowl.

## STEP 6

H: 1



Place Spark Screen (H) onto the fire bowl.



# CARE & MAINTENANCE

**SAFE USE:** The screen will become extremely hot while in use. Always use the poker/lifter tool or heat-resistant gloves when handling the screen; if using gloves, ensure they are designed for handling hot metal.

**EXPOSURE & MAINTENANCE:** Long-term exposure to high-intensity heat can cause the mesh screen to warp and the high-temperature paint to flake or burn off from the steel. If the paint burns off and the steel is exposed to moisture, it will rust. As with any outdoor steel product, periodic maintenance is required to maintain integrity and appearance. Remove rust and refinish with a paint that is suitable for high-temperature surfaces; follow the paint manufacturer's instructions and ensure the paint is completely dry before using the screen again.

**CLEANING:** All fire pits must be cleaned and inspected periodically. Cleaning out ashes between each use is recommended. Do not allow ash to accumulate in the bottom of the pit. Before cleaning, make sure the metal is completely cool. Never drop your fire pit, as any breakage could cause permanent damage.

**AVOID ACCELERANTS:** Never use accelerants to start a fire; this is dangerous and can damage your fire pit.

**AVOID PLASTIC:** Never use any plastic materials in or nearby a fire pit. Plastic residue is very difficult to remove. Additionally, the emissions from burning plastic are toxic.

**USE ON A SAFE SURFACE:** Always use fire pits on a smooth, non-combustible surface; do not use them on a wood deck or other combustible surfaces like dry grass, leaves, mulch, etc. Also, do not use fire pits near combustible structures like vinyl or wood siding.

**COVER AND STORE:** Ensure the fire pit is completely cool before covering. Ashes can remain hot long after a fire dies down. We highly recommend cleaning the fire pit before covering it. Do not allow the fire pit to be exposed to water. The manufacturer is not liable for damage resulting from use and/or environmental conditions.

Store in a dry location; this will protect it from the effects of weather elements.

**EXTINGUISH:** Let fires die down gradually, do not use water to put out a fire as this may cause the metal to crack from the sudden drop in temperature.

## SAFETY STATEMENTS & WARNINGS

- For outdoor use only. Never use this product in an enclosed area.
- Always follow local laws and regulations when using wood-burning fire pits.
- Exercise the same care and precautions as you would with an open fire.
- Keep unit a safe distance away from buildings, balconies, or overhangs when in use.
- Only use this fire pit on a level, non-combustible surface.
- Do not use on or near combustible surfaces or structures such as wood decks, dry leaves or grass, mulch, vinyl or wood siding, etc.
- Keep away from all combustible materials including gasoline and other flammable liquids and vapors.
- Never use accelerants such as, but not limited to, gasoline, alcohol, paint thinners, kerosene, as this may cause serious injury or product damage.
- The fire pit becomes very hot when in use. Use the lid lifter to handle the hot screen. Let the unit completely cool before cleaning or moving.
- Keep out of reach of children.
- Do not overfill or use this unit to burn leaves or trash.
- Avoid using any fire pit during dry or windy conditions.
- Never leave unit unattended while hot or in use.
- Always supervise children and pets when the fire pit is in use.
- DO NOT USE CHEMICAL-BASED CLEANERS as this may damage the product and/or ignite a flame during the next use.
- Extinguish the fire properly before leaving. Use a fire extinguisher or a bucket of sand to smother the fire if necessary. Do not use water to extinguish hot fires or embers as this may cause serious injury and may damage the product.
- Ashes can remain hot for a long time after fire is extinguished. Dispose of cold ashes properly.
- Ensure the unit is completely cool before covering, failure to do so will damage the cover and the unit.

**Contact the local authorities regarding possible burn restrictions before using this product.**

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

