



Screw the rods onto the connector.

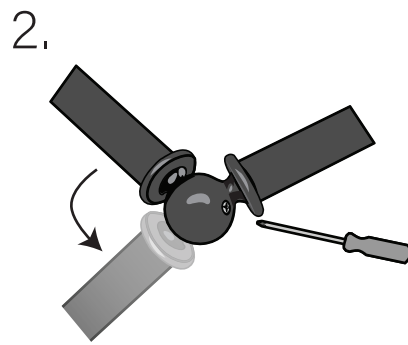

Loosen the screw on the connector and adjust the rods to the desired angle.

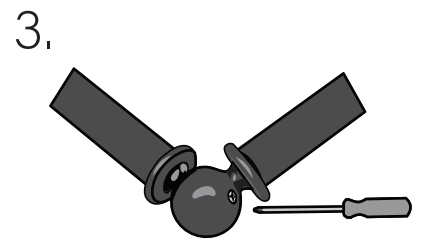

Tighten the screw to lock the rods' position.