

Three Head LED Flexible Floor Lamp



Thank you for purchasing high quality LED floor lamp with three heads that provides clearer and brighter natural light and is perfect for work and reading.

ASSEMBLY INSTRUCTIONS

Please carefully read all instructions before starting assembly:

1. Remove and set aside all lamp parts from the carton.
2. Thread Adaptor Cord of Base Part through Base Pole; tightly twist Base Pole clockwise into Base Part. See illustration A.
3. Thread Power Supply Cord of Lamp Head Part through Upper Pole; tightly twist Upper Pole clockwise into Lamp Head Part. Then thread Power Supply Cord through Middle Pole; tightly twist Middle pole clockwise into Upper Pole. See Illustration B.
4. Connect the two ends of Power Supply Cord & Adaptor Cord together using the attached Locking Connectors. See Illustration C.
5. Carefully tuck excess Power Supply Cord & Adaptor Cord in the Base Pole. DO NOT CUT OR SHORTEN Internal Cords. Then tightly twist Middle Pole clockwise into Base Pole.
6. Touch & Dimmer switch is on the connection part. Touch & Dimmer switch has four light modes which are little light, low light, middle light, and high light.

* LED Floor Lamp: Max. wattage is 15.5W;
Max. Lumen is 1100 Lm.

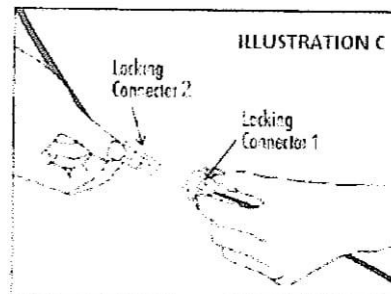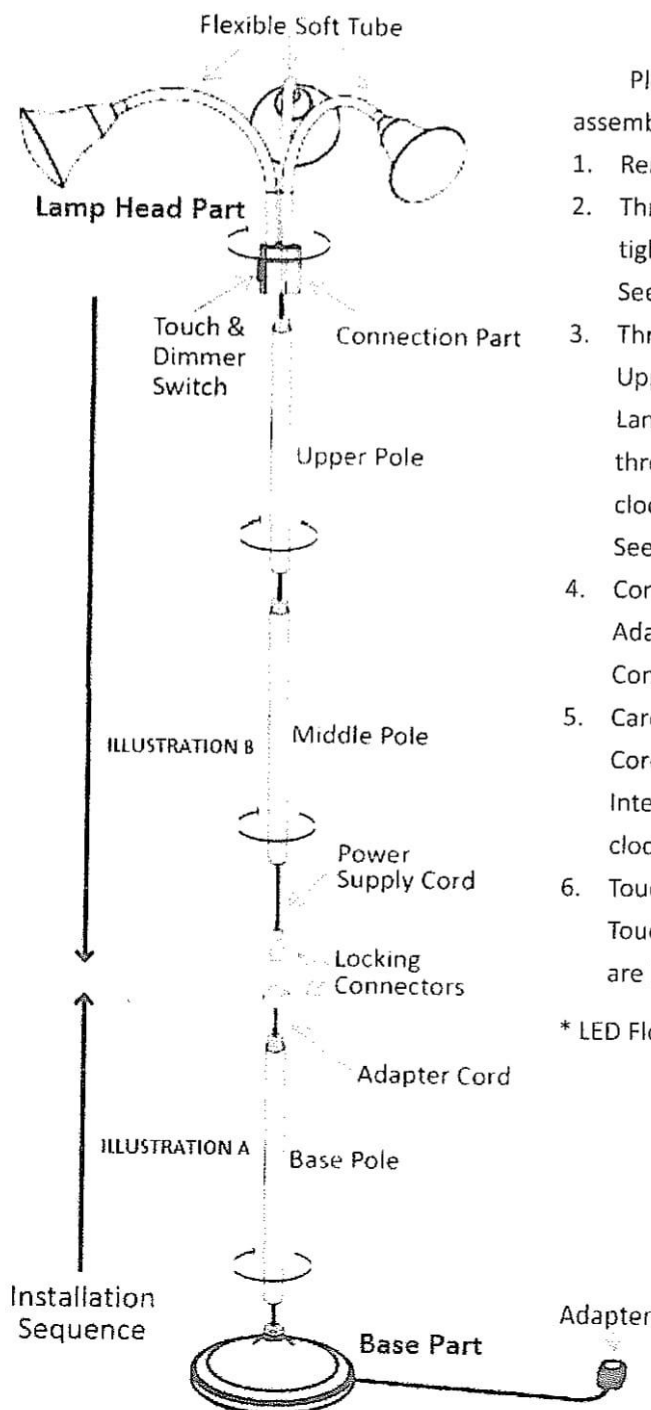

IMPORTANT SAFEGUARDS:

To ensure that your floor lamp gives long-lasting enjoyment, please observe the following safety instructions. Please save this instruction manual.

- Before plugging in, first ensure that the voltage indicated on the rating label corresponds to the main voltage in your home.
- This floor lamp conforms to all quality and safety standards.
- The manufacturer is not responsible for damage to property and persons, caused by incorrect use of the unit.

USING YOUR FLOOR LAMP:

- Do not use the floor lamp outdoors.
- Unpack and place the floor lamp on a flat surface.
- Plug into the power supply.
- Adjust the soft tube to the location you want.
- Press the switch button to use the floor lamp.

CLEANING:

- Before cleaning always unplug the floor lamp from the power supply.
- Wipe the base, shade and soft tube with damp cloth.
- Do not immerse the appliance in water. Do not use detergent or abrasives for cleaning.