

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.


NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Weight Capacity : 300 lbs

Warning : Do not stand on chair

Warning : Do not over torque bolts / screws

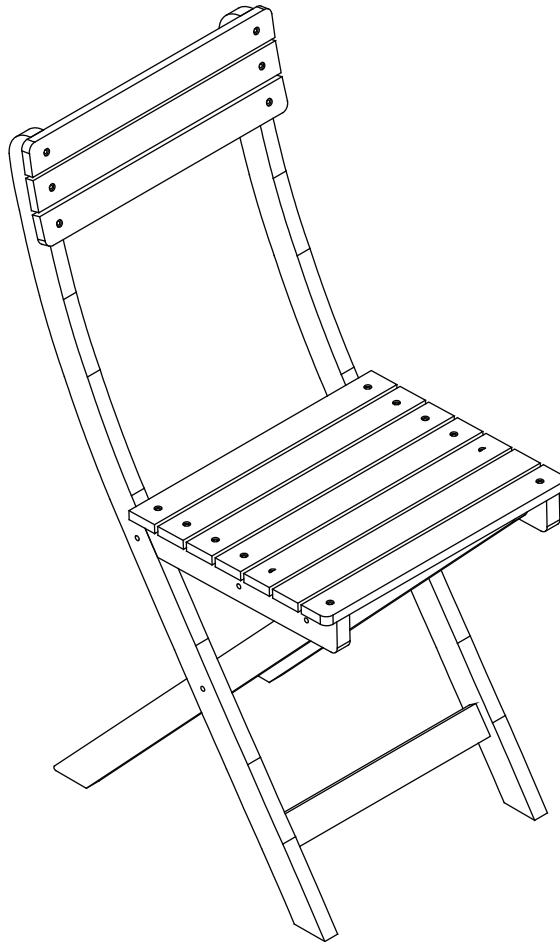

Product Dimensions: 14.96" W x 18.89" D x 31.1" H


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

1

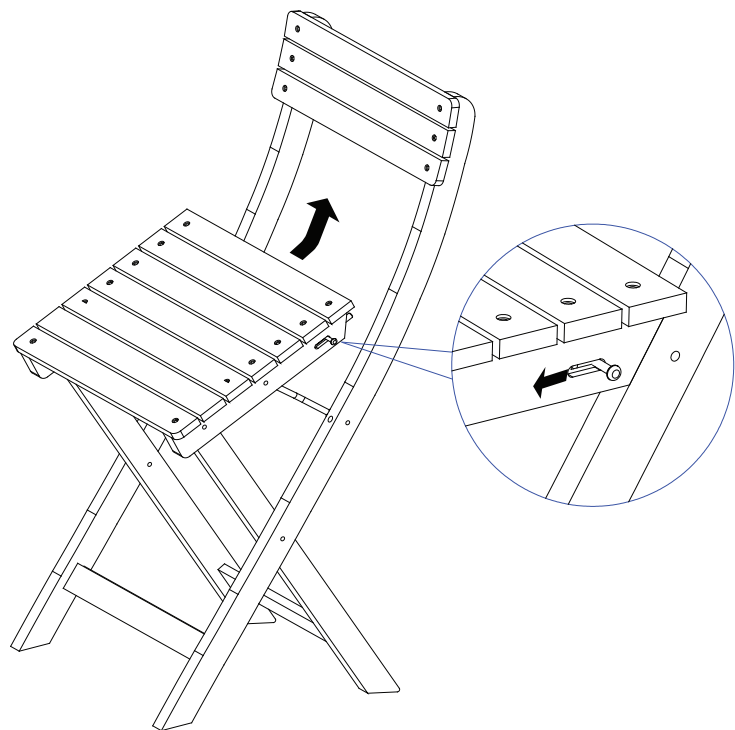


Step 1

To close:

Pull the Seat up and fold Iron Leg Frame as indicated by the arrows, by hand, until the Chair folds shut.

Note: There is a iron latch under the Seat Frame, pull this up by hand to lock/unlock the iron dowel into position.

2

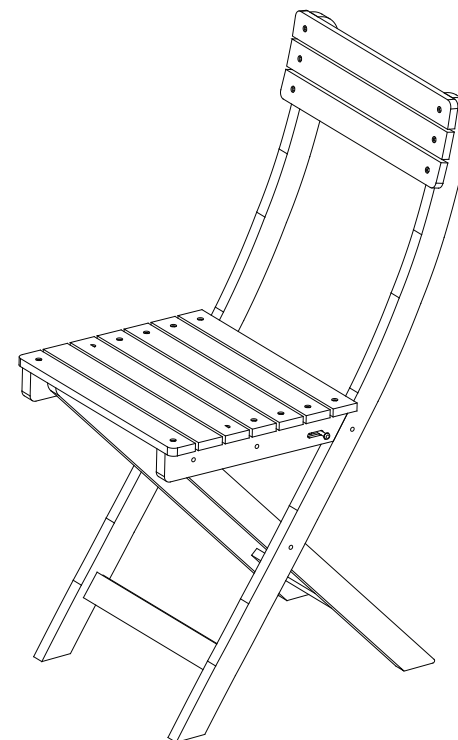

Step 2

To open:

Pull the Seat forward with one hand and steady the Chair with your other hand. Unfold Leg Frame as indicated by the arrows, until the Chair folds out and locks into position.

Note: There is a iron latch under the Seat Frame, pull this up by hand to lock/unlock the iron dowel into position.