 
 
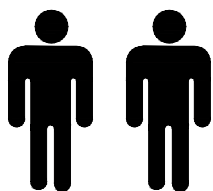 



Installation Instruction

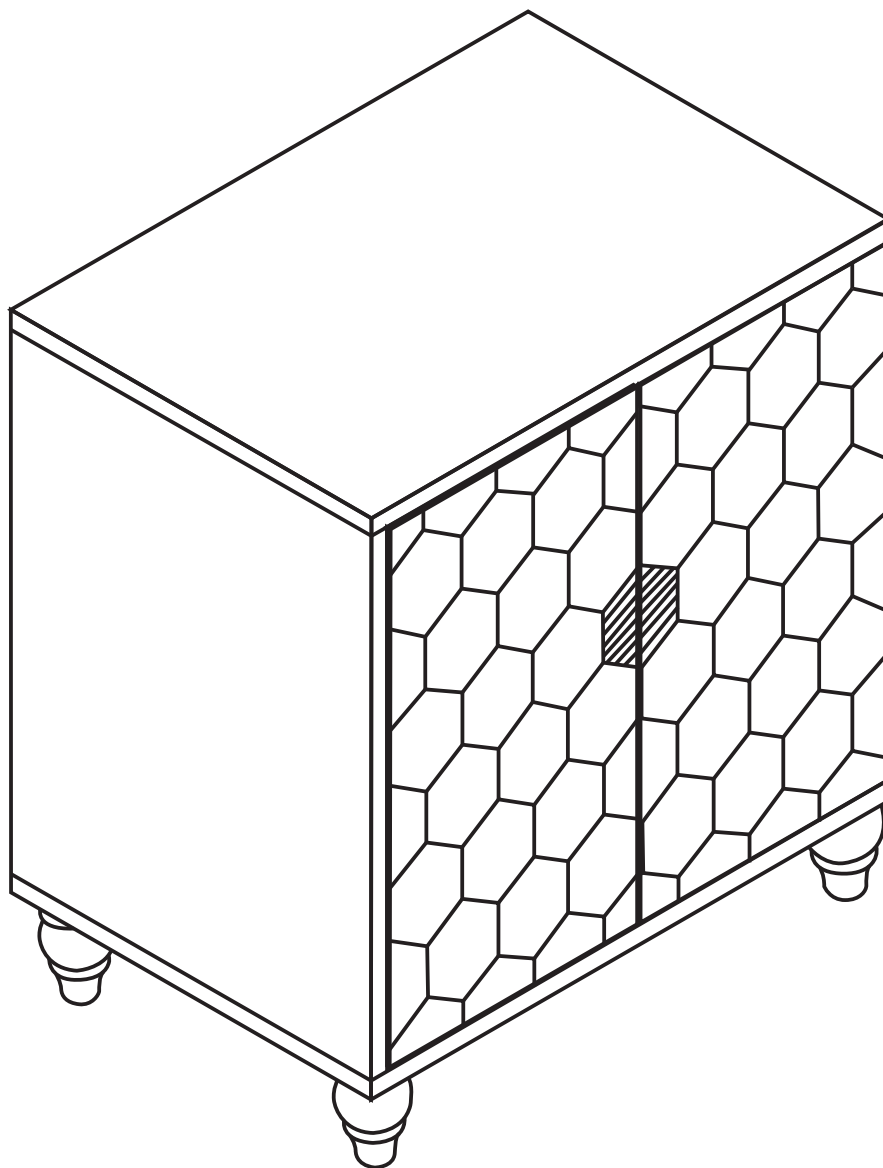




2PERS.

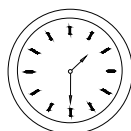

    
90 MIN



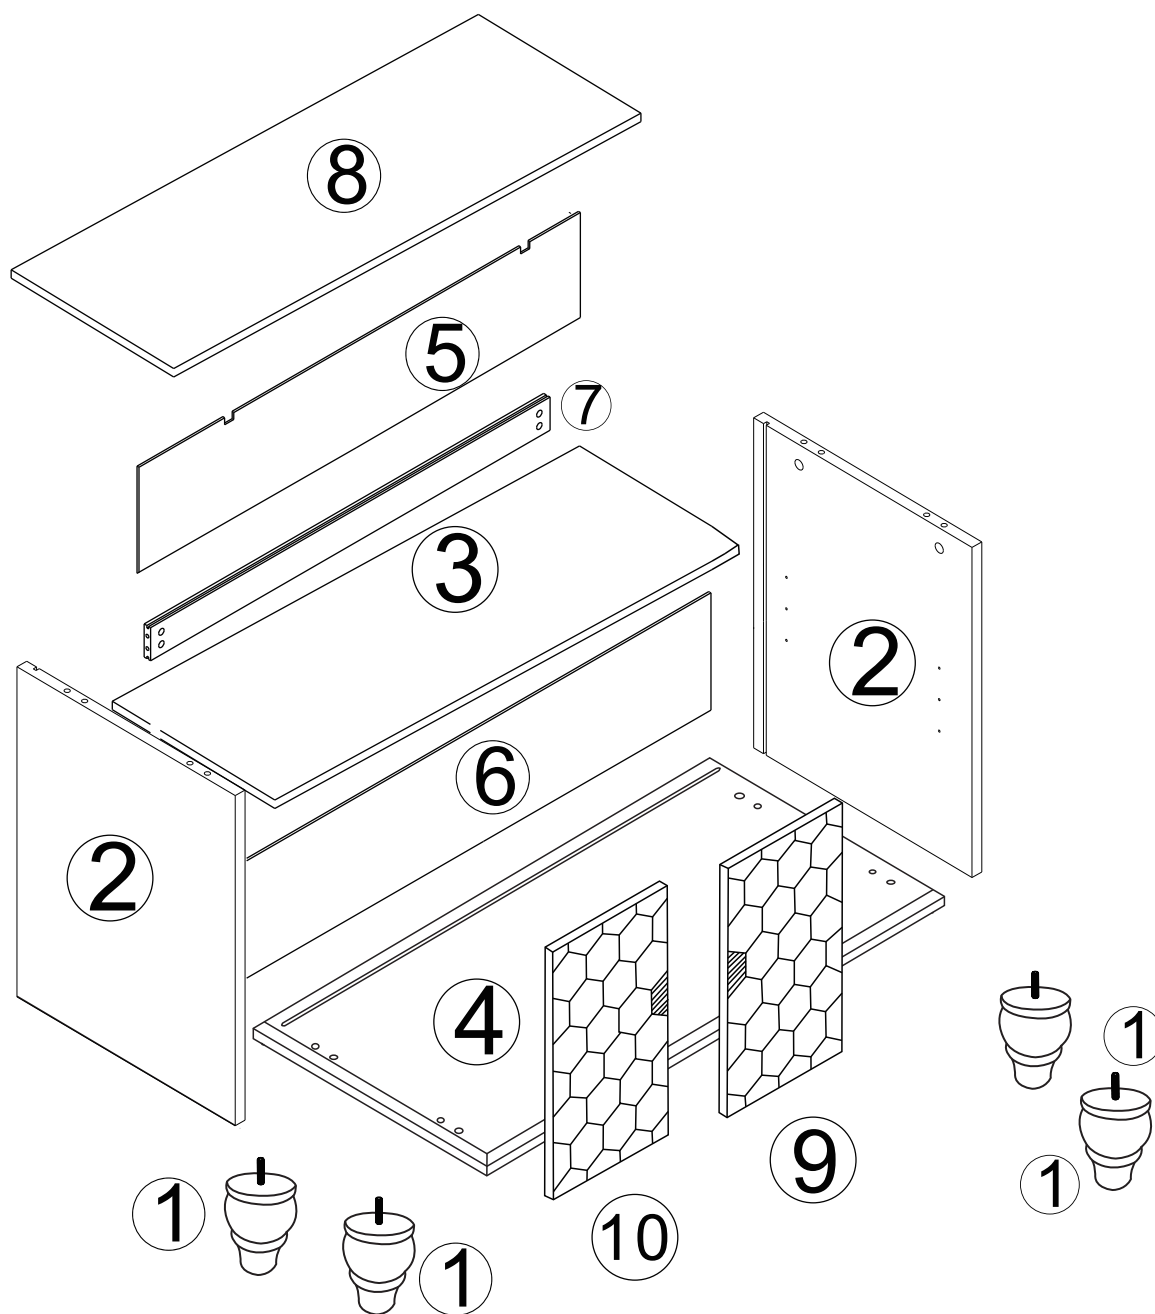


A  12 pcs	B  12 pcs	C  8 pcs	D  2 pcs	E  1 pc	F  24 pcs
G  4 pcs	H  4 pcs	I  2 pcs	K  1 pc	L  8 pcs	M  8 pcs
N  4 pcs					

 
Step 1:

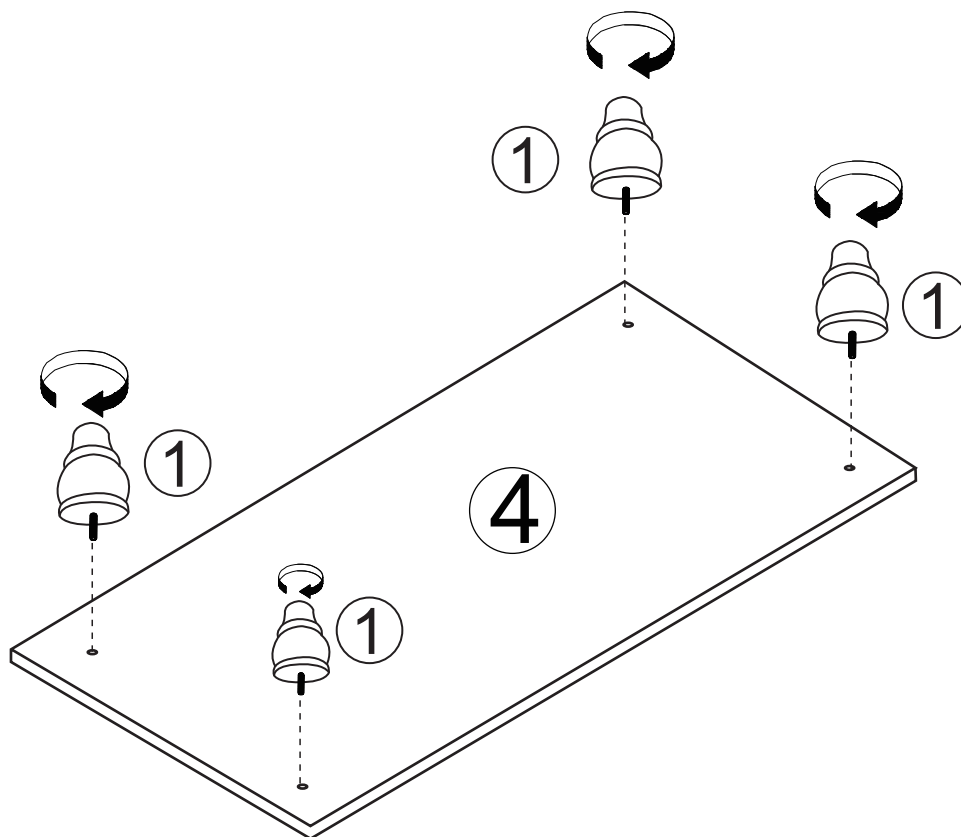

 
Step 2:

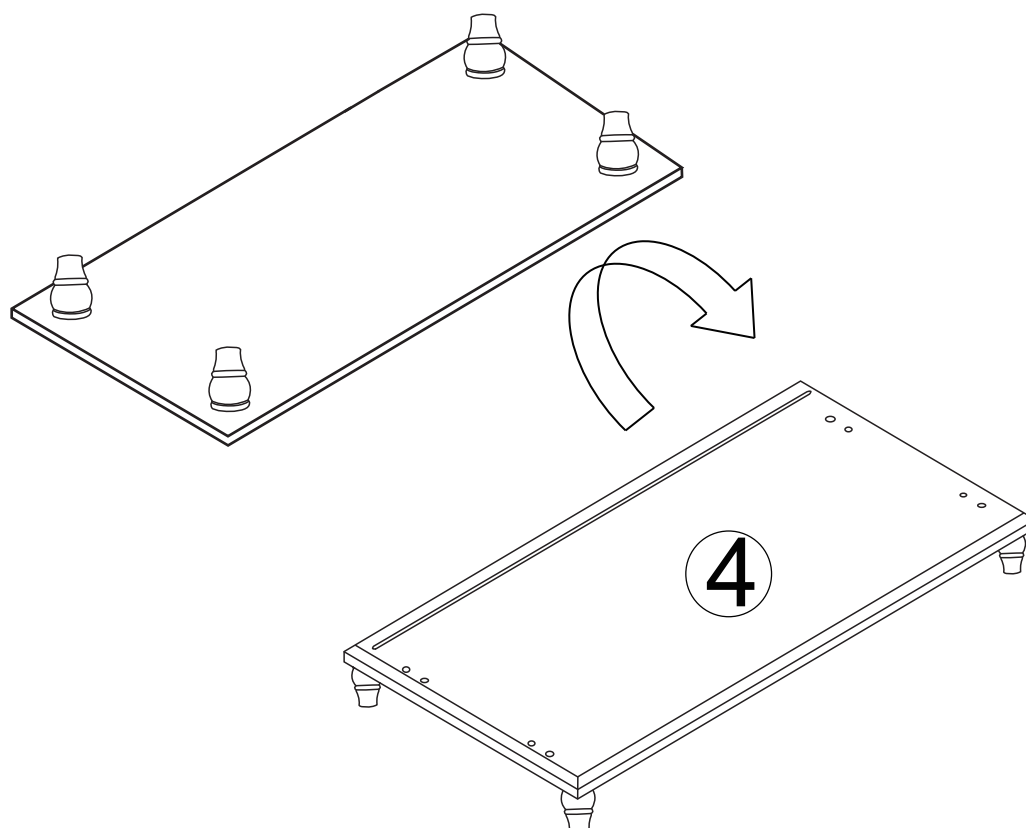


 
Step 3:

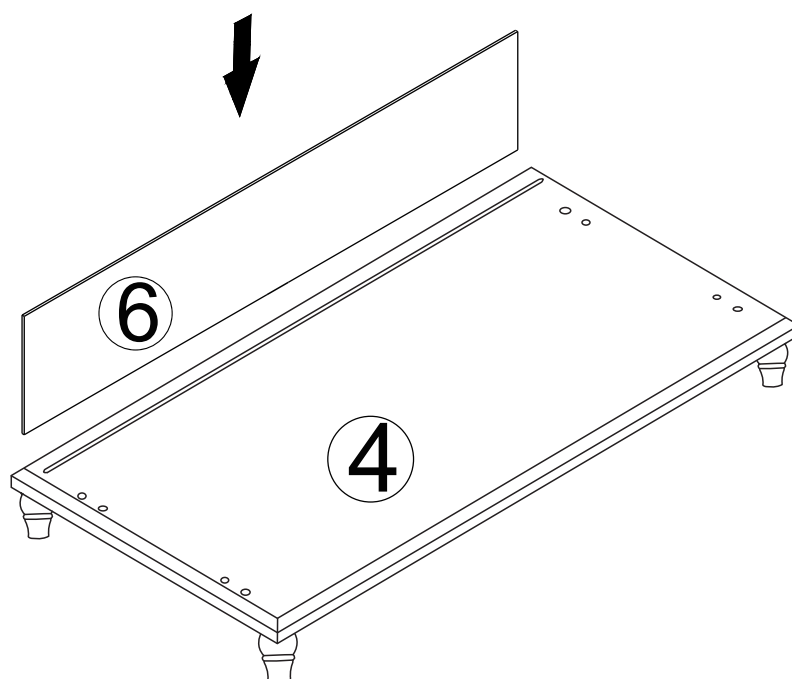



 
Step 4:

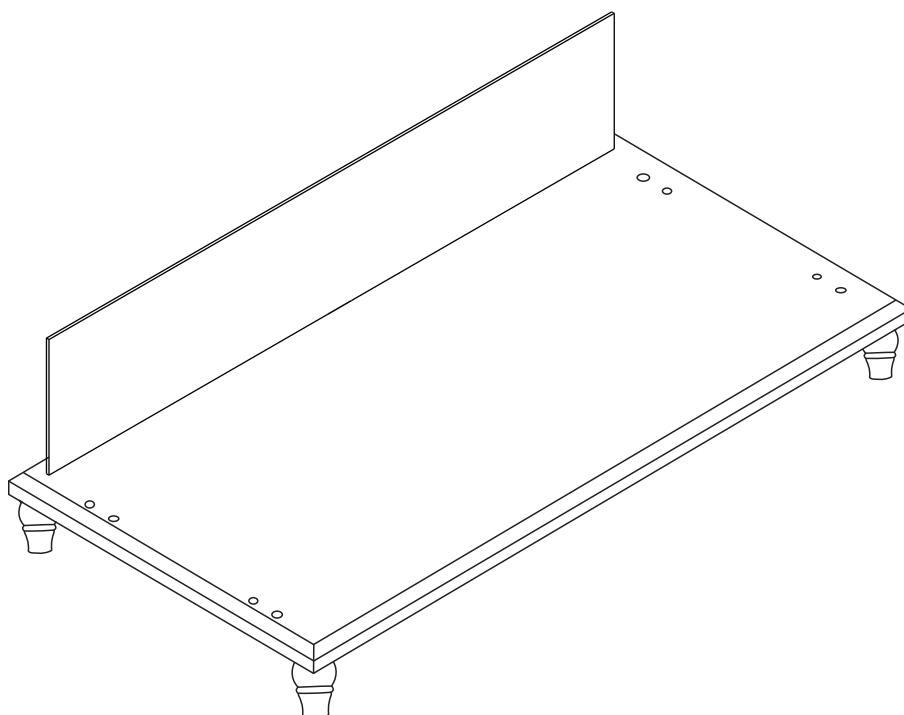

  
Step 5:

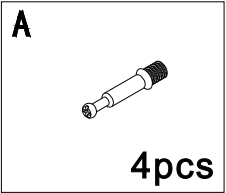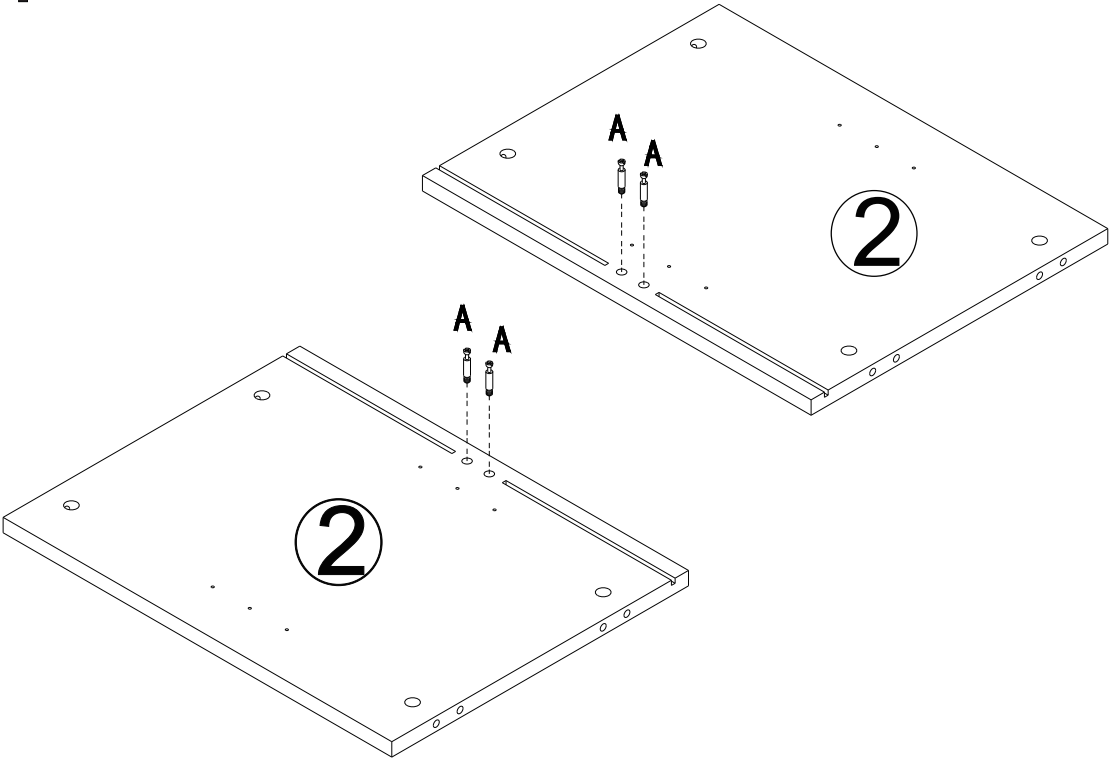

  
 
Step 6:

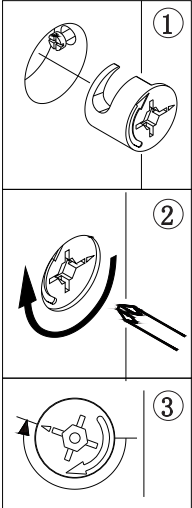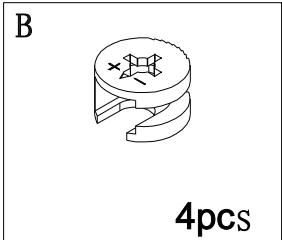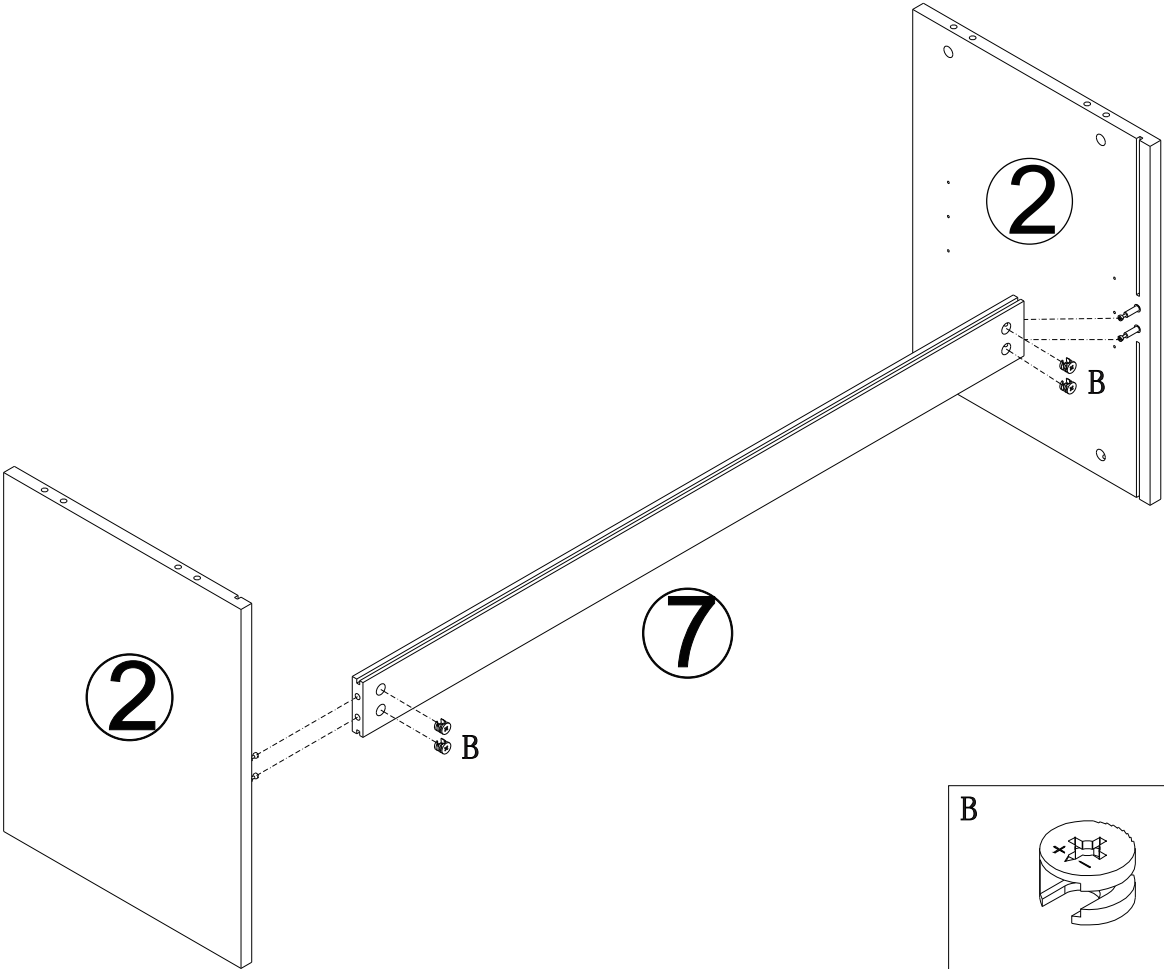

 Step 7:

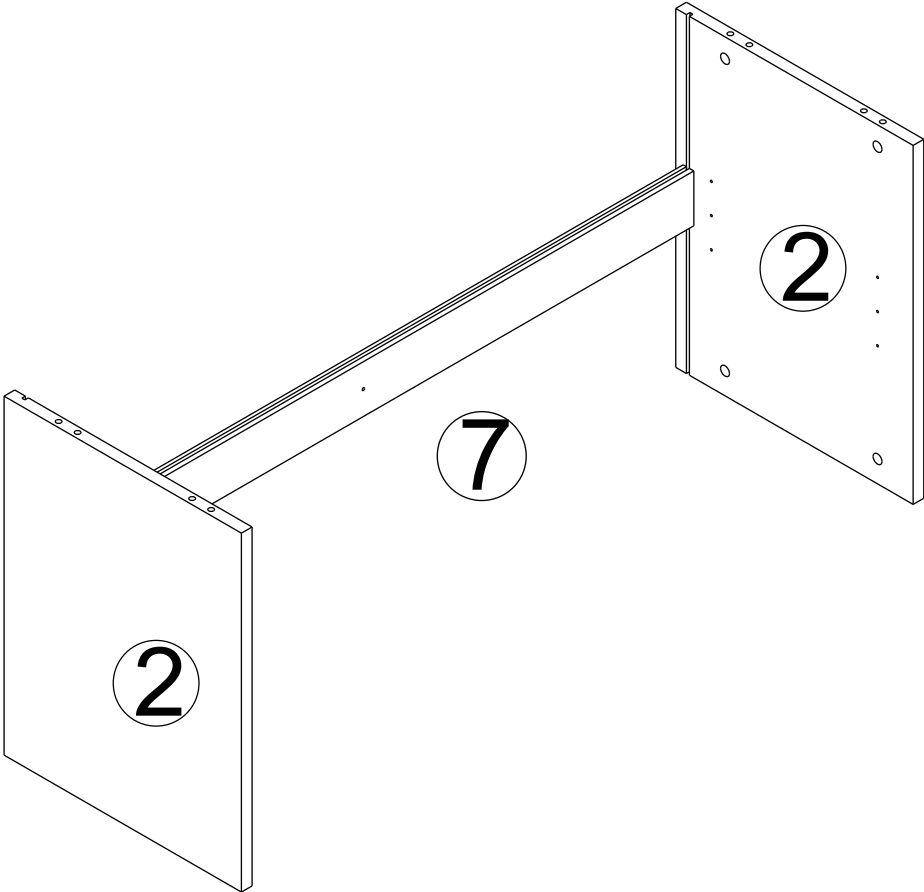


  Step 8:

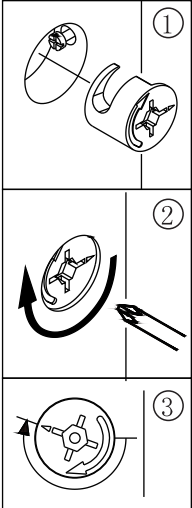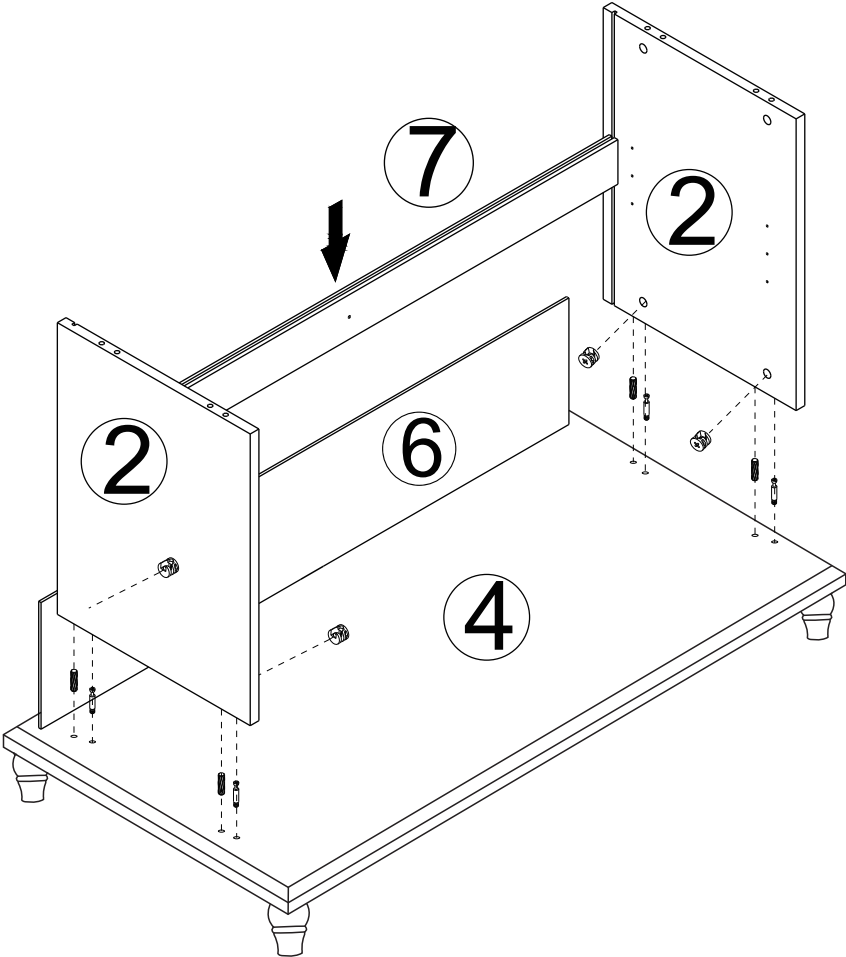


A		4pcs
B		4pcs
C		4pcs

 
Step 9:

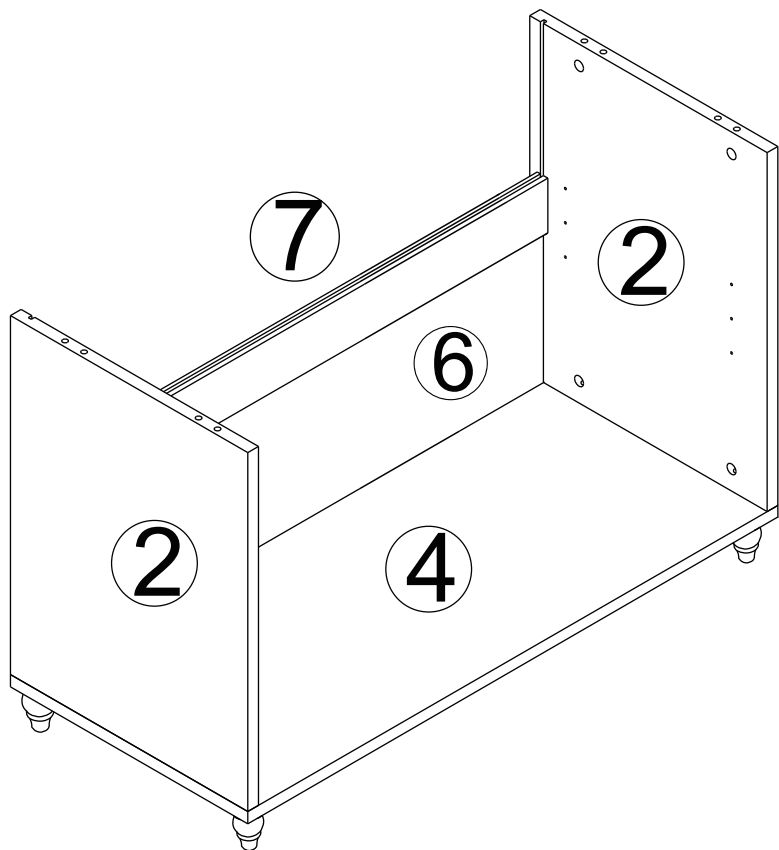

 Step 10:


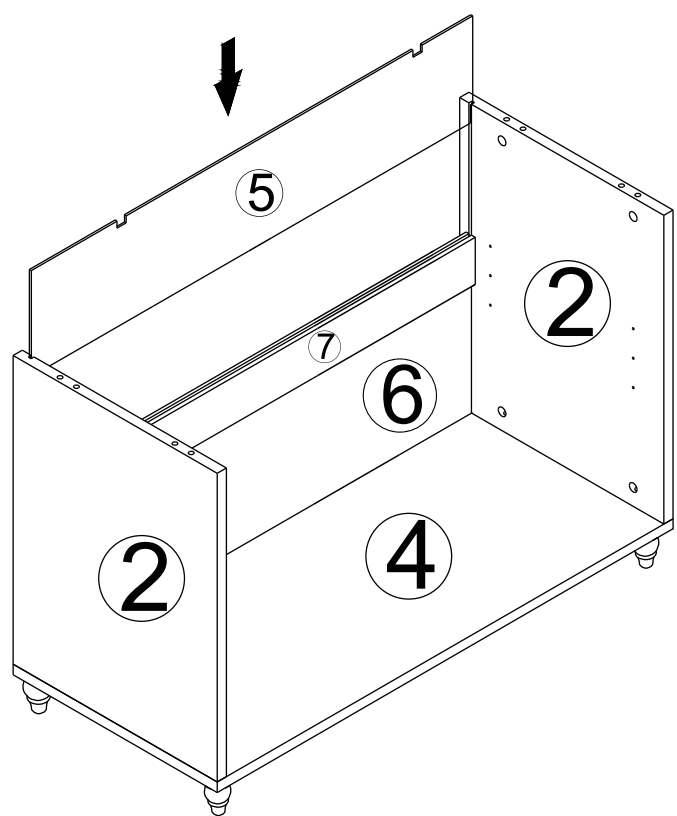


 Step 11:

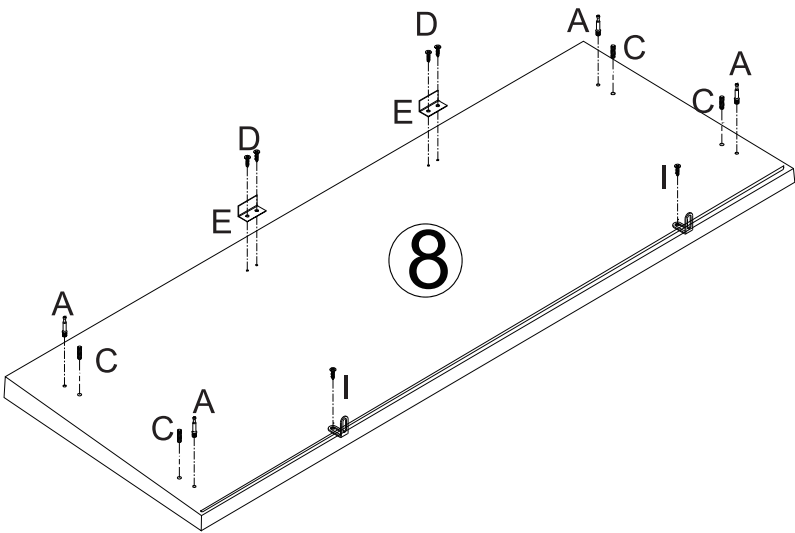


A		4pcs
I		2pcs
C		4pcs
E		2pcs
D		4pcs

  Step 12:

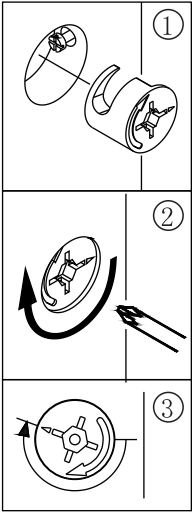
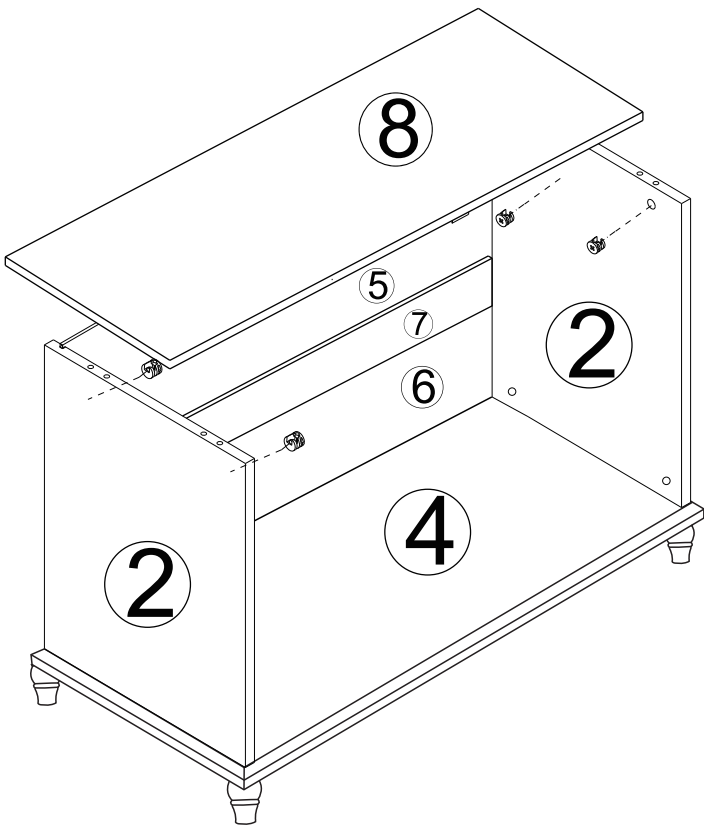


B		4pcs
---	---	------

 
Step 13:

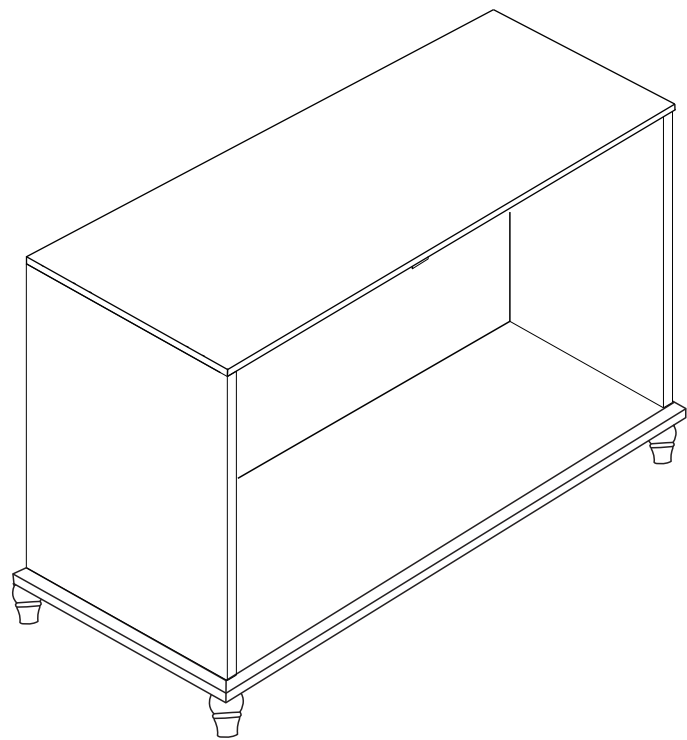

  Step 14:

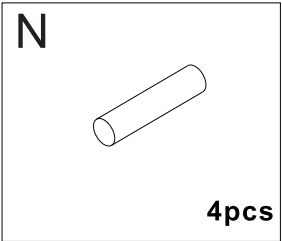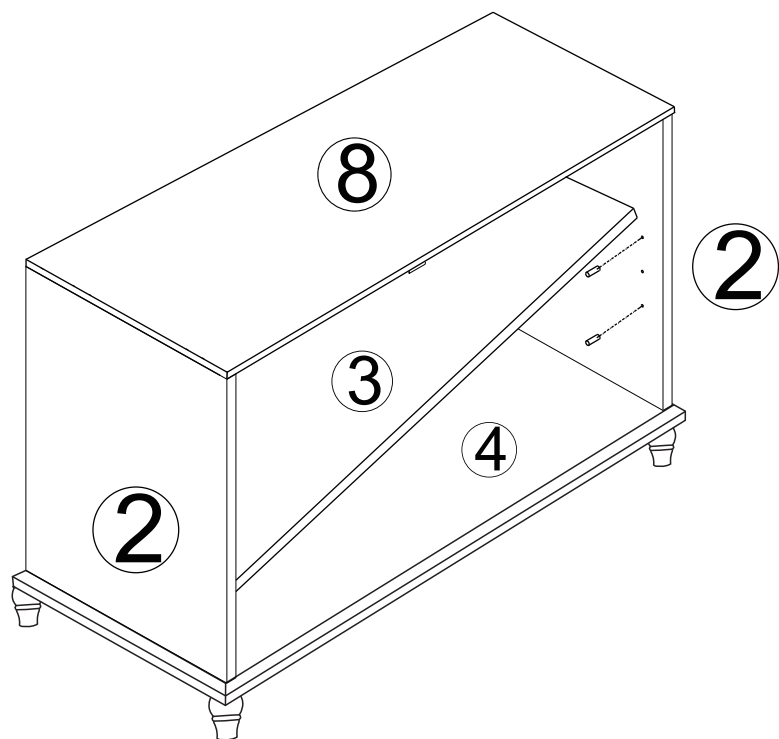

 Step 15:

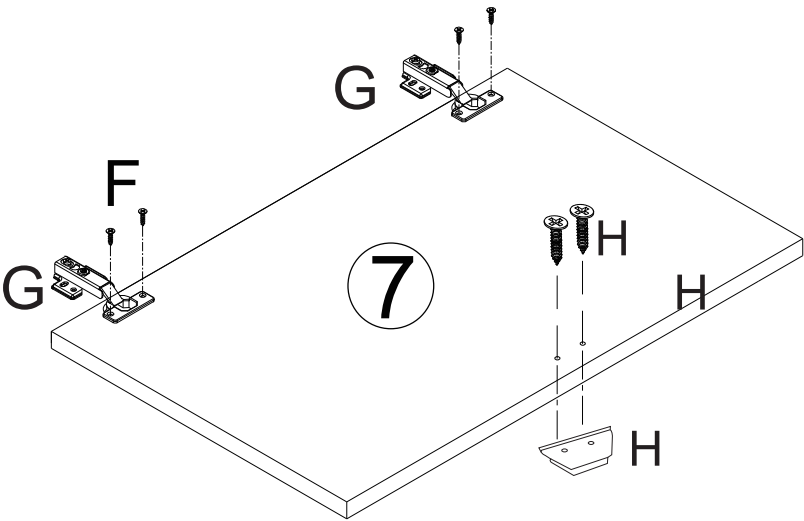


F




8pcs

 G





4pcs

 H



4pcs 2pcs

 
 
Step 16:

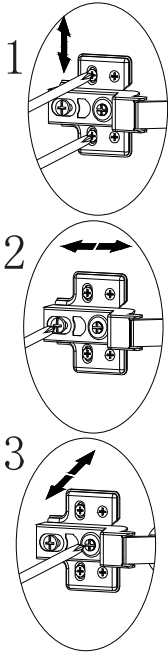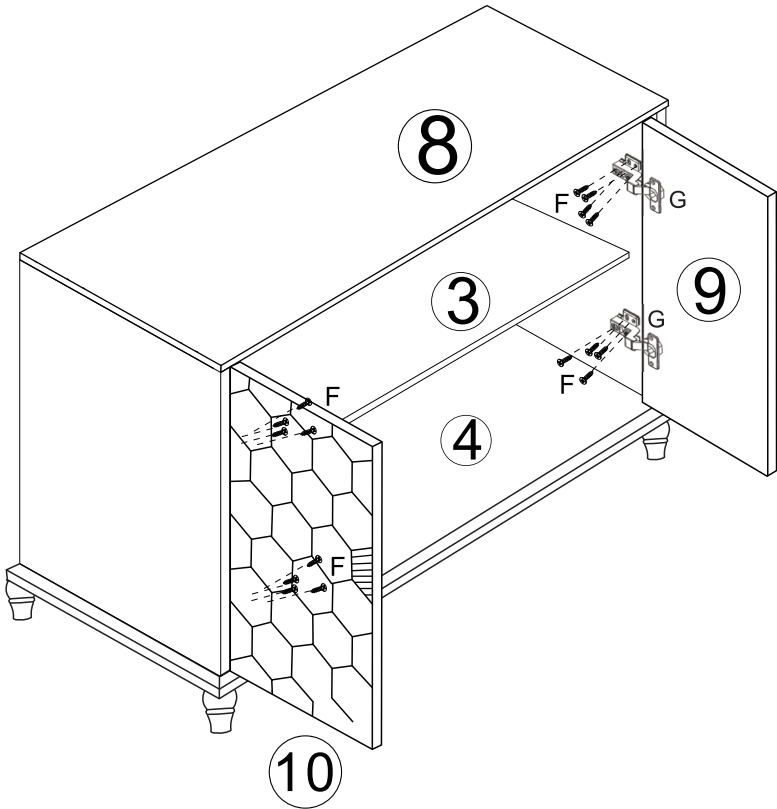

F




  16pcs

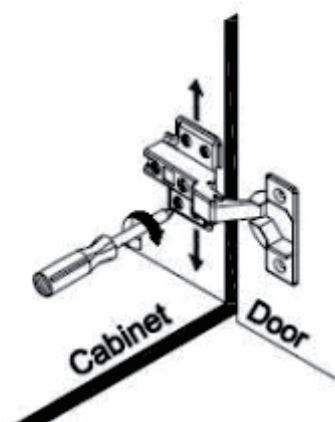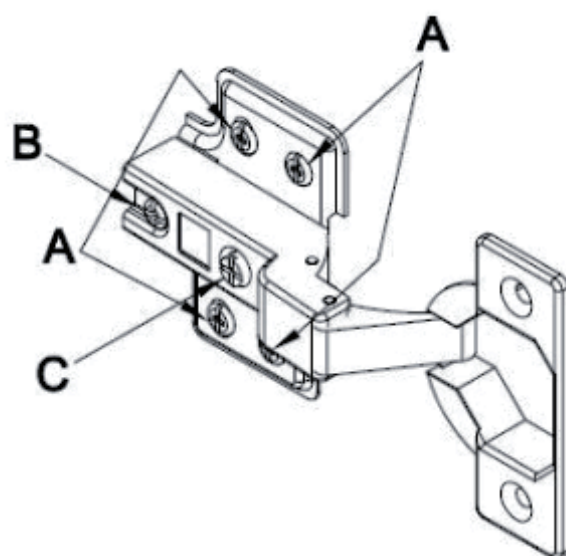


To adjust the vertical height.

 Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

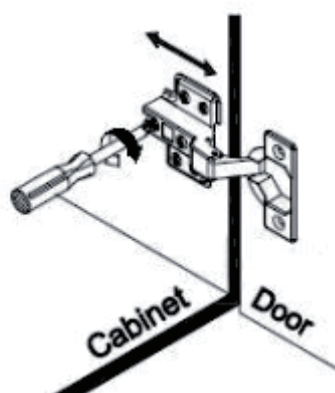

To adjust depth.

 
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

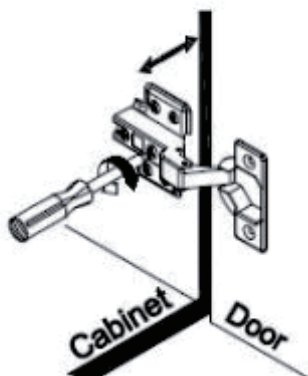


To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

 Step 17:

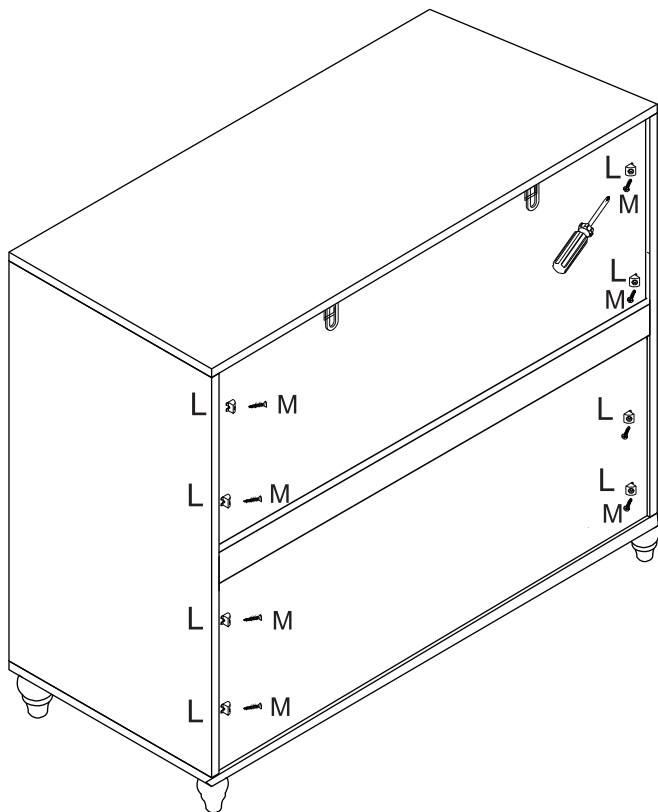

K

 

1pcs

L



 
8PCS

M



8PCS

Step 18:

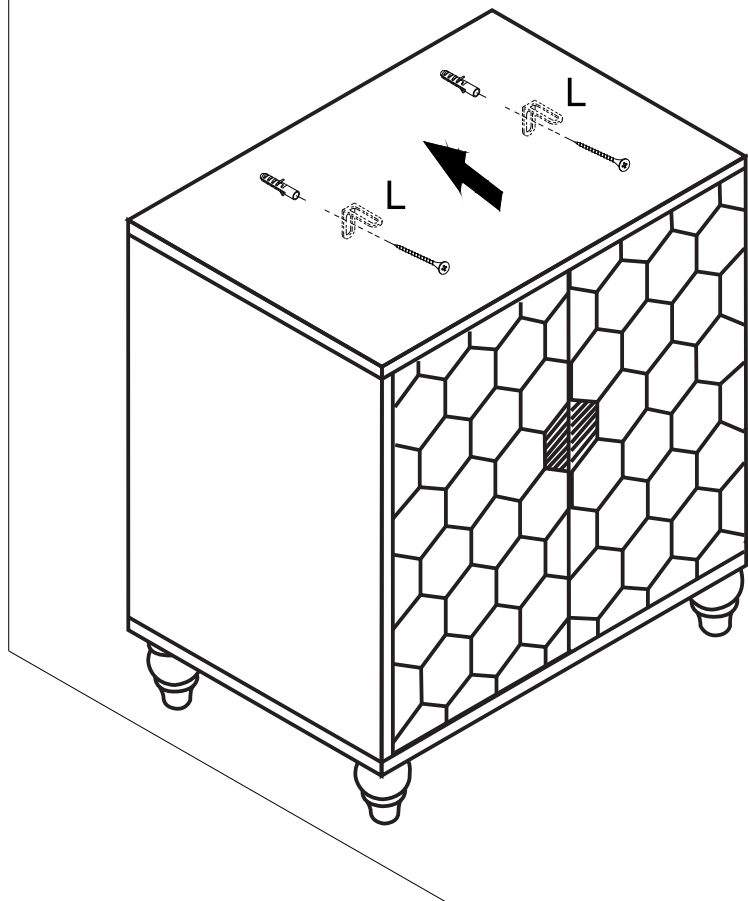

L



2pcs