

Warranty

1 YEAR LIMITED WARRANTY

- We warrant the metal frame and burner to be free of manufacturing defects to the original purchaser for one years.
- Proof of purchase (dated register receipt) is required for warranty claims.

WHAT IS NOT COVER

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Pre-Assembly

PLANNING ASSEMBLY

Carefully remove all pieces from the carton and make sure that you have all parts (refer to the hardware and package contents list). If you are missing parts, please contact after-services for further assistance.


YOUR OWNER'S MANUAL

Keep and store this Owner's Manual for future reference. It contains important instructions and procedures for safety and maintenance.



NOTE: Please read and understand the entire manual before you assemble, operate, or install the fire pit.

TOOLS REQUIRED

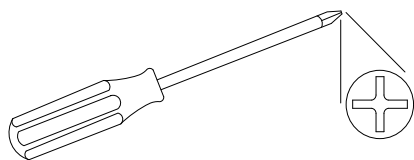


Phillips
screwdriver




5# Wrench

HARDWARE INCLUDED


Part	Description	Quantity
AA	M6×10 mm Bolt	28
BB	M6×20 mm Bolt	4
CC	M5×10 mm Bolt	4
DD	M5 Nut	4

 


— AA

 

— BB

 


— CC

 

— DD

Package Contents

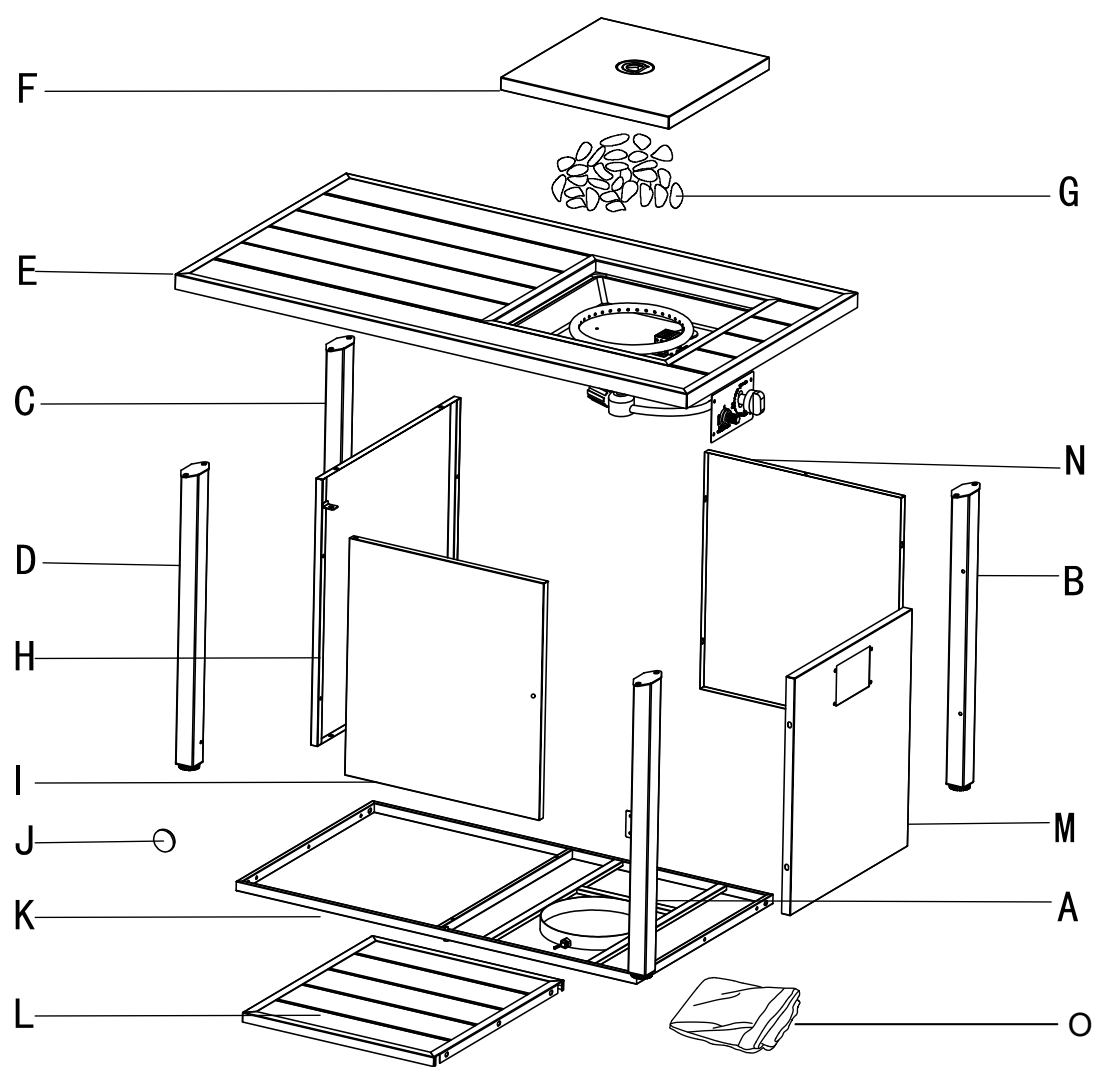


Part	Description	Quantity
A	The Right Front Leg	1
B	The Right Behind Leg	1
C	The Left Behind Leg	1
D	The Left Front Leg	1
E	Table Top With Burner	1
F	Lid	1
G	Lava Rock	1
H	Side Panel	1

Part	Description	Quantity
I	Door	1
J	Knob	1
K	Gas Tank Support	1
L	Storage Rack	1
M	Side Panel With Panel	1
N	Back Panel	1
O	Cover	1

Assembly



1 Assembling The Four Legs

- ☐ Attach the four legs(A,B,C,D) to the table top with burner(E) by using eight M6x10mm bolts(AA).
- ☐ Do not tighten the bolts at this step.

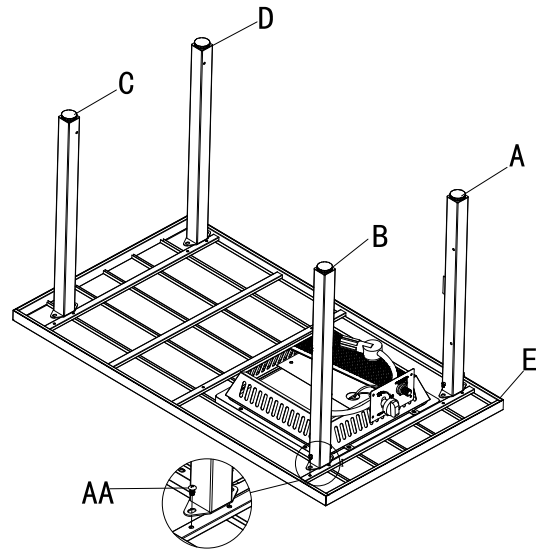

2 Assembling The Gas Tank Support And The Storage Rack


- ☐ Attach the gas tank support(K) to the four legs(A,B,C,D) by using four M6x20mm bolts(BB).
- ☐ Attach the storage rack(L) to the gas tank support(K) by using six M6x10mm bolts(AA).

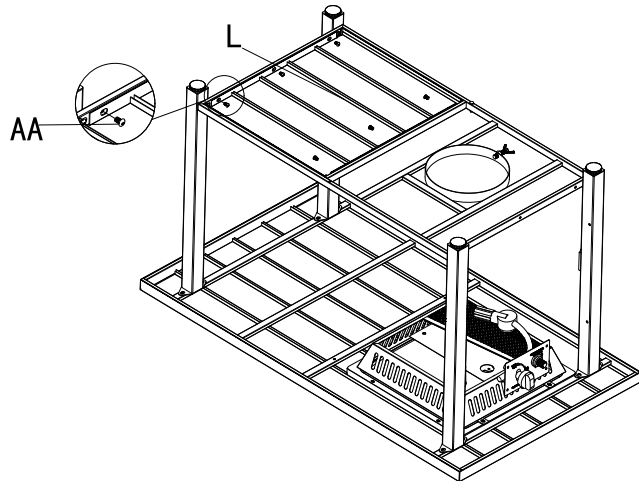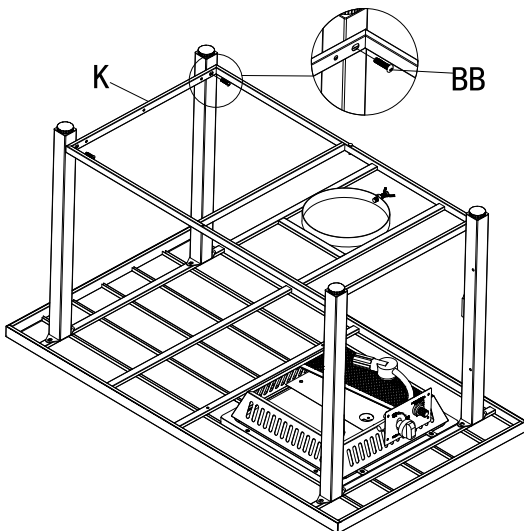

Assembly (continued)


3 Assembling The Side Panel

- Attach the side panel(H) to table top with burner(E) and the gas tank support(K) by using four M6x10mm bolts(AA).

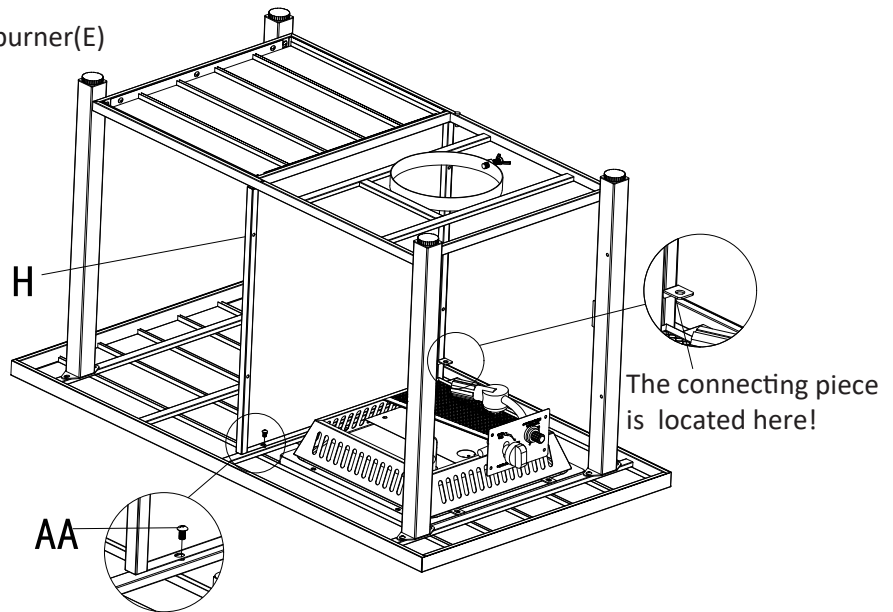

4 Assembling Side Panel With Window


- Attach the side panel with window(M) to the legs(A,B) by using four M6x12mm bolts(AA).
- Attach the control panel to the side panel with window by using four M5x10mm bolts(CC) and four M5 nut(DD).

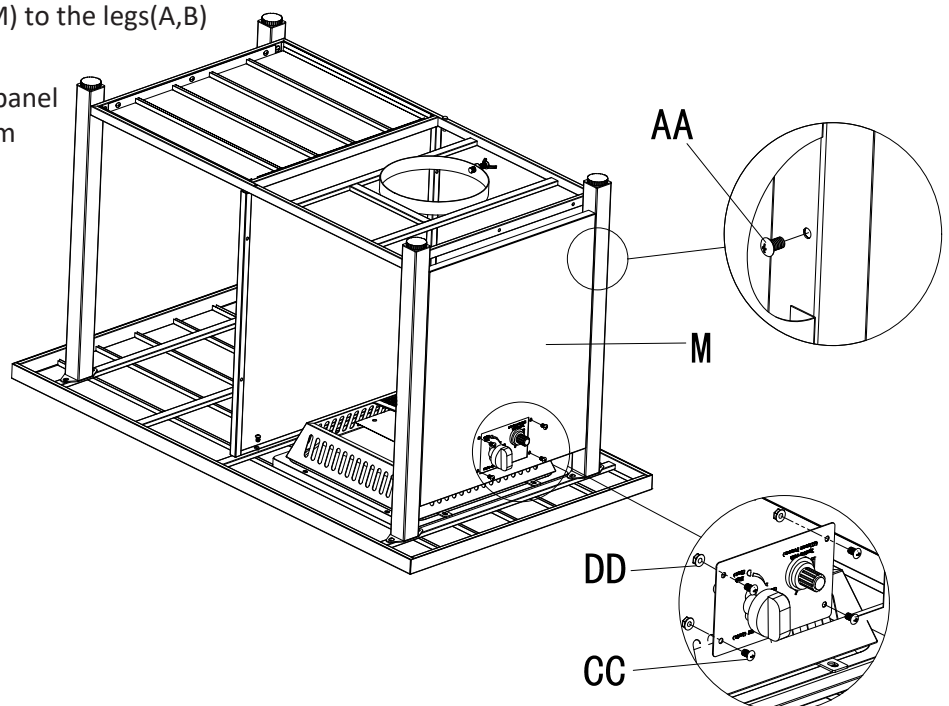

Assembly (continued)



5 Assembling The Back Panel

- ☐ Attach the back panel(N) to the leg(B) and the side panel(H) by using four M6x10mm bolts(AA).
- ☐ Tighten all the bolts with a phillips screwdriver(included).

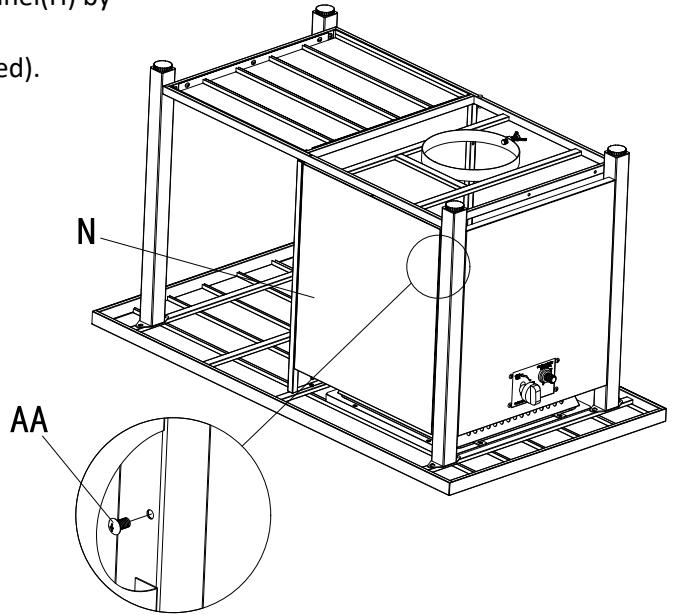

6 Assembling the door


- ☐ Attach the knob(J) to door(I) by using one M6x10mm bolt(AA) and tighten it.
- ☐ Attach the door to side panel(H) by using one M6x10mm bolt(AA) and do not over tighten it with 5# wrench. Just make sure the door can rotate smoothly.

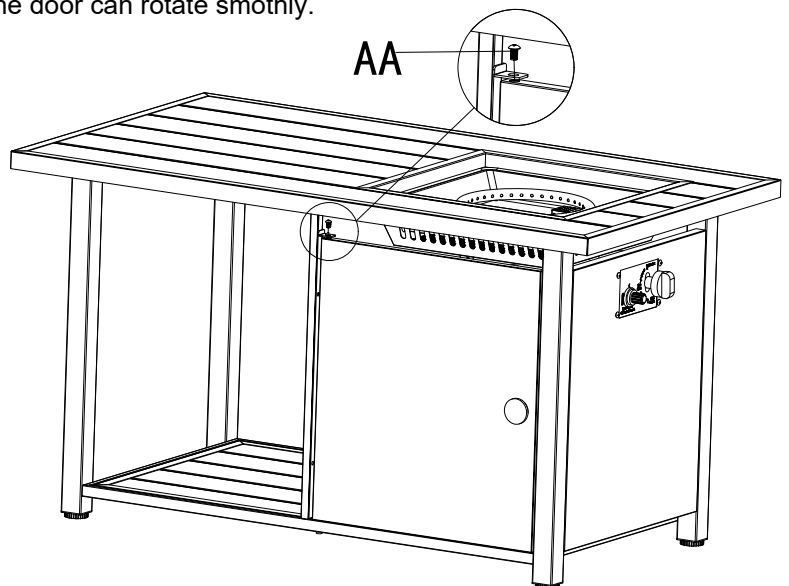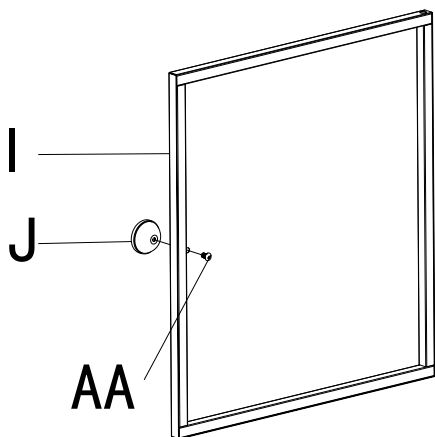

Assembly (continued)

7 Place The Lava Rock

- ☐ Place the Lava Rock(G) into the fire bowl.
- ☐ Note:Ensure no lava rock is placed on the ignition portion of the burner.Then place the lid(F) on.



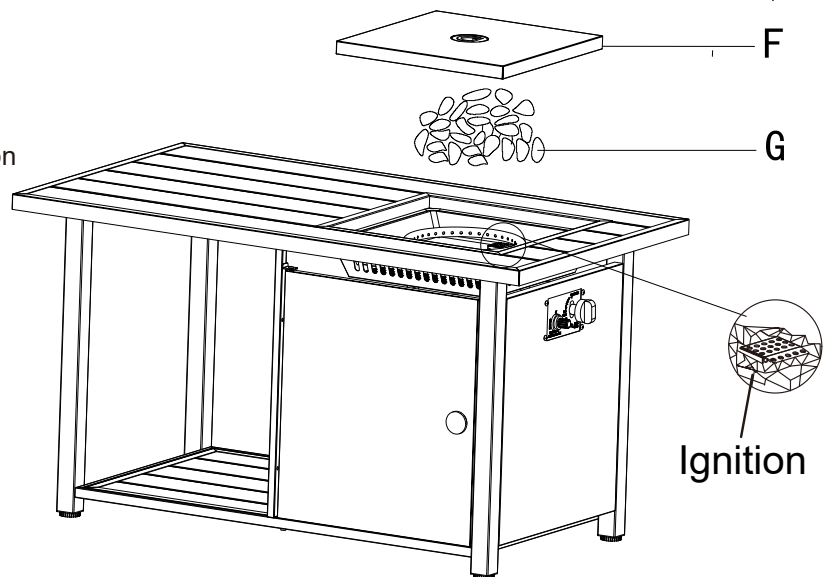


8 Assembling The Cylinder

- ☐ Put the cylinder into the gas tank support (K), and secure the cylinder by tightening the screw in the gas tank support (K). Connect the hose and regulator to the cylinder.
- ☐ Connect the hose and regulator to the cylinder.



NOTE: The propane cylinder is sold separately. Use a standard 20 lb. propane cylinder only. Put the hose away from the bowl base during connect the propane cylinder.

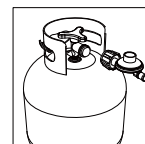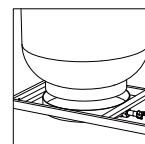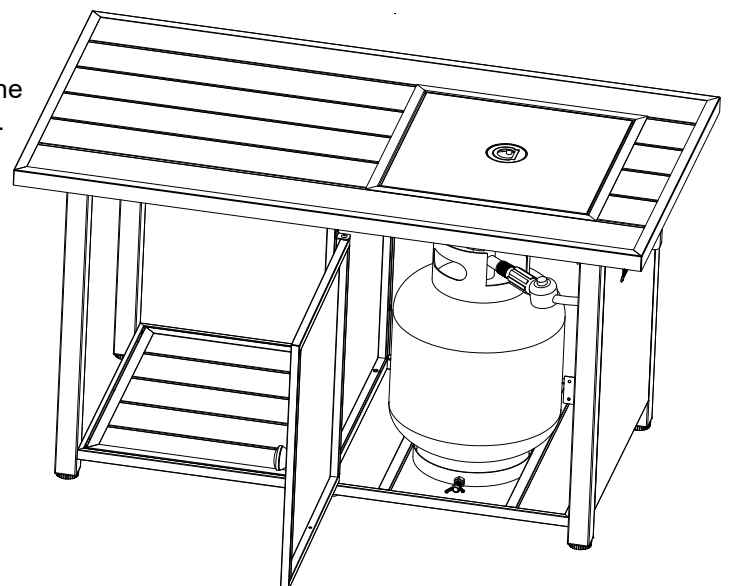

9 Installing The AAA Battery

- ☐ Open the igniter and place the AAA battery into the igniter. Then tighten clockwise.
- ☐ The Lid (F) must be removed when the burner is in operation. Wait until the unit cools before replacing the metal lid.
- ☐ Do not over tighten the igniter button.

