

WB6255

BIG BOOK DISPLAY WITH WRITE & WIPE

WARNING: ADULT ASSEMBLY REQUIRED

This product contains hardware that before assembled, can pose a choking hazard to children under the age of 3 years. Care should be taken when unpacking and assembly of this product.


SAFETY NOTE

To prevent accidental tipping, we strongly recommend this product be anchored to the floor or wall. It is the consumer's responsibility to ensure this unit is installed according to all applicable regulations and used in a safe manner consistent with its intended purpose.

PACKING LIST

REF	QTY	DESCRIPTION	
1	8	020-004	6MM x 32MM DOWEL
2	15	013-018	#8 x 1¼" WASHER HEAD SCREW
3	16	013-607	#8 x ¾" TRUSS HEAD SCREW
4	4	081-060	2" SOLID RUBBER SWIVEL CASTER

HARDWARE & TOOLS REQUIRED

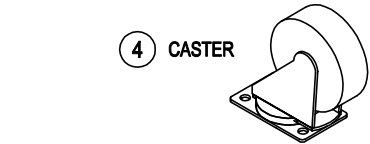

ASSEMBLY INSTRUCTIONS

1. READ ALL THE ASSEMBLY INSTRUCTIONS BEFORE STARTING TO ASSEMBLE THE ITEM.
2. OPEN THE HARDWARE PACK, SORT AND IDENTIFY THE DIFFERENT FASTENERS YOU WILL BE USING.
3. FOLLOW EACH STEP IN ORDER AND MAKE SURE ALL FASTENERS ARE TIGHTENED WHEN FINISHED.
4. DO NOT USE POWER DRIVERS. IT IS TOO EASY TO OVER TIGHTEN OR STRIP THE FASTENERS WITH POWER TOOLS!

STEP 1
TURN THE BOTTOM OVER AND PLACE (4) CASTERS OVER THE PRE-DRILLED HOLES AND FASTEN THEM WITH (16) #8 x ¾" LG TRUSS HEAD SCREWS.

STEP 2
TURN THE BOTTOM OVER AND INSERT (4) DOWELS INTO THE PRE-DRILLED HOLES AT THE END OF THE PANEL. YOU MAY NEED A SMALL HAMMER TO TAP THE DOWELS IN HALF WAY.

STEP 3
NEXT, LOCATE THE RIGHT AND LEFT SIDES AND LAY THEM FLAT ON A CLEAN SURFACE. NOTE BE SURE TO POSITION THE PANELS CORRECTLY WITH SIX HOLES AT THE TOP OF THE SIDE AND FOUR HOLES AT THE BOTTOM OF THE PANEL. INSERT THE BOTTOM INTO THE RIGHT SIDE PANEL.



STEP 4
PLACE (4) DOWELS INTO THE PRE-DRILLED HOLES AT THE END OF THE PRE-ASSEMBLED TOP AND THEN INSERT IT INTO THE RIGHT SIDE . NOTE THE LOCATION OF THE GROOVE FOR THE CHALK BOARD OR WRITE AND WIPE FRONT, IT SHOULD CREATE A CONTINUOUS LINE.

STEP 5
NOW INSERT THE CHALK BOARD OR WRITE AND WIPE INTO THE GROOVES OF THE BOTTOM, RIGHT SIDE AND TOP.

STEP 6
PUSH THE LEFT SIDE ONTO THE DOWELS OF THE TOP AND BOTTOM, SECURE WITH (6) #8 x 1¼" WASHER HEAD SCREWS. NEXT GENTLY TURN THE UNIT OVER TO SECURE THE RIGHT SIDE WITH (6) #8 x 1¼" WASHER HEAD SCREWS.

STEP 7
TURN THE UNIT RIGHT SIDE UP SO THAT IT IS SUPPORTED BY THE CASTERS. OPEN THE PRE-ASSAMBLD TOP SO THAT IT POINTS STRAIGHT UP. ALIGN THE BOOK REST UP WITH THE THREE HOLES IN THE PRE-ASSAMBLD TOP USE (3) #8 x 1¼" WASHER HEAD SCREWS TO SECURE THE BOOK REST.

STEP 8
NOW SLOWLY SLIDE THE FIVE DIVIDERS IN THE GROOVE IN THE BOTTOM AND TOP.

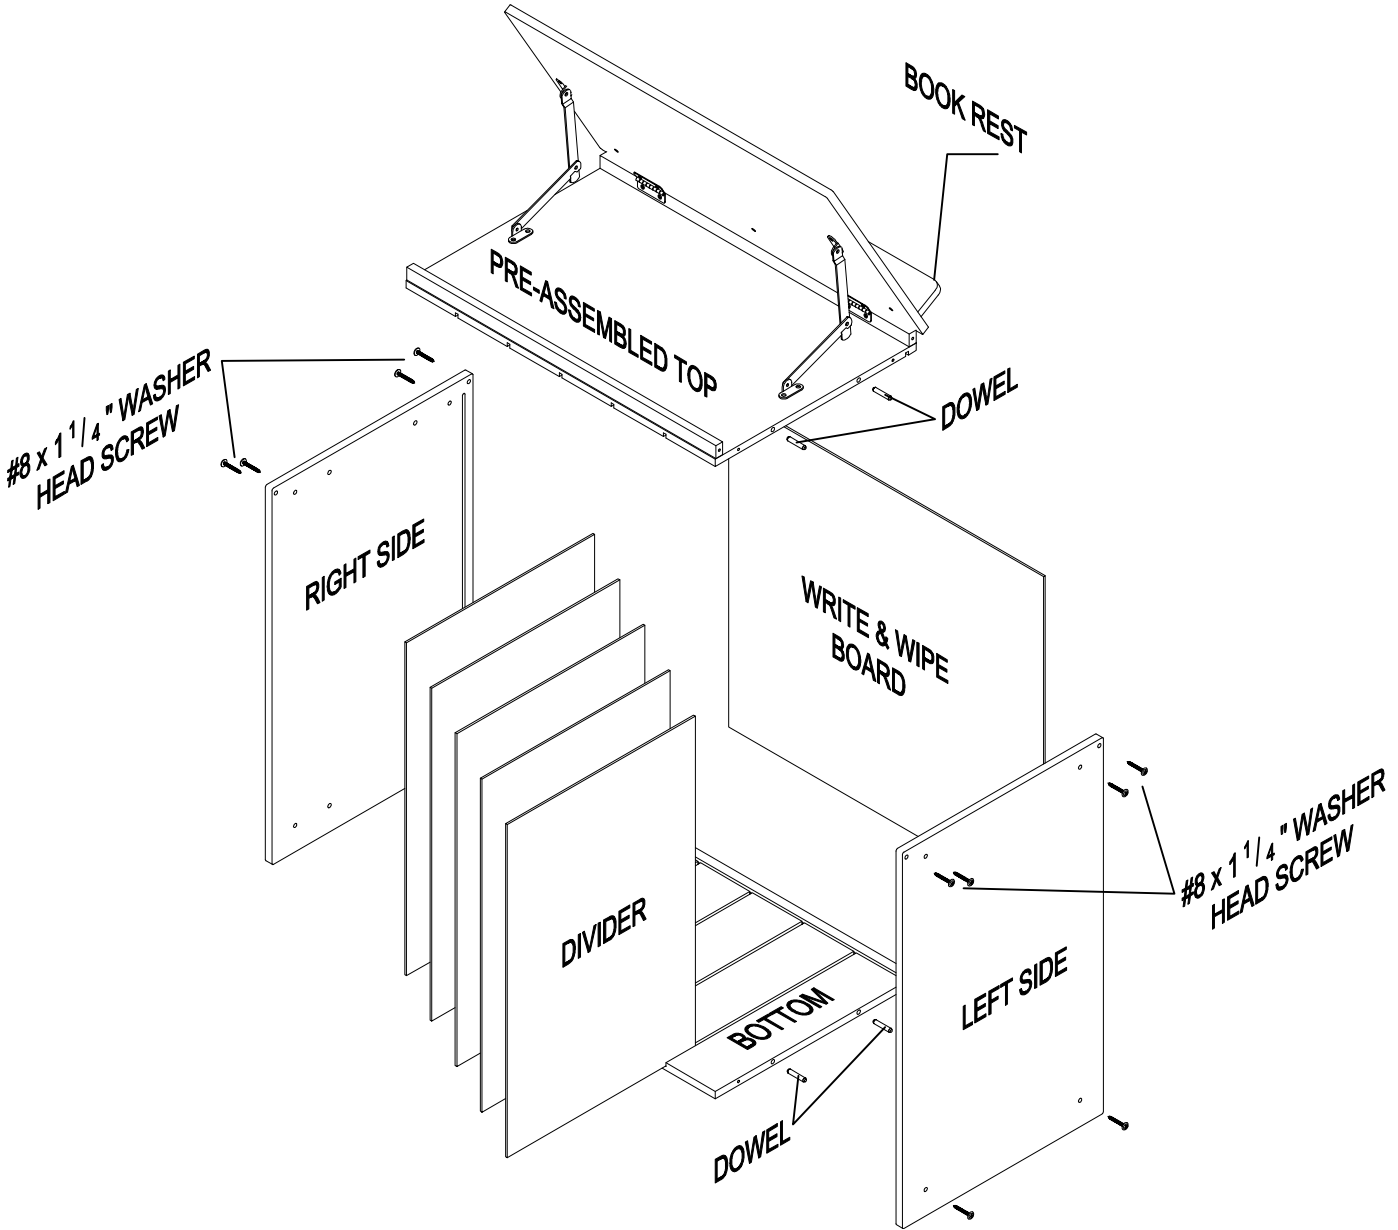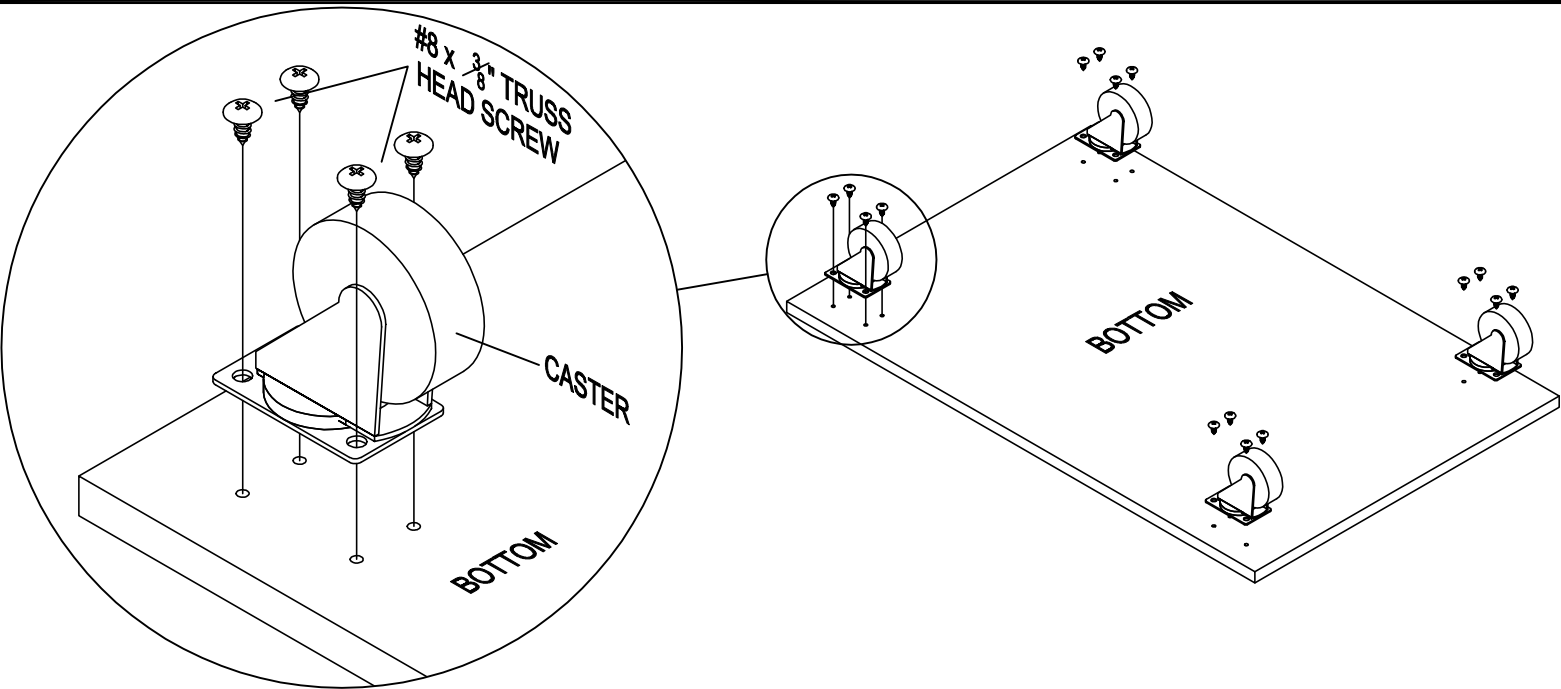

WHITNEY BROTHERS

EDUCATIONAL FURNITURE FOR CHILDREN

For assistance, please call us toll free

1-(800)-225-5381

WWW.WHITNEYBROS.COM