

Cuisinart®

Digital Vacuum Sealer

VS-600C



Instruction
Booklet

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be taken to reduce risk of fire, electric shock and/or injury, including the following:

1. **READ ALL INSTRUCTIONS CAREFULLY BEFORE USING.**
2. ALWAYS unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
3. To protect against the risk of electric shock, do not place cord, plug or base of appliance in water or any other liquid.
4. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
5. Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from unit during operation to reduce the risk of injury and/or damage to the appliance.
6. **Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest Cuisinart Repair Center for examination, repair, electrical or mechanical adjustment.**
7. The use of attachments not recommended by Cuisinart may cause fire, electric shock or risk of injuries.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
10. This appliance is for household use. Any servicing other than cleaning and user maintenance should be done by authorized Cuisinart repair personnel.

11. Do not use appliance for other than intended use.
12. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
13. Keep the appliance 3 inches (6 cm) from other objects to ensure motor ventilation.
14. Do not use the appliance near a flame, hot plate or stove.
15. Only use food-grade vacuum bags.
16. Allow the unit to recover in between vacuum sealing processes. A maximum rate of one bag or accessory per minute is recommended.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Do not attempt to repair this appliance yourself. Only an authorized Cuisinart representative should perform any repairs. Please contact Cuisinart Customer Service for information.

NOTICE

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

CONTENTS

Important Safeguards2

Parts and Features.....3

Before First Use5

Operating Instructions5

Cleaning and Maintenance6


Tips and Hints7

Troubleshooting8

Warranty9

PARTS AND FEATURES

 - 1. Vacuum & seal**
Touch this key, it starts the automatic operation of vacuuming the bag and then automatically seals the bag when vacuum is complete.
- 2. Seal**
This button provides two functions:
- To seal the open end of a bag without vacuuming air suction used to make a bag from a bag roll.
 - When the automatic “Vacuum & seal” function is in operation, this button stops the motor pump and immediately starts to seal the bag so that less vacuum pressure inside the bag can be controlled by the operator to avoid crushing for delicate items.

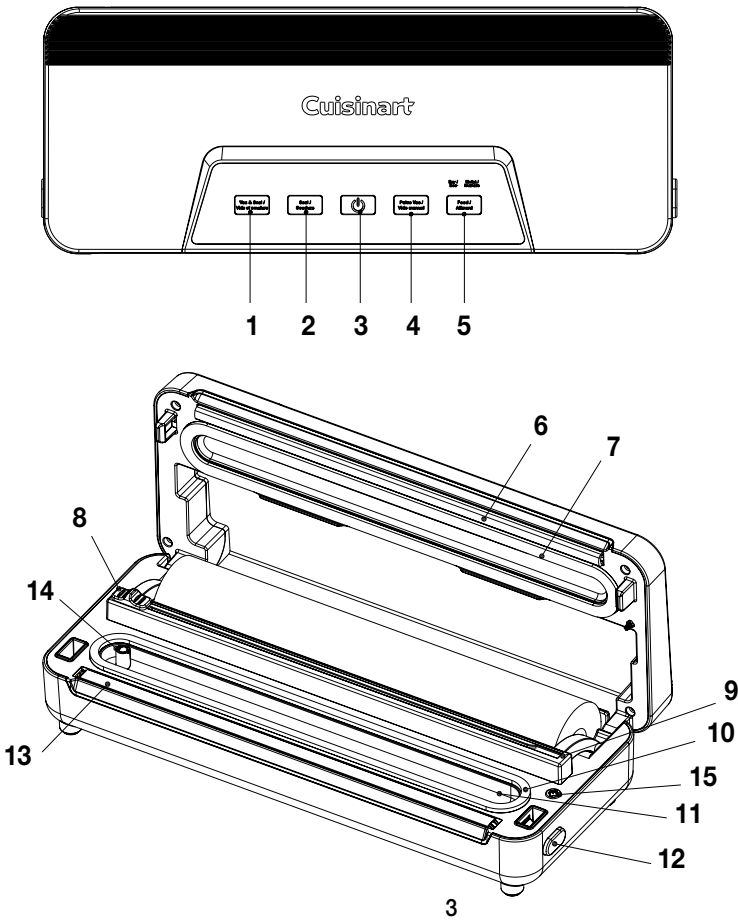

3. **Power indicator**

This button has three functions depending on the machine status:

- When the machine is first powered on, only this button lights on. If the lid is unlocked, press this key. The Pulse button will flash to show that the function is active. If the lid is locked, press this key. All button lights except Food button light will flash and the machine enters standby mode.
- When the machine is in operation (vacuuming or sealing operations), touch this key, the machine stops immediately.
- When the machine is in standby status with the button lights flashing, touch this key, the other button lights fade out.

4. **Pulse vacuum**

This selection is used for delicate foods that do not require full vacuum sealing. The user can control how much air should be extracted. It can also be used for an optional container sold separately.

5. **(Food Type) – Dry/Moist Food Selection**

- **Dry:** for contents without moisture. The sealing time is shorter for dry goods. Dry is the default setting and can be changed by user.
- **Moist:** for foods containing moisture. Sealing time is a longer for this selection.

6. **Sealing strip**

Place the bag to be sealed over this strip. Clean and dry or replace it when distorted or broken.

7. **Upper gasket**

Keeps air away by forming a vacuum chamber with a lower gasket. Keep clean with a damp cloth.

8. **Bag Cutter**

Press and slide the knob from one end to the other to cut bags to a desired size.

9. **Cutter rack**

Support the cutter to slide along.

10. **Lower gasket**

Keeps air away by forming a vacuum chamber with the upper gasket in the vacuum chamber. Keep clean with a damp cloth.

11. **Vacuum chamber**

Position the open end of the bag inside the chamber. Air will be drawn out of bag to catch liquids and overflows.

12. **Release Button**

This button provides two functions:

- Press both sides to open the cover;
 - Release the vacuum pressure inside the machine.
- ### 13. **Sealing element**
- Teflon-coated heating element which becomes hot to seal the bag.
- ### 14. **Air intake**
- Air intake connects with vacuum chamber and pump. Do not cover this intake when placing bag for vacuum & seal operations.
- ### 15. **Safety switch**
- Limits the sealing function by cutting off the heating circuit when the lid is open.

 
BEFORE FIRST USE

- Remove all packaging materials and any promotional labels or stickers from your vacuum sealer. Be sure all parts (listed in Parts and Features) of your new vacuum sealer have been included before discarding any packaging materials.
- You may want to keep the box and packing materials to use at a later date.
- Before using your Cuisinart Vacuum Sealer for the first time, remove any dust from shipping by wiping the unit with a damp cloth.



OPERATING INSTRUCTIONS

Making a Bag from a Cuisinart™ Vacuum Sealer Bag Roll

1. Using a Cuisinart Vacuum Bag Roll, cut a length of bag material from the roll a few inches longer than the length of the item you intend to seal. Be sure to cut the bag material in a straight line.

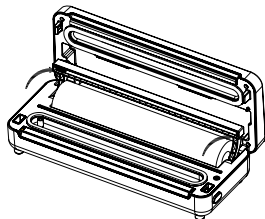


  Ensure the cutter is positioned at either end before cutting the bag.

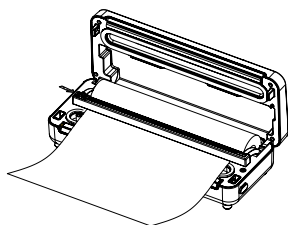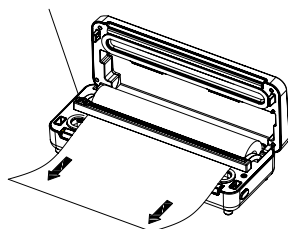


NOTE: Make sure bag is on a clean flat surface. Hold roll material taut to help guide straight cutting line.

 2. Open the lid of the unit and place one open end of the bag material on the sealing strip.

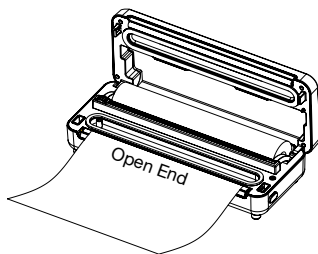

 3. Close the lid by pressing down on both ends of the front of the lid to ensure it's securely locked. You should hear each side click into place.

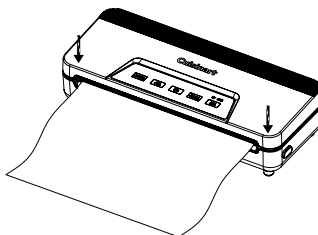


4. Plug in the vacuum sealer, press the Power button to switch it on, then press Seal button to begin.
5. The seal button light will remain on while the unit seals the end of the bag. When the sealing process is complete, the light will turn off, and the unit will enter standby mode with the button lights flashing.
6. After the button lights begin flashing, press the buttons on the sides of the unit to unlock the lid; remove your bag.
7. Continue to **Vacuum Sealing with Cuisinart™ Bags** to seal and preserve your items.

Vacuum Sealing with Cuisinart™ Bags

1. Place the food items you wish to seal into the vacuum bag. Be sure to allow at least two extra inches between the contents of the bag and the top of the bag.

NOTE: Be sure the end of the bag that

 will be going into the vacuum channel is clean and free of any food pieces, liquids or oils, as these could prevent proper sealing.

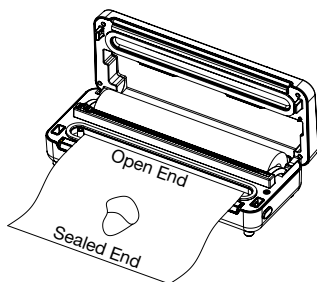

2. If the lid is locked, press the buttons on the sides of the unit to release it. Open the lid and position the open end of the bag over the vacuum channel.
3. Close the lid by pressing down firmly on each side to ensure the lid is securely locked. You will hear it lock into place.
NOTE: If sealing delicate or moist foods, please refer to **Sealing Delicate Food** before continuing.
4. Press Vacuum/Seal button.
5. The Vacuum Seal button light will remain on while the unit removes the air from the bag.
6. The Seal Only button light will turn on as the unit automatically switches to the sealing function to seal it.
7. When both lights go off, the automatic vacuum seal process has been completed. And the unit will enter standby mode with the button lights flashing. Push the buttons on each side of the unit to unlock the lid and remove your sealed bag.

Sealing Delicate Food

1. Follow steps 1–3 of **Vacuum Sealing with Cuisinart™ Bags** section.
2. Press the Vacuum/Seal button to begin the sealing process.
3. Once enough air has been removed and before delicate foods start to get crushed, press the Seal button to stop the vacuum process and heat seal the bag. The Seal Only button light will turn

on while the unit seals the bag.

4. Once the button light goes off, the sealing process is complete. And the unit will enter standby mode with the button lights flashing. Push the buttons on each side of the unit to unlock the lid and remove your sealed bag.

Cuisinart™ Vacuum Bag Guidelines

Freezer Use

- Vacuum-sealed fruits, vegetables, and meats can be stored for extended periods of time.
- Never mix fruits, vegetables, or meats in the same vacuum bag.

CLEANING AND MAINTENANCE

- Always unplug the machine before cleaning.
- Do not immerse the unit or electrical cord in water or any other liquid.
- Do not use abrasive cleaners or scouring pads to clean the unit, as they may scratch or damage the surface.
- Clean the outside of the unit with a soft damp cloth, using mild dish soap and warm water.
- To clean the inside of the unit, use a paper towel or a soft clean cloth to wipe away any food or liquid. Dampen a soft cloth with mild soapy water and gently wipe clean.
- Dry the machine gently with a soft, clean cloth.
- Any other servicing should be performed by an authorized service representative.
- A safety protector in the heating base prevents the unit from overheating due to excessive operation. If overheating occurs, unplug the unit and wait 10–20 minutes to allow the vacuum sealer to cool down before resuming operation.

CORD STORAGE

Place the power cord into the storage box when unit is not in use. The storage box is located on the bottom of the unit. Do not wrap the cord around the appliance.

TO STORE APPLIANCE NOTICE:

Never store lid in locked position as gaskets may become compressed and the unit may not function properly.

TIPS AND HINTS

1. For best results use Cuisinart bags and accessories.
2. Allow at least 30 seconds in between using Seal Only function to allow sealing strip to cool slightly
3. Place bag on vacuum sealer so that the bag curves naturally towards the unit.
4. During the vacuum sealing process, small amounts of liquids, crumbs or food particles can be pulled into the vacuum channel, clogging the pump and damaging the unit. To prevent this, follow these tips:
 - a. Folding bag ends over and/or standing bag up in a bowl allows you to add foods into the bags with ease. Folding bag ends over also allows you to cleanly add food (especially moist foods) without getting any residue on the bag edges, helping to ensure a better seal.
 - b. Clean vacuum channel in between each use with a clean paper towel tightly wadded or rolled up and inserted into vacuum channel to soak up any liquid.
5. Allow at least a few inches of bag material between the bag contents and the top of the bag. Then leave at least one additional inch of bag material for each time you plan to reuse the bag.
6. Save money by buying foods in bulk, like meats and vegetables, and vacuum seal to keep fresher longer. Prep foods before sealing so that they will be ready to go.
7. Remember that softer foods should be frozen slightly before vacuum sealing and storing in freezer. Examples would be baked goods, soft fruits and vegetables and cooked dishes like pre-portioned leftover foods.
8. To keep track of dates, you can write on the white stripe on the bag with permanent marker.
9. Save and freeze leftovers! Portion leftovers like lasagna and casseroles into proper serving sizes, then vacuum seal and freeze so that they are ready to defrost and serve with ease. Softer foods like pastas should be slightly frozen first so that they do not lose their shape when vacuum sealed.
10. Seal and save fresh-squeezed citrus juices. Freeze first in ice cube trays and then vacuum seal cubes to keep in freezer for future use.
11. Make cookie dough and scoop into individual portions. Freeze the scoops and then vacuum seal for cookies ready to be baked at any time.
12. Think of your vacuum sealer before you travel. Vacuum seal food when hiking, camping or even for long car trips. Toiletries can be sealed to avoid leakage in luggage.
13. Make instant ice packs by sealing a bag filled with water and then keeping in the freezer.

TROUBLESHOOTING

Air is not completely removed from the bag.	• Make sure the top end of the bag rests entirely within the vacuum channel. • Check sealing strip and gasket for debris or moisture. • Be sure the cover is securely locked. • Check to make sure the bag does not have a hole. • Check to make sure the bottom of bag is completely sealed.
Vacuum bag loses vacuum after being sealed.	• Wrinkles, crumbs, oils or other liquids may cause leaks around the seal. Reopen the bag with your bag cutter, cutting a straight edge across the bag just below the seal. Smooth out the edge and wipe the inside of the top of the bag with a clean dry cloth or paper towel before attempting to reseal. • Check to make sure the bag does not have a hole.
Vacuum sealer fails to properly seal the pouch.	• If the sealing strip overheats, it can melt the bag, resulting in an incomplete or improper seal. Lift the cover and allow the sealing strip to cool for several minutes before attempting to use again. It is recommended that you always wait at least 30 seconds between uses of the Seal Only and Vacuum/Seal function. • Food or debris in the sealing strip can result in improper sealing. Wipe the cooled strip lightly with a damp, clean cloth and dry thoroughly. • If the bag material is not cut in a straight line.

WARRANTY

LIMITED THREE-YEAR

WARRANTY

We warrant that this Cuisinart product will be free of defects in materials or workmanship under normal home use for 3 years from the date of original purchase. This warranty covers manufacturer's defects including mechanical and electrical defects. It does not cover damage from consumer abuse, unauthorized repairs or modifications, theft, misuse, or damage due to transportation or environmental conditions. Products with removed or altered identification numbers will not be covered.

This warranty is not available to retailers or other commercial purchasers or owners. If your Cuisinart product should prove to be defective within the warranty period, we will repair it or replace it if necessary. For warranty purposes, please register your product online at www.cuisinart.ca to facilitate verification of the date of original purchase and keep your original receipt for the duration of the limited warranty. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration or other damage to external or internal surfaces that does not impair the functional utility of the product. This warranty also expressly excludes all incidental or consequential damages.

Your Cuisinart product has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart.

If the appliance should become defective within the warranty period, do not return the appliance to the store. Please contact our Customer Service Centre:

Toll-free phone number:

1-800-472-7606

Address:

Cuisinart Canada
100 Conair Parkway, Unit # 1,
Woodbridge, ON L4H 0L2

Email:

consumer_Canada@conair.com

Model:

VS-600C

To facilitate the speed and accuracy of your return, please enclose:

- \$10.00 for shipping and handling of the product (cheque or money order)
 - Return address and phone number
 - Description of the product defect
 - Product date code*/copy of original proof of purchase
 - Any other information pertinent to the product's return
- * The date code format we are using on unit is WWYY, representing week, and year. eg. 2426 = manufactured in 24th week of the year 2026.

Note: We recommend you use a traceable, insured delivery service for added protection.

Cuisinart will not be held responsible for in-transit damage or for packages that are not delivered to us. To order replacement parts or accessories, call our Customer Service Centre at 1-800-472-7606. For more information, please visit our website at **www.cuisinart.ca**.

Cuisinart®



Coffeemakers



Blenders



Juicers



Cookware



Tools and
Gadgets

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances, cookware, tools and gadgets.

www.cuisinart.ca

©2026 Cuisinart Canada

100 Conair Parkway, Unit #1
Woodbridge, ON L4H 0L2

Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

Printed in China

Trademarks or service marks of third parties referred to herein are the trademarks or service marks of their respective owners.

IB-19446-CAN