 
 




# L-shaped Desk

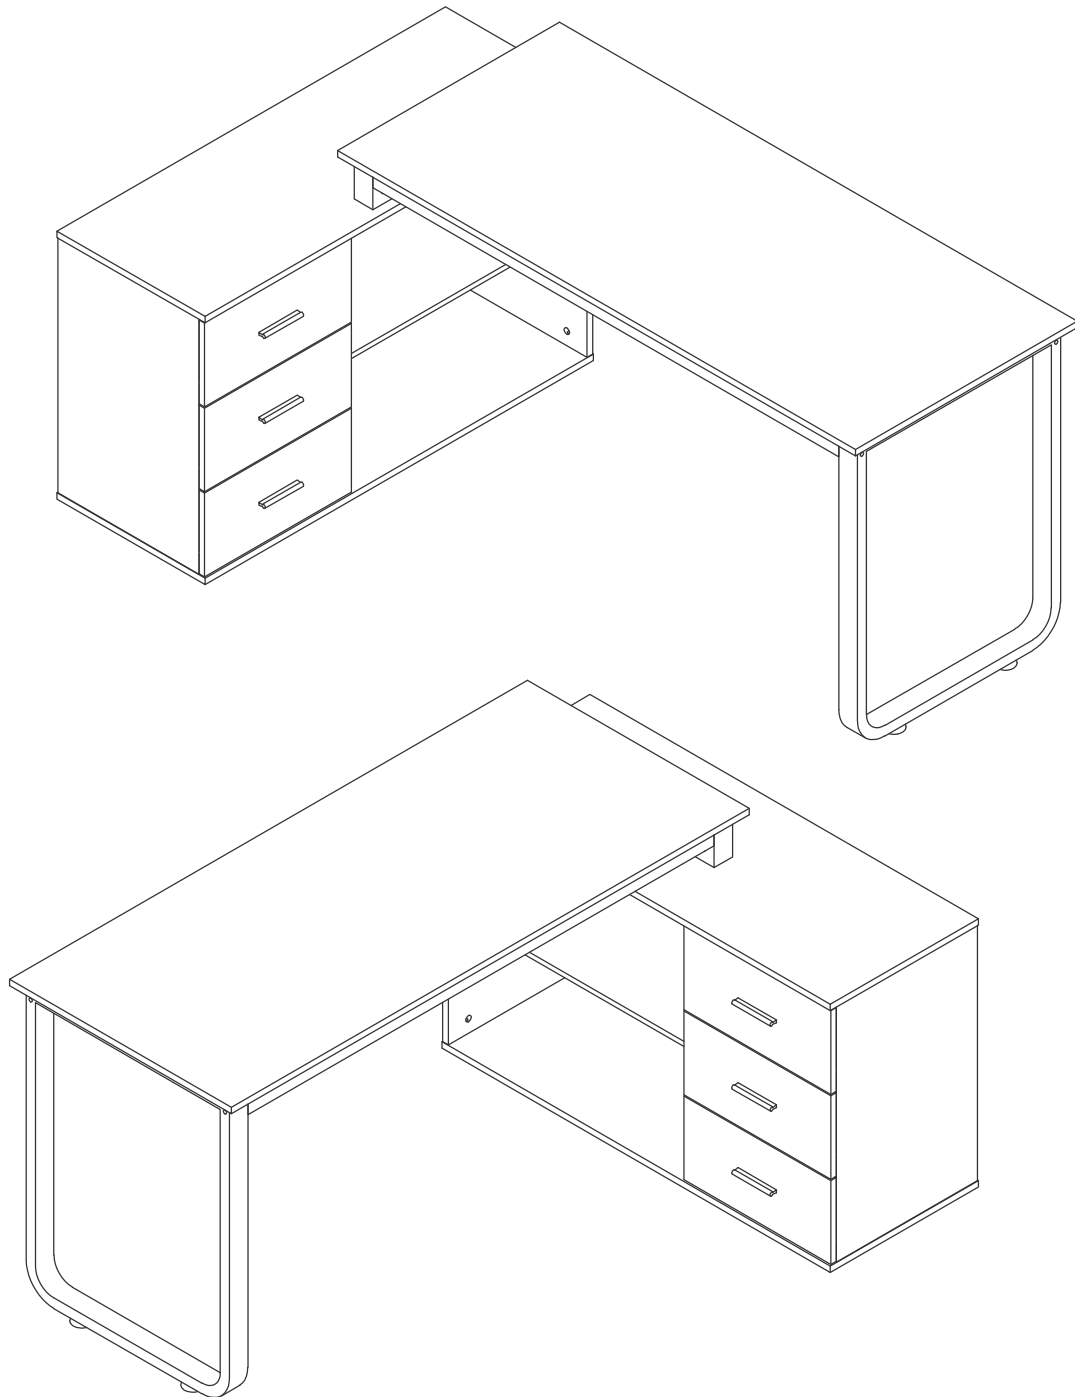

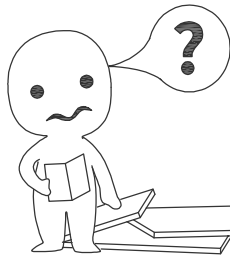



### **IMPORTANT INFORMATION!**

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

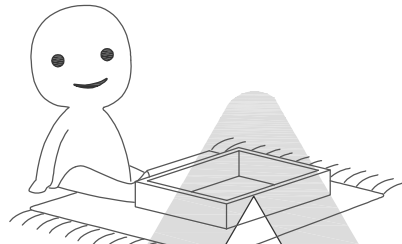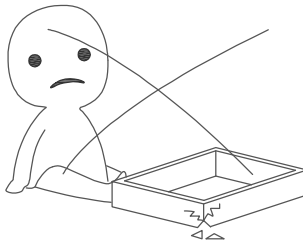





### **AVOID SCRATCHES!**

  In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

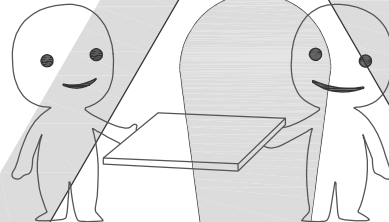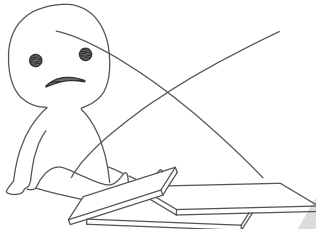

### **IMPROVE EFFICIENCY !**

    Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

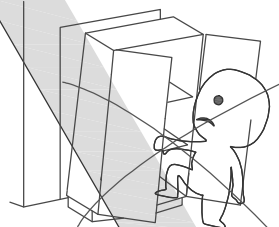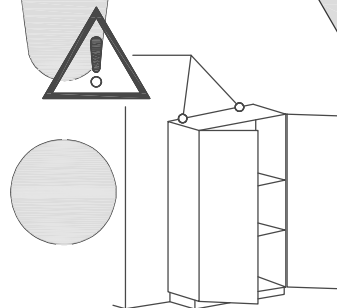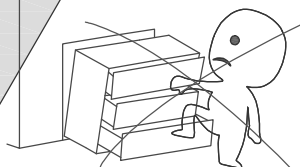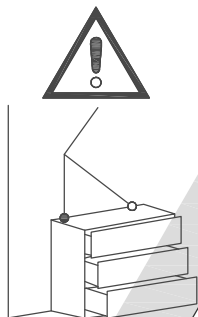

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

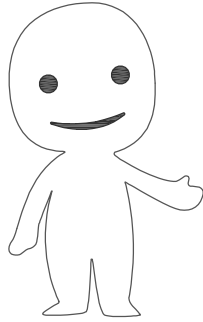


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 28



M5 x 45 mm

B x 28



 
Ø15 x 10 mm

C x 24



M3.5 x 12 mm

D x 12



M5 x 40 mm

E x 4



 
M6 x 35 mm

F x 4




M6 x 60 mm

G x 4



M6 x 70 mm

 H x 14



Ø8 x 40 mm

I x 4



 
Ø6 mm

J x 6




M4 x 18 mm

K x 2



M8

 L x 3




M x 6




Ø30 x 3 mm

 N x 1




540 x 40 mm

 O x 1




4 #

 17

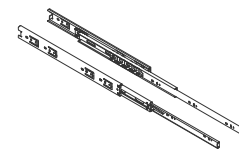


14"(3508W) 3 SET

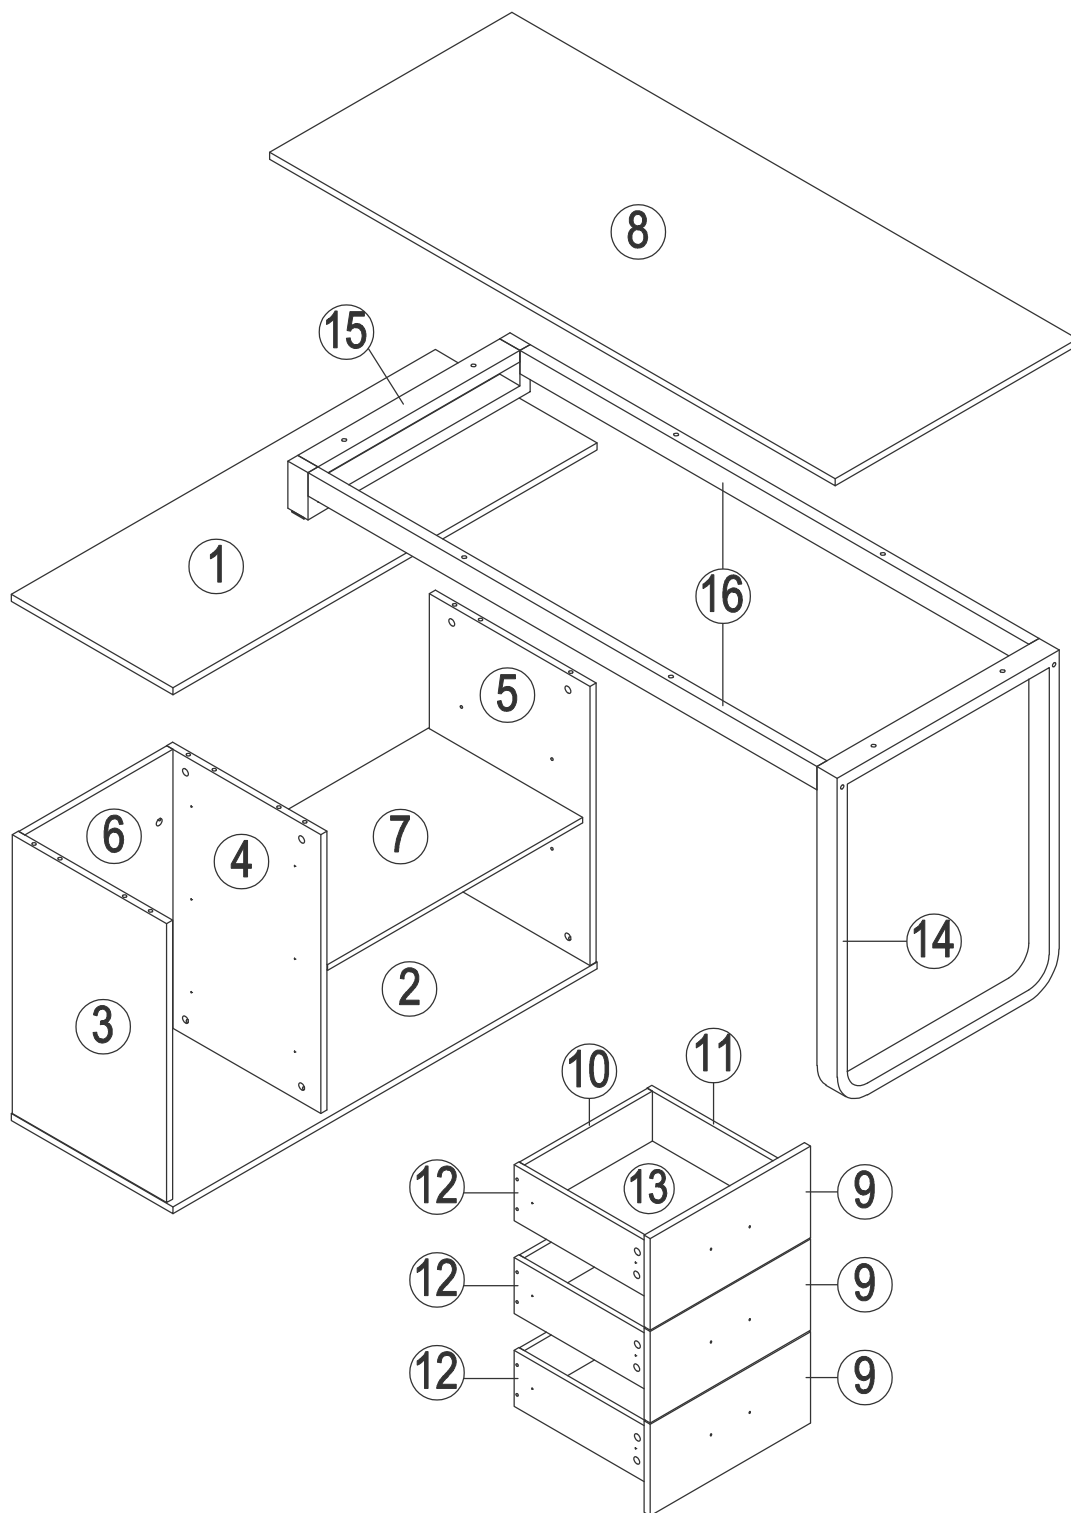 


**Slides Must Be Separated Before Assembly.  
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

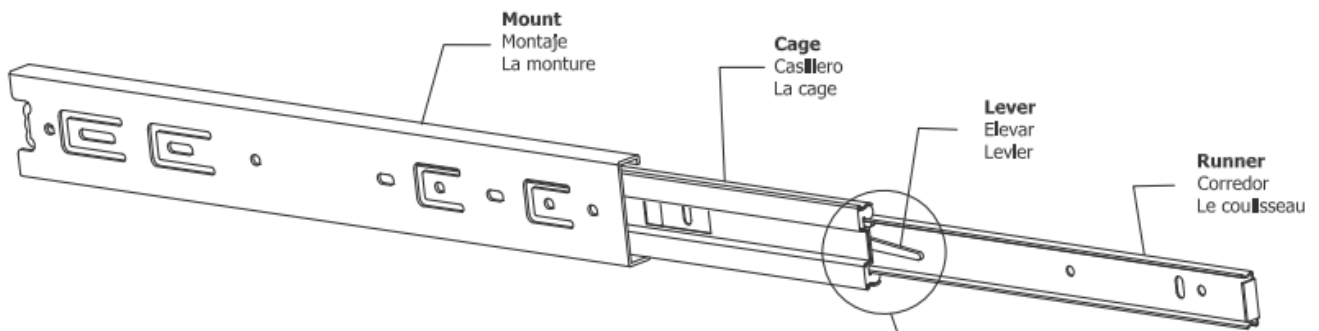

 
**STEP 1: Extend Slide**  
Extender la diapositiva  
Extendre la diapositive

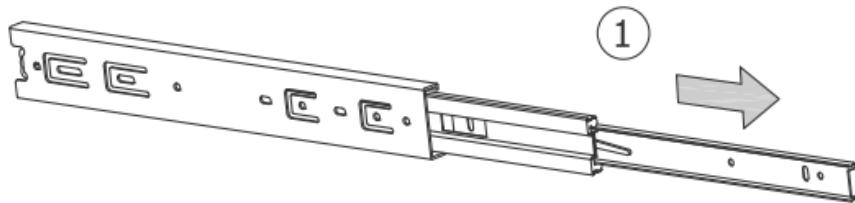

 **STEP 2: Push Lever UP**  
Empujar hacia arriba  
Lever le levier

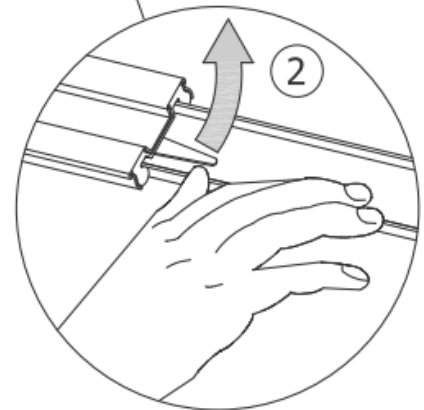

 **STEP 3: Remove Runner**  
Quitar el corredor  
Enlever le coureur

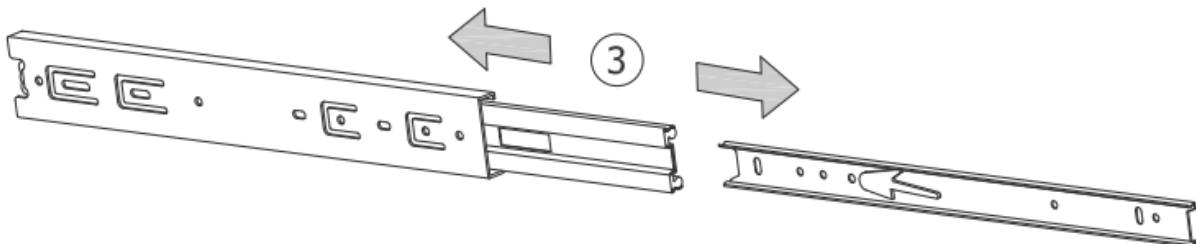


1

K x 2



M8

 Rotate part(K) into the bottom of leg 14 as shown.

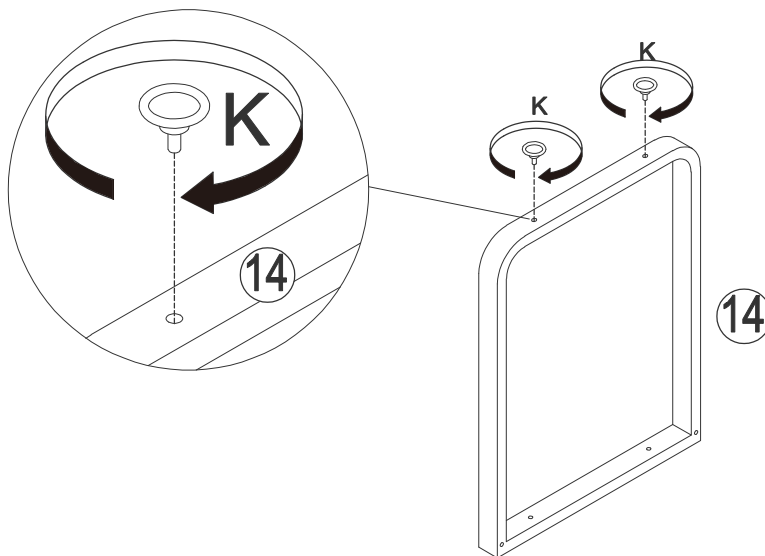


2


G x 4



 M6x70MM



 Attach leg 14 and part 15 to bar 16 with screw(G) as shown.

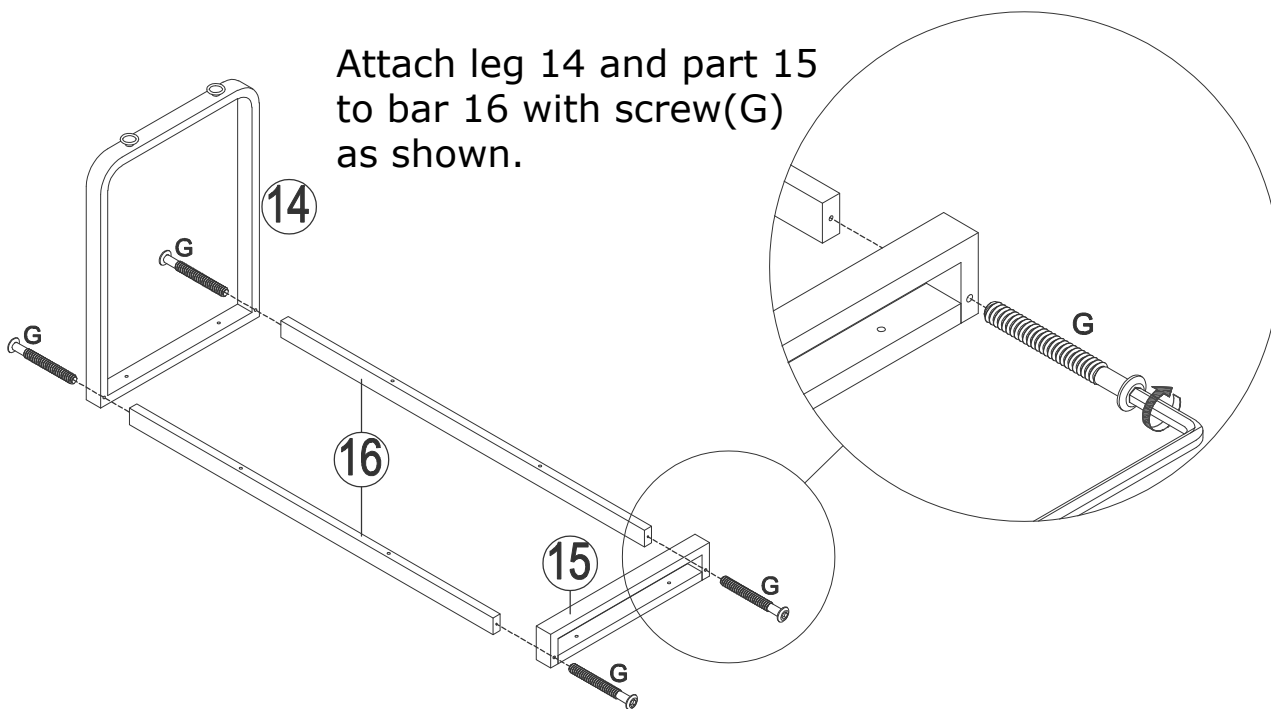

3

E x 4

 
 
 
 


M6x35MM

F x 4




M6x60MM

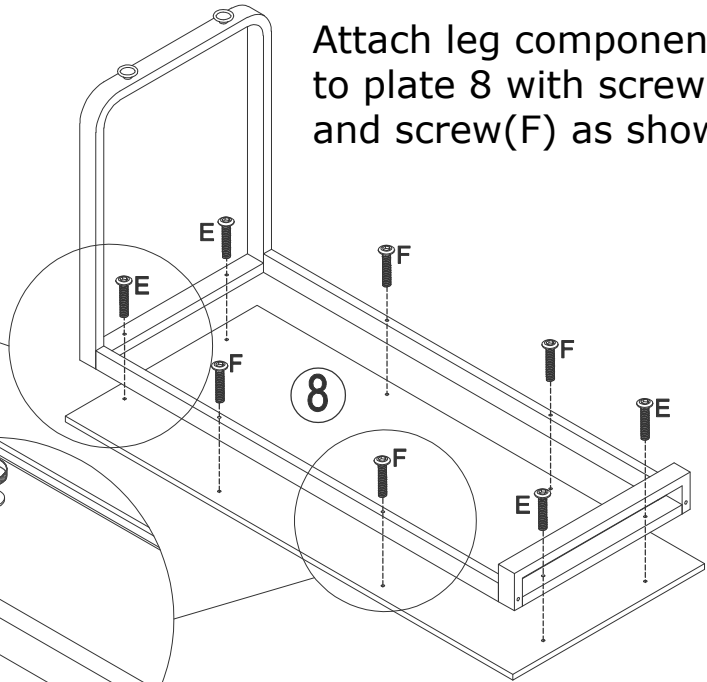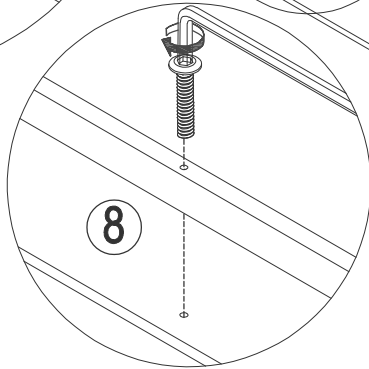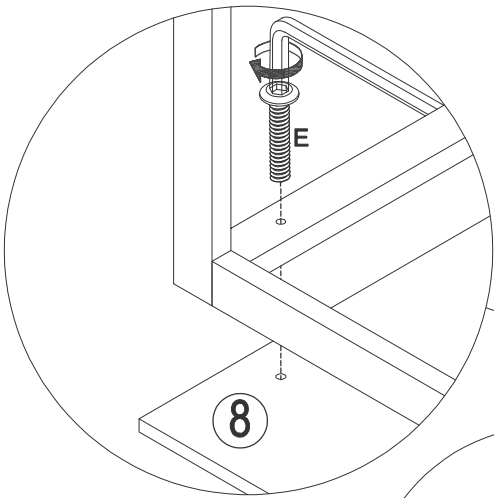


Attach leg component to plate 8 with screw(E) and screw(F) as shown.

4

 N x 1



540x40MM

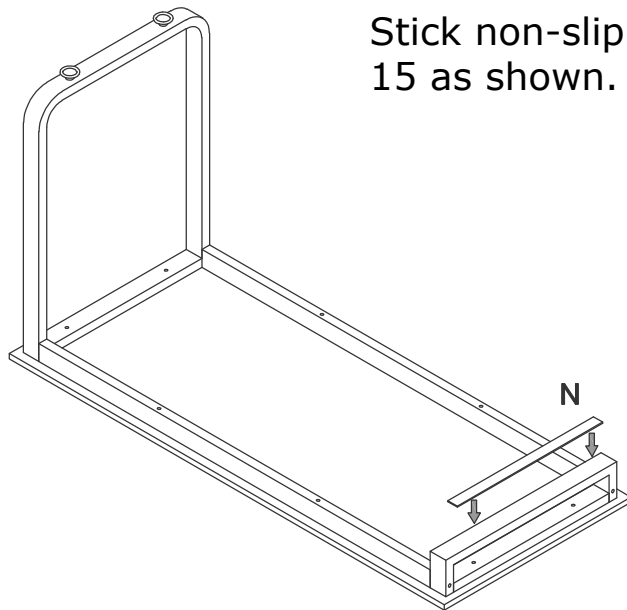 


Stick non-slip mat(N) to part 15 as shown.

5

C x 6



 
M3.5x12MM



Back section of part


17

 17

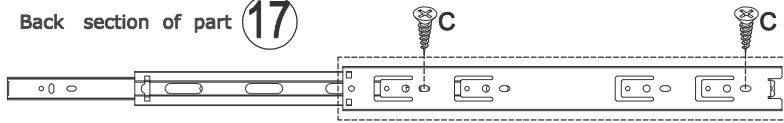


Separate glides. Fix slide rail 17 to plate 3 with screw(C) as shown.

 Please pay attention to the holes where the accessories are inserted.



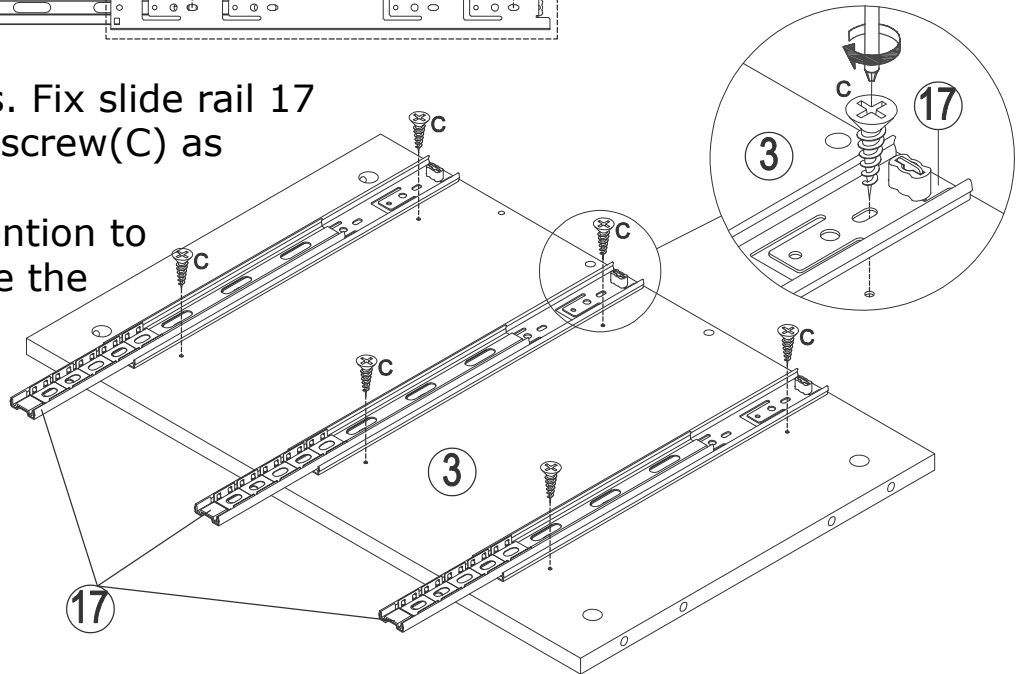


6

 A x 2



M5x45MM

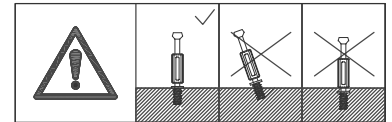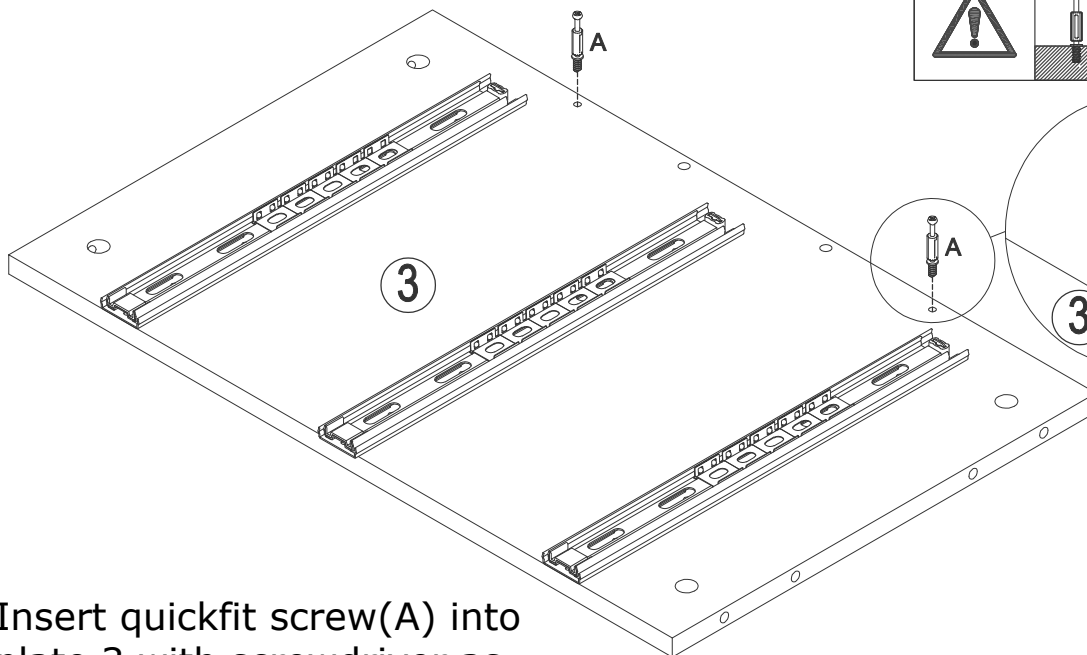   


Insert quickfit screw(A) into plate 3 with screwdriver as shown.

7

C x 6



 
M3.5x12MM




Back section of part

17

 17

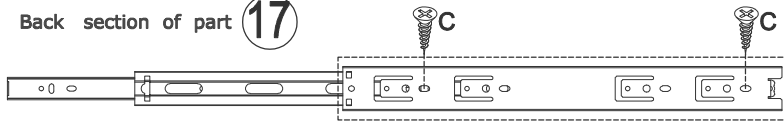

 Fix slide rail 17 to plate 4 with screw(C) as shown. Please pay attention to the holes where the accessories are inserted.



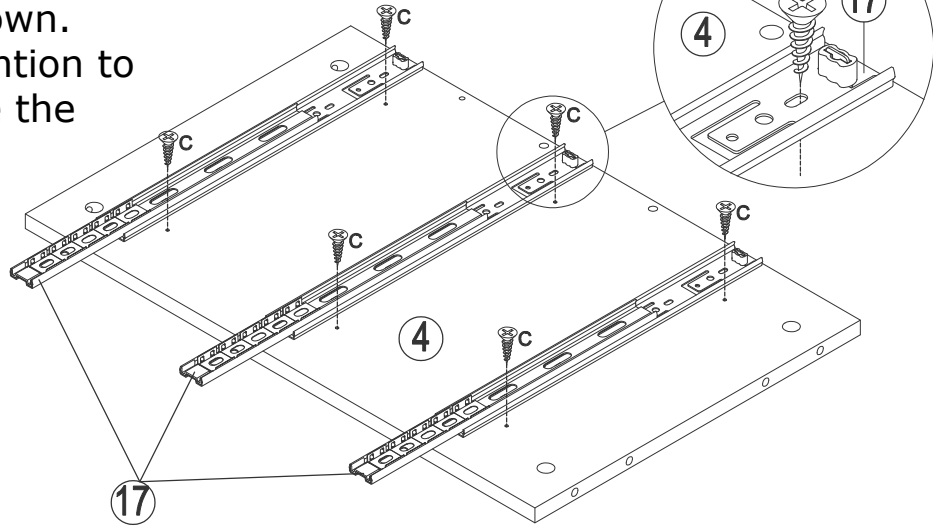


8

   A x 2



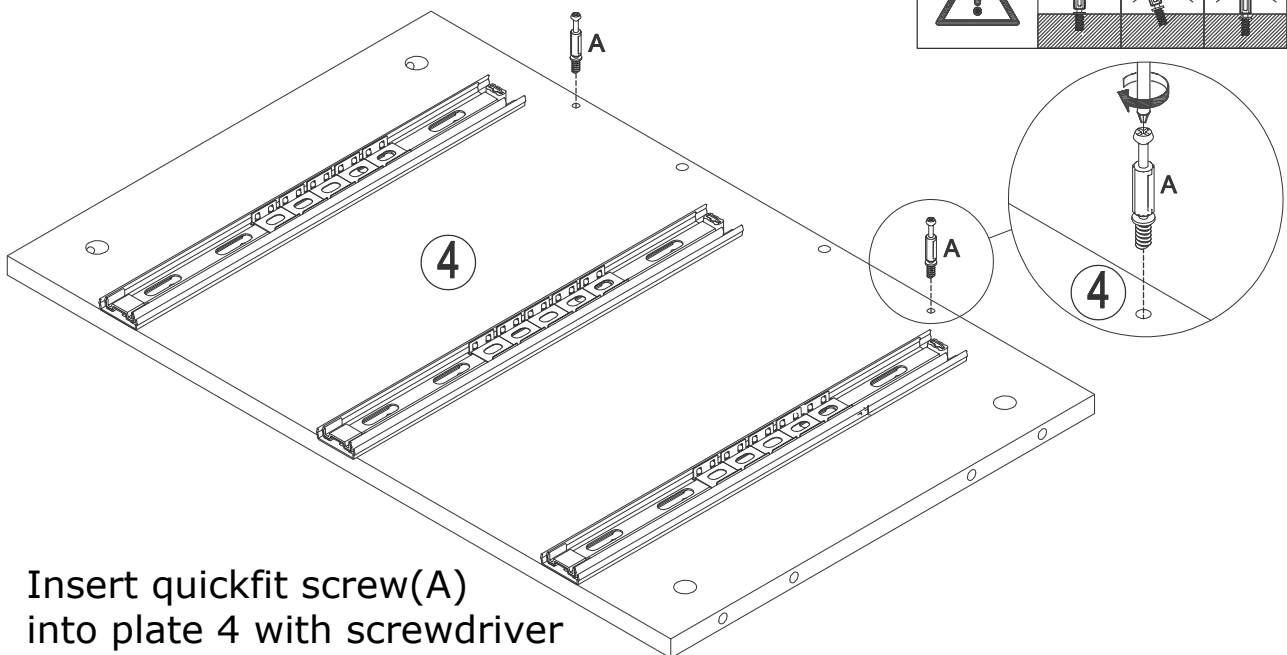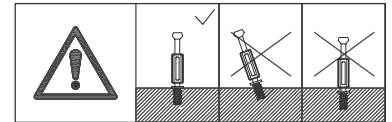

M5x45MM

 
 
 
 
 


Insert quickfit screw(A) into plate 4 with screwdriver as shown.

9


B x 4  
  
Ø15x10MM




H x 4  
  
Ø8x40MM

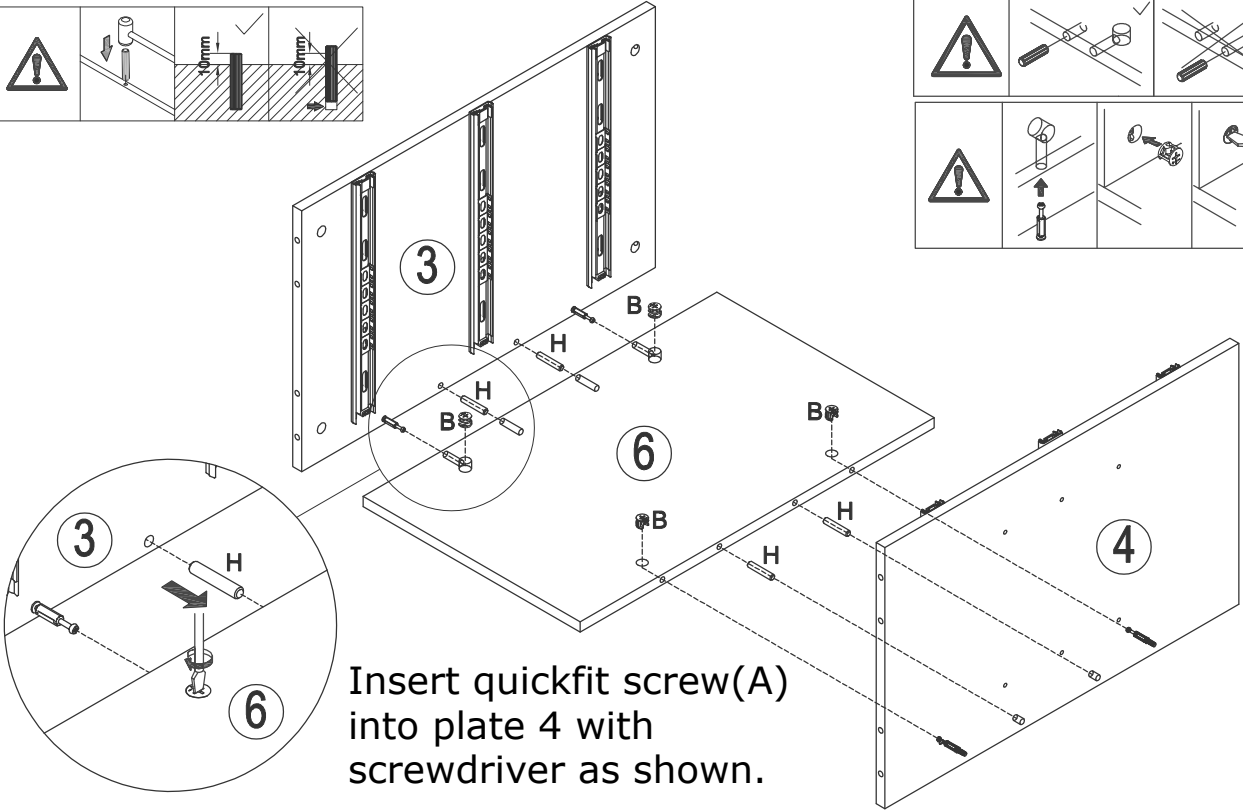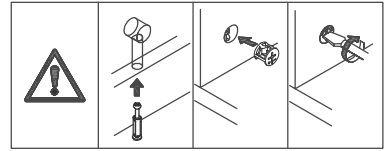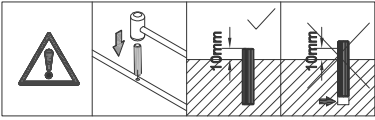

Insert quickfit screw(A) into plate 4 with screwdriver as shown.

10

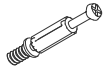A x 6  
  
M5x45MM

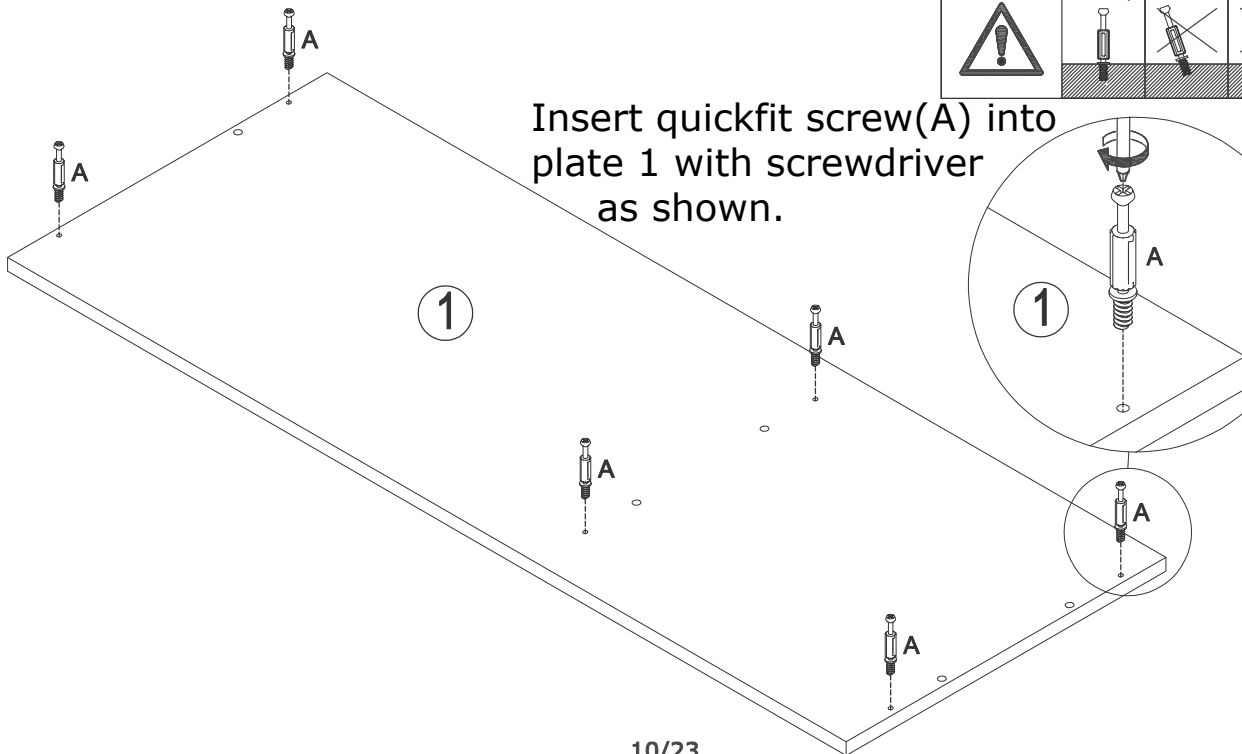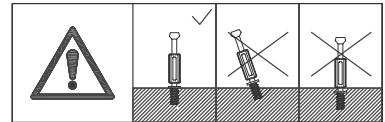   

Insert quickfit screw(A) into plate 1 with screwdriver as shown.

# 11

B x 6

 
 
 
 


Ø15x10MM

H x 5




Ø8x40MM

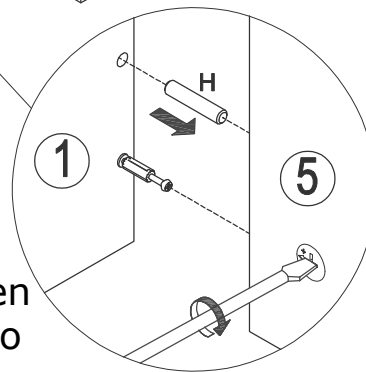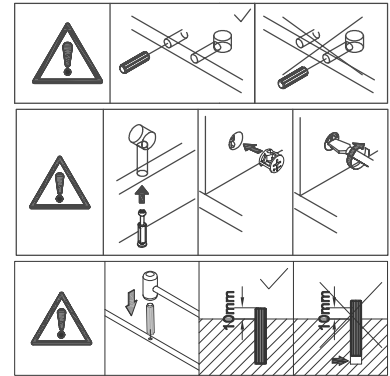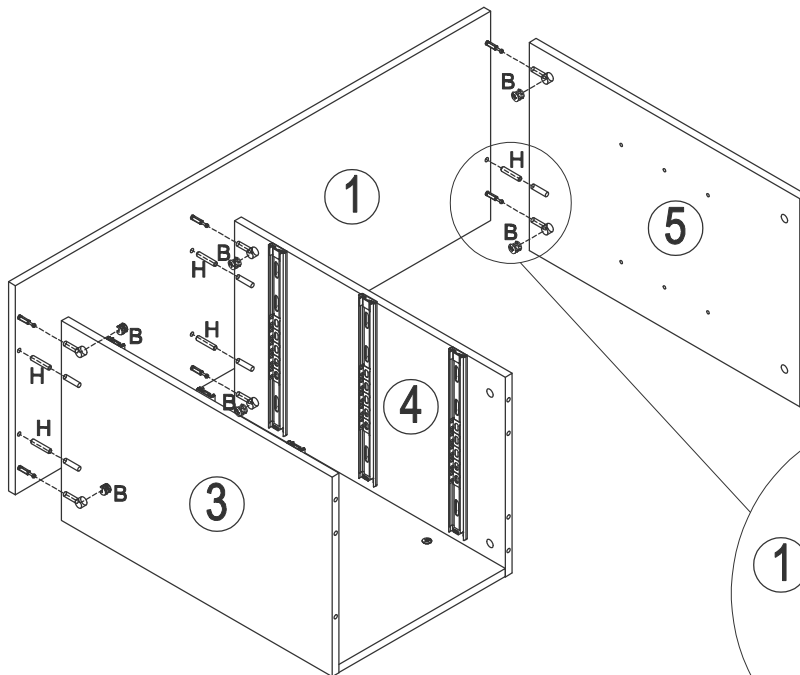





Cover plate 1 to plate 3,4,5 with wooden dowel(H),turn cam locks(B) clockwise to tighten as shown.

# 12

 A x 6



M5x45MM

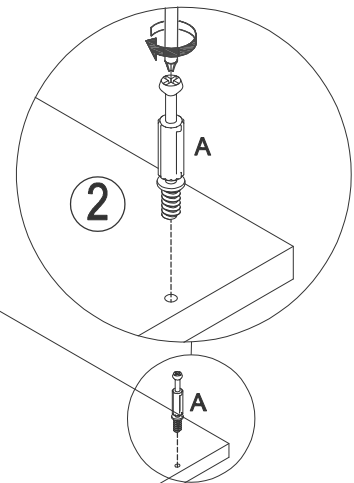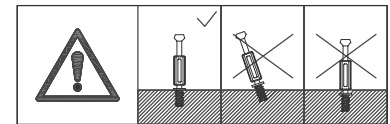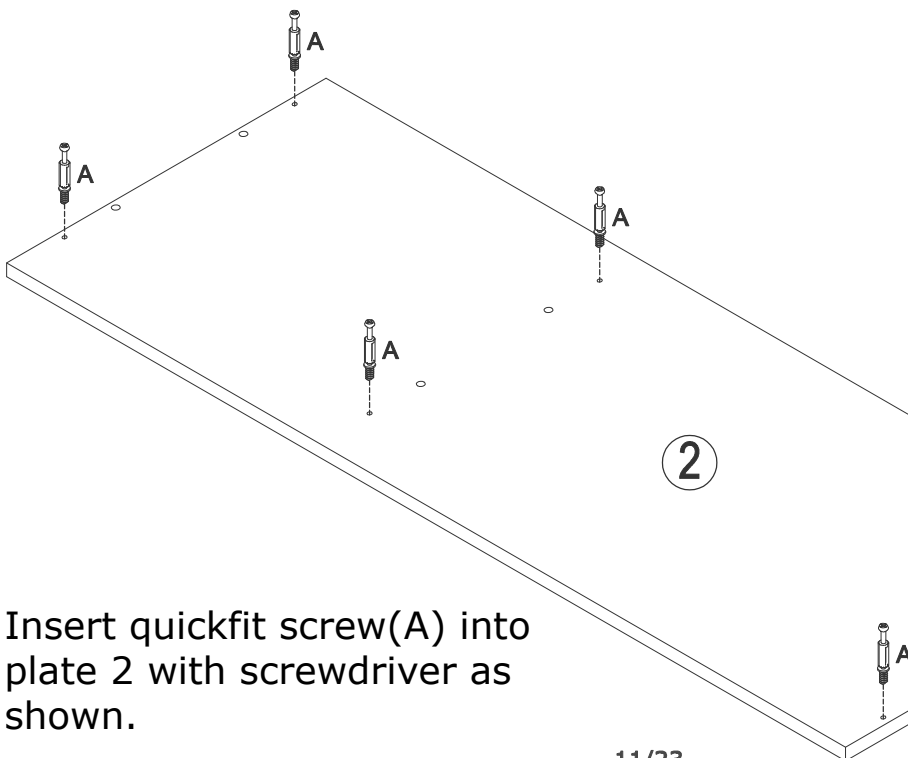    

Insert quickfit screw(A) into plate 2 with screwdriver as shown.

13

B x 6

 
 
 
 
 


Ø15x10MM

H x 5




Ø8x40MM

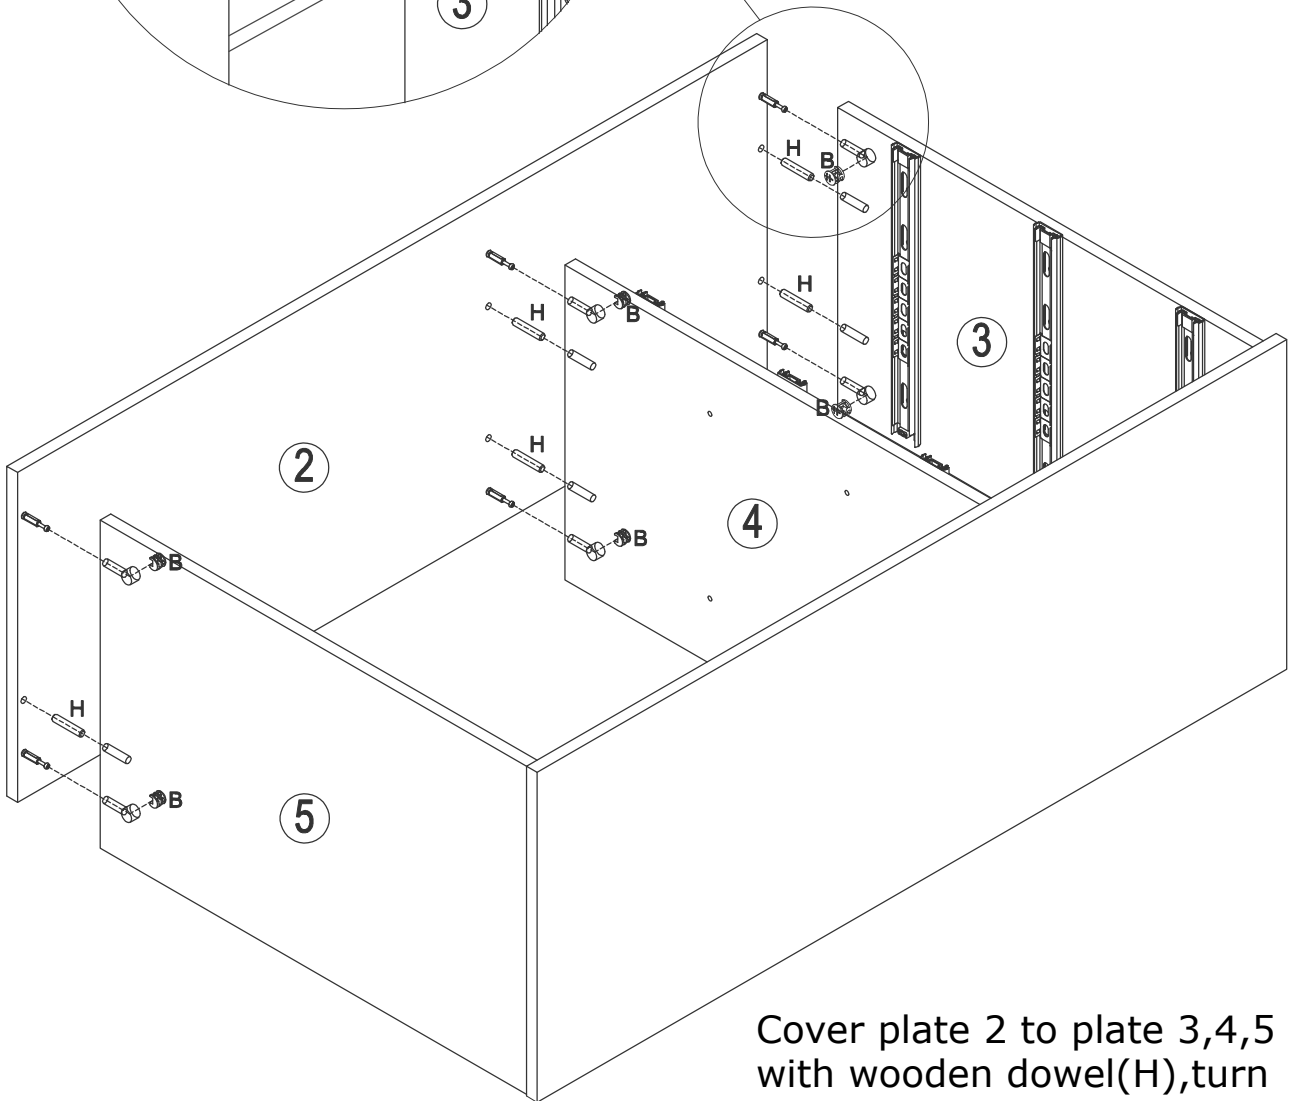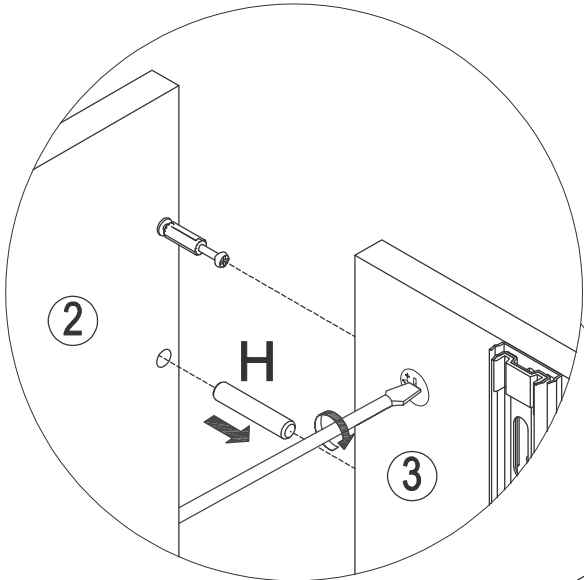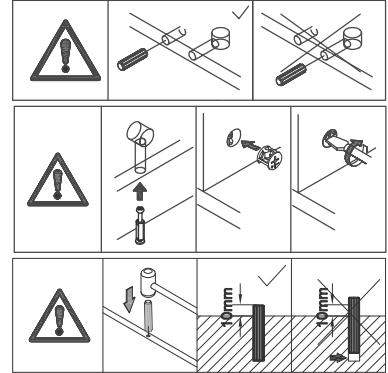

Cover plate 2 to plate 3,4,5 with wooden dowel(H), turn cam locks(B) clockwise to tighten as shown.


14

 M x 6  
Ø30x3MM

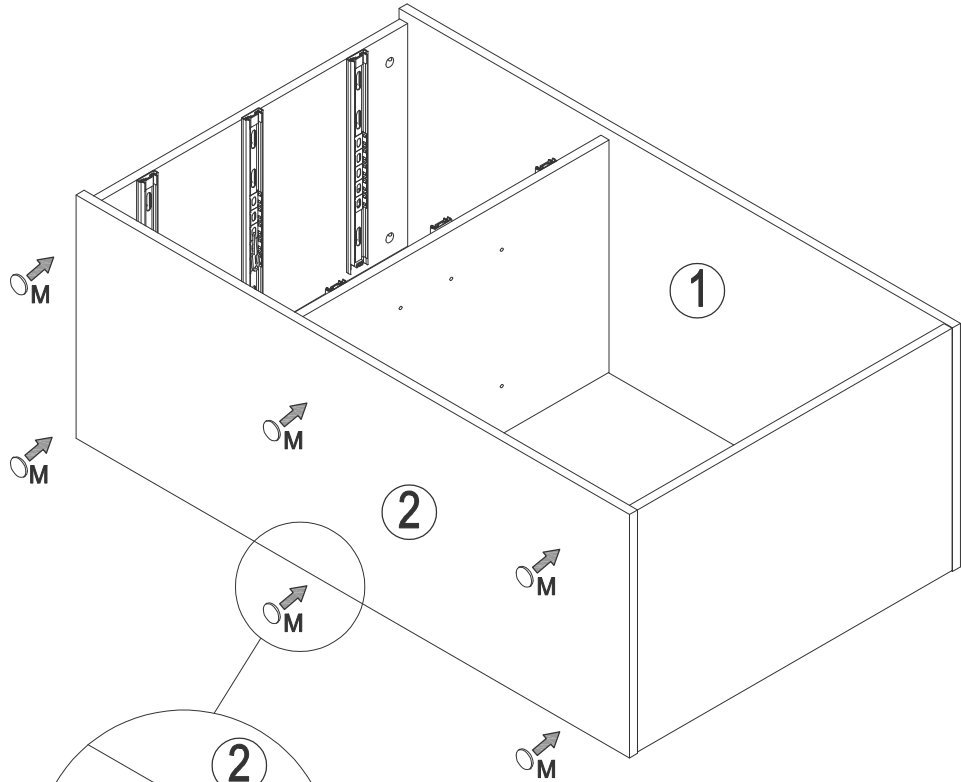

OR

 Stick non-slip mat(M) to bottom plate 2 or plate 1 as you like.

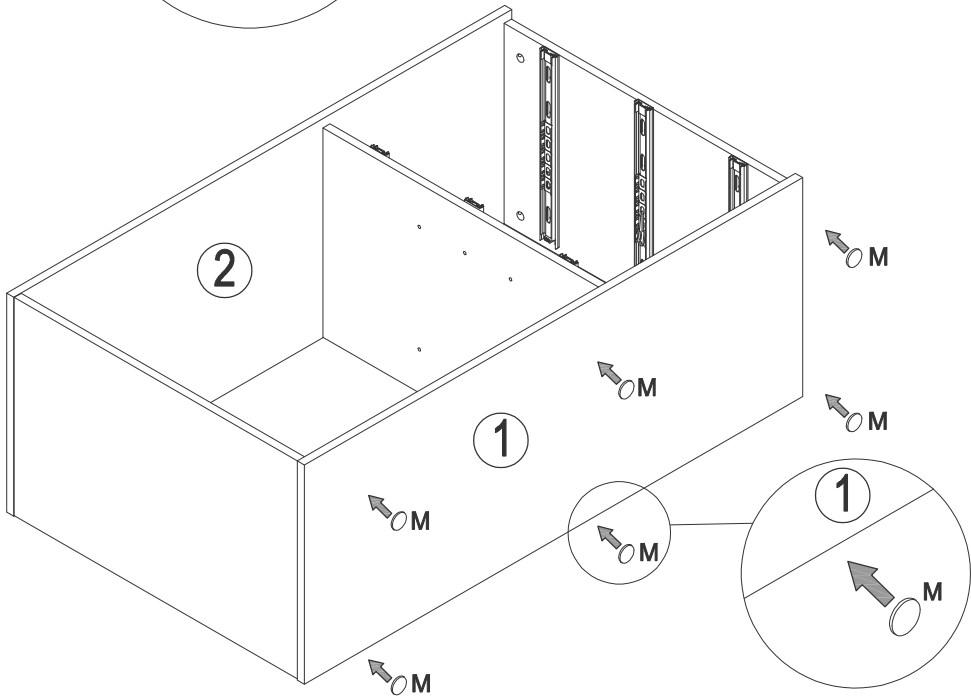


15


I x 4




 
Ø6

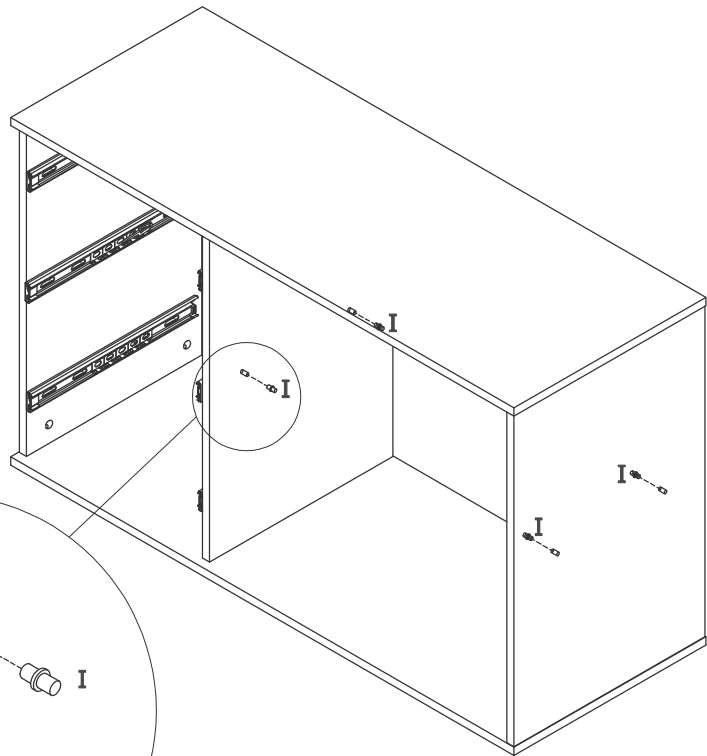

OR

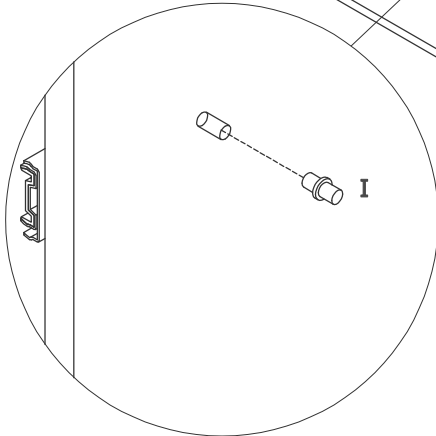 


  Insert part(I) into a proper position of side plate 4 and 5 as shown.

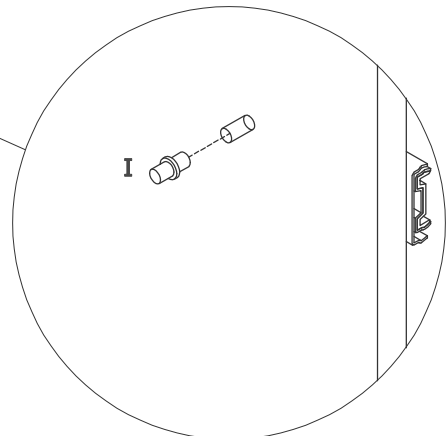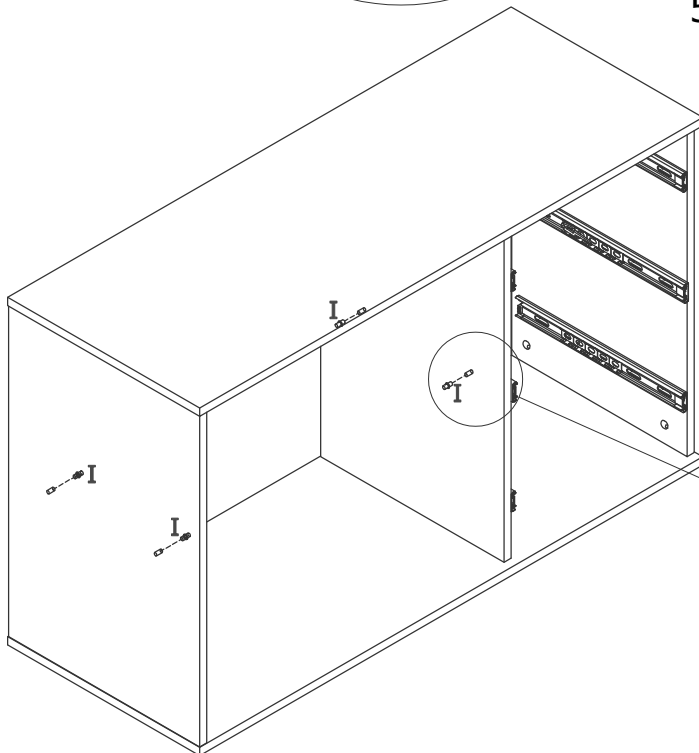


16

 Put shelf plate 7 as shown.

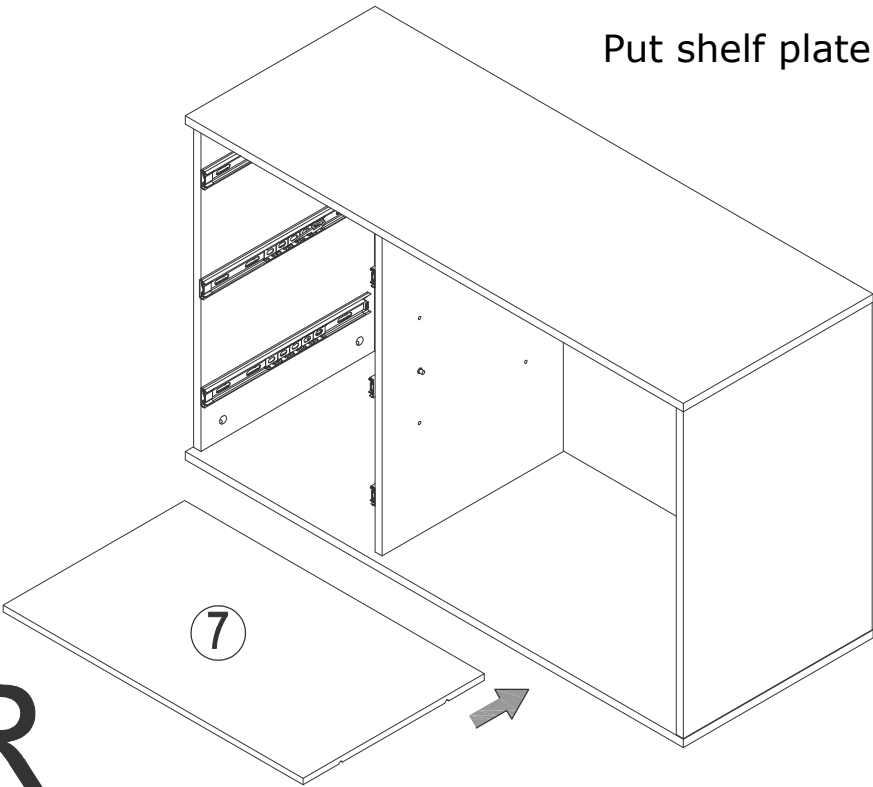


OR



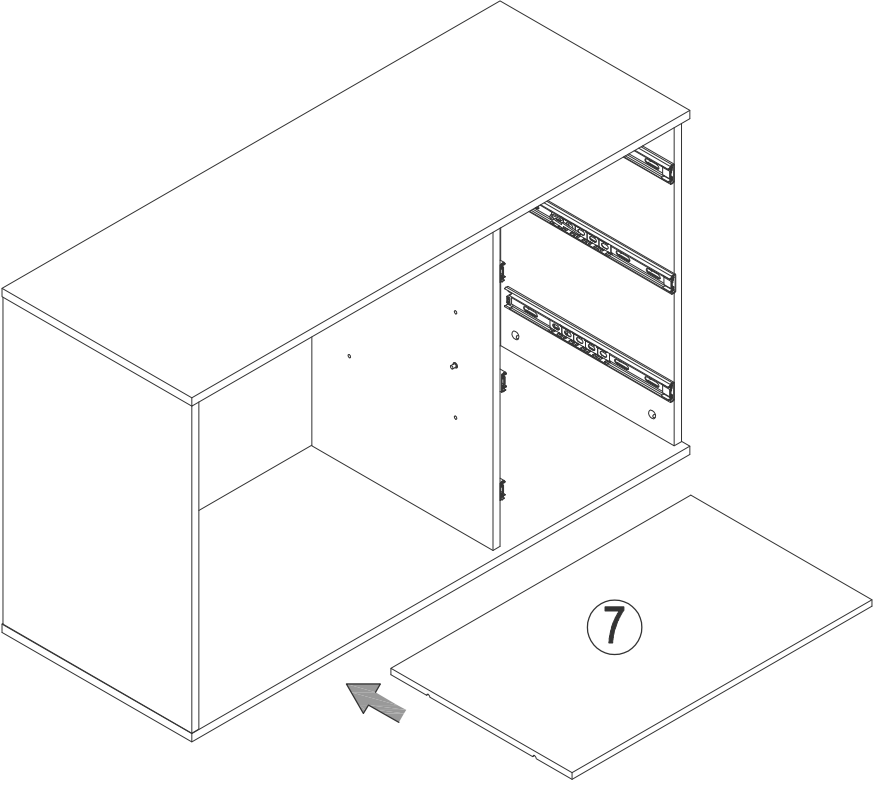 


17

 A x 12



M5x45MM

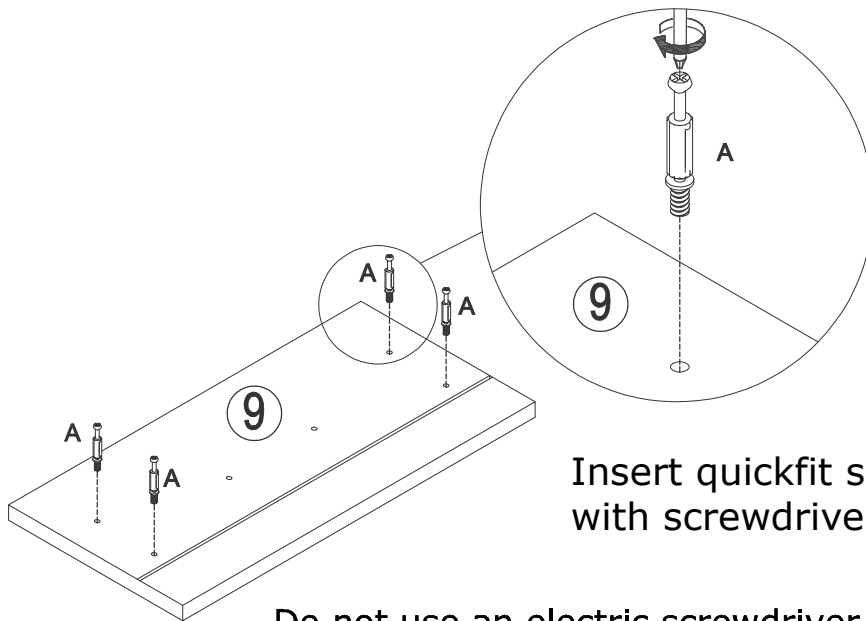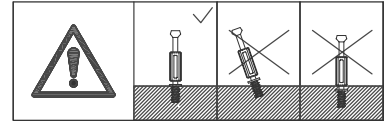   

Insert quickfit screw(A) into plate 9 with screwdriver as shown.

Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack

X3

18

B x 12



 
 
 
Ø15x10MM

J x 6




M4x18MM

L x 3

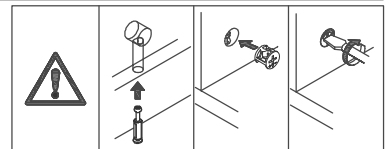


 Attach plate 9 to plate 11 and 12, turn cam locks(B) clockwise to tighten as shown. Fix handle(L) to plate 9 with screw(J) as shown.

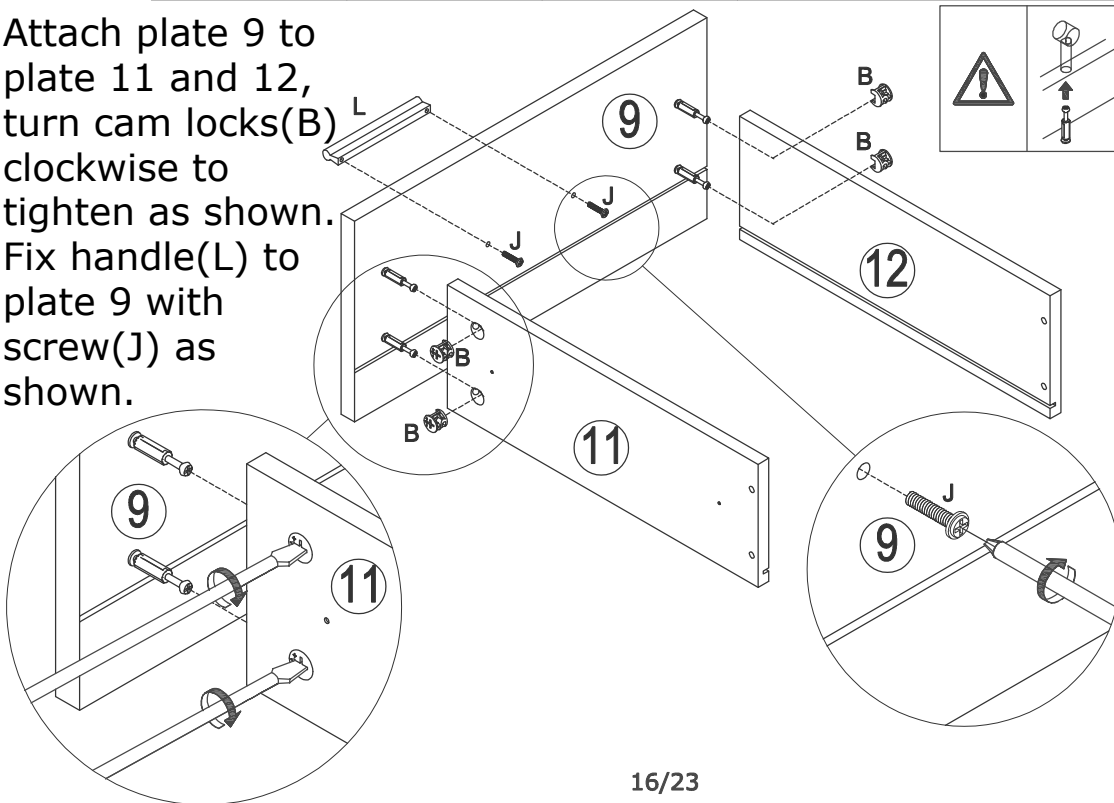

X3

 
19

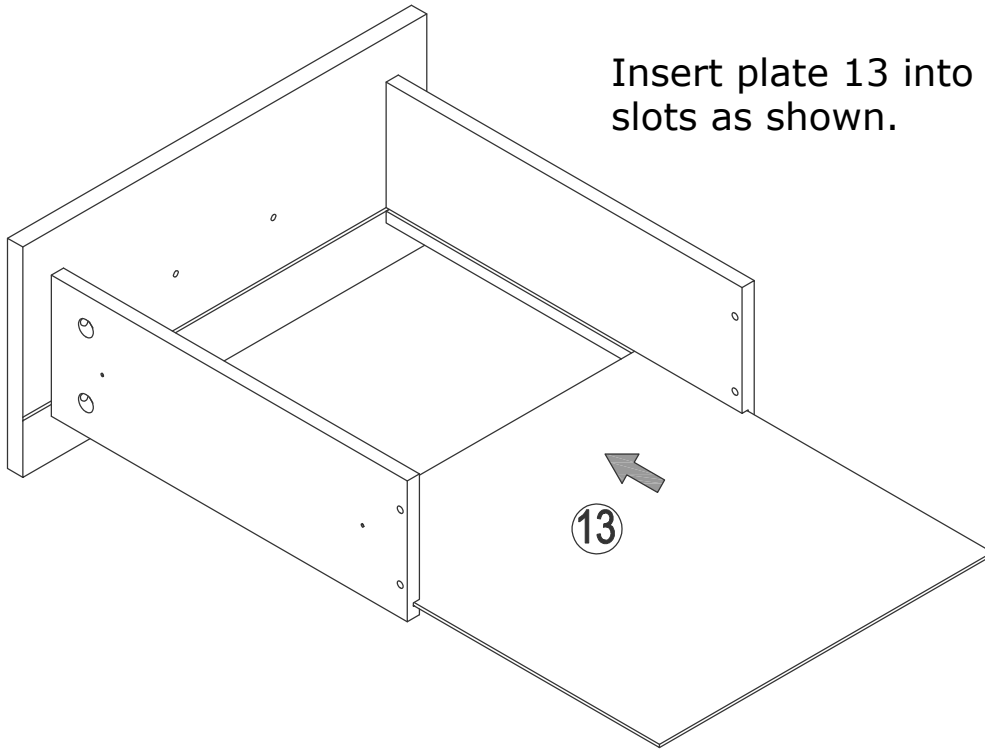

Insert plate 13 into available slots as shown.

X3

 20

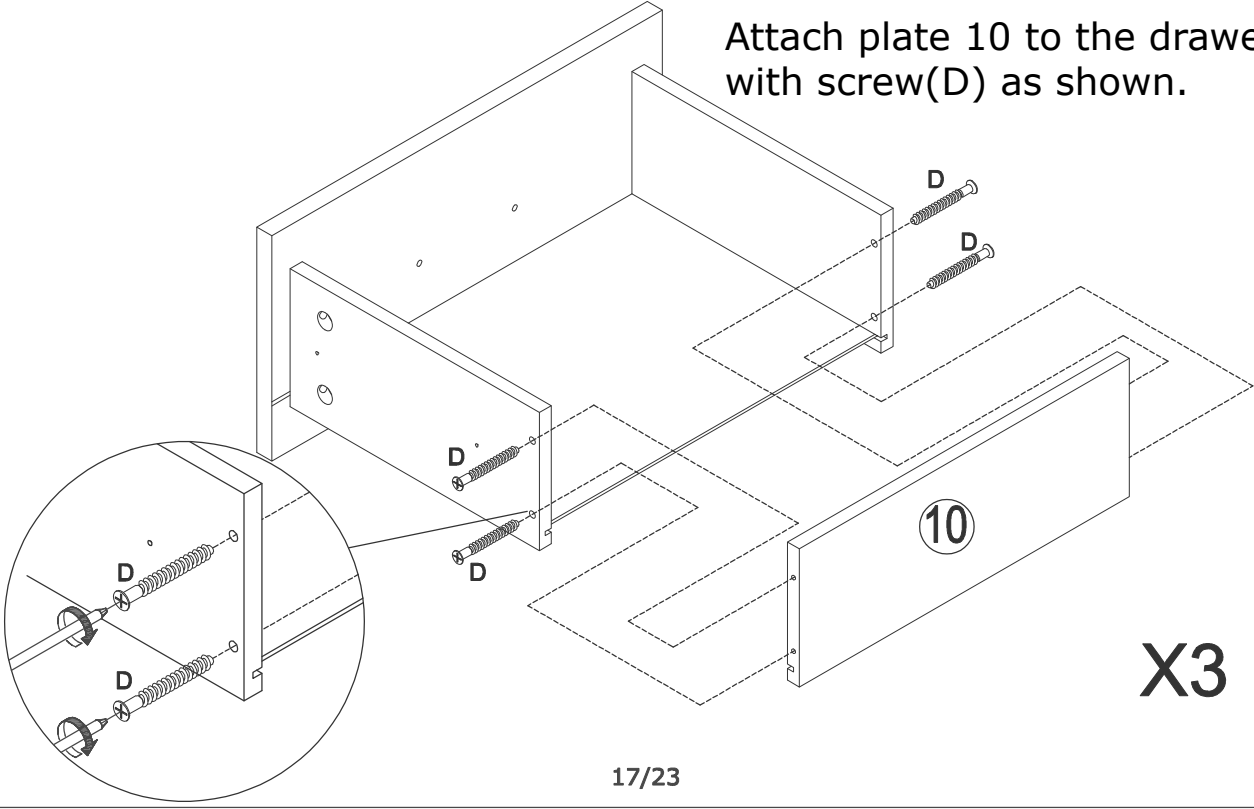

Attach plate 10 to the drawer with screw(D) as shown.

 
X3

21


C x 12



M3.5x12MM



 
Fix runner 17 to plate 11 and 12 with screw(C) as shown.  
Please pay attention to the holes where the accessories are inserted.

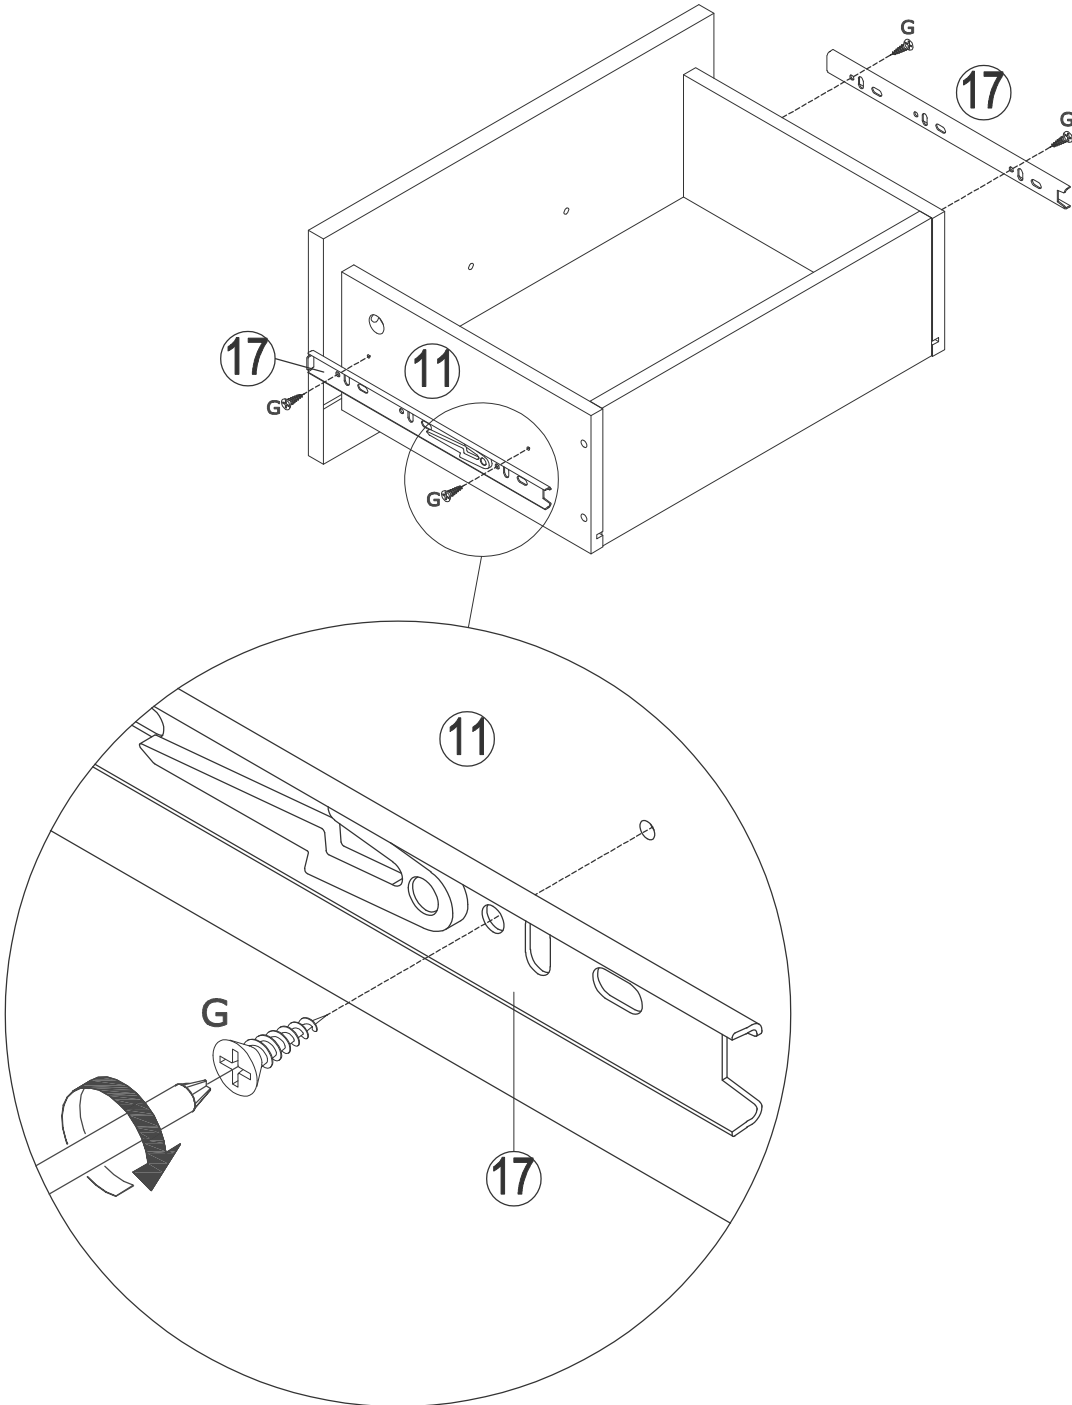



X3

22

 Align rails, put all drawers.

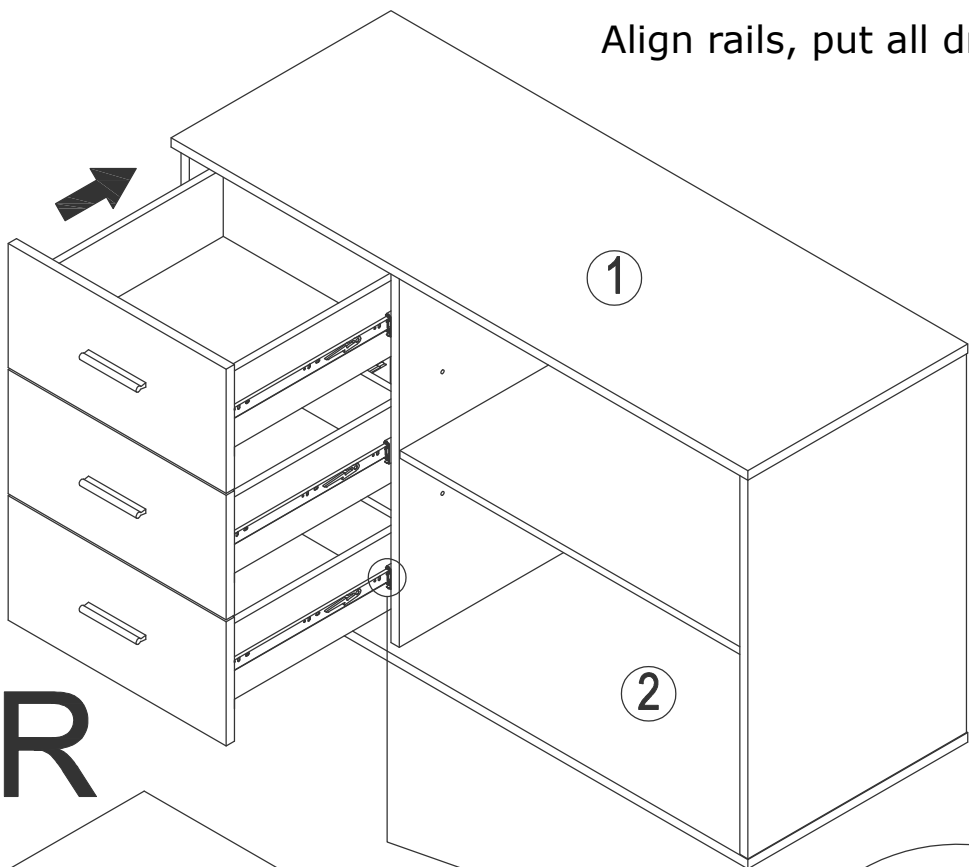


OR

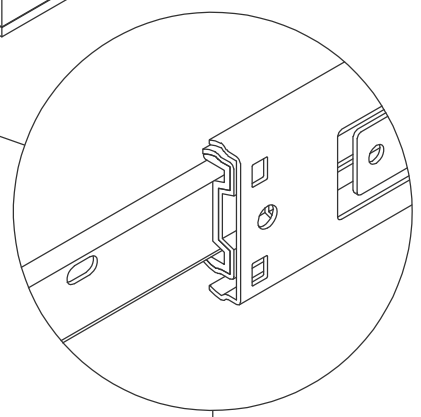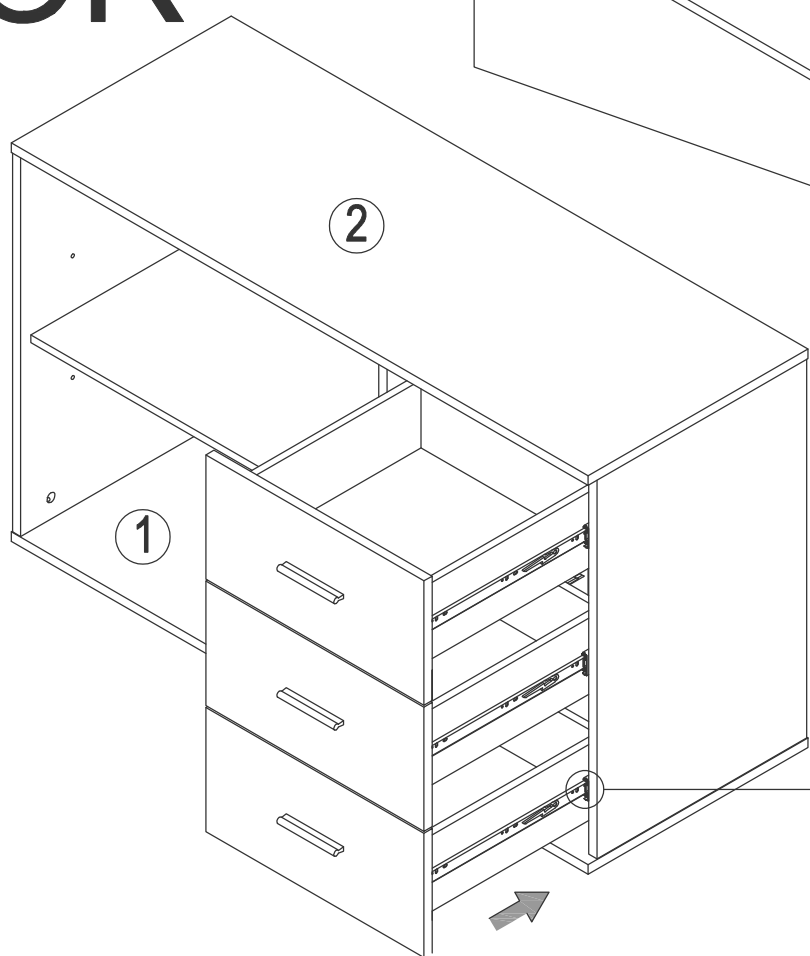  


23

 
Put the table top as shown.

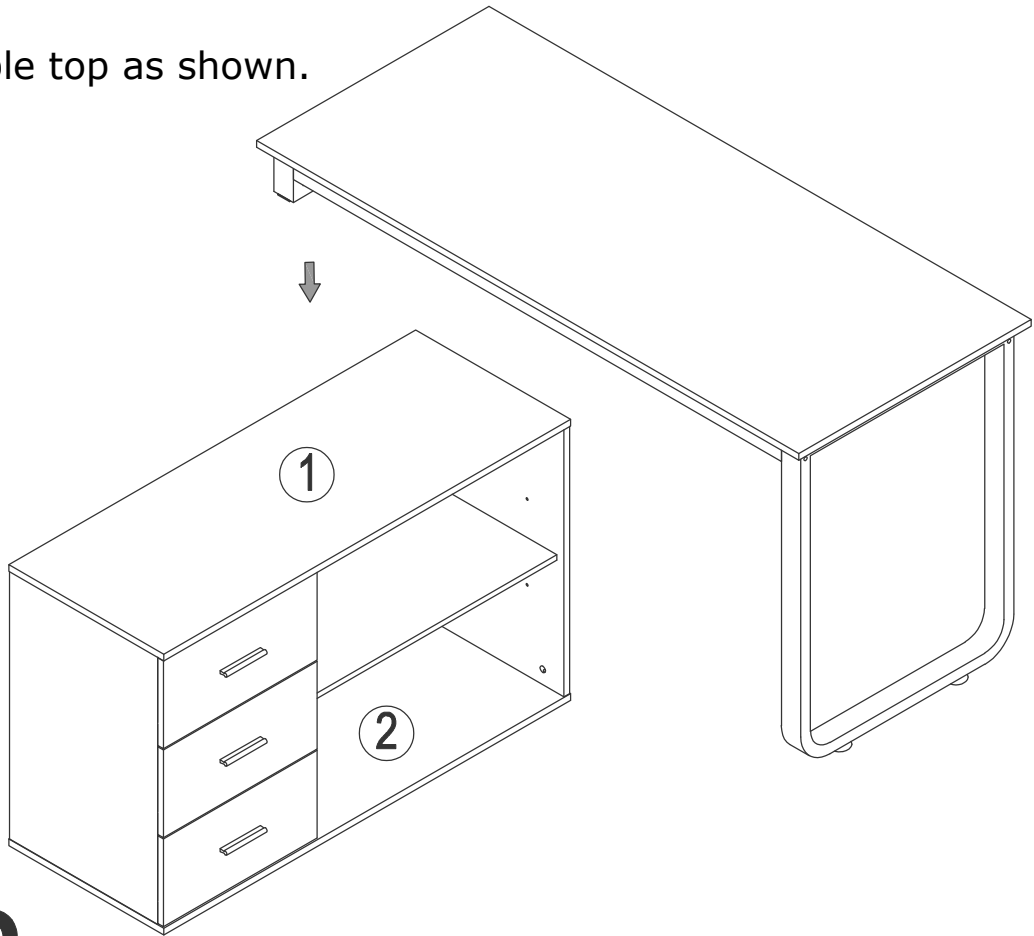


OR

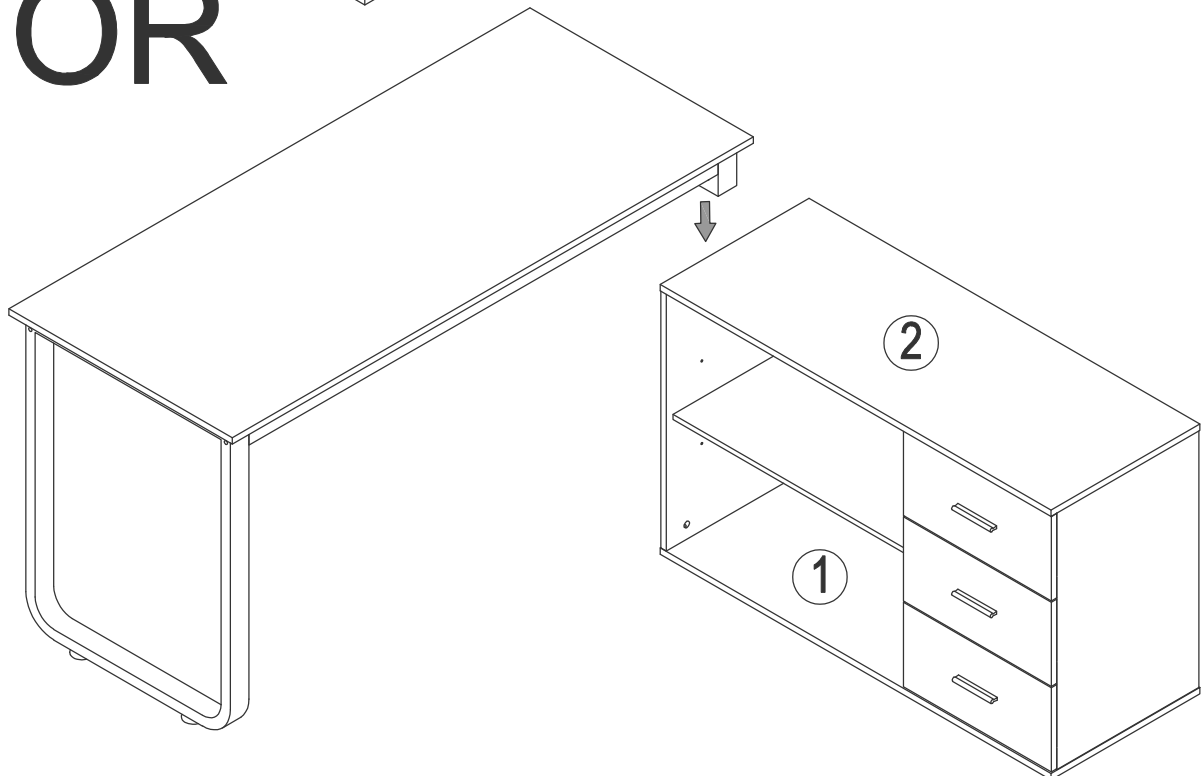 

24

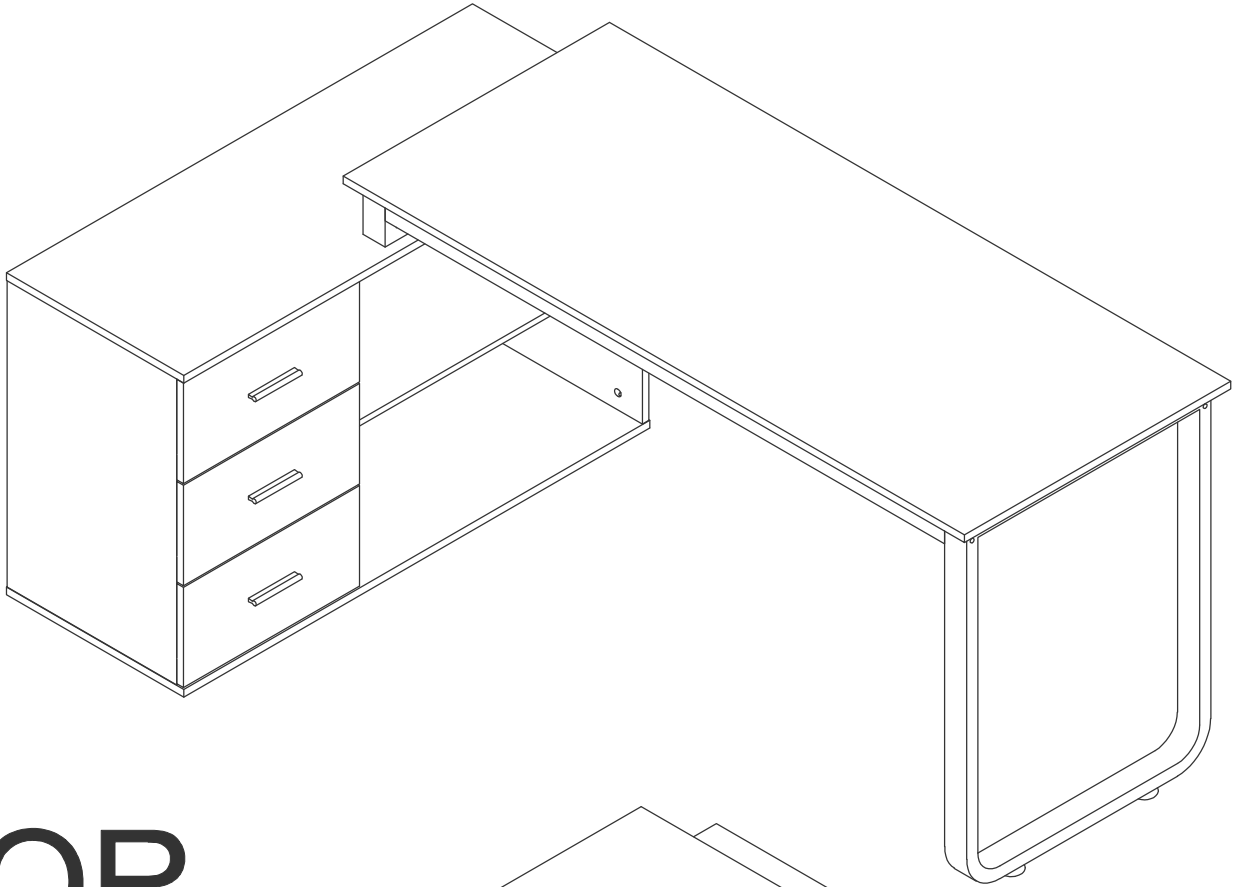 

OR

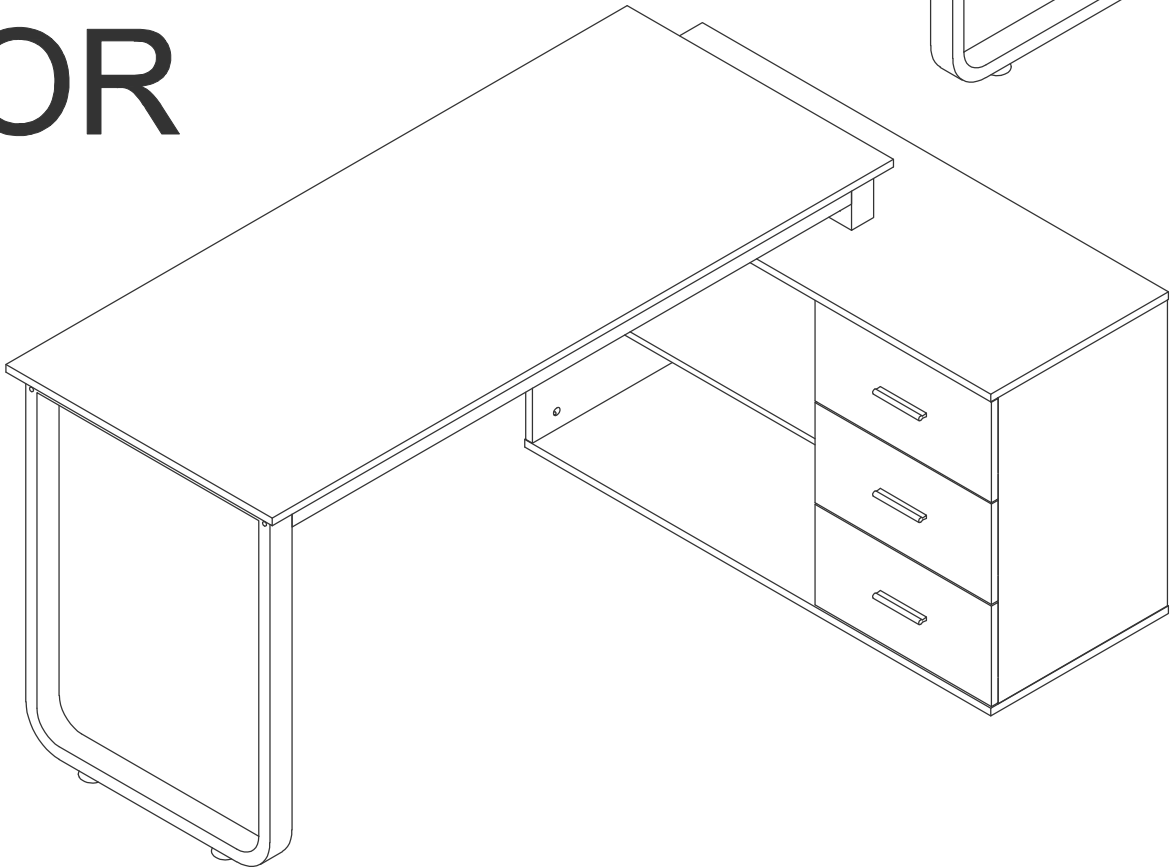 

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.