







 



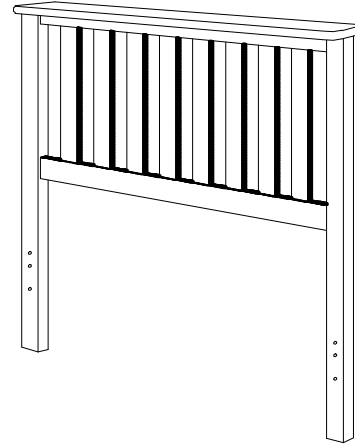


ASSEMBLY INSTRUCTIONS


No	Hardware List	Qty
1	JCBC Screw M6 x 100mm 	4 Pcs
2	Barret Nut 	4 Pcs
3	Wooden Button 14.5 	4 Pcs
4	JCBC Screw M6 x 60mm 	6 Pcs
5	M6 Flat Washer 	6 Pcs
6	Nylon Washer 	6 Pcs
7	M6 Hex Nut 	6 Pcs
8	M4 Allen Key 	1 Pc
9	Minifix Bolt 	3 Pcs
10	Housing 13.5mm 	3 Pcs
11	Plastic Cap 	3 Pcs
12	Wrench 10mm 	1 Pc



IMPORTANT NOTE :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched .
- Check to be sure that you have all parts and hardware .
- Remove all wrapping materials, including packing straps before you start to assemble.
- Keep all hardware parts out of reach of children.

No	Part List	Qty
A	Center Frame	1 Pc
B	Side Post	2 Pcs
C	Caprail	1 Pc

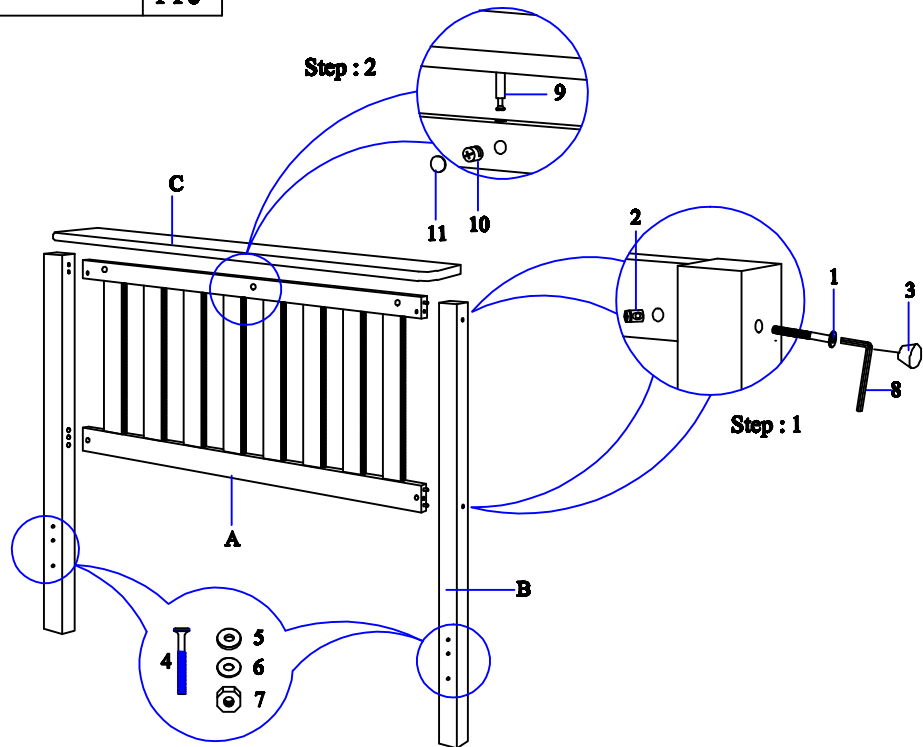

* NOTE *

DO NOT TIGHTEN ALL THE SCREWS UNTIL COMPLETELY ASSEMBLED.

- THIS PAGE LISTS ALL THE CONTENTS INCLUDED IN THE BOX. PLEASE TAKE TIME TO IDENTIFY THE HARDWARE AS WELL AS THE INDIVIDUAL COMPONENTS TO THIS PRODUCT. AS YOU UNPACK AND PREPARE FOR ASSEMBLY, PLACE THE CONTENTS ON A CARPETED OR PADDED AREA TO PROTECT THEM FROM DAMAGE.
- CLEANING & CARE TREAT SURFACE WITH CARE. SURFACE IS RESISTANT TO SCRATCHES BUT IS NOT SCRATCH RESISTANT. CLEAN SURFACES WITH A DRY OR DAMP SOFT CLOTH. DO NOT USE ABRASIVE CLEANERS. HARDWARE MAY LOOSEN OVER TIME. PERIODICALLY CHECK THAT ALL CONNECTIONS ARE TIGHT.