

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over
1. For use with televisions weighing 69.2 lbs or fewer. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury. NEVER use with CRT televisions

 
2. Do not stand on the product

 WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover:
	<ul style="list-style-type: none">• ALWAYS install tipover restraint provided.• For use with televisions weighing 69.2 lbs or fewer. Use with heavier televisions may result in instability causing tipover resulting in death or serious injury. NEVER use with CRT TVs.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers.• Do not defeat or remove the drawer interlock system.
	<i>This is a permanent label. Do not remove!</i>



Assembly Instructions







Caution : You must read this before you proceed

TV CABINET



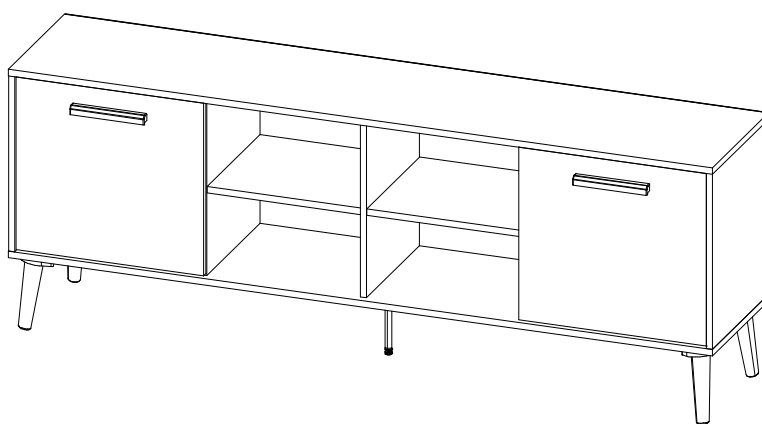




Parts List

  Label	Picture	Description	QTY
A		Top Panel	1
B		Left Side Panel	1
C		Right Side Panel	1
D		Center Panel Left	1

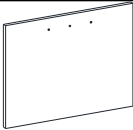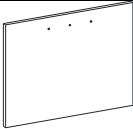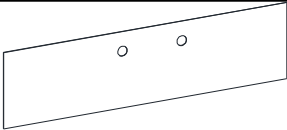      E		Center Panel Right	1
F		Center Panel	1
G		Shelf Panel Center	2
H		Shelf Panel Side	2
I		Door Panel Left	1
J		Door Panel Right	1
K		Back Panel	1
L		Bottom Panel	1
M		Handle	2
N		Leg Support	4
O		Leg (with pre-fixed PVC Foot)	4
P		Center Leg	1

   
Hardware

Label	Picture	Description	QTY
①		Cam Lock	11
②		Cam Bolt	11
③		Cam Cap	11
④		Positioning Dowel (Ø8*30mm)	21
⑤		Cap Wood Screw (M6*50mm)	11
⑥		Allen Key	1
⑦		Nail	41
⑧		Hinge	4
⑨		Screw (M4*32mm)	7
⑩		Screw (M3.5*16mm)	41
⑪		Metal Shelf Support	17
⑫		Screwdriver (not provided)	1
⑬		Hammer (not provided)	1
⑭		Power Drill (not provided)	1
⑮		Metal Bracket	4

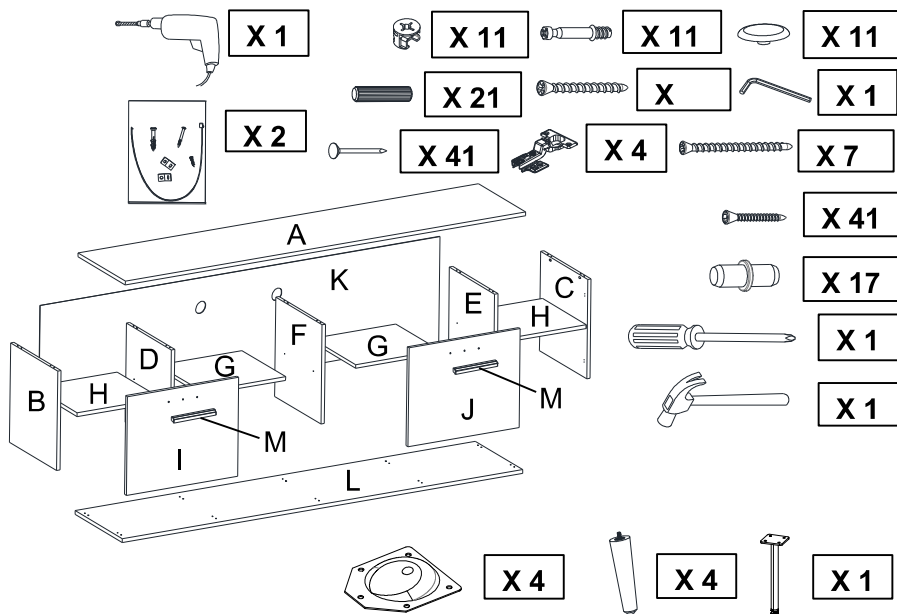  Cabinet Restraint Device Hardware			
①6		Wall Plug	2
①7		Wall Plug Screw	2
①8		Pan Head Screw	2
①9		Cabinet Restraint Strap	2
Assembly Preparation			
Before Beginning Assembly:			
<div><ul style="list-style-type: none">Read instructions, cover to cover-</div> <div><ul style="list-style-type: none">Have 2 adults on hand for assembly-</div> <div><ul style="list-style-type: none">Do not assemble on flooring or carpet-</div> <div><ul style="list-style-type: none">Assemble on a clean non-marring surface (packing foam)-</div> <div><ul style="list-style-type: none">Save all packaging until finished-</div>			


Assembly Steps

 Overview

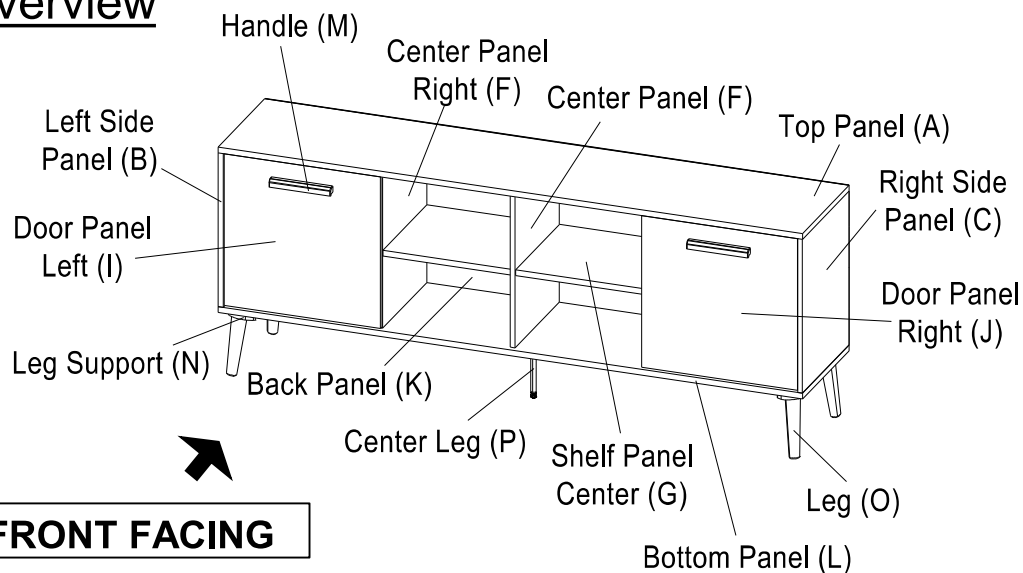


This TV Cabinet has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the TV Cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

 Step 1

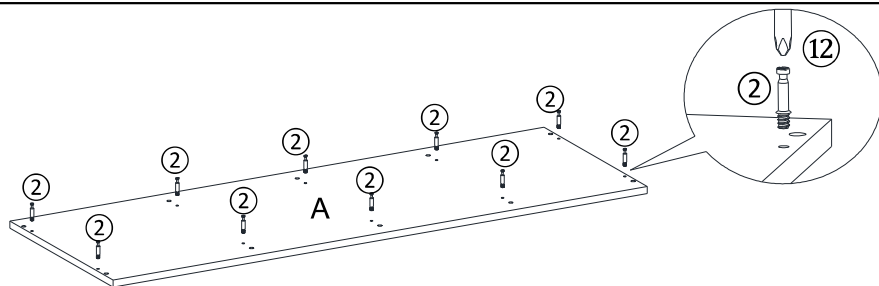

Unpack and place all parts on a clean, non-marring surface. Attach Cam Bolts(2) to mounting positions on top surface of Top Panel(A) with Screwdriver(12).

 Step 2

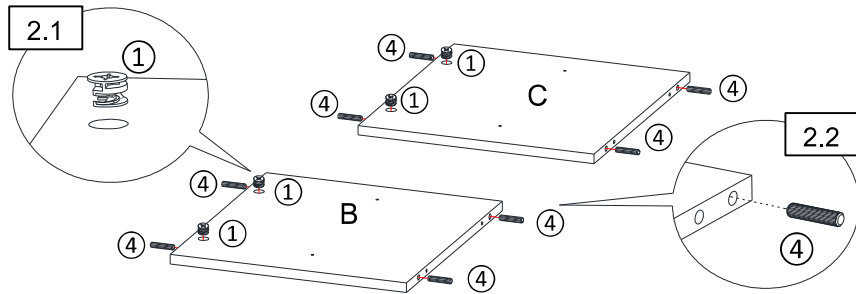


2.1) Insert Cam Locks(①) into mounting positions on Left Side Panel(B) by hand.

2.2) Insert Positioning Dowels(④) into mounting positions on Left Side Panel(B) by hand.

2.3) Repeat the same process with the Right Side Panel(C).

 Step 3

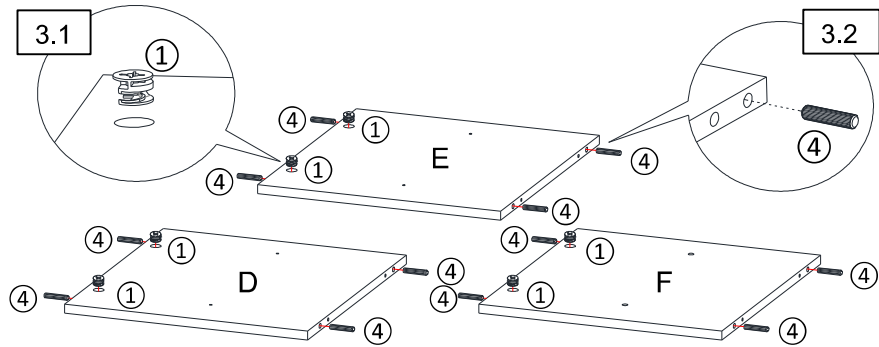


3.1) Insert Cam Locks(①) into mounting positions on Center Panel Right(E) by hand.

3.2) Insert Positioning Dowels(④) into mounting positions on Center Panel Right(E) by hand.

3.3) Repeat the same process with the Center Panel Left(D) and Center Panel(F).

 Step 4

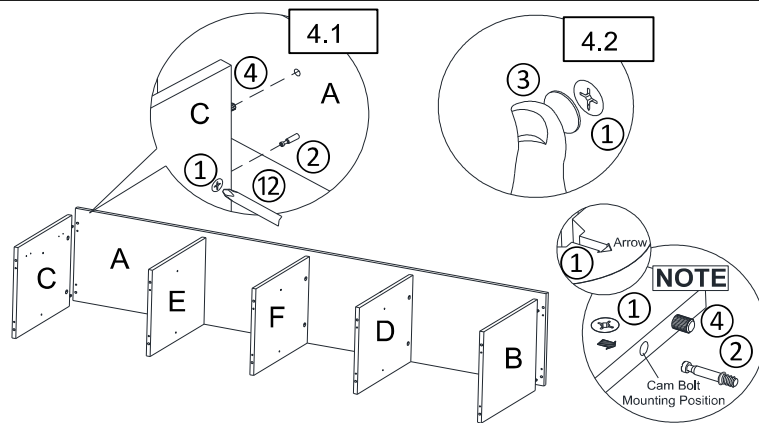

4.1) Insert Positioning Dowels(④) from Left Side Panel(B), Right Side Panel(C), Center Panel Left(D), Center Panel Right(E) and Center Panel(F) into Top Panel(A).

 
Insert Cam Bolts(②) from Top Panel(A) into Left Side Panel(B), Right Side Panel(C), Center Panel Left(D), Center Panel Right(E) and Center Panel(F)

Note: Ensure the arrow on Cam Lock head points towards the Cam Bolt mounting position.

Turn the Cam Locks(①) clockwise with the Screwdriver(⑫) until they lock into place.

4.2) Cover Cam Locks(①) with Cam Caps(③) by hand.


Step 5

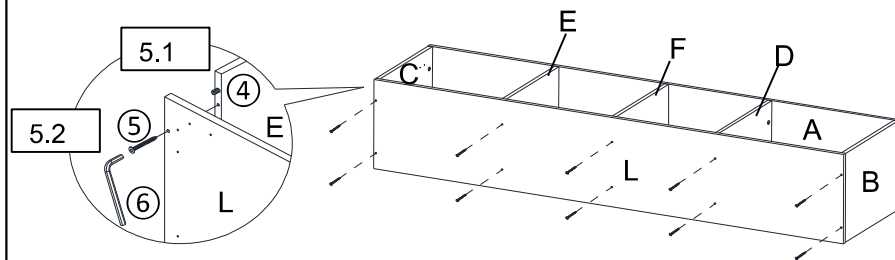

5.1) Insert Positioning Dowels(④) from Left Side Panel(B), Right Side Panel(C), Center Panel Left(D), Center Panel Right(E) and Center Panel(F) into Bottom Panel(L).

5.2) Attach Bottom Panel(L) to Left Side Panel(B), Right Side Panel(C), Center Panel Left(D), Center Panel Right(E) and Center Panel(F) using Cap Wood Screws(⑤) with Allen Key(⑥).

 Step 6

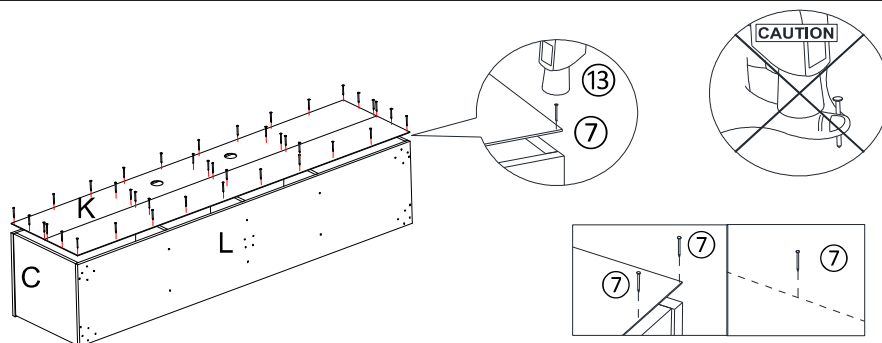


Attach Back Panel(K) to TV Cabinet Assembly using Nails(⑦) with Hammer(⑬).

Please be extra careful when using Hammer to avoid injury.

Note: Hit Nails along all four edges (slightly inwards from sides) on the lines drawn on the Back Panel(K).

 Step 7

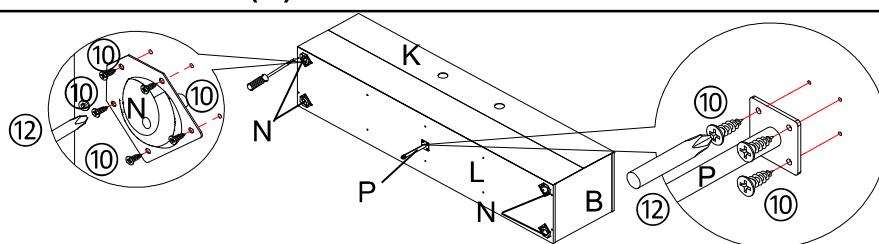


Attach Leg Supports(N) and Center Leg(P) to Bottom Panel(L) using Screws(⑩) with Screwdriver(⑫).

Tighten the Screws fully in a sequential manner.

Caution: The thinner sides of Leg Supports(N) should be facing outwards. Misassembly and reassembly may cause damage and instability to the product.


Note: There are pre-existing mounting positions on the Bottom Panel(L) to attach the Leg Supports.

 Step 8

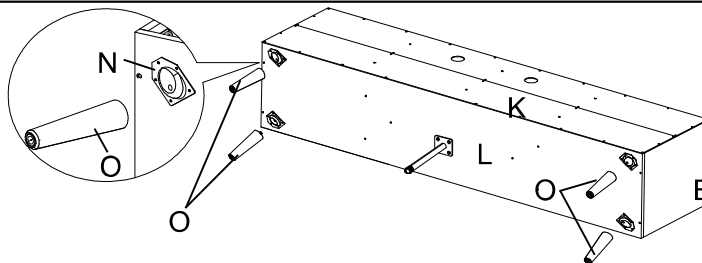


Attach Legs(O) to Leg Support(N) by rotating Legs clockwise by hand.

 Step 9

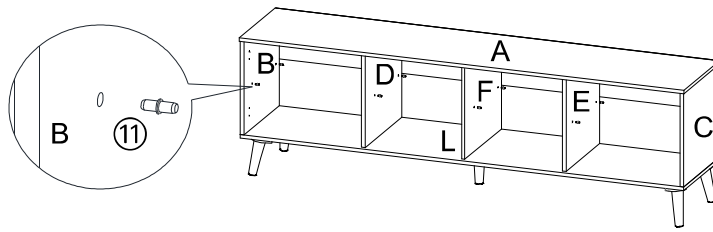


Stand the TV Cabinet up with help from an adult assistant.
Insert Metal Shelf Supports(⑪) into mounting positions on Left Side Panel(B), Right Side Panel(C), Center Panel Left(D), Center Panel Right(E) and Center Panel(F) by hand.

 Step 10

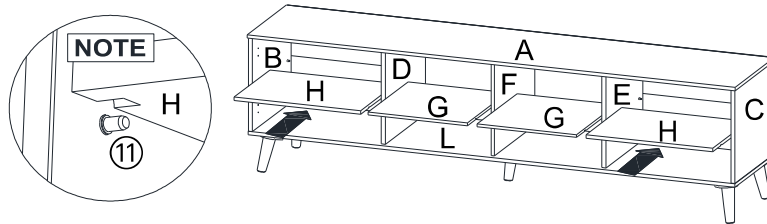


Put Shelf Panels(G) and (H) into place on Shelf Supports(⑪).
Note: There are lead mounting positions on Shelf Panels to fit Metal Shelf Supports.

 Step 11

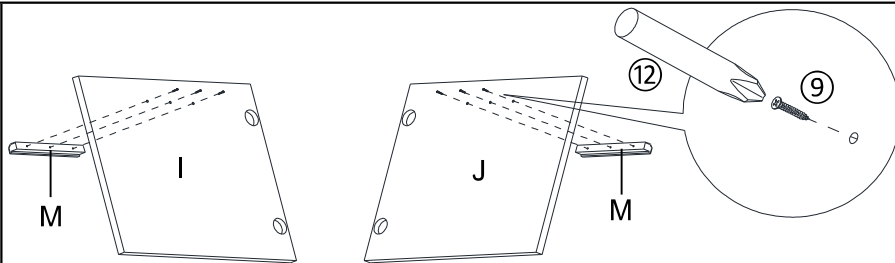

Attach Handles(M) to Door Panel Left(I) and Door Panel Right(J) using Screws(⑨) with Screwdriver(⑫).
Tighten the Screws fully in a sequential manner.
Note: There are pre-existing mounting positions on the Door Panels to attach the Handles.

 Step 12

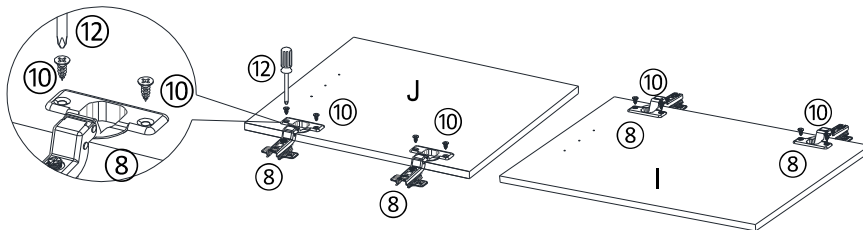


Attach Hinges(⑧) to Door Panel Left(I) and Door Panel Right(J) using Screws(⑩) with Screwdriver(⑫).

Tighten the Screws fully in a sequential manner.

Note: There are pre-existing mounting positions on the Door Panels to attach the Hinges.

 Step 13

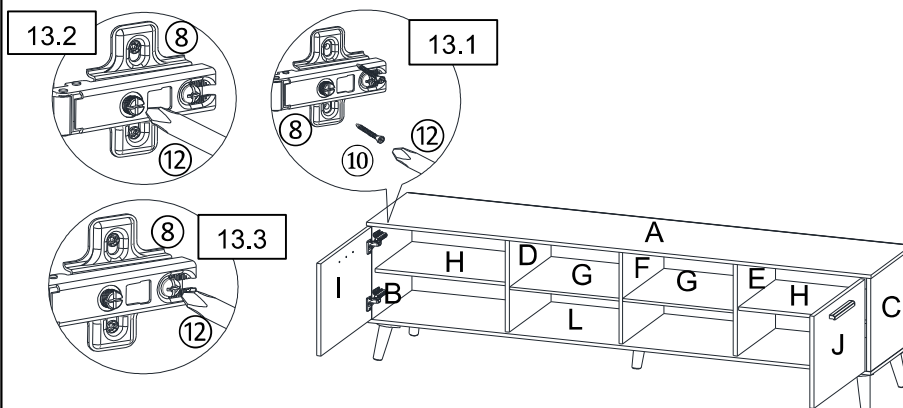

13.1) Attach Hinges(⑧) to Left Side Panel(B) and Right Side Panel(C) using Screws(⑩) with Screwdriver(⑫).

Tighten the Screws fully in a sequential manner.

13.2) Rotate first screw on Hinges(⑧) to adjust left-right position of Door Panels when necessary.

 
13.3) Rotate second screw on Hinges(⑧) to adjust in-out position of Door Panels when necessary.

Note: There are pre-existing mounting positions on the Side Panel Left and Side Panel Right to attach the Hinges.

Cabinet Restraint Device Installation Instructions

WARNING

Serious or fatal crushing injuries can occur from tipping furniture.
To help prevent tip-over: ALWAYS secure this furniture to the wall using Cabinet Restraint Device.
See product instructions for more ways to help prevent furniture tip-over.

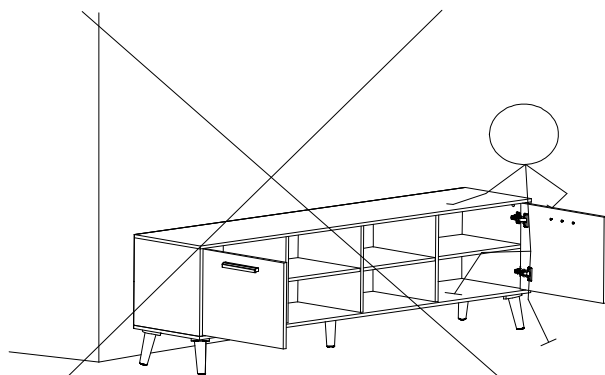


Usage For Cabinet Restraint Device:

To secure TV Cabinet against wall, attach two Metal Brackets(15) on wall and product, use Cabinet Restraint Strap(19) to connect the Metal Brackets(15).

Instructions:

 
Step 14

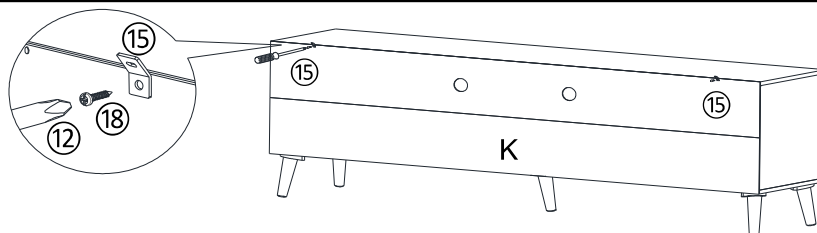

14.1) Turn the TV Cabinet so the back side faces you.

14.2) Attach Metal Brackets(15) to Back Panel(K), where labeled, using Pan Head Screws(18) with Screwdriver(12).

 Step 15

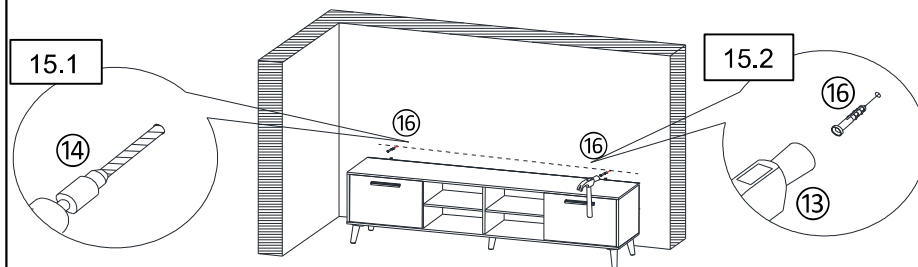

15.1) Drill two holes on wall at same height as Metal Brackets(15) on TV Cabinet with Power Drill(14).

You can mark these points in two ways as below:

 
1) Move the TV Cabinet back to the wall. Mark two points the same height as the TV Cabinet on the wall.

Note: The Metal Brackets need to be secured to a solid, load bearing surface. Please use a Stud Finder(not supplied) if needed to locate the Wall Frame.

2) Measure the height of the Metal Brackets(15) with ruler/measuring tape and mark on wall to keep them accurate and the same height.


15.2) Insert Wall Plugs(16) into holes on wall with Hammer(13).

Step 16

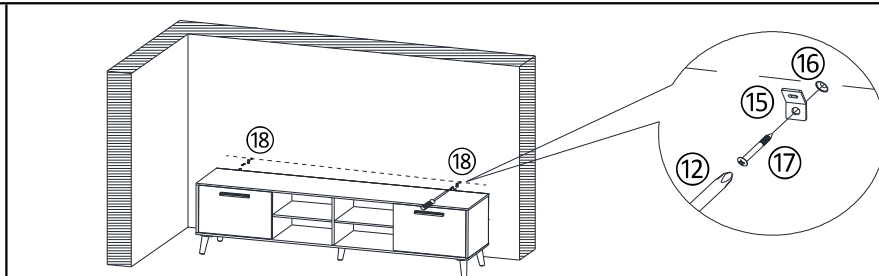

Attach Metal Brackets(15) to Wall Plugs(16) using Wall Plug Screws(17) with Screwdriver(12).

 
Step 17

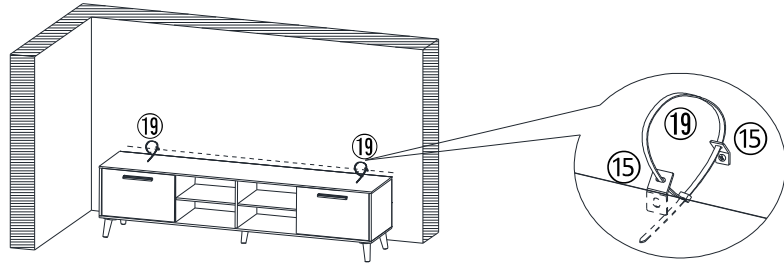

Move the TV Cabinet back against wall.

Pull the Cabinet Restraint Straps(①⑨) through the Metal Brackets(①⑤) on the wall and TV Cabinet one by one, and pull the Cabinet Restraint Straps(①⑨) tight.

 Step 18

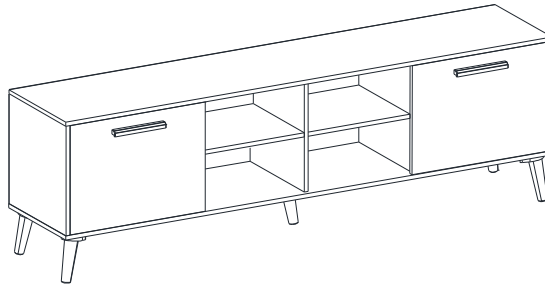

Your TV Cabinet is ready for use.

This TV Cabinet can only be used on a flat, level surface.

Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.