

ASSEMBLY INSTRUCTIONS

 
ARCHER DINING CHAIR

ASSEMBLY
REQUIREMENTS

75 MINUTES
Assembly Time
Approximate


2-Person
Assembly

Tools Required
(Not Provided)

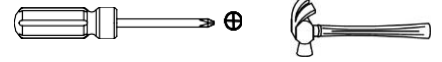

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

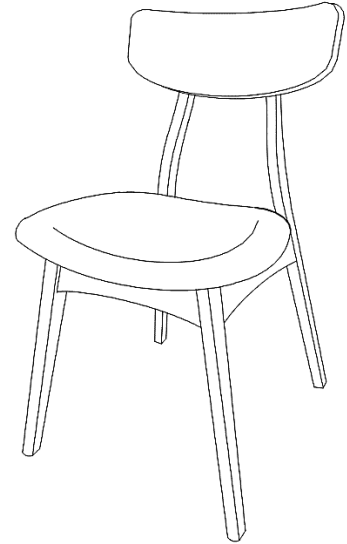

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE








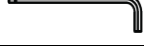
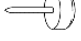 
- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.


This product is for indoor and household use only - not for commercial use.

ASSEMBLY INSTRUCTIONS

ARCHER DINING CHAIR


Part List (For 2 chairs)		
No.	Description	Qty
AL	Chair Leg (Left)	2 pcs
AR	Chair Leg (Right)	2 pcs
B	Backrest	2 pcs
C	Front & Back Apron	4 pcs
D	Cushion Seat	2 pcs

Hardware List (For 2 chairs)			
No.	Description	Qty	Extra*
E	M6 x 25mm JCBC Bolt 	4 pcs	1 pc
F	M6 x 50mm JCBC Bolt 	8 pcs	1 pc
G	1/4 Spring Washer 	12 pcs	1 pc
H	8 x 30mm Wood Dowel 	4 pcs	1 pc
I	10 x 40mm Wood Dowel 	16 pcs	1 pc
J	M8 x 32mm Wood Screw 	8 pcs	1 pc
K	Wood Button 	4 pcs	1 pc
L	M4 Allen Key 	1 pc	
M	Leg Stud 		2 pcs

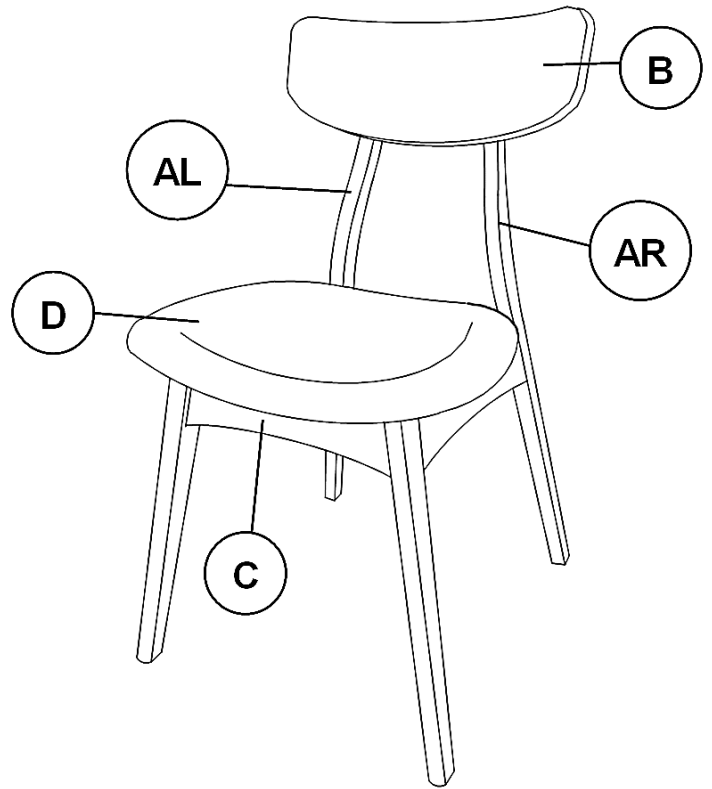

* Extra hardware for spare use

STEP 1

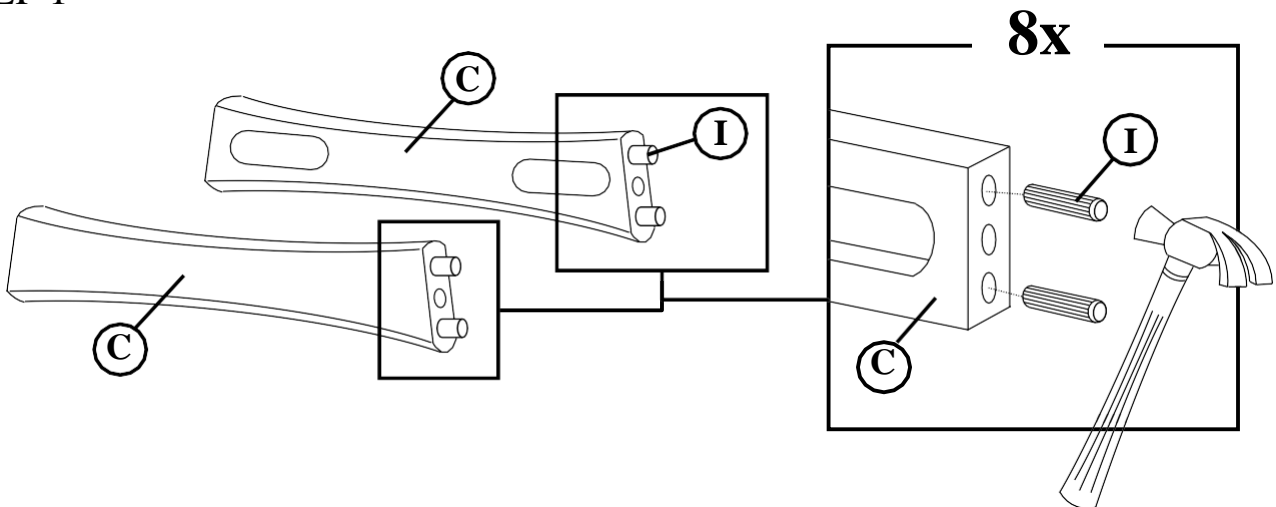


Insert Wood Dowel (I) into the outer holes on each end of Front and Back Apron (C). Use a hammer or mallet to lightly tap in wood dowel if necessary.

ASSEMBLY INSTRUCTIONS


ARCHER DINING CHAIR

STEP 2

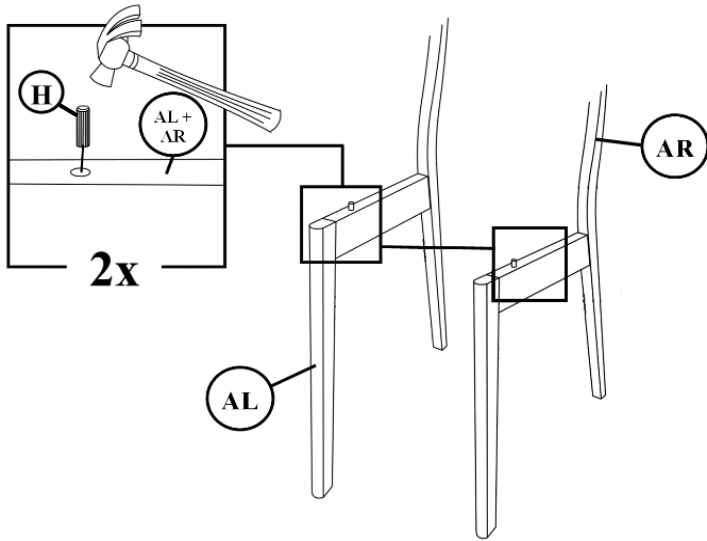


- a) Place a Chair Leg (AL) and (AR) as shown on a flat surface.
- b) Insert Wood Dowel (H) into middle hole on side apron of (AL) and (AR). Use a hammer or mallet to lightly tap in wood dowel if necessary.

STEP 3

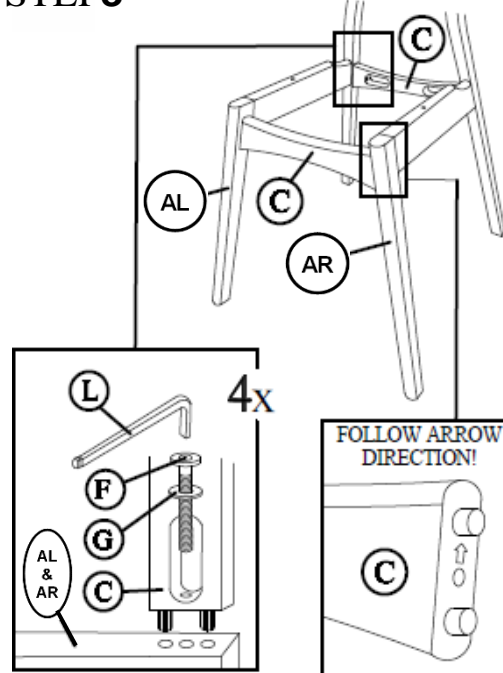


- a) Attach Front and Back Apron (C) to a Chair Leg (AL) and (AR) via Wood Dowels on (C). Check that the arrow points up.
- b) Use Screw (F) fitted with Spring Washer (G), to fasten (C) to (AL) and (AR). Use Allen Key (L) to drive (F). Do not over-tighten.

STEP 4

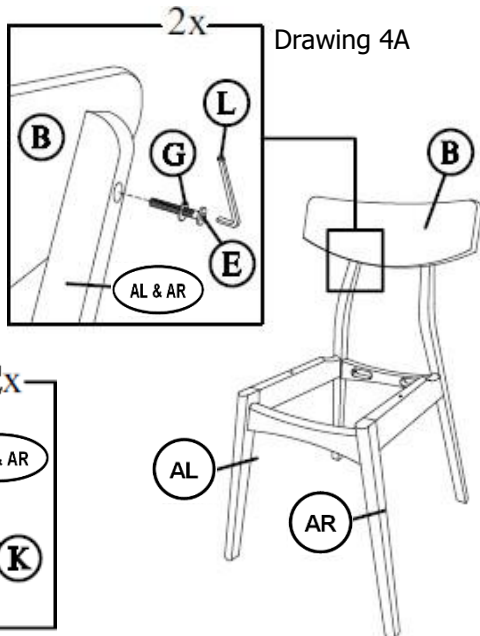

- a) Refer to Drawing 4A - Use Screw (E) fitted with Spring Washer (G) to fasten Backrest (B) to Chair Leg (AL) and (AR). Use Allen Key (L) to drive (E). Do not tighten (E) completely until both bolts are in place. Do not over-tighten.
- b) Refer to Drawing 4B - Use Wood Button (K) to conceal screw hole on back of Leg (AL) and (AR).

STEP 5

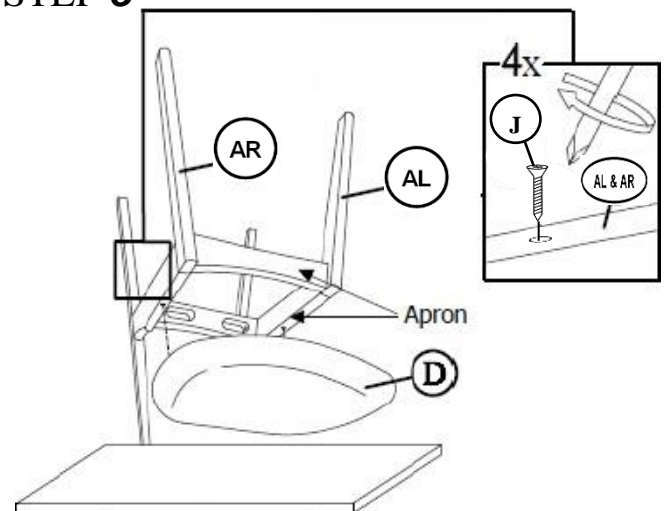

- a) Lay Cushion Seat (D) bottom-side up on an elevated surface (e.g. table top).
- b) Position apron frame of chair to center on (D) and fit wood dowels on side apron of (AL) and (AR) into the designated holes on the bottom-side of Cushion Seat (D).
- c) Use Screw (J) to fasten (D) to apron. Do not over-tighten.
Set the chair right-side up. The assembly of the chair is complete.