

Owner Manual



Weight Capacity

80 LBS



Installation:
10 minutes.



One Person

Thank You For Choosing Our Furniture

- ▀ If you have any questions or concerns,
don't hesitate to reach out to us. ▀

NOTE:

This brochure contains
IMPORTANT safety info.
Please read and keep it
for future reference.

MAINTENANCE AND WARNINGS



Before You Start

Please follow the steps below:

-  Check the packaging for any damage, deformation, or water stains. If there is significant damage, please contact us promptly.
-  Unpack the box and compare the contents with the parts list and hardware list to ensure all components and accessories are present and complete.
-  Please read the installation instructions carefully to understand the installation steps and precautions to ensure proper installation.
-  Clean the installation area in advance and ensure the ground is level and there is enough space to avoid damaging the furniture or making installation difficult.
-  Lay a protective mat on the ground to prevent scratching the floor during installation.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Precautions

-  This product is for indoor use only. Do not expose it to outdoor elements or high-humidity environments.
-  Keep the product away from high heat or open flames to prevent fire hazards.
-  Do not allow children to climb on the product, as this may cause tipping and result in personal injury.



Safety Warnings

 
 
-  If you notice any loose or damaged parts, stop using the product immediately and contact customer service.
-  Do not attempt to disassemble or replace any components yourself, as this may affect the stability and safety of the product.

Daily Maintenance

- Regularly clean the surface with a soft cloth to prevent dust accumulation.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Avoid exposing furniture to humid environments for extended periods. Use a dehumidifier or desiccant during humid weather.
- Avoid direct contact of furniture with water. If water is accidentally spilled, wipe it dry immediately.
- Avoid placing excessively heavy objects on the furniture: ensure the weight is within a reasonable load-bearing range.
- Avoid using sharp or rough items on the furniture surface to prevent scratches. Handle items gently when moving them.


Explosive view

Hardware
pack

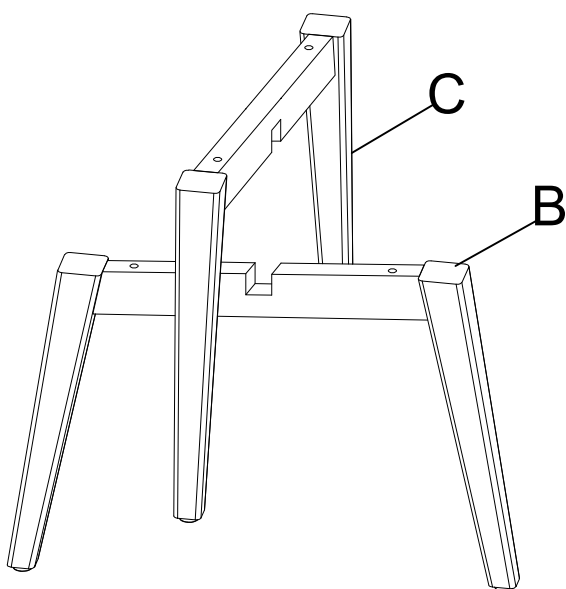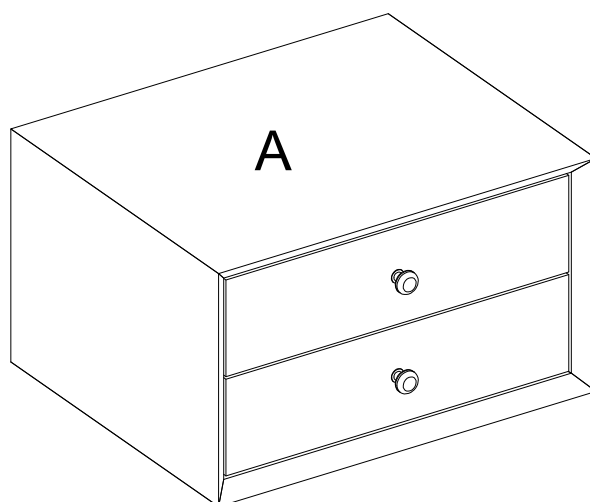


Parts list


 
A x1 Cabinet body

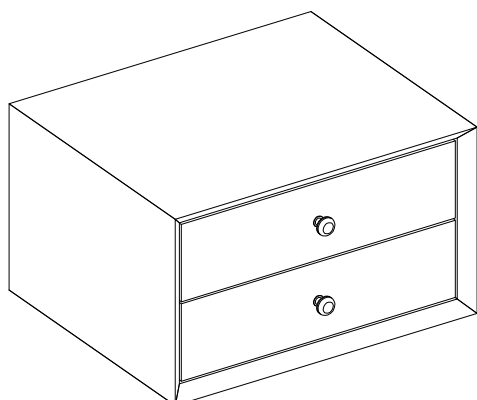

B x1 Cabinet leg

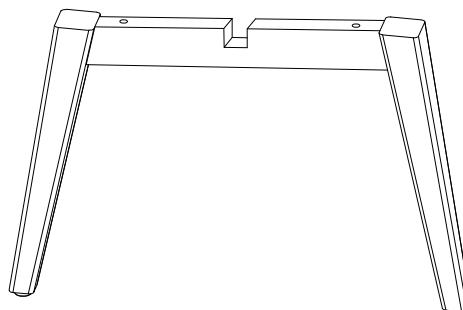 


C x1 Cabinet leg

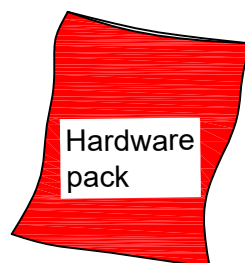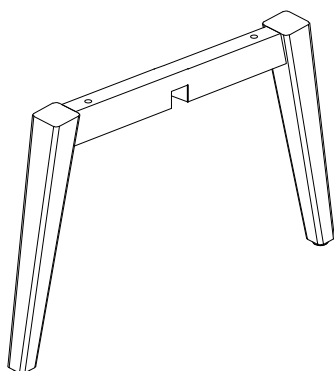  


Hardware List

 ① x4+1 Hex socket head




1/4*60mm

 ② x1 Allen key




M4

 ③x1 Screwdriver



④x1 screw

 


4*20mm

⑤x1 screw



4*35mm

 
⑥x1 Wall anchor



⑦x1 Tie





 
⑧x2 Metal Bracket

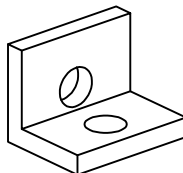


Step 1

   Connect part B/C to part A with bolt ①, tight bolt with allen key②.

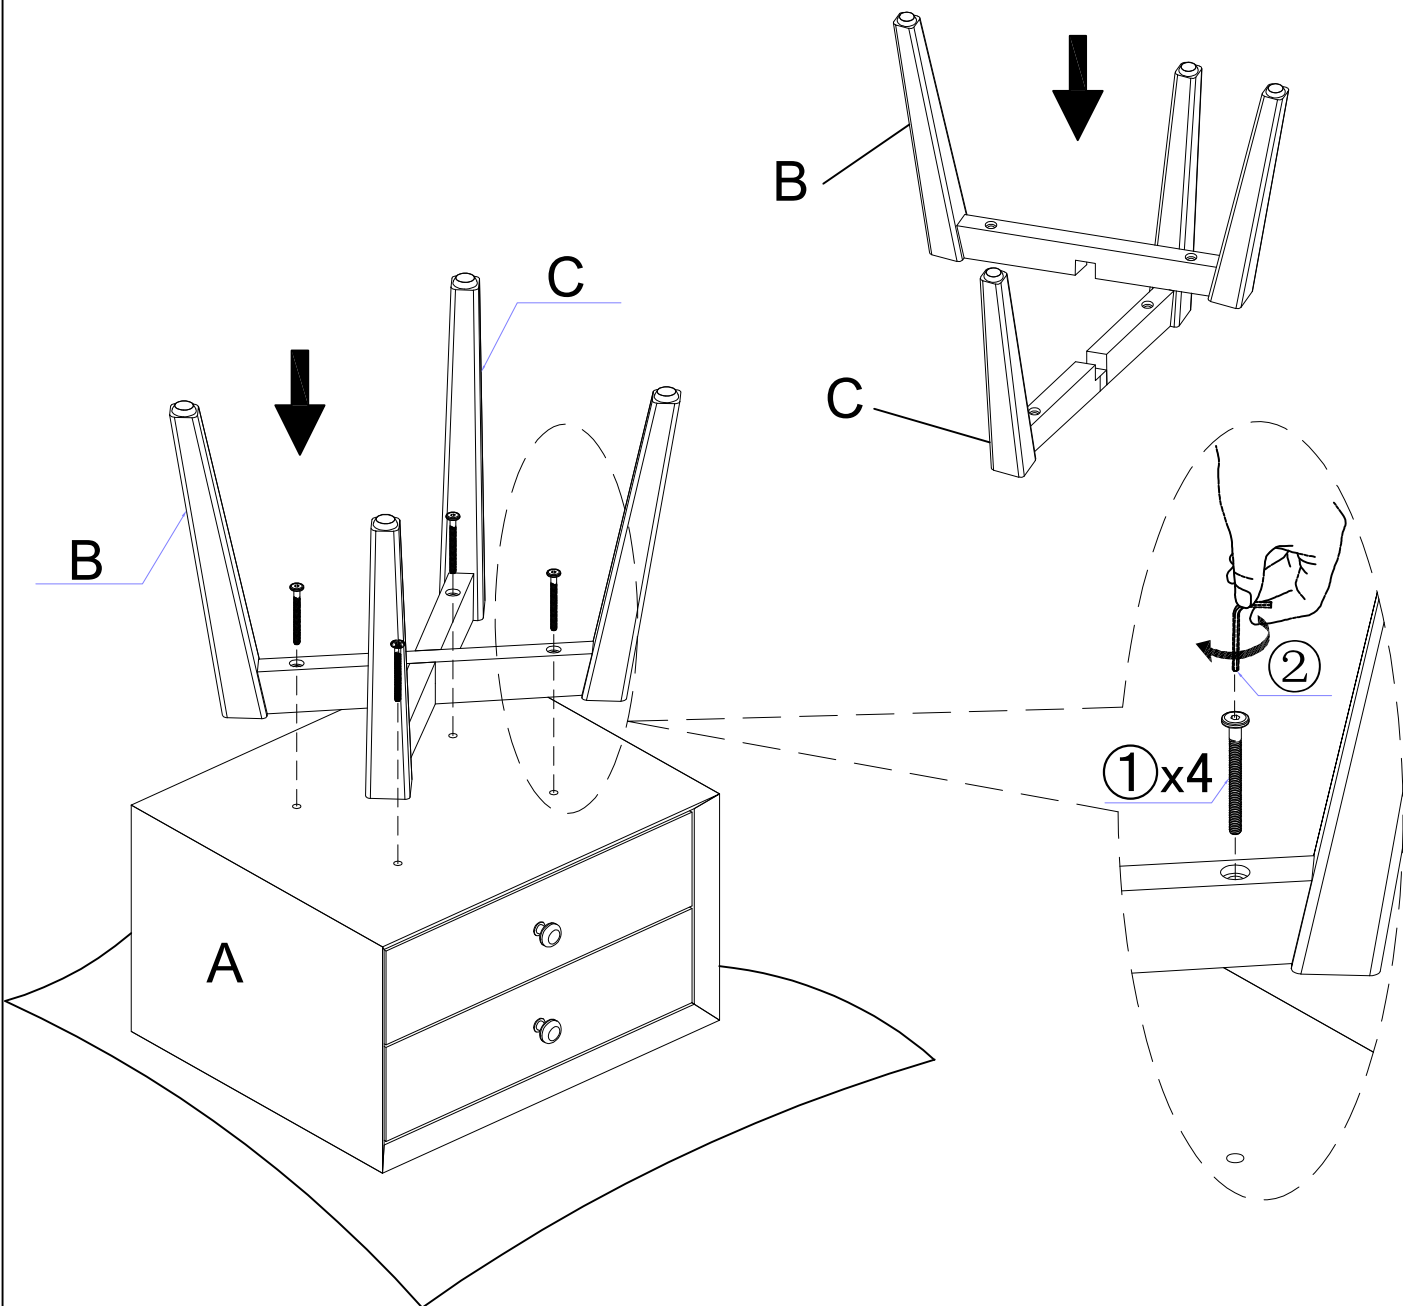

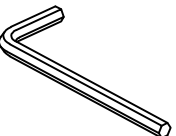
① x4	② x1
	
1/4*60mm	M4



 
Step 2

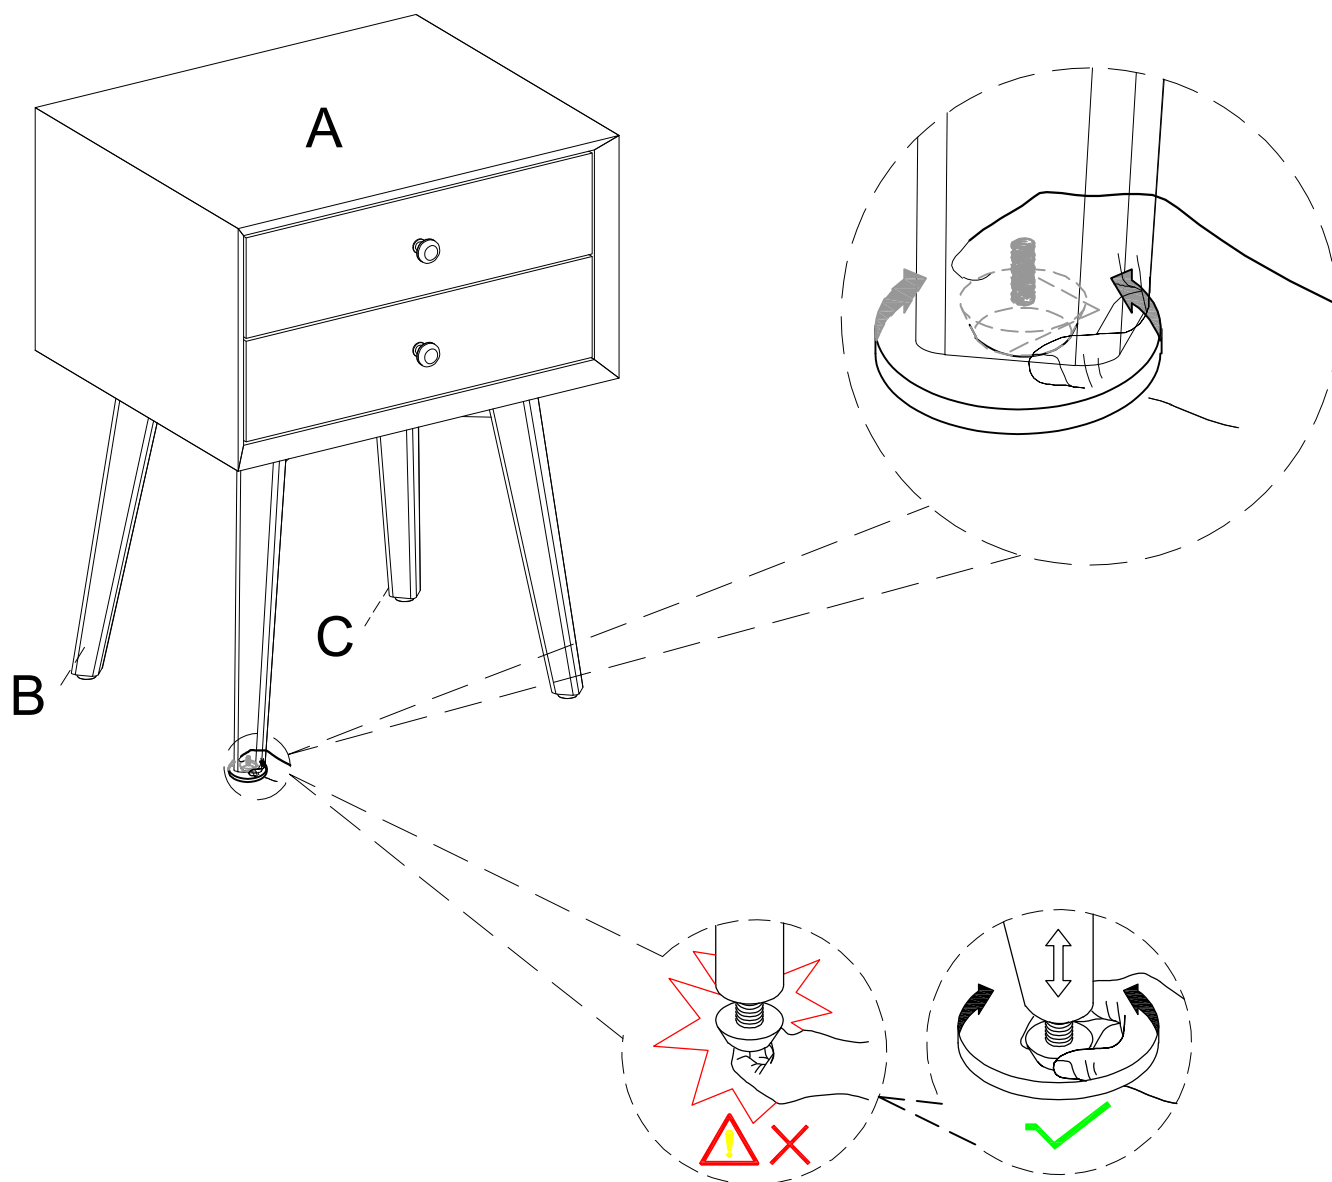

Step 3

   
 
Connect part ⑧ to part A with screw ④, tight screw with screwdriver ③.

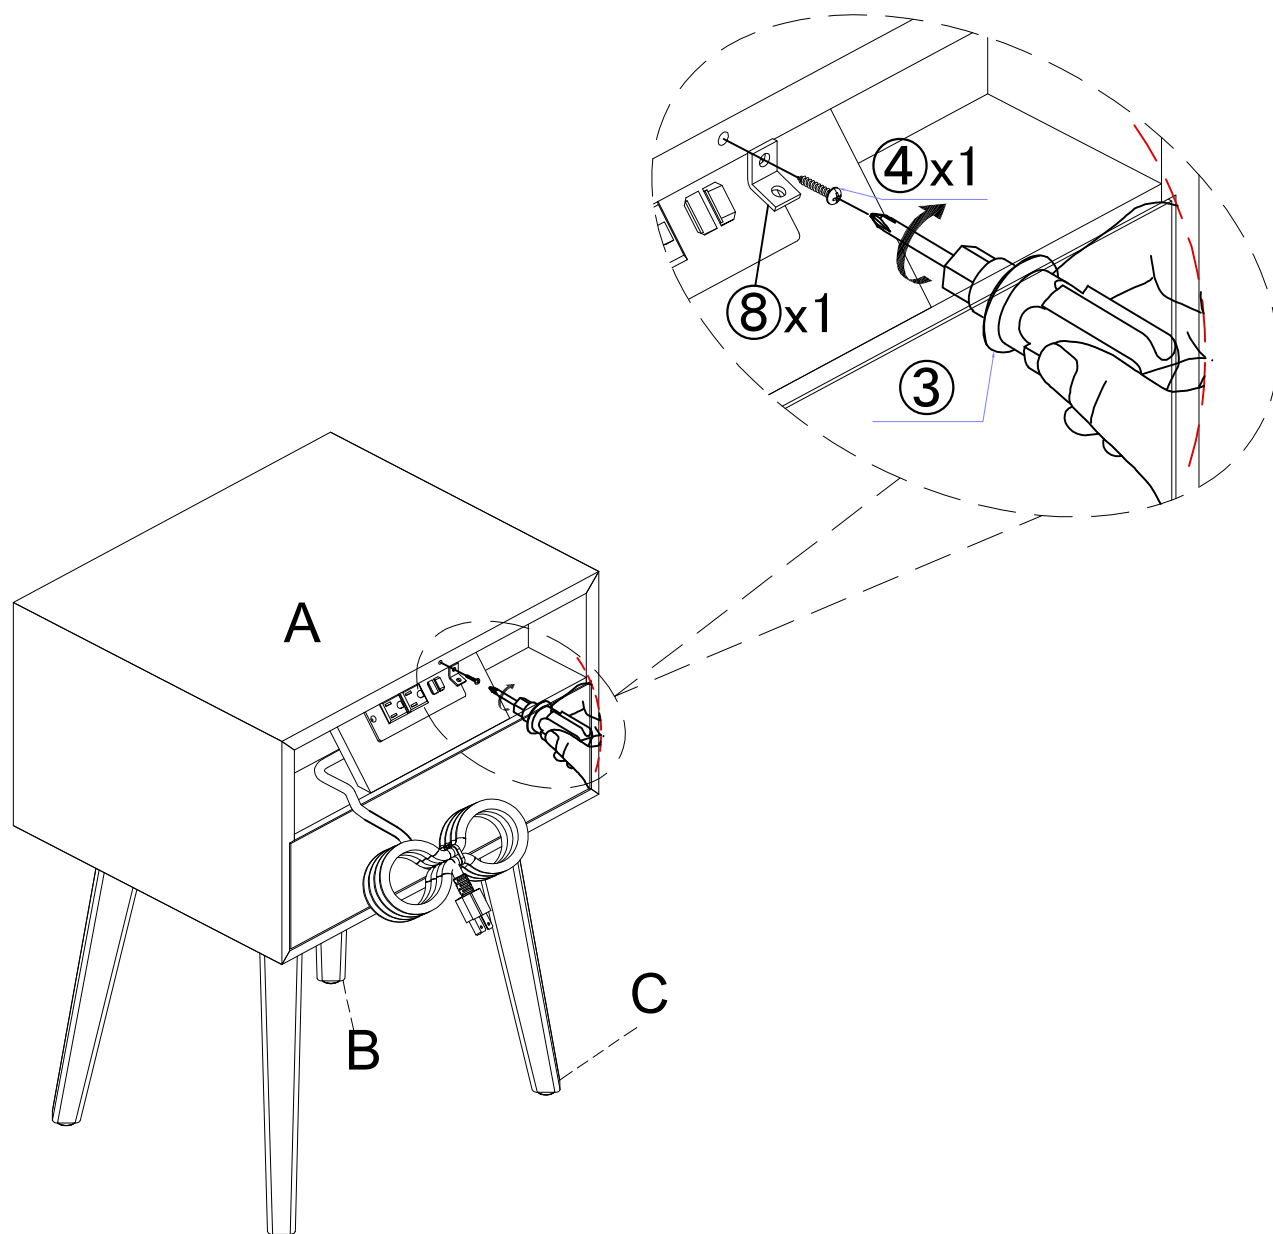

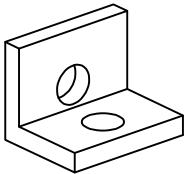
⑧ x1	④ x1	③ x1
		
	4*20mm	

Step 4

  
Install Anti-tip device ⑧ to the wall in this step.

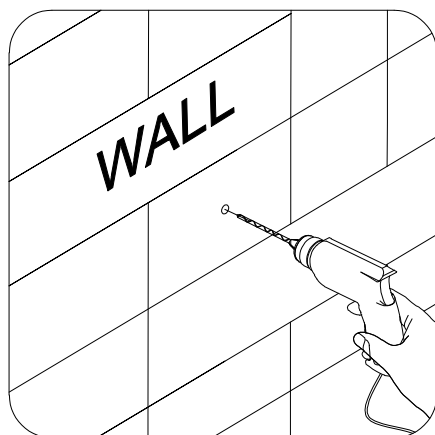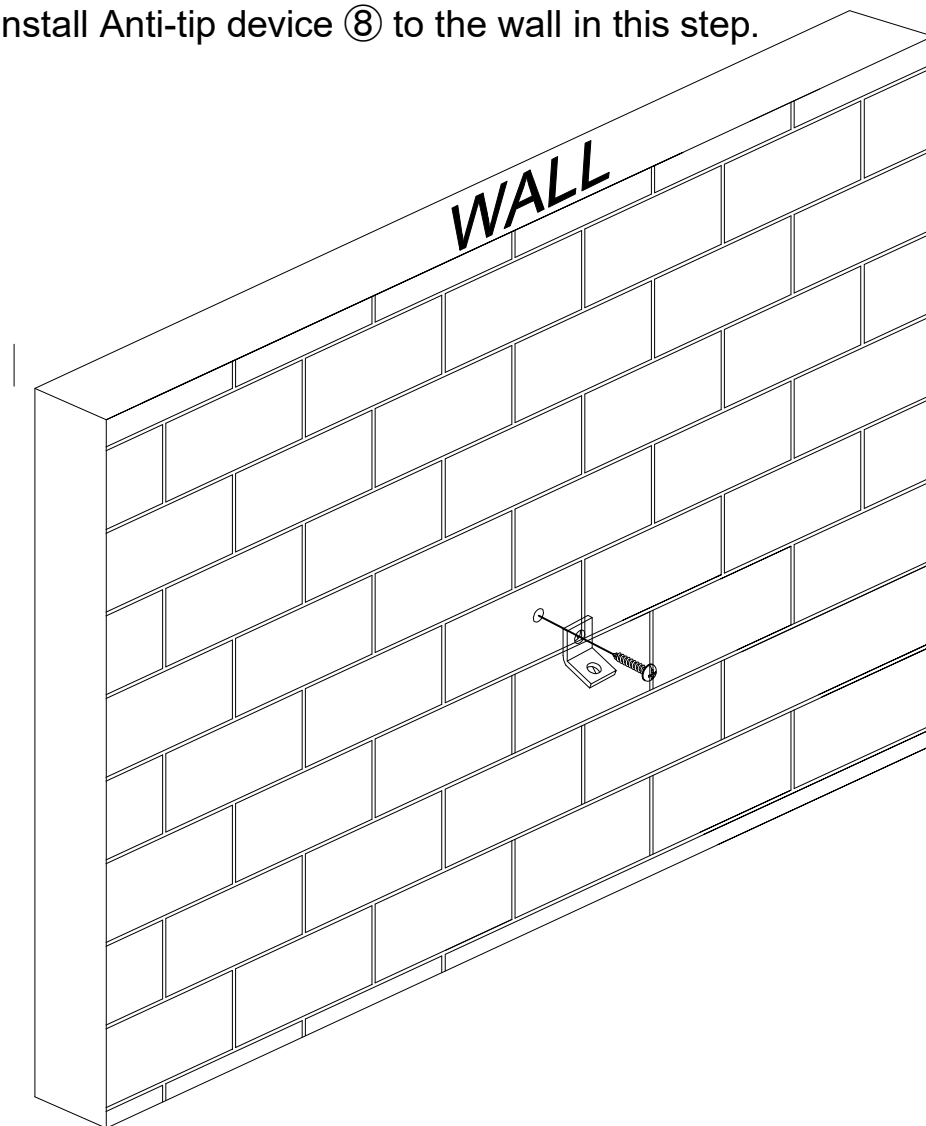




 
1. Drill a hole in the wall with an electric drill.

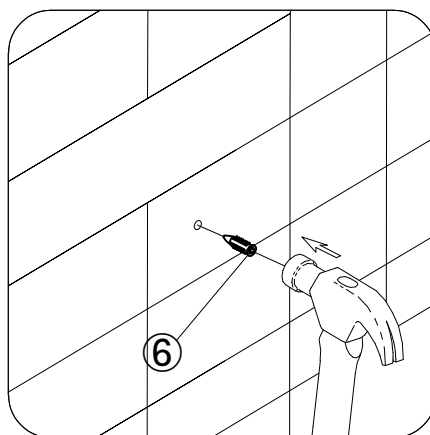

 2. Tap the plastic wall anchor into the hole with a hammer.

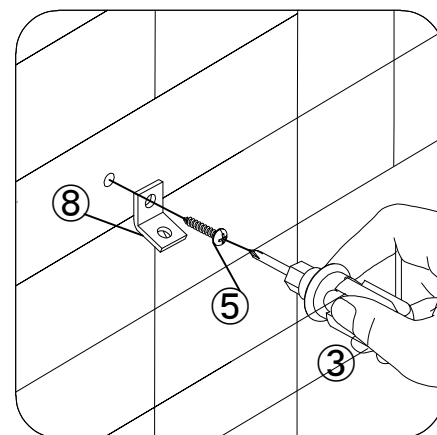

    3. Secure the Anti-tip device ⑧ to the wall with screws ⑤

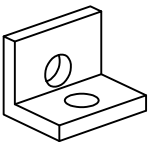⑧x1	⑤x1	⑥x1	③x1
			
	Ø4x35mm		

 
 
 
 
Step 5

WARNING

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- For use with televisions weighing 35 lb or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

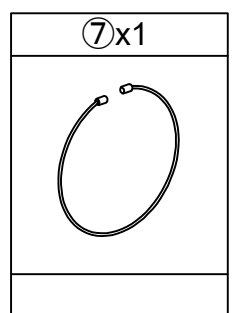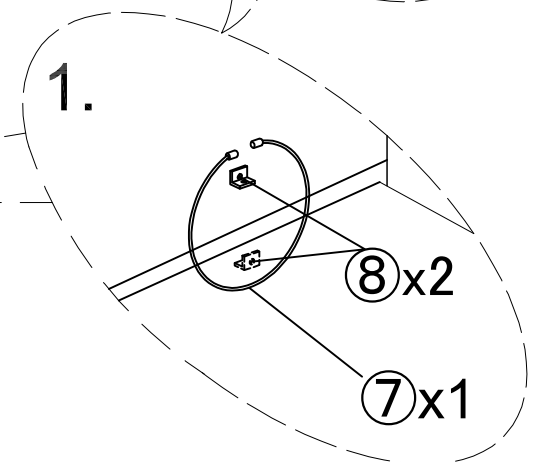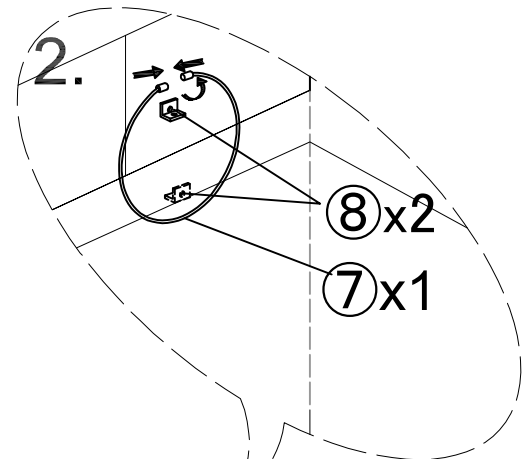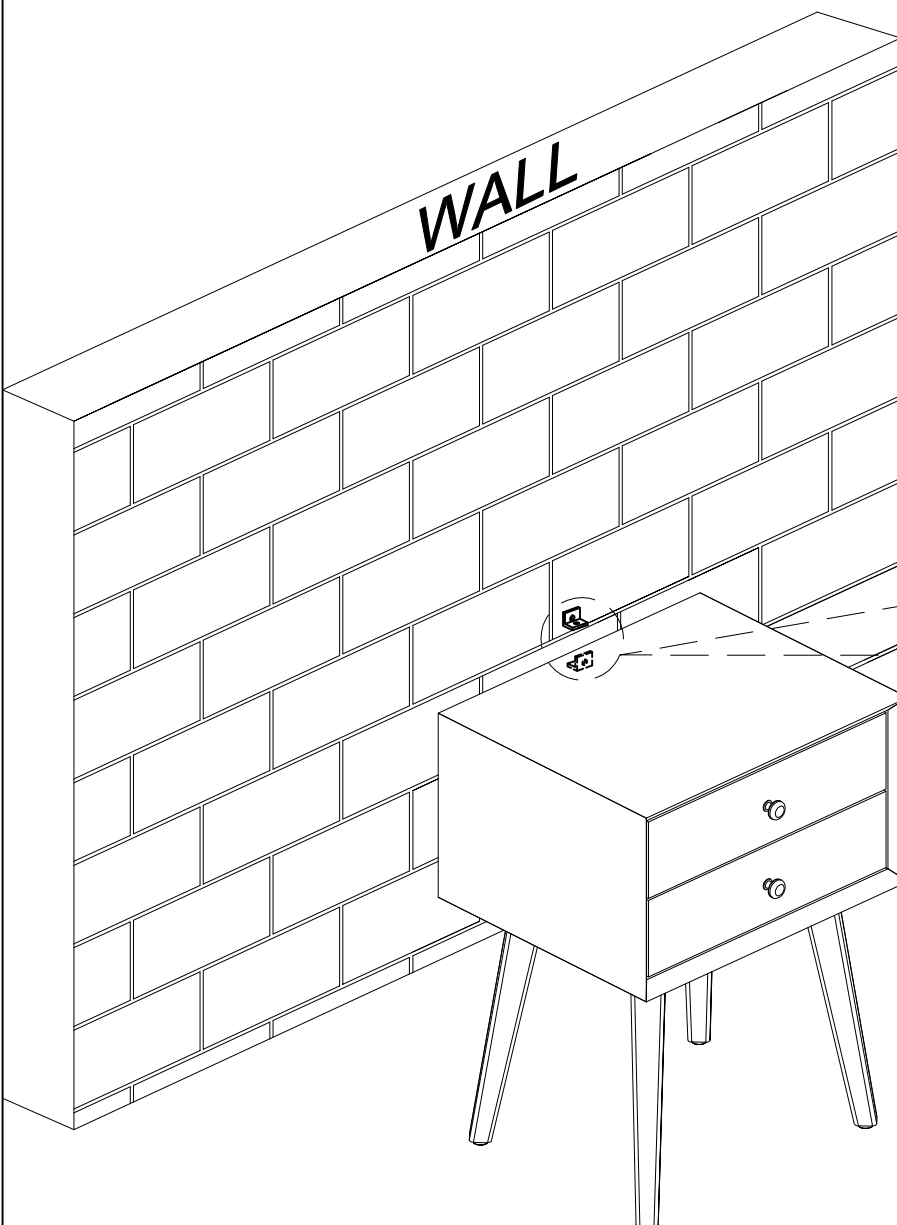

WARRANTY

- We strive to offer quality products, and we also try our best to satisfy every customer who orders from us with products or services as needed.
- Replacement parts can be purchased from our company if available.
- For returns, please check the return policy with the retailer or marketplace where you purchased the item.

We appreciate your purchase.
Brighten your life with our furniture!