

POLYRATTAN PLANTER WITH CLEAR PLASTIC LINER

Read all information carefully before using this product. Save this document for future reference.

! IMPORTANT: The plastic liner is preattached inside the planter. The liner is not replaceable and should not be removed or punctured. Damage resulting from removal of or puncturing the liner will void the product warranty.



USE & CARE

FILLING: Only use lightweight potting soil. Take care not to puncture the built-in plastic liner.

WATERING: Take extra care when watering. Overwatering may damage plants and may also damage surfaces if the inner liner was punctured while filling.

INDOOR USE ONLY: For indoor use only. Using this item outdoors automatically voids the product warranty.

MOVING: Always lift the planter from the bottom when moving it, never drag or slide it as doing so will damage the polyrattan. Slowly and gently set the planter down to prevent breakage.

CLEANING: Brush, vacuum or use a garden hose to remove loose dirt and debris. If using a hose with a spray nozzle, use gentle or medium pressure settings; high-pressure sprayer settings may damage the construction of the planter and void the product warranty.

Mix 1/4 cup of soap or a mild detergent with 1 gallon of warm water. Using a soft-bristle brush, gently scrub the dirt and grime from the polyrattan.

Thoroughly rinse, ensuring all soap residue has been removed.

Ensure the planter is thoroughly dry before storing or refilling.

STORAGE: Store in a dry, indoor location. Cover to prevent dust and debris build-up.

Any modification to the product or failure to follow recommended care will void the product warranty.

! WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the improper use, inadequate maintenance, or neglect of this product.