 


INSTALLATION

 
 
Product Manual

Version: 590005US-01-25A-NG

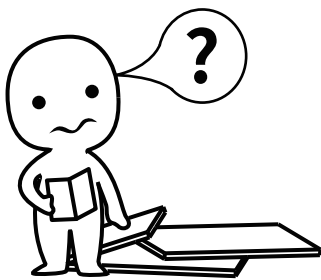


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

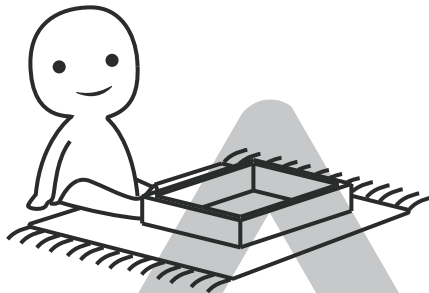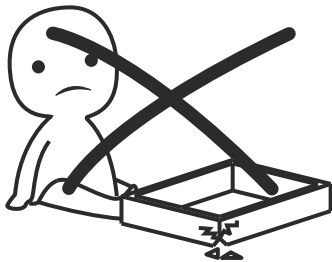



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

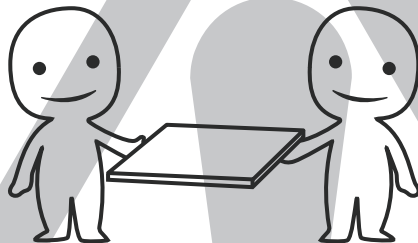

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

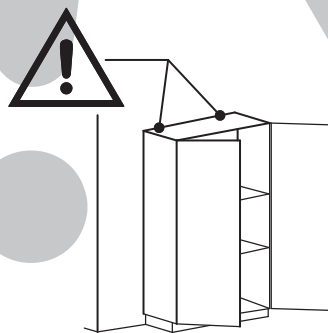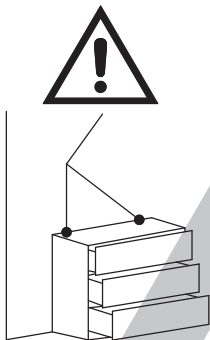

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

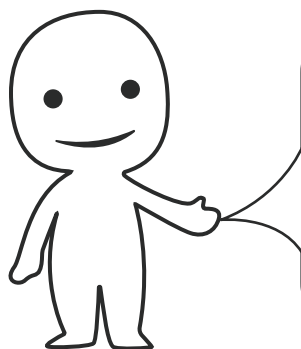


Please prepare the following tools

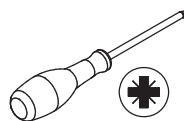 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 20+2



Ø 6 x 40 mm

B x 20+2



Ø 15 x 9.5 mm

C x 26+2



 
M6 x 10 mm

D x 38+2




M6 x 28 mm

E x 14+1



M6 x 50 mm

 F x 10+1

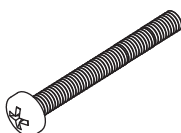


M6 x 75 mm

G x 2




M4 x 14 mm

 H x 5+1



M5 x 40 mm

 I x 4




J x 4




M6 mm

 
K x 1

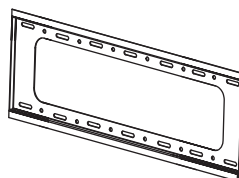

L x 2

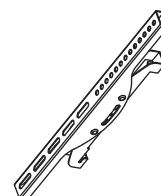 

M x 1

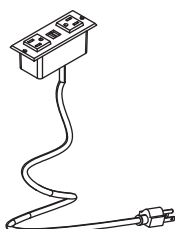 


N x 1



 O x 1



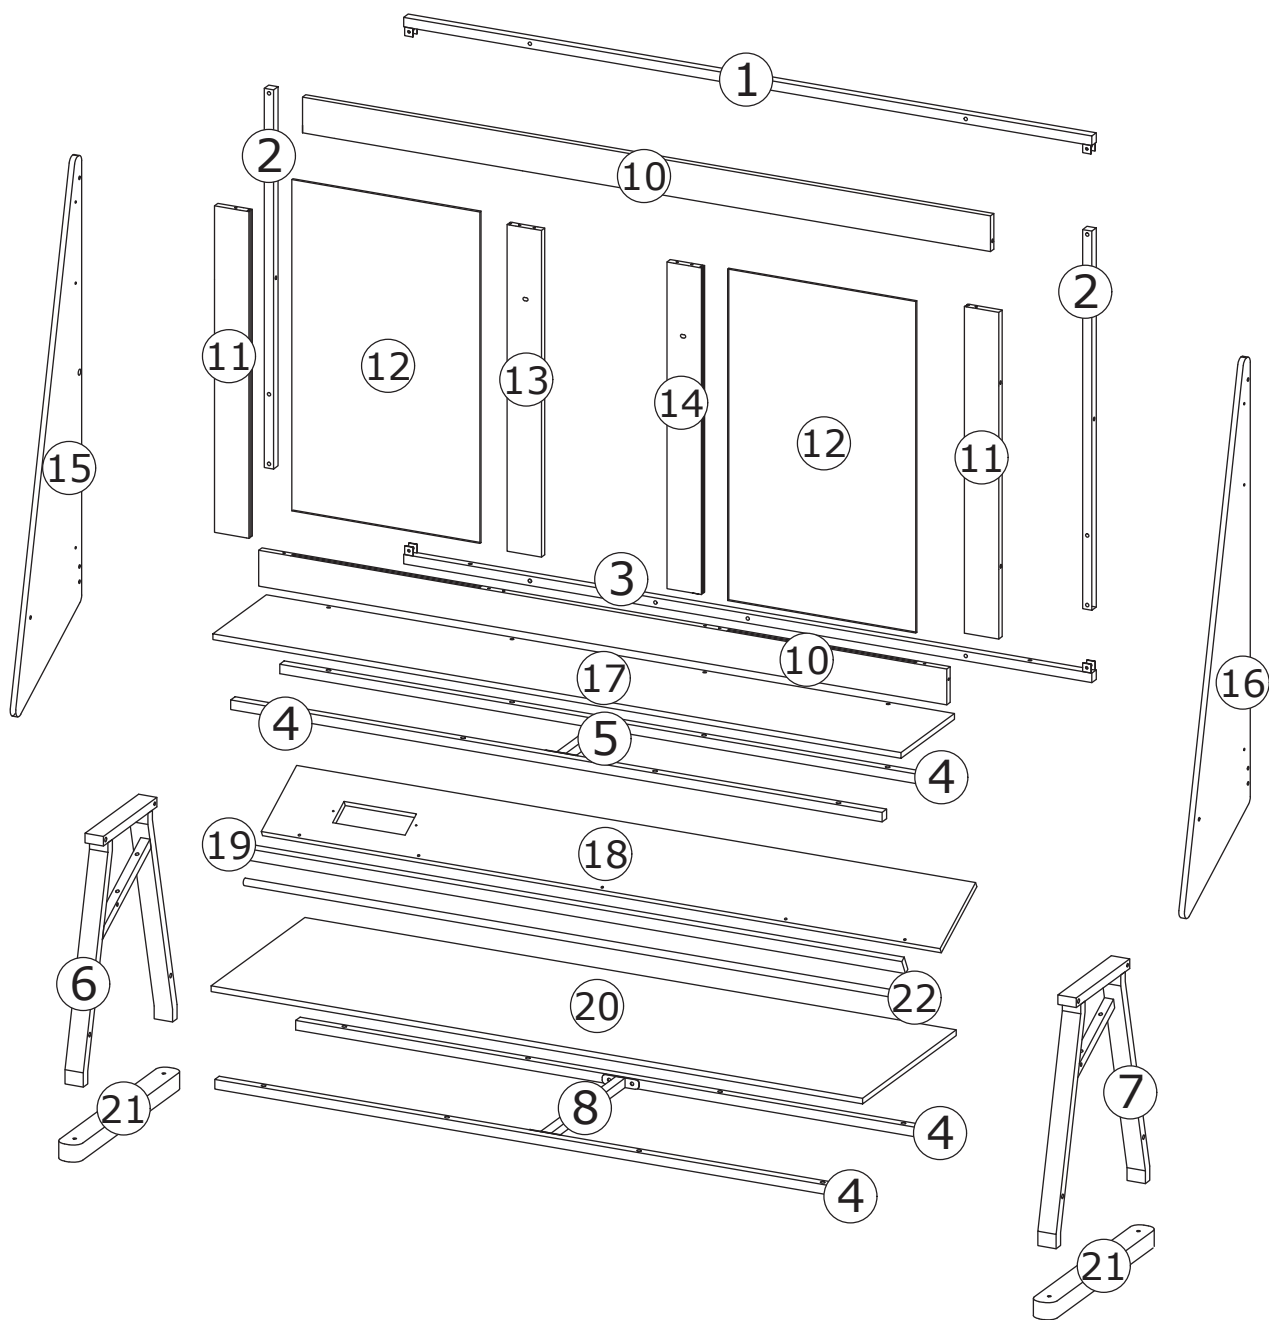


⚠ WARNING

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- Replace with statement addressing TV use.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 This is a permanent label. Do not remove!

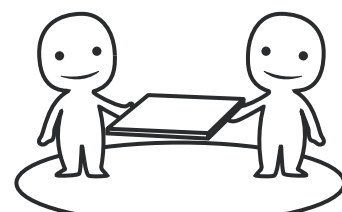

ASSEMBLED BY 2 ADULTS

1

C x 4

 


M6 x 10 mm

O x 1



As illustrated, fasten the 8 iron pipe to two 4 iron pipes using C screws.

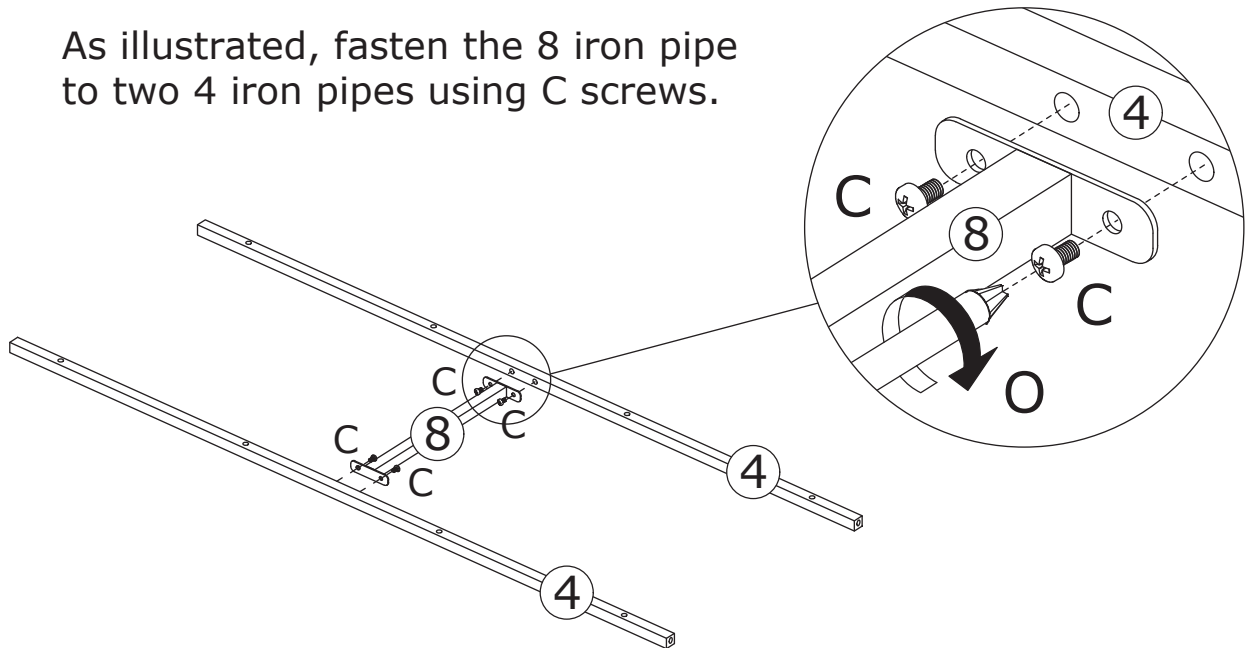

2

C x 4

 


M6 x 10 mm

O x 1





As illustrated, fasten the 5 iron pipe to two 4 iron pipes using C screws.

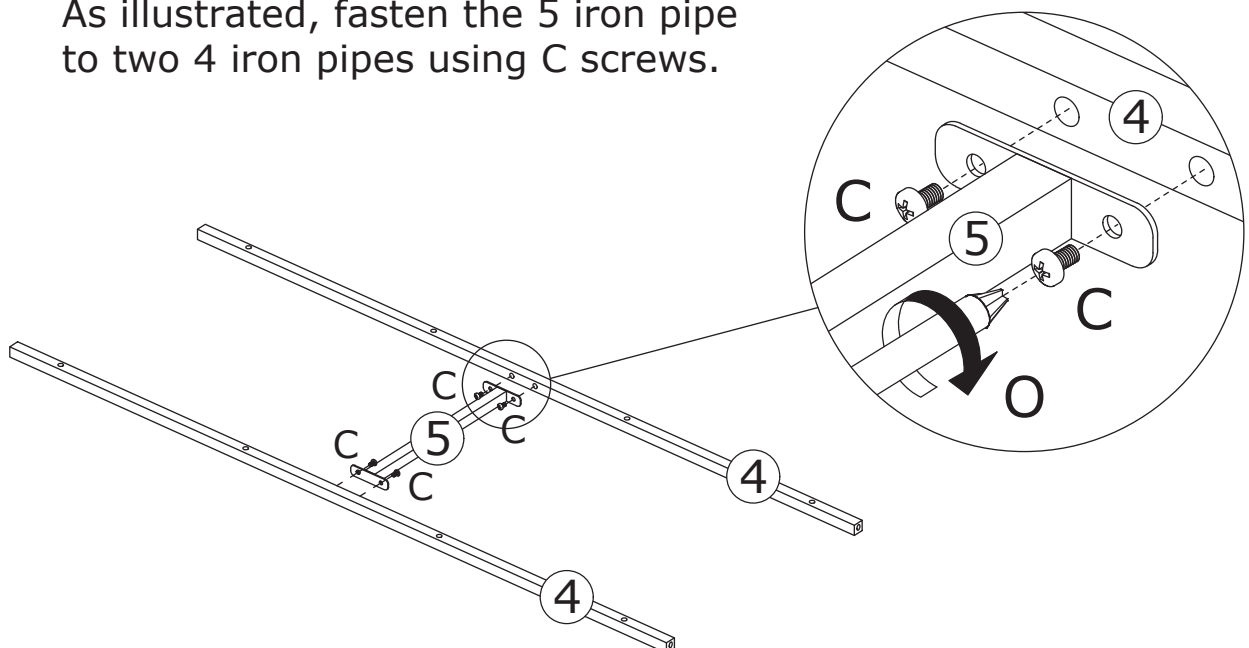

3

D x 9  M6 x 28 mm	O x 1 	
--	--	--


 
 
As illustrated, attach the 4 and 8 iron pipes to the 20 board using D screws.

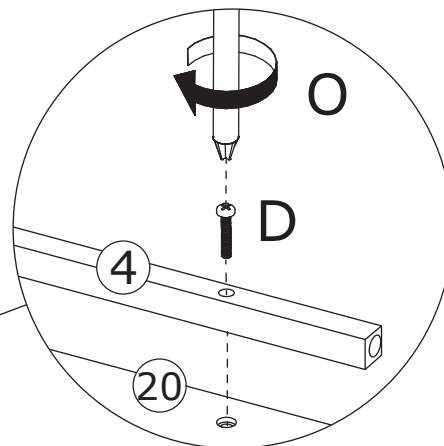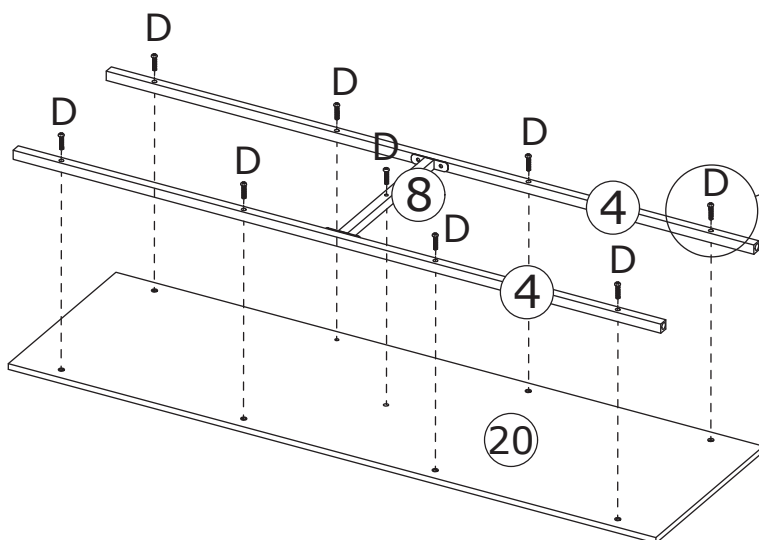

4

E x 4  M6 x 50 mm	O x 1 	
--	--	--

   
As illustrated, fix the 21 board to the 6 iron frame and the 7 iron frame respectively with the E screws.

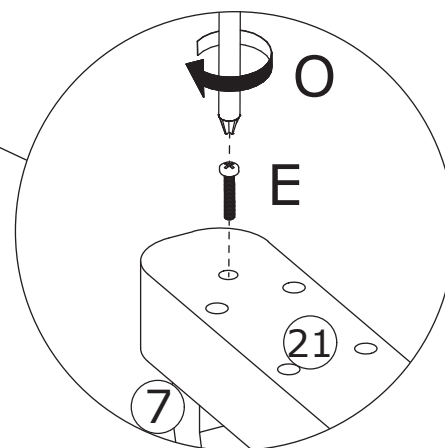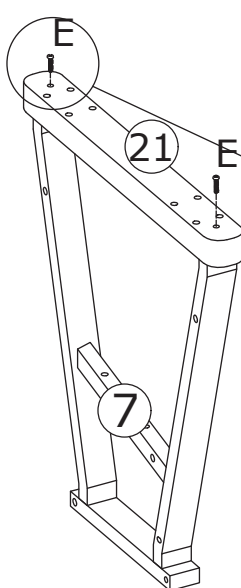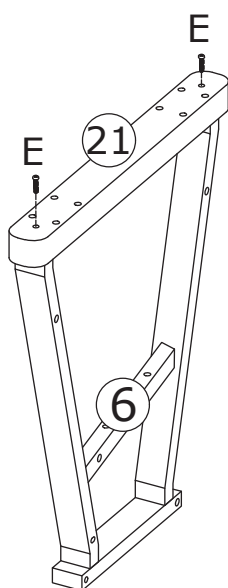

5

C x 16  M6 x 10 mm	I x 4 	O x 1 	
---	--	--	--

 
Fix the I casters to the 21 board with the C screws.

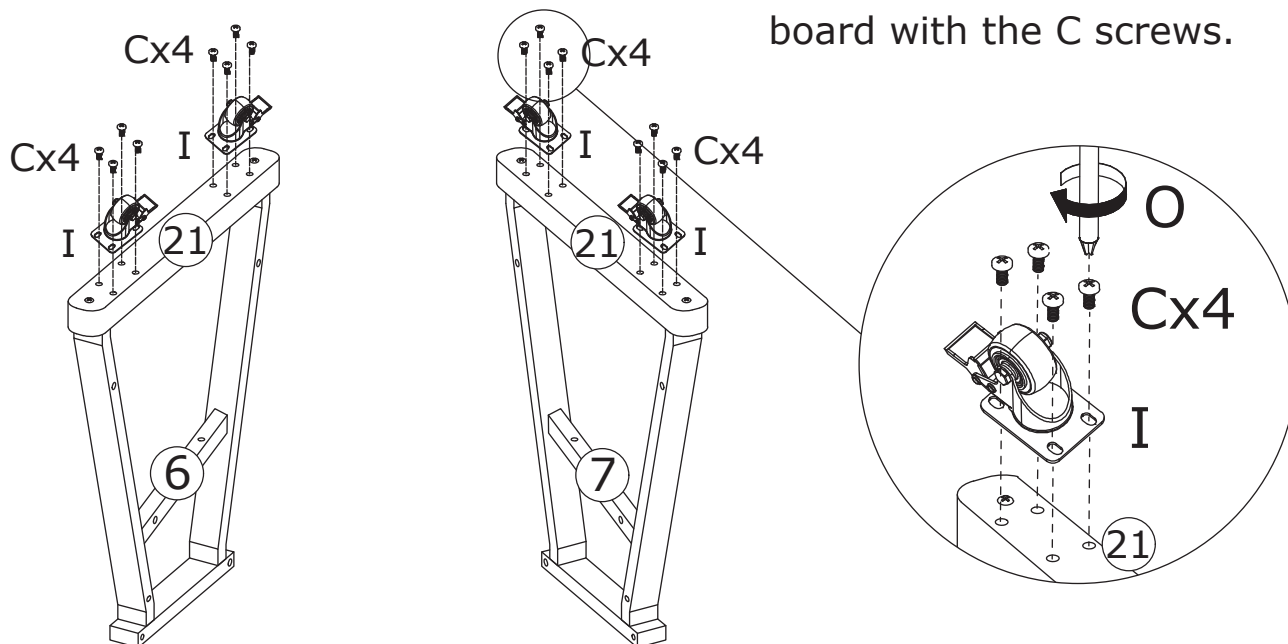

6

F x 4  M6 x 75 mm	O x 1 	
--	--	--

 
As illustrated, fix the 6 and 7 iron frames to the iron pipes under the 20 board with the F screws.

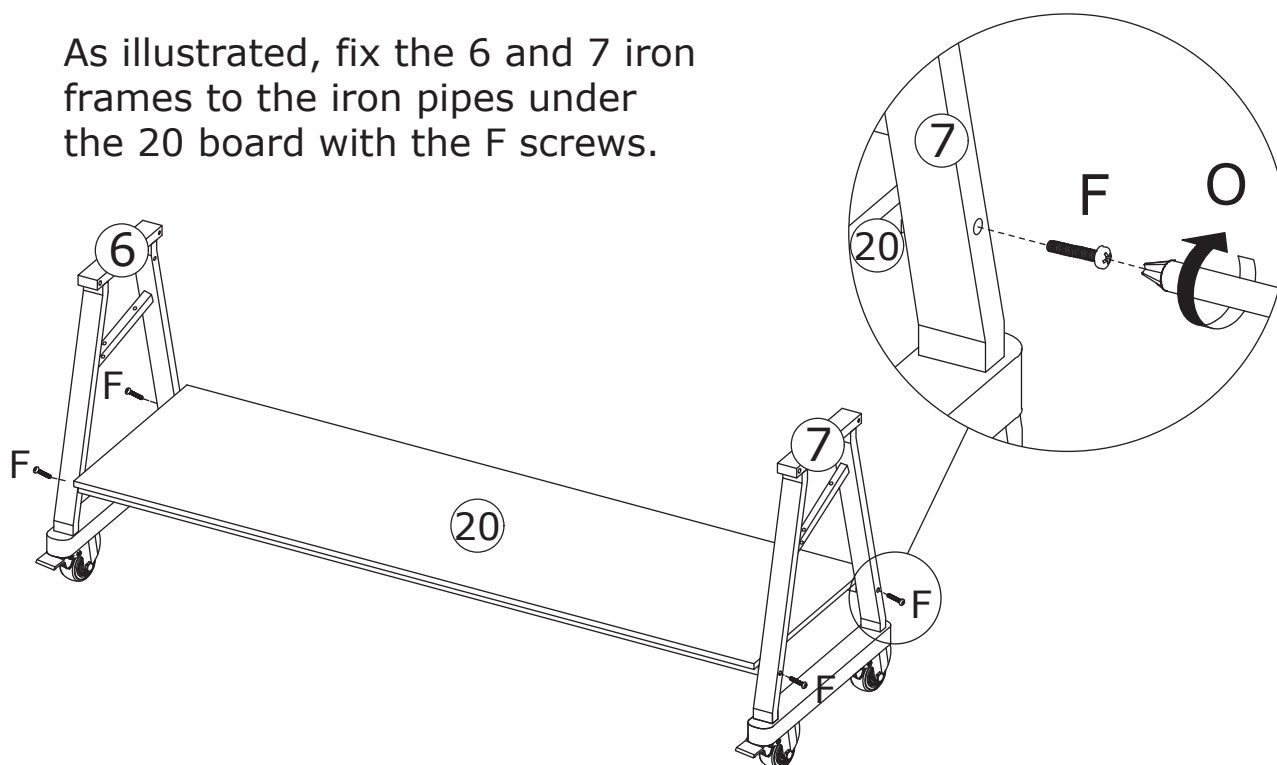



7

H x 5  M5 x 40 mm	O x 1 	
--	--	--

 
As illustrated, fix the 19 board and the 18 board with the H screw.

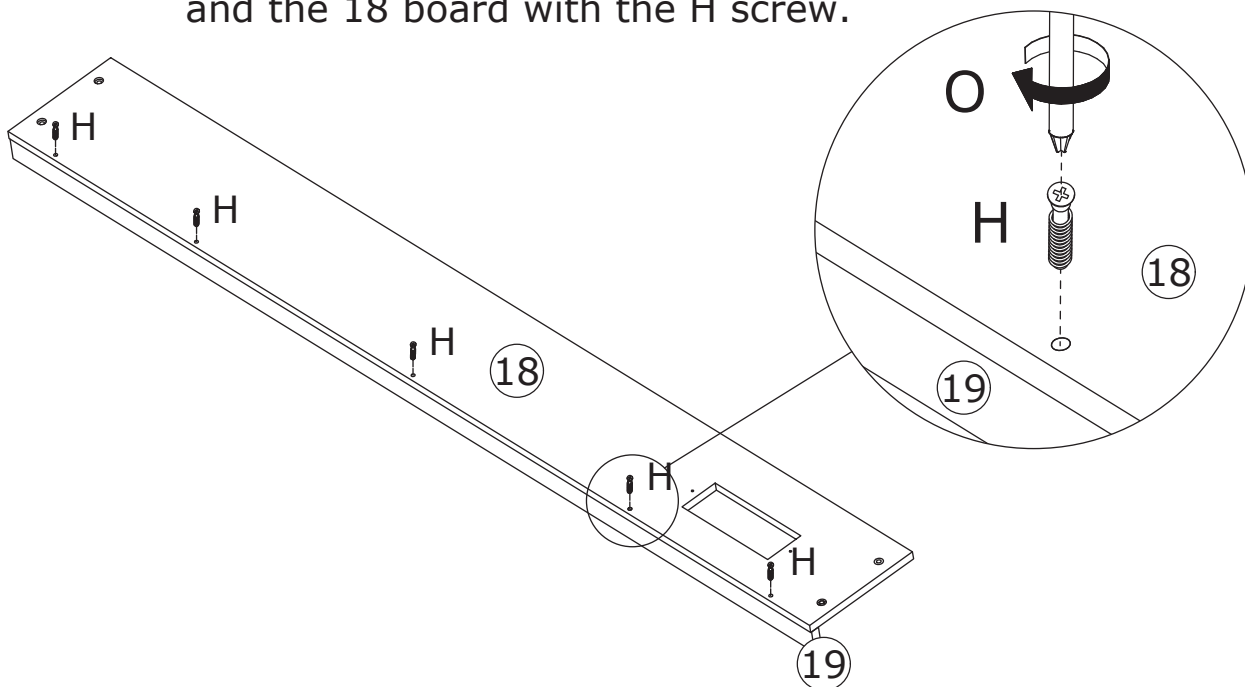


8

  G x 2  M4 x 14 mm	M x 1 	O x 1 	
--	--	--	--

 
As illustrated, install the M power socket onto the 18 board with the G screw.

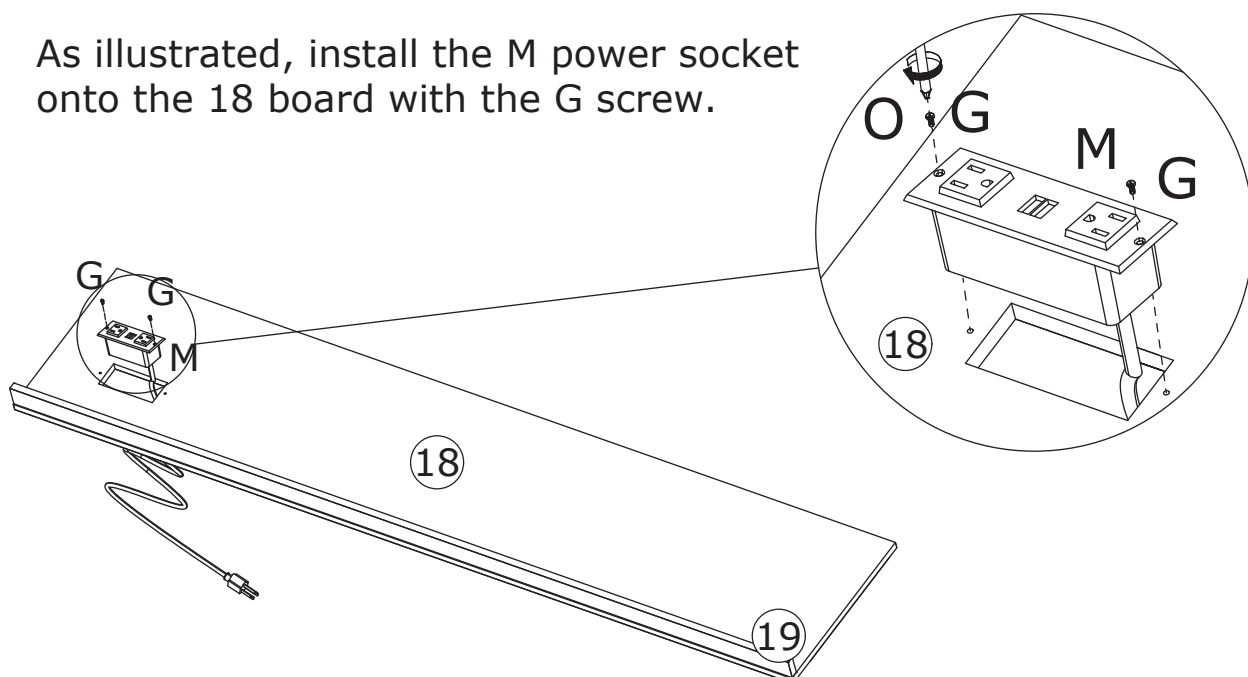


9

 F x 2  M6 x 75 mm	O x 1 	
--	--	--

 
As illustrated, fix the 22 iron pipe between the 6 and 7 iron frames with the F screw.

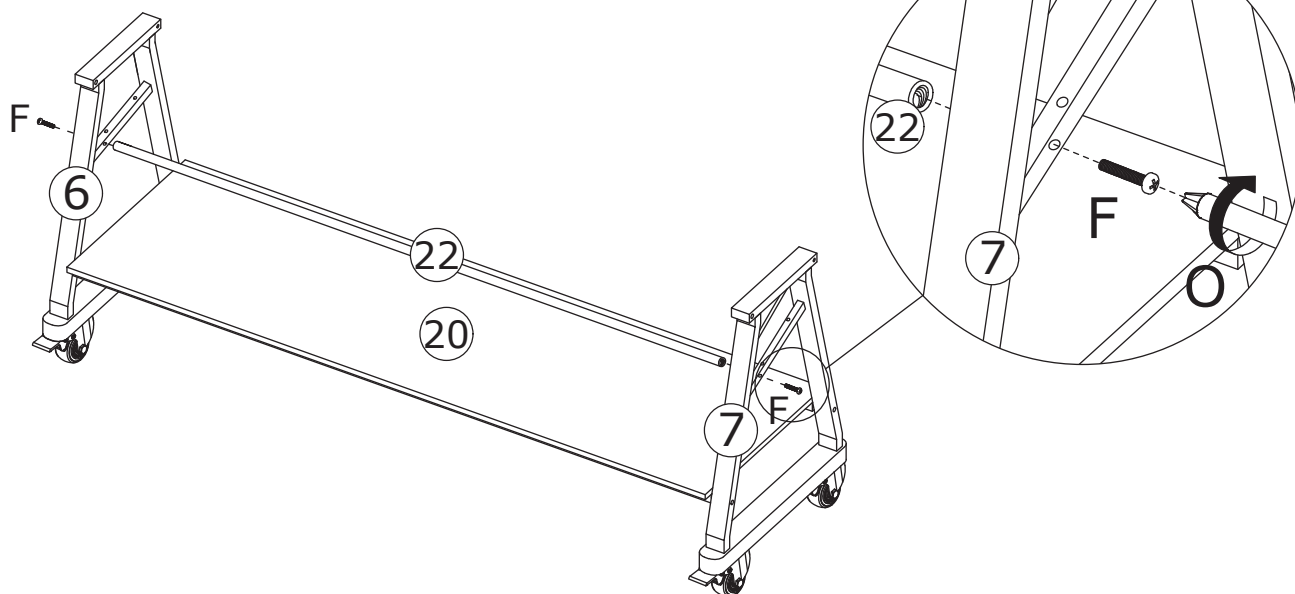

10

 D x 4  M6 x 28 mm	O x 1 	
--	--	--

 As illustrated, place the 18 board on the 6 and 7 iron frames and the 22 iron pipe, and then fix it with the D screw.

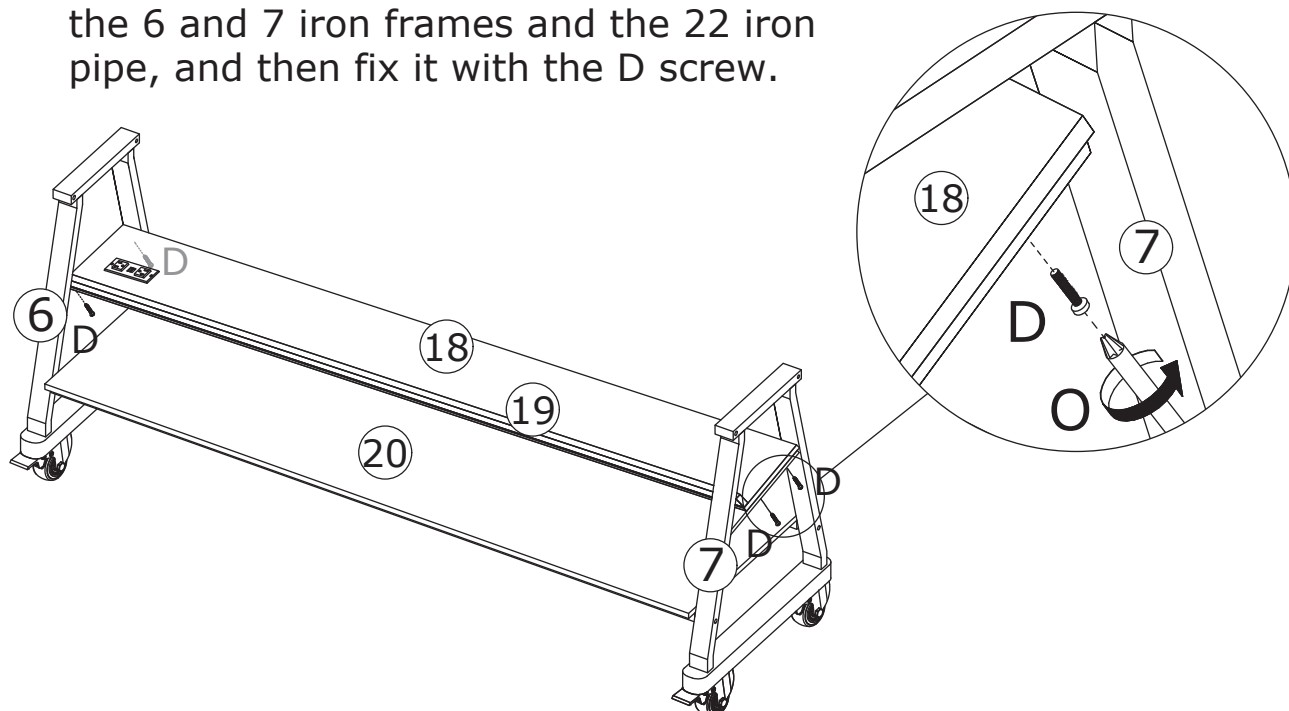

11

D x 5

 


M6 x 28 mm

O x 1




As illustrated, fix the 4 and 5 iron pipes onto the 17 board with the D screw.

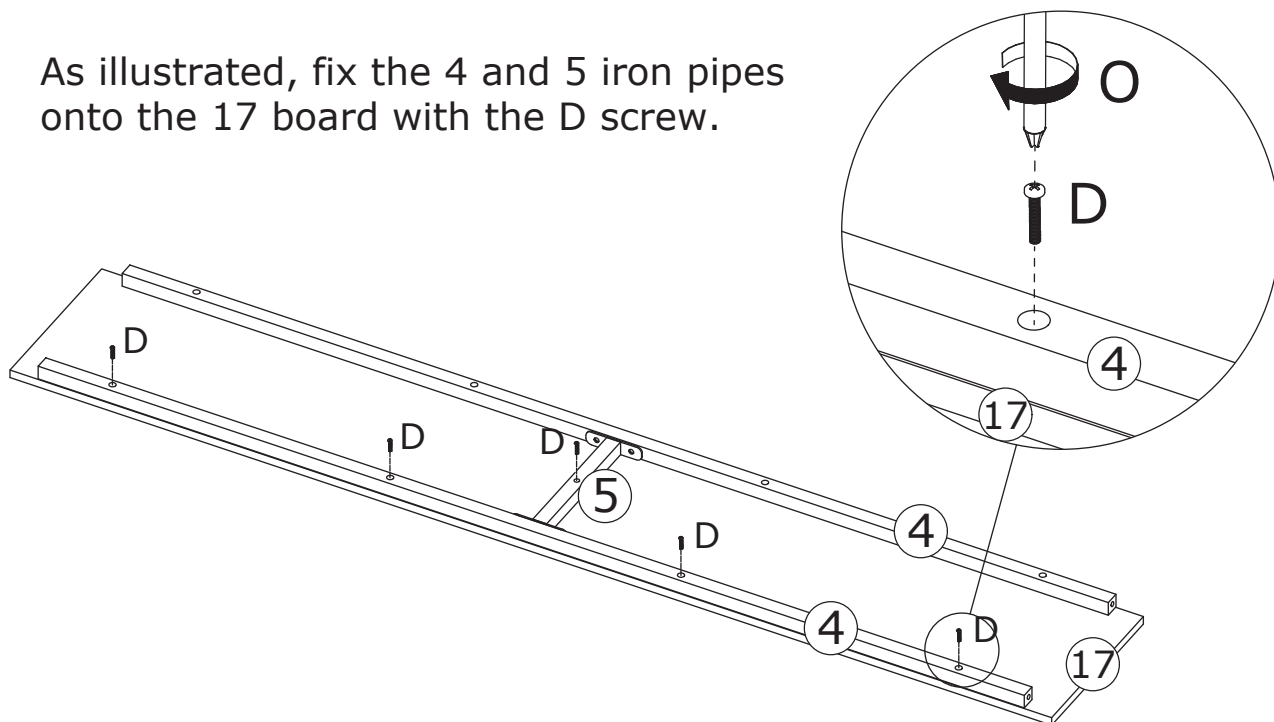

12

 As illustrated, place the 17 board on the 6 and 7 iron frames.

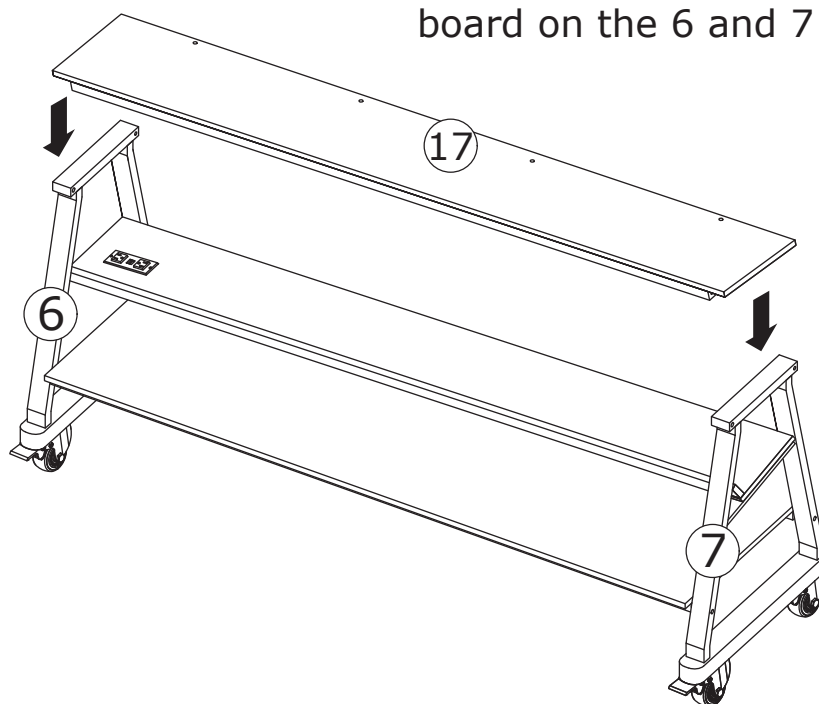


13

A x 12




Ø6 x 40 mm

 O x 1

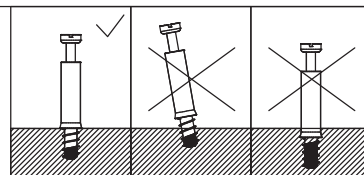

 As illustrated, fix the A screw on the 10 board.

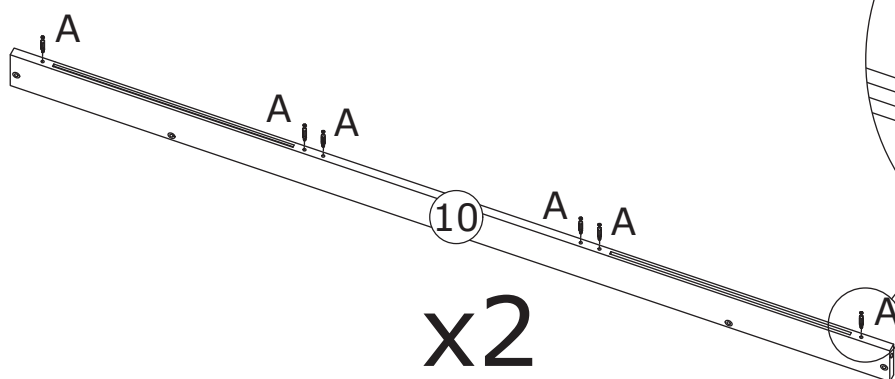


14

B x 6




Ø15 x 9.5 mm

 
O x 1

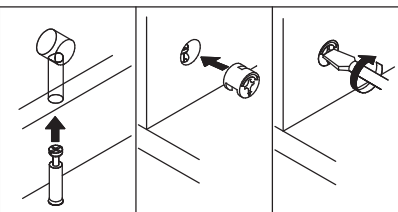

 As illustrated, connect the 11, 13 and 14 boards to the 10 board, insert the B screw and then tighten it.

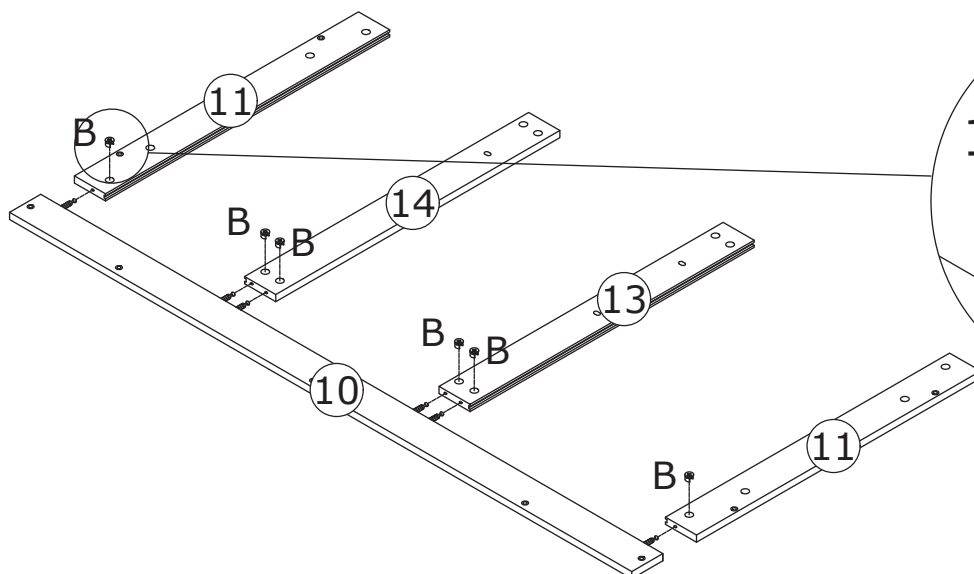

 As illustrated, insert the 12 board into the slots of the 11, 13 and 14 boards.

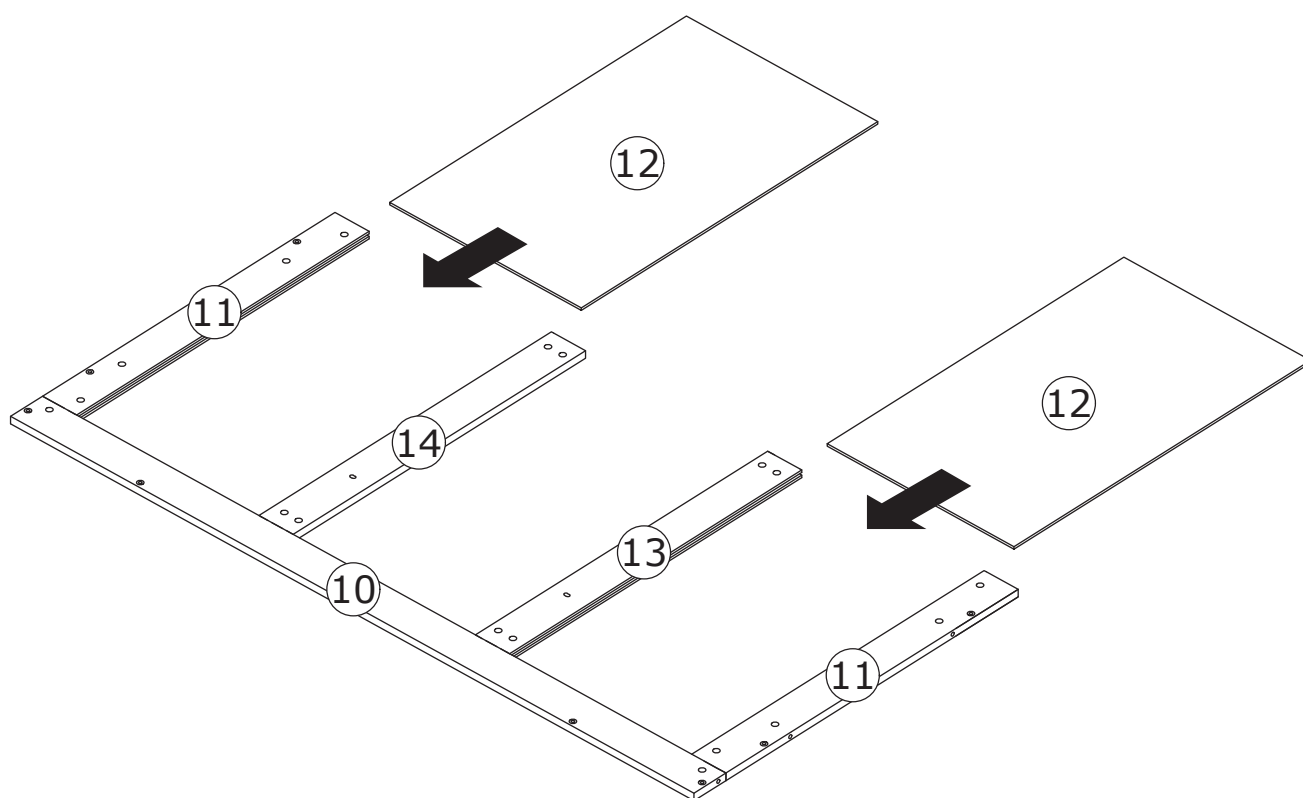




16

B x 6





Ø 15 x 9.5 mm

   O x 1

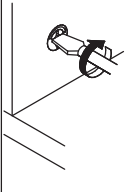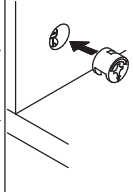


  As illustrated, connect the 10 board with the 11, 13 and 14 boards, then insert the B screw and tighten it.

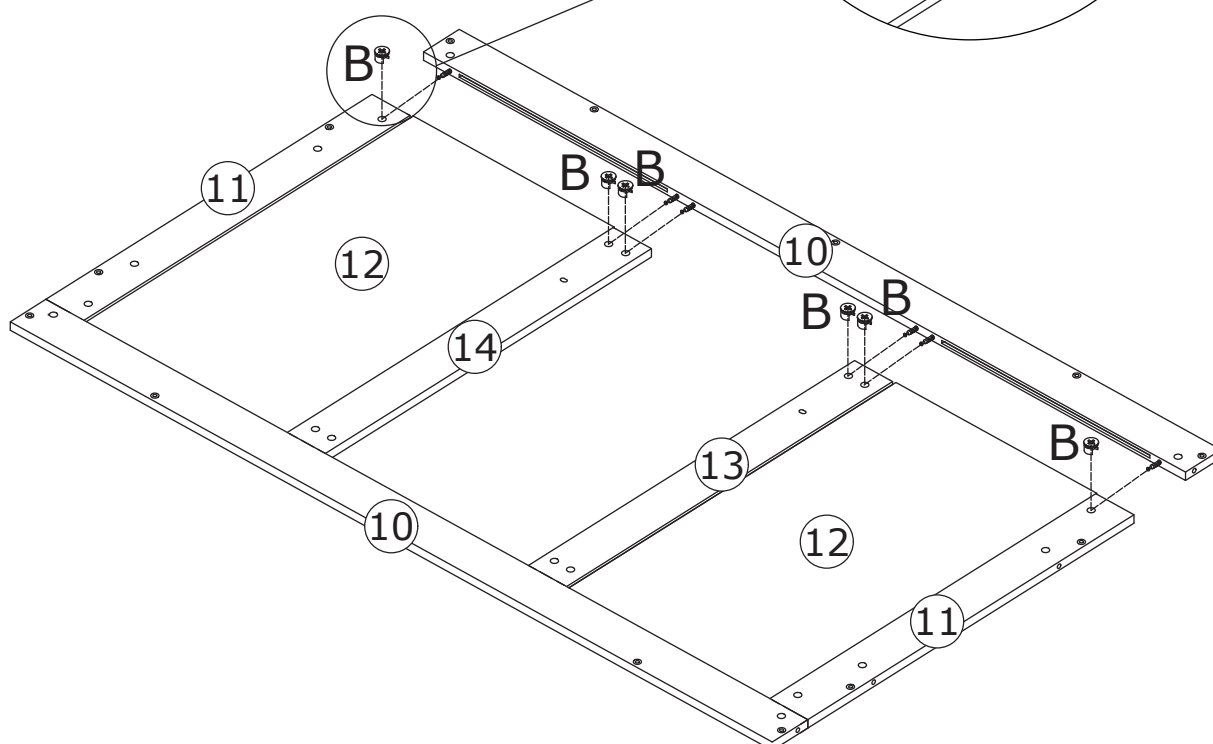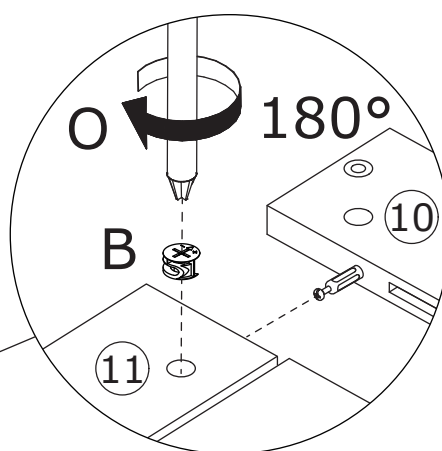

17

 As illustrated, insert the protruding parts of the 1 and 3 iron pipes into both ends of the 2 iron pipe to assemble a quadrilateral iron frame.

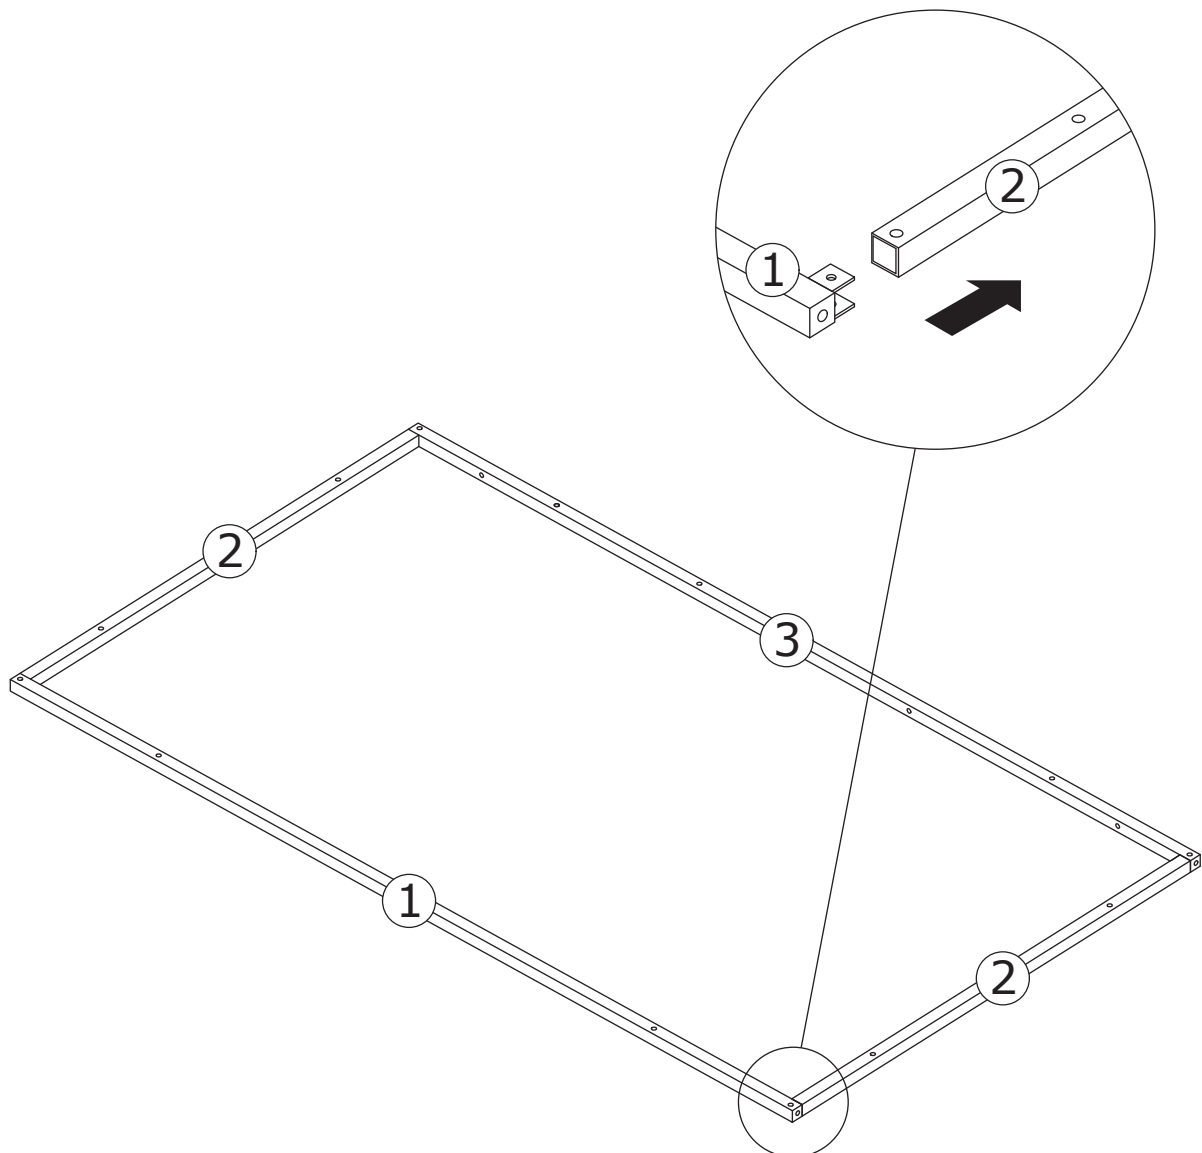


18

D x 14




M6 x 28 mm

 O x 1



As illustrated, fix the assembled quadrilateral iron frame mentioned above onto the 10 and 11 boards with the D screw.

 (PS. Please pay attention that the positions of the 1 and 3 iron pipes should be consistent with those in the following figure.)

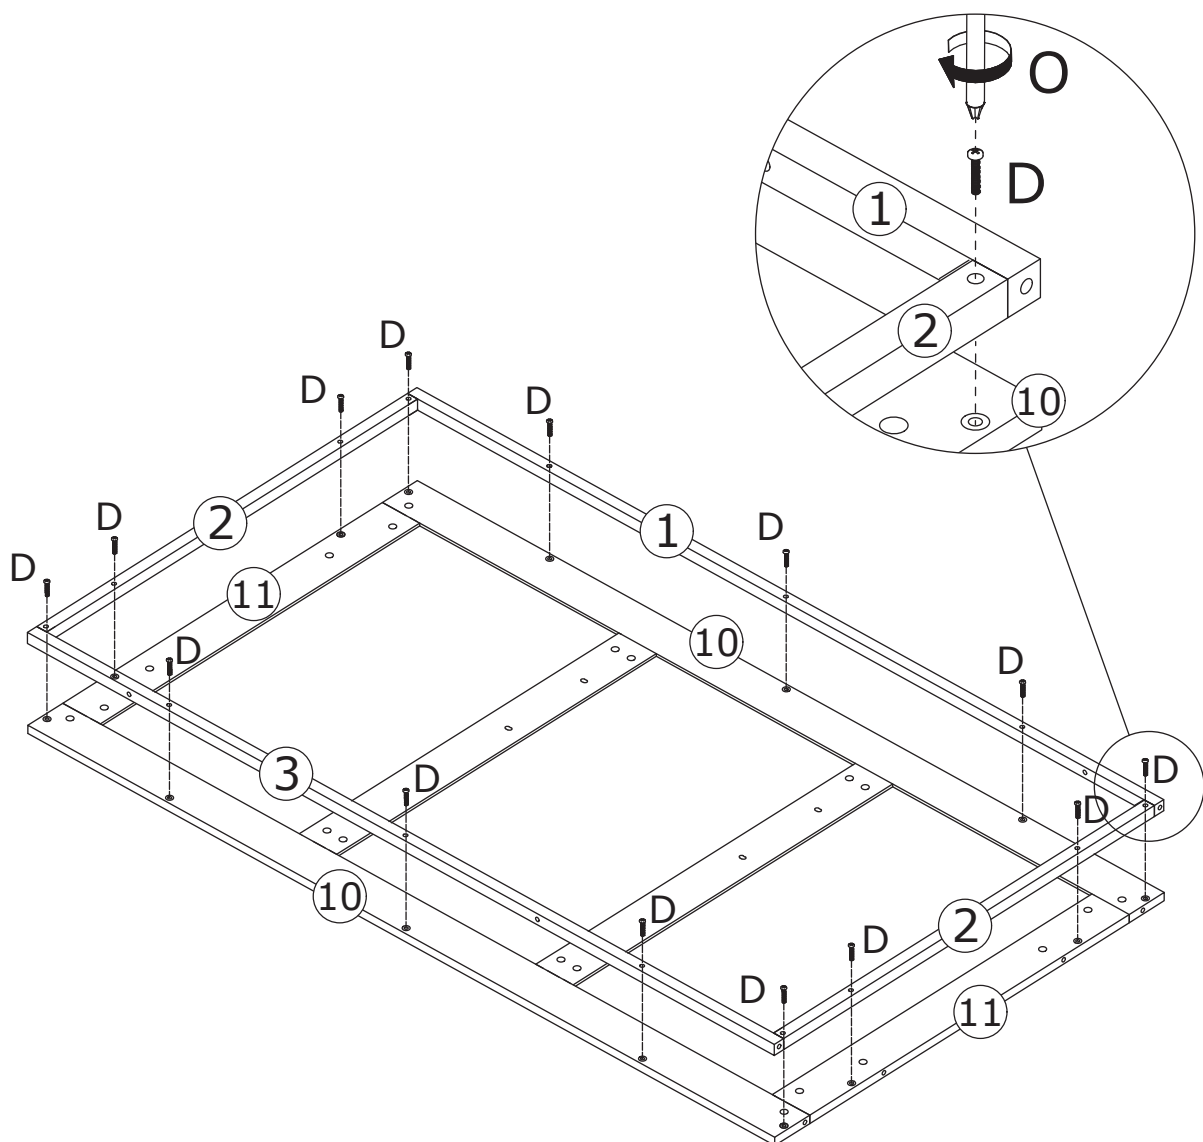


19

A x 8




Ø6 x 40 mm

 
O x 1

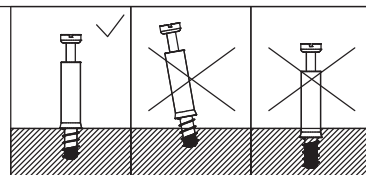

 
As illustrated, install the A screw onto the 15 and 16 boards.

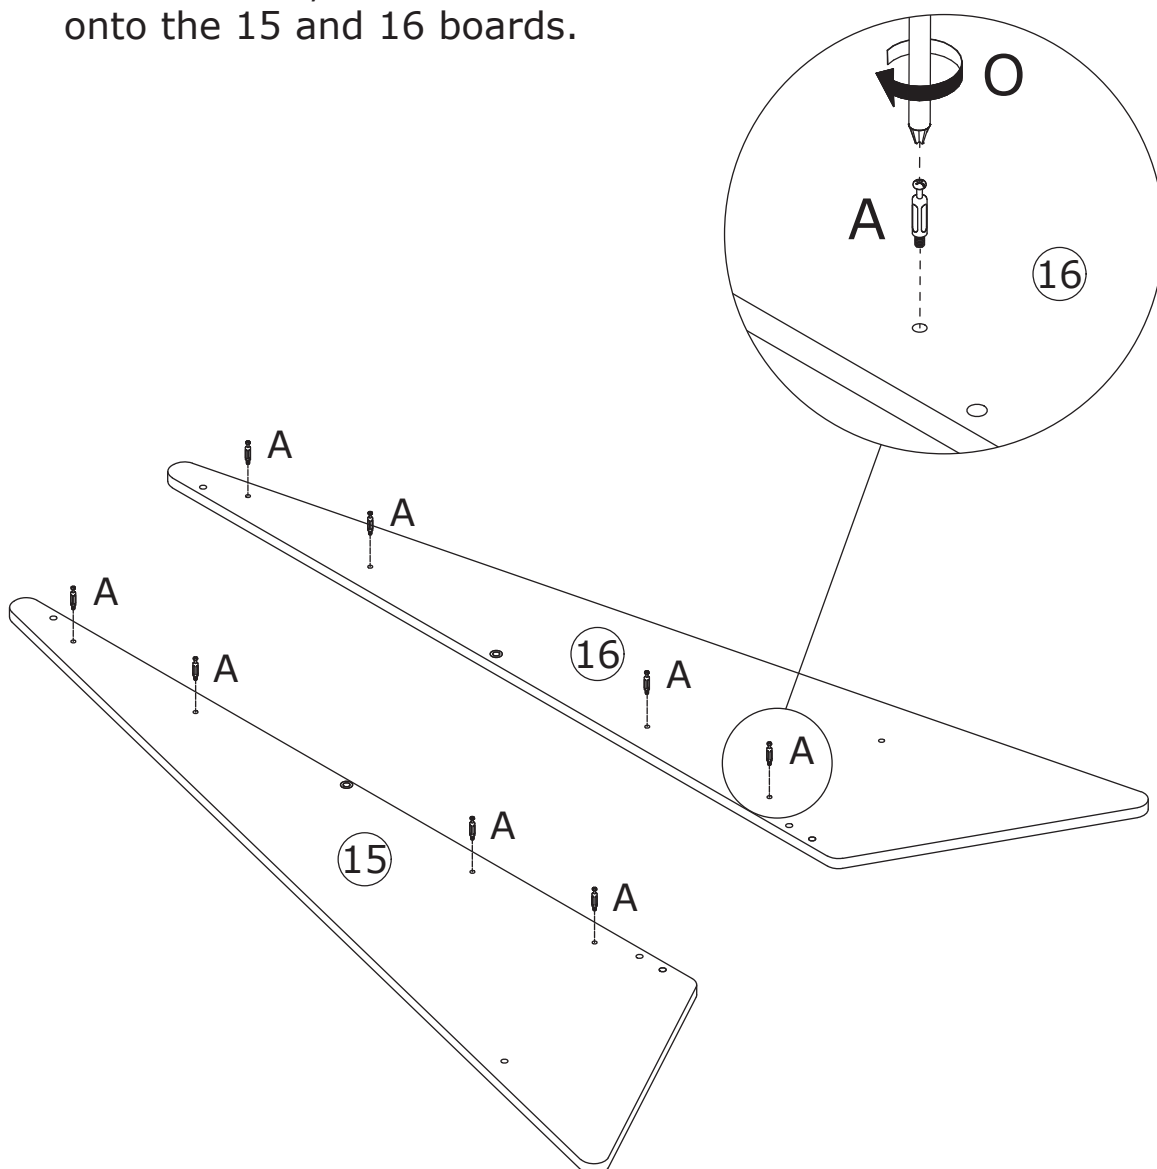

20

 F x 2  M6 x 75 mm	O x 1 	
--	--	--

 As illustrated, fix the 15 board onto the 6 iron frame with the F screw.


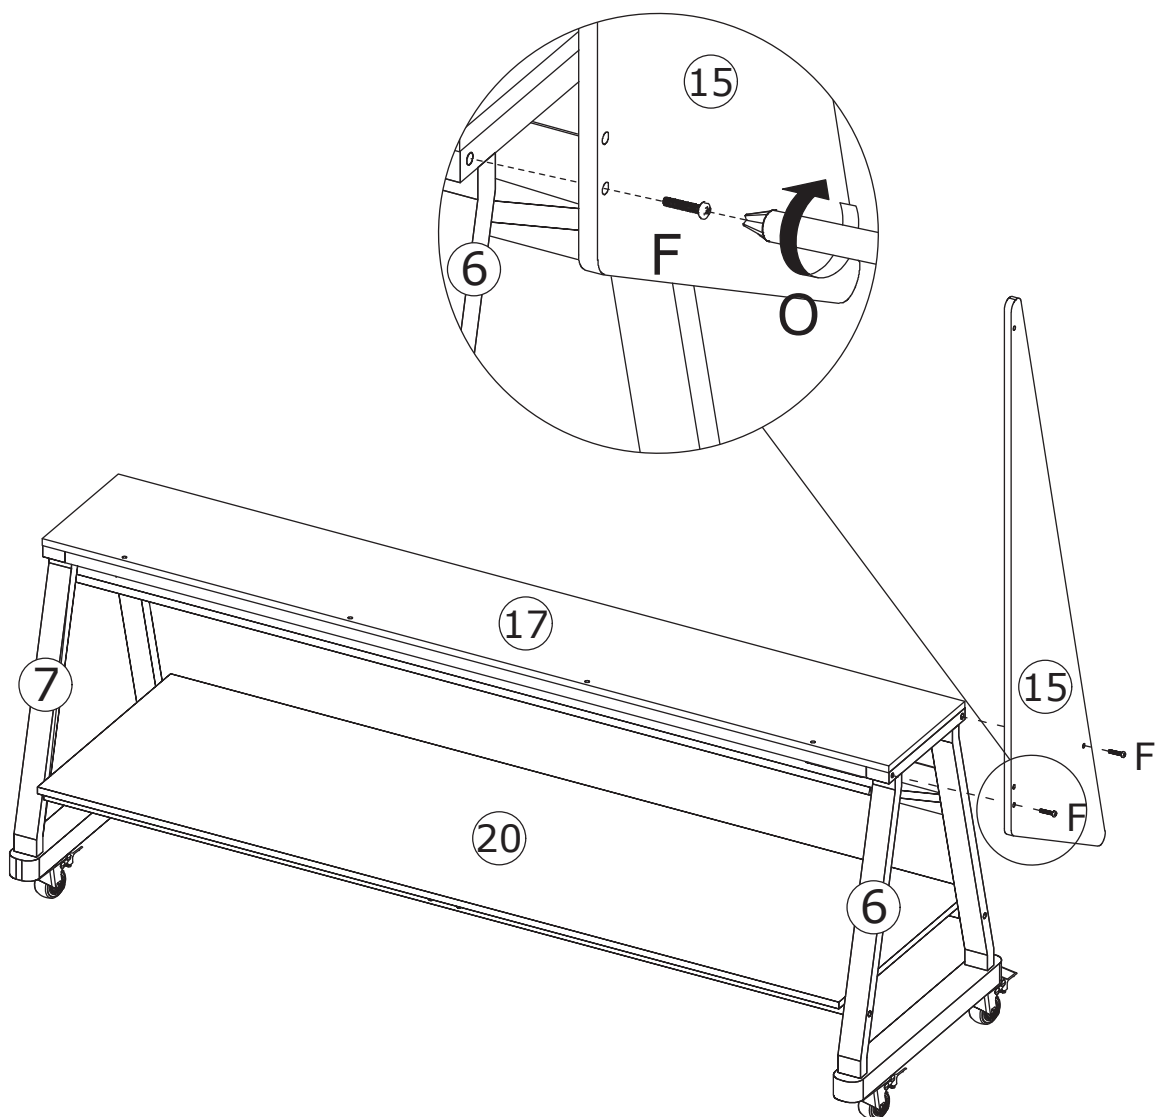


21


B x 4  Ø 15 x 9.5 mm	D x 1  M6 x 28 mm	E x 2  M6 x 50 mm	O x 1 	
---	--	--	---	--

As illustrated, connect the assembled quadrilateral iron-wood frame mentioned above to the 15 wooden board, then insert the B screw and tighten it. Finally, fix it with the D and E screws.

  
(PS. Please pay attention to the up and down directions of the quadrilateral iron-wood frame.)

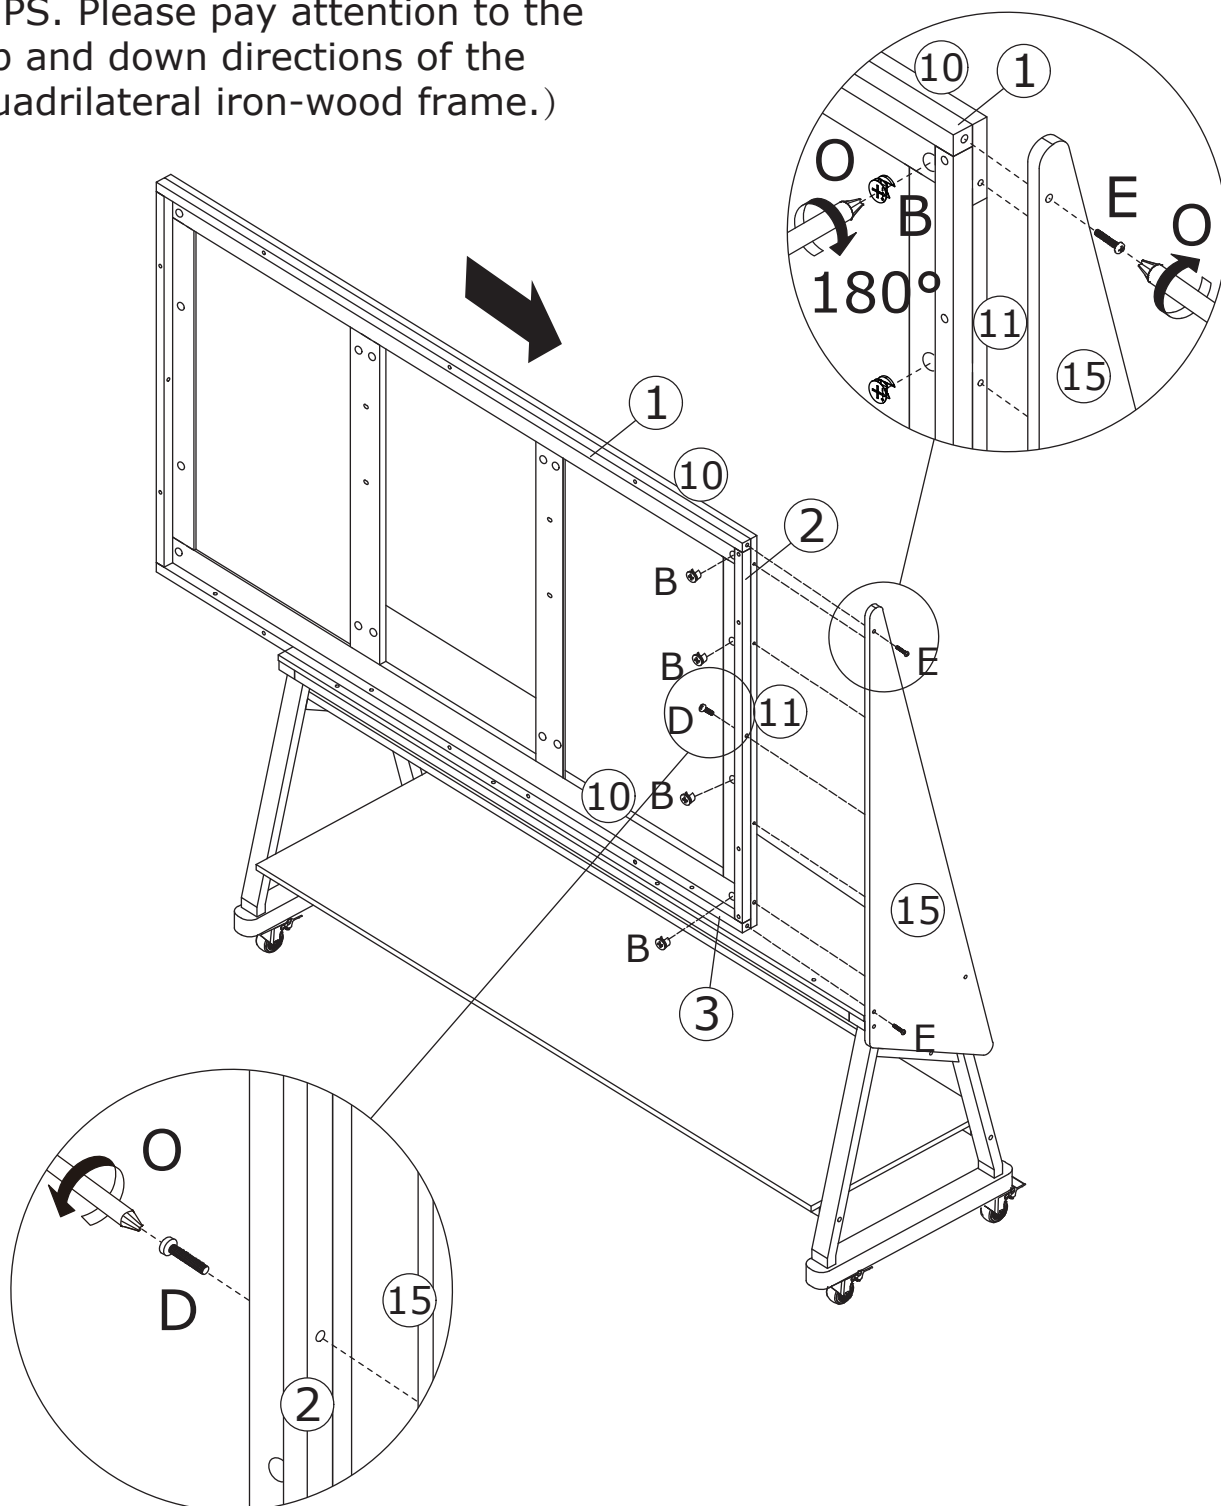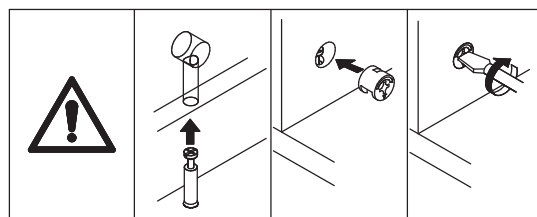

22

 
E x 4  M6 x 50 mm	O x 1 	
--	--	--

 As illustrated, use the E screw to connect the 4 iron pipe, the 17 board and the 3 iron pipe from the bottom and then tighten it.

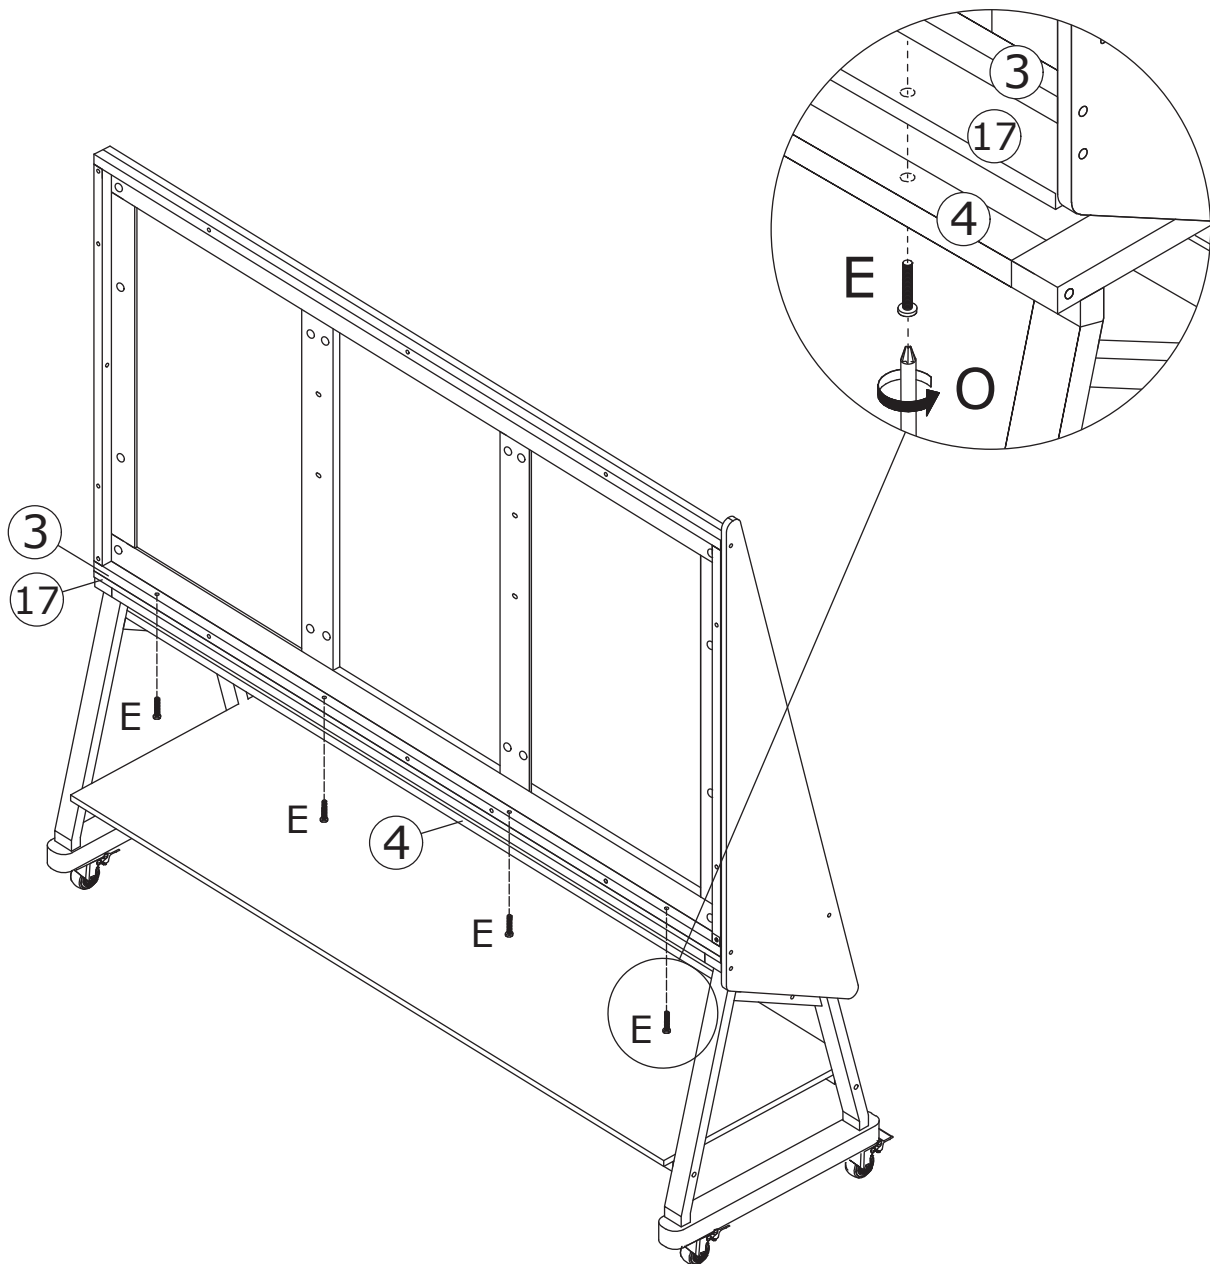


23


B x 4  Ø 15 x 9.5 mm	D x 1  M6 x 28 mm	E x 2  M6 x 50 mm	F x 2  M6 x 75 mm	O x 1 	
---	--	--	---	--	--

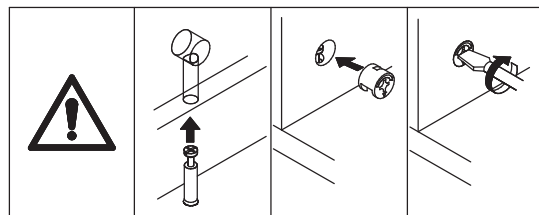 


 As illustrated, after connecting the 16 board to the quadrilateral iron-wood frame, insert the B screw and tighten it. Finally, fix it with the D and E screws.

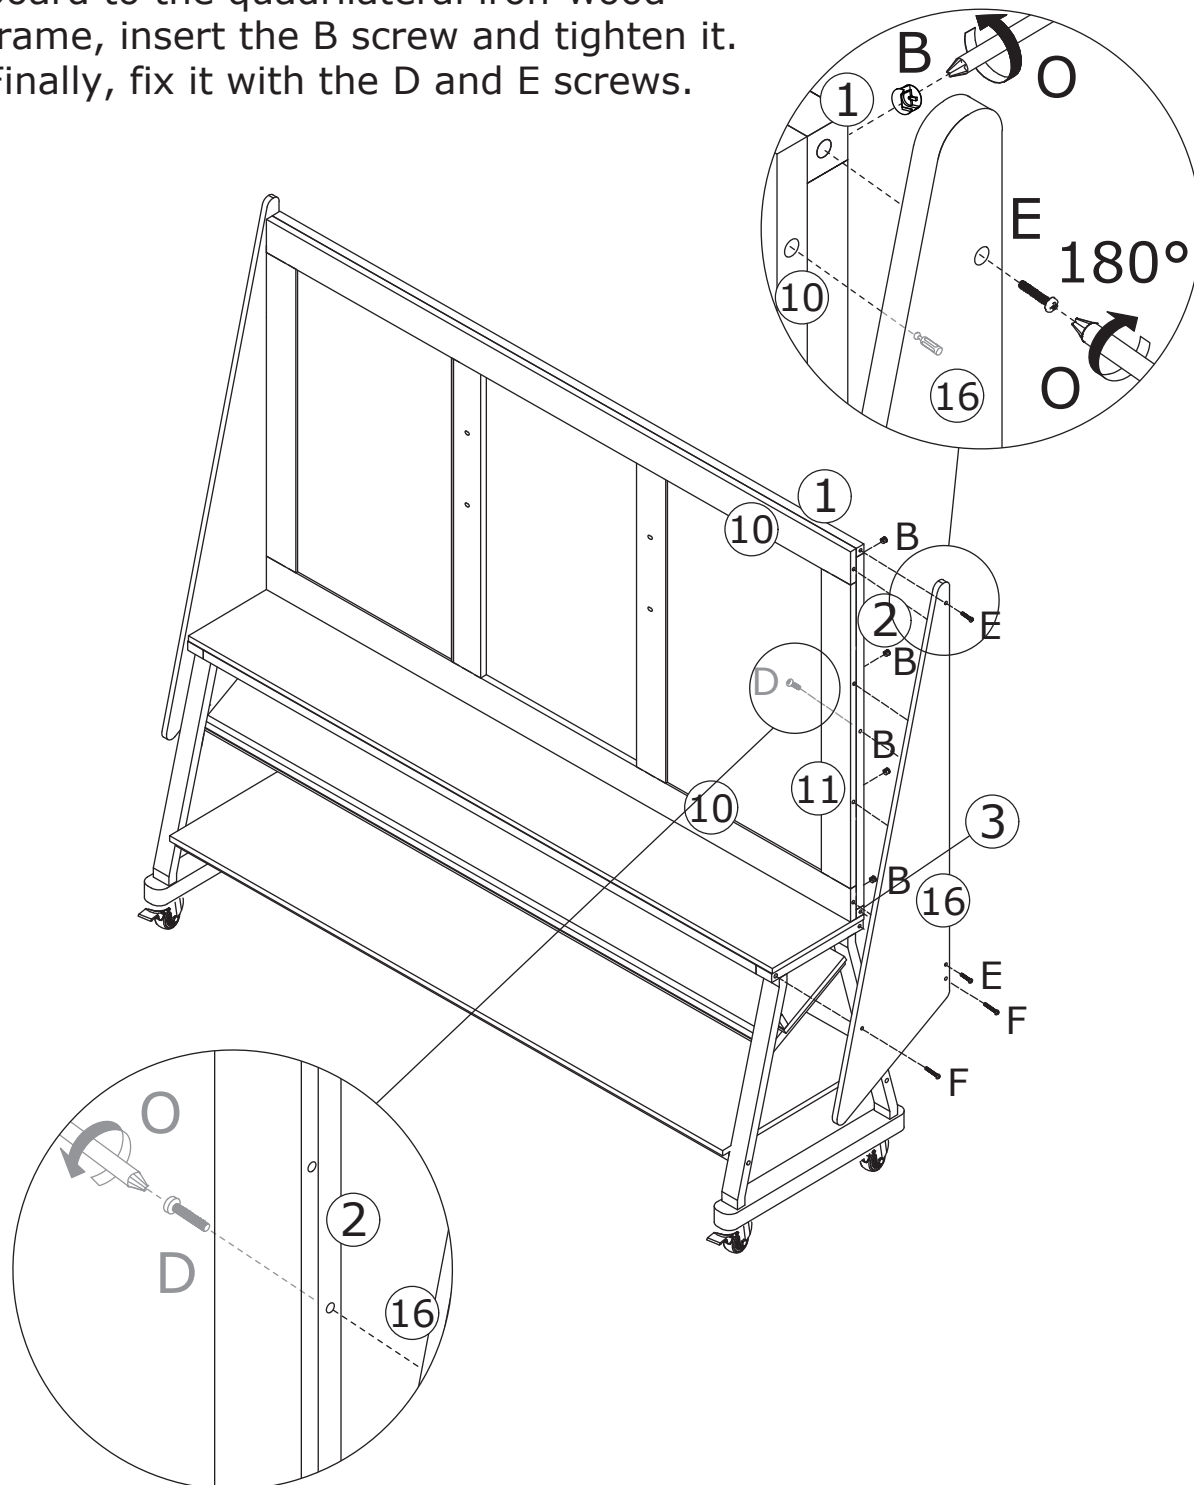


24

 
D x 4  M6 x 28 mm	J x 4  M6 mm	K x 1 	N x 1 	O x 1 	
--	---	--	---	--	--

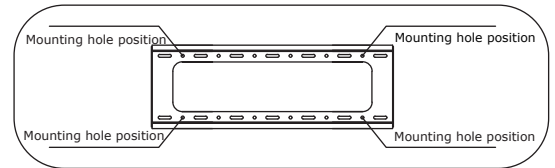 

 
As illustrated, according to the holes marked in the instruction manual, pass the D screw through the K TV stand, the 13 board and the 14 board, and then tighten and fix it with the J nut.

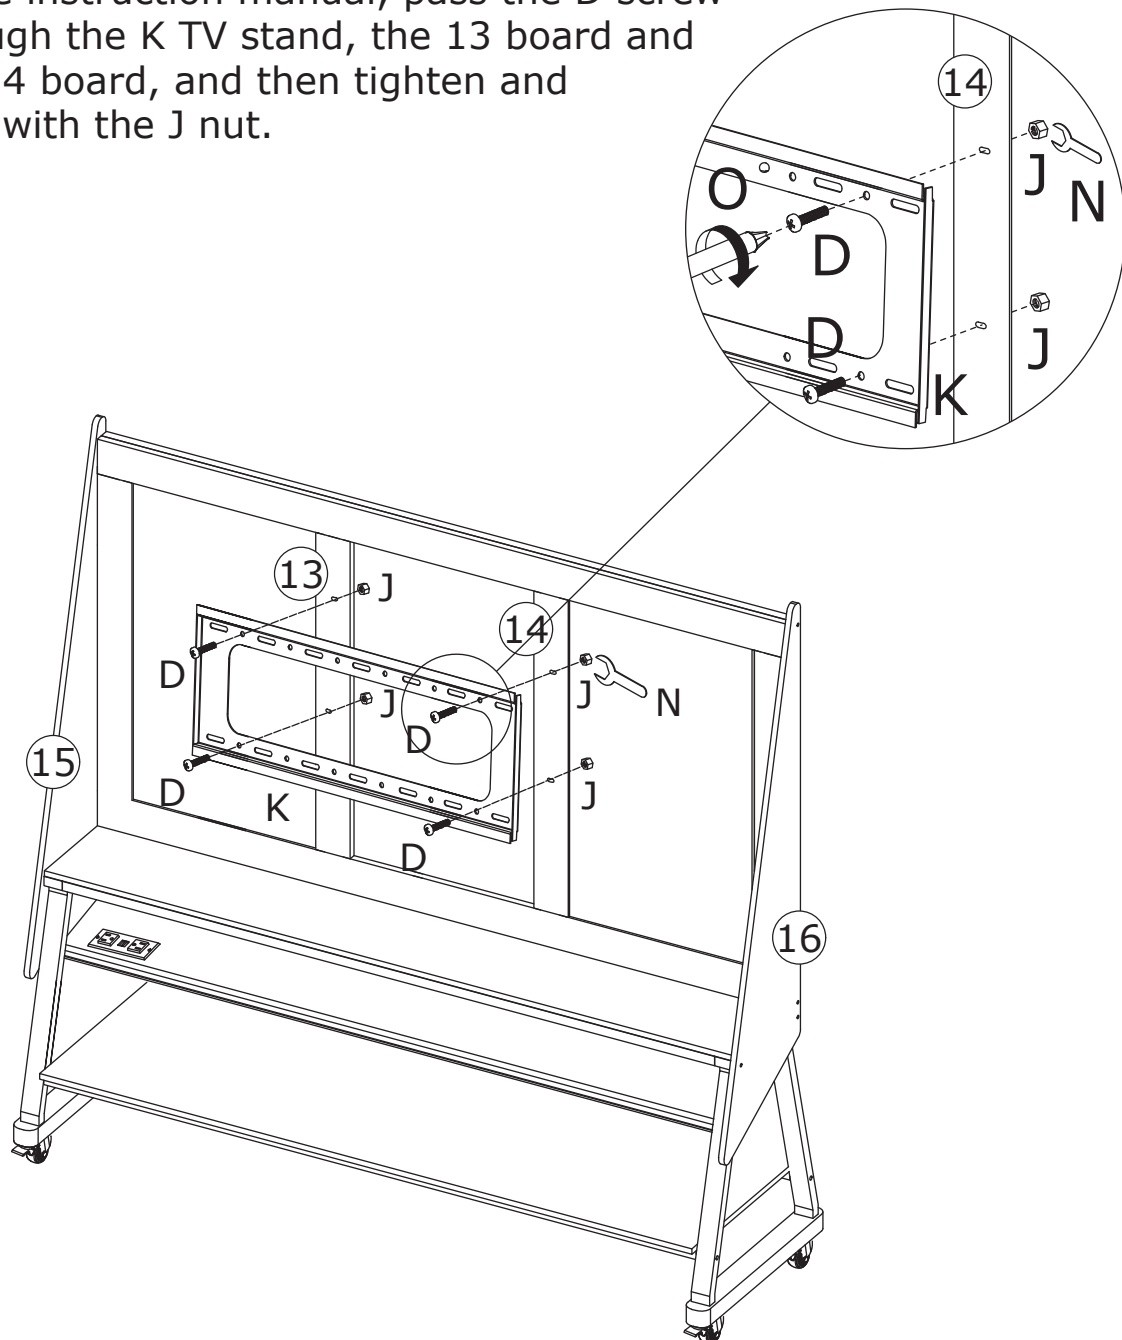

25

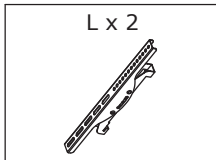 

 
After connecting and fixing the L iron piece to the TV you want to install (the TV set is not shown in the following picture), hang it on the K TV stand as shown in the figure.

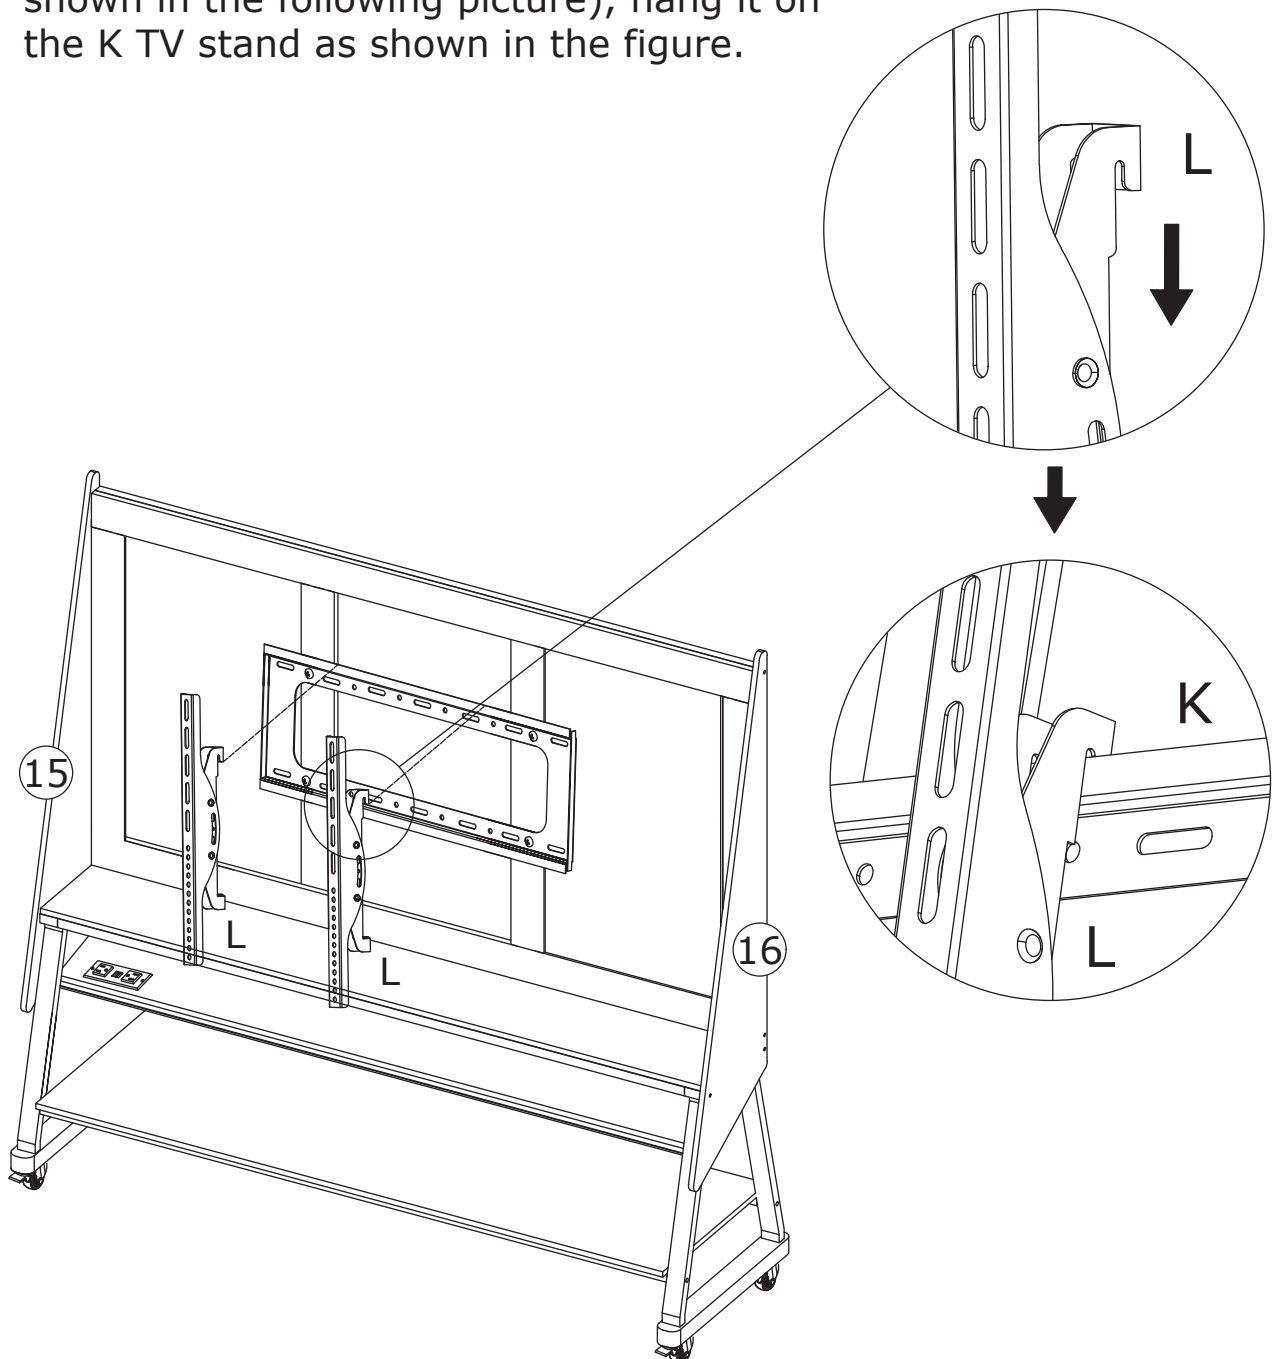

26

C x 2  M6 x 10 mm	E x 2  M6 x 50 mm	O x 1 	
--	--	--	--

 After adjusting the TV to an angle that is suitable for you to watch, as shown in the figure, install the C and E screws and tighten them. The installation of this product is now completely finished. Wish you a happy use of this product!

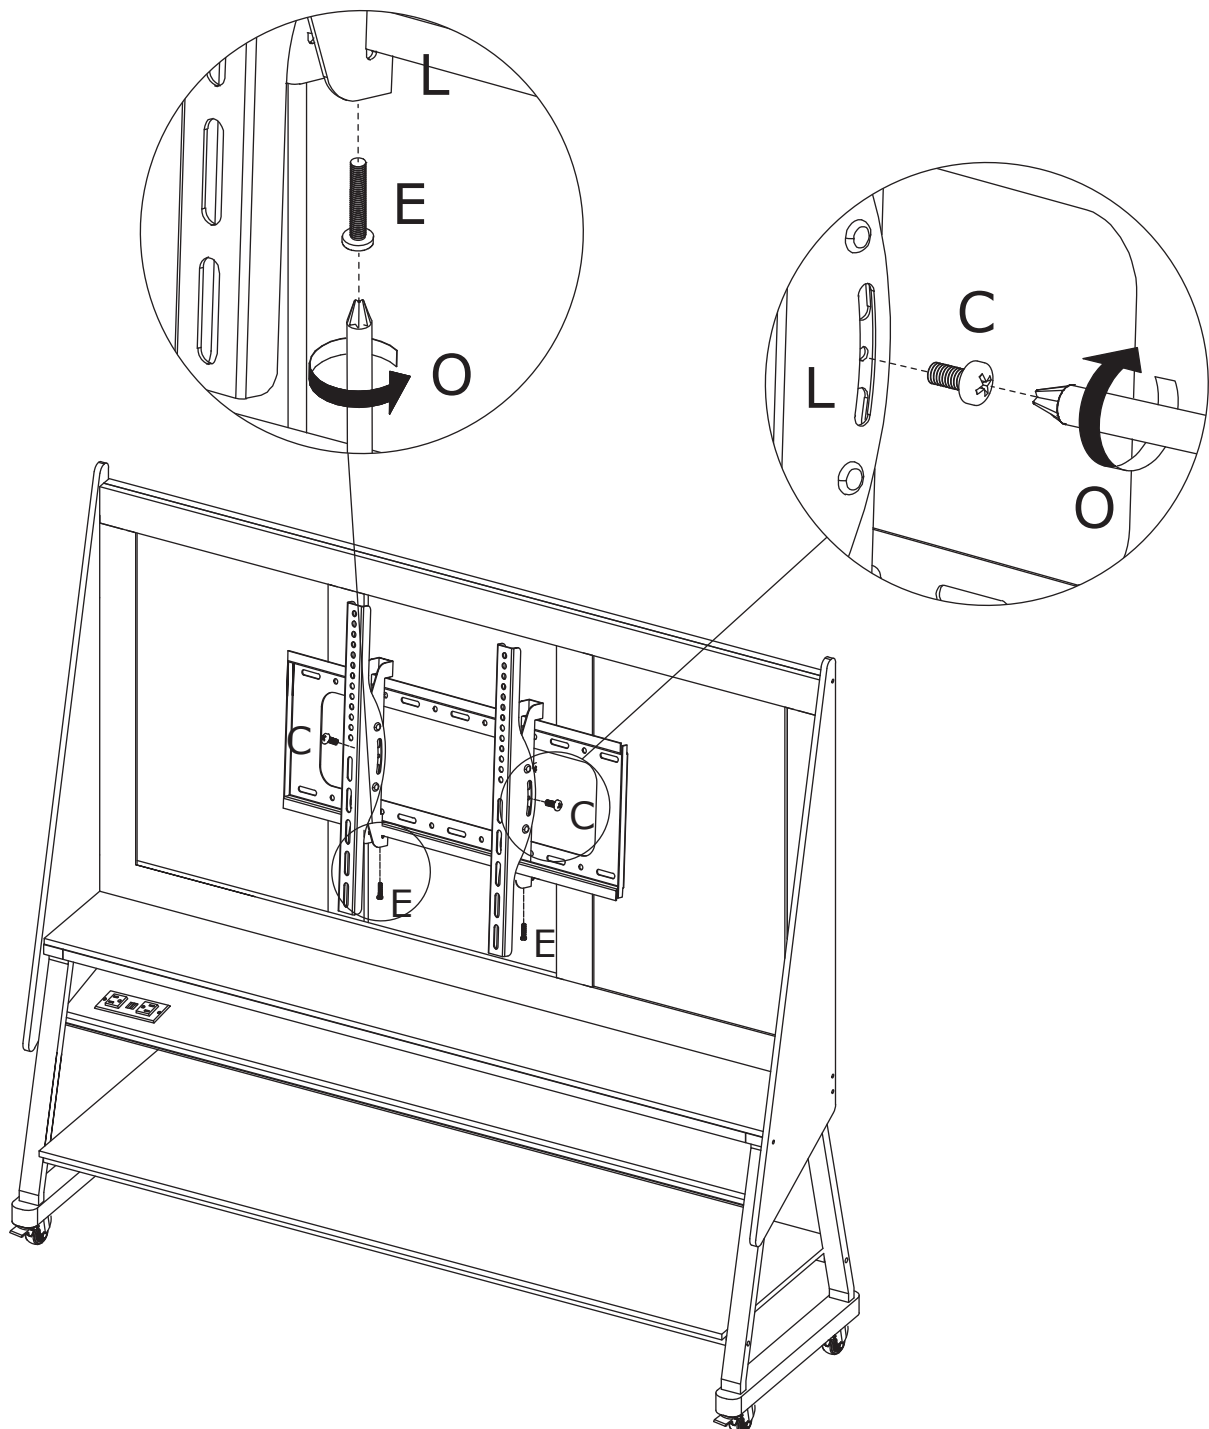

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068