 
 







LOW BOOKCASE

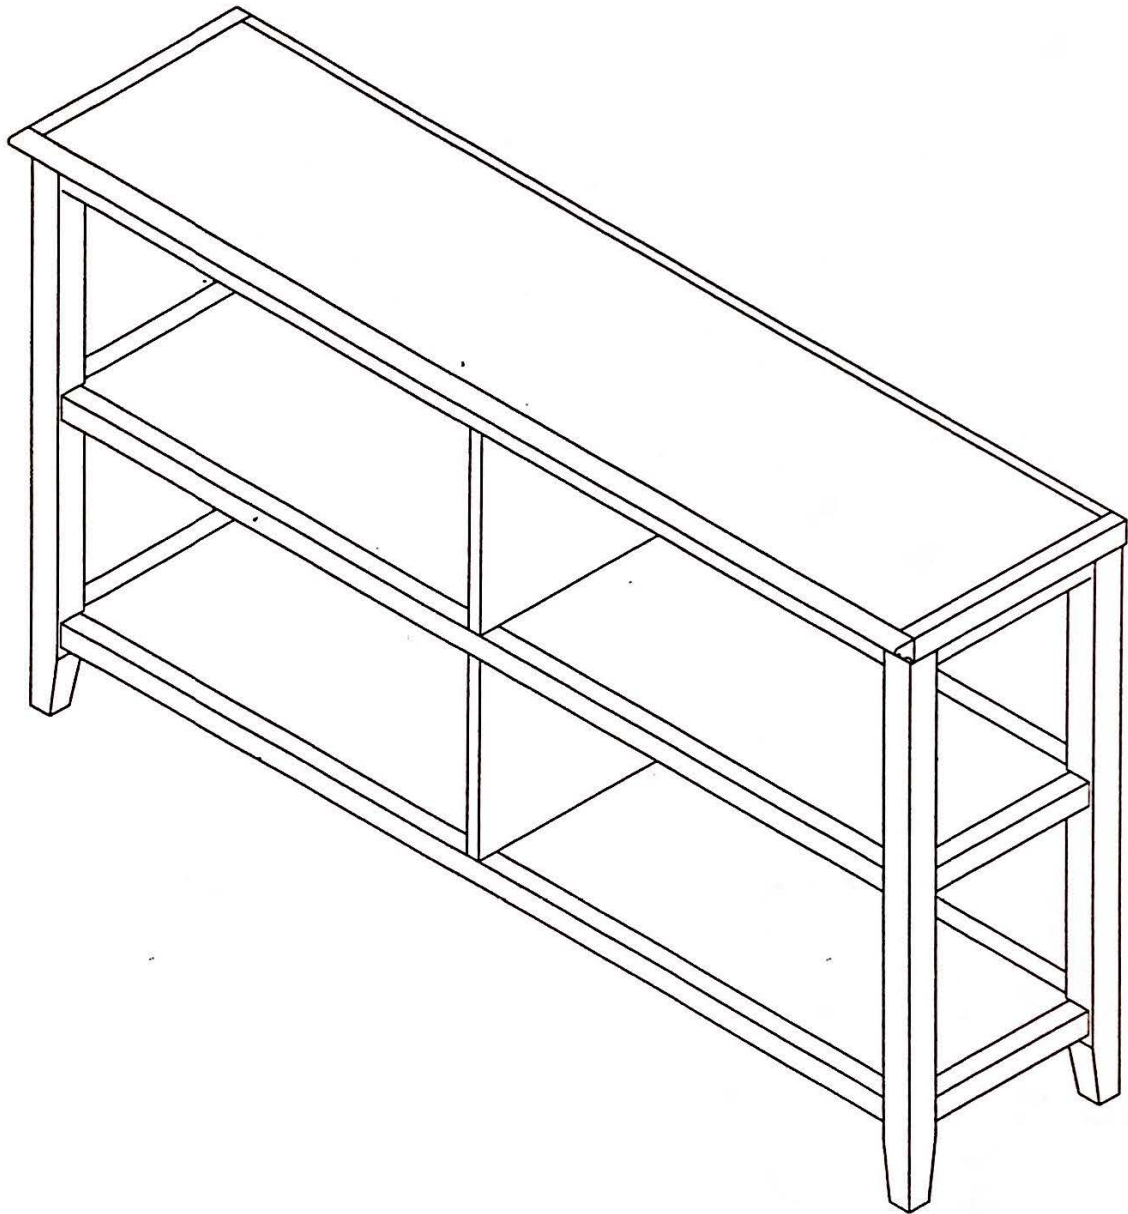

NO CLIMBING

     LOW BOOKCASE

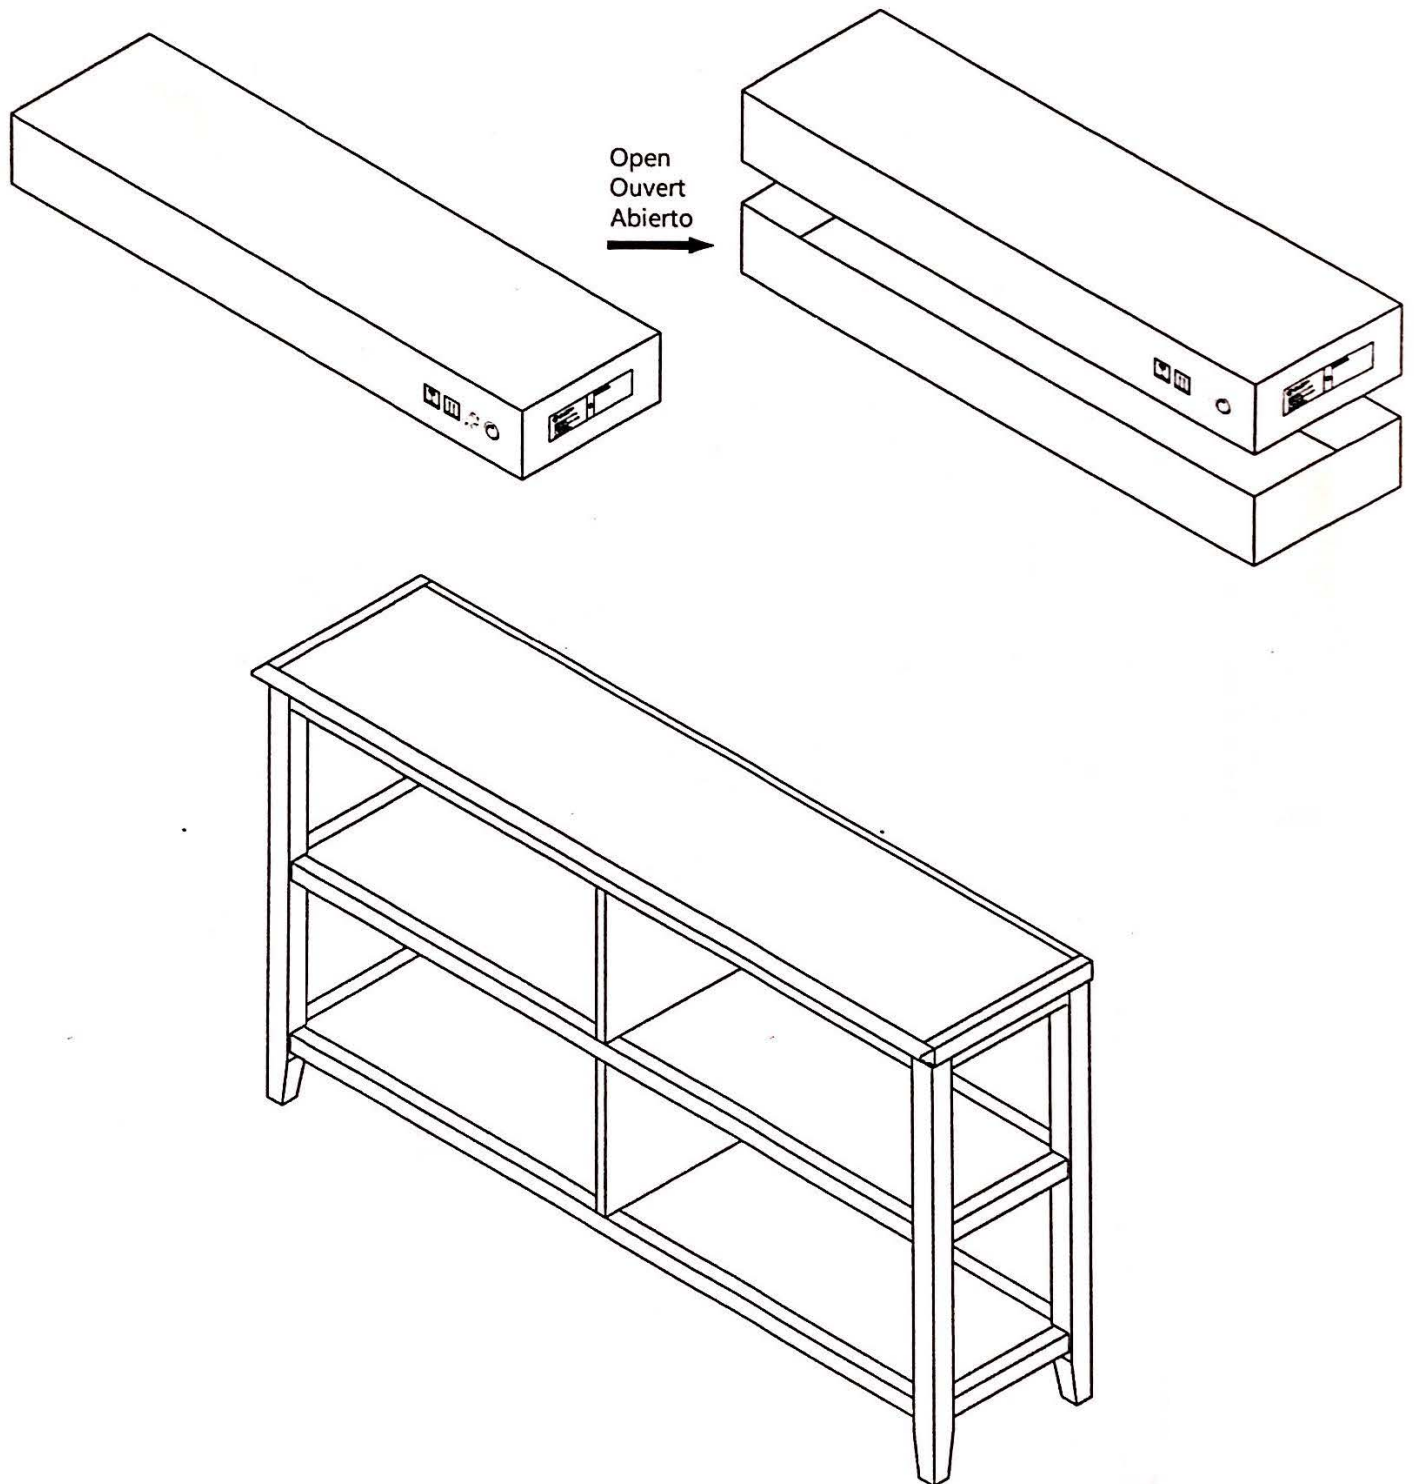

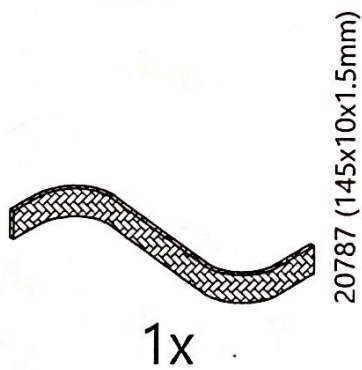
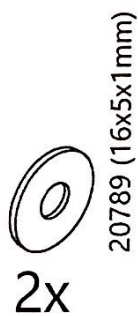

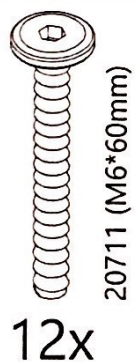
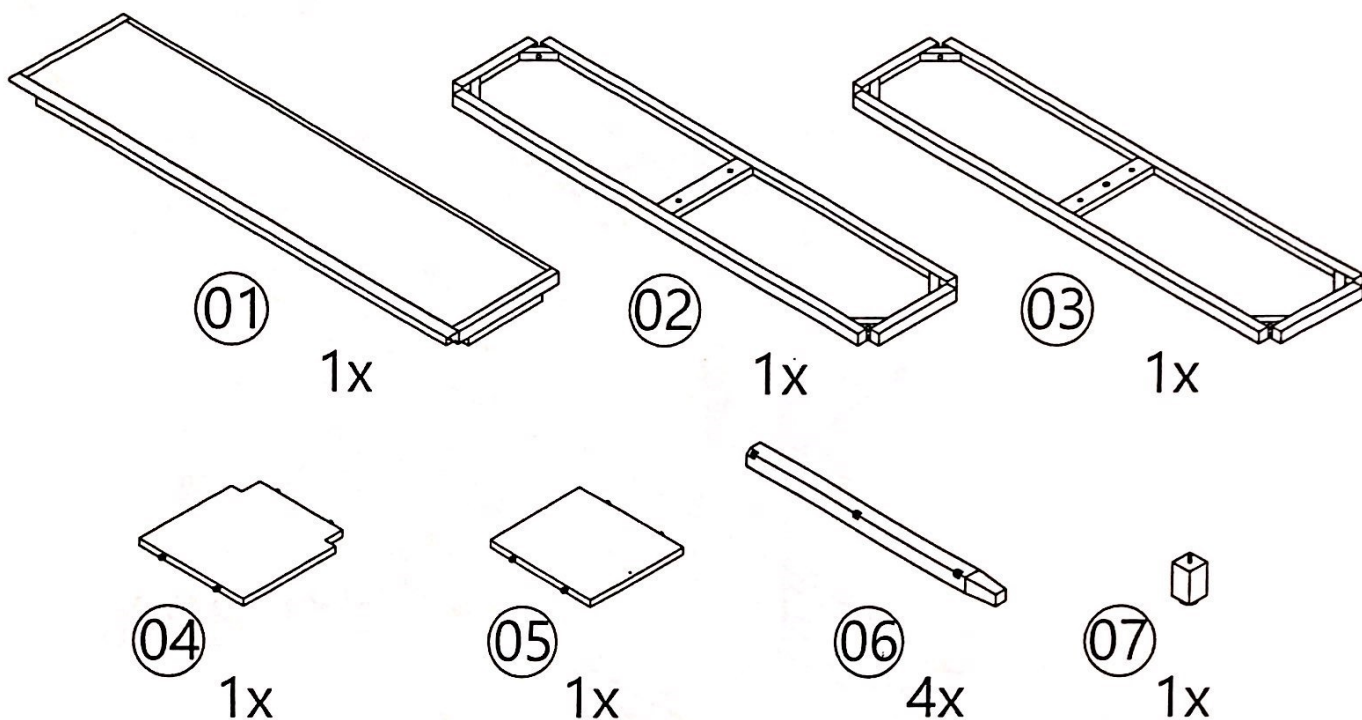





WARNING:

CHOKING HAZARD--Small Parts
Not for children under 3 years.
To be Assembled by an Adult

        
Not Include
Non Inclus
No Incluido








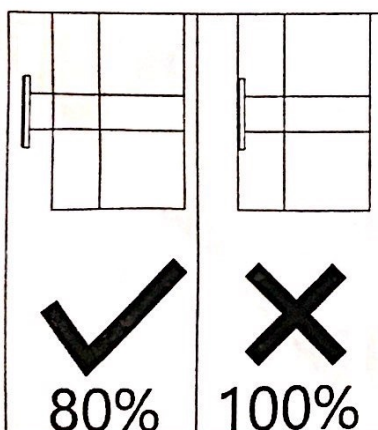
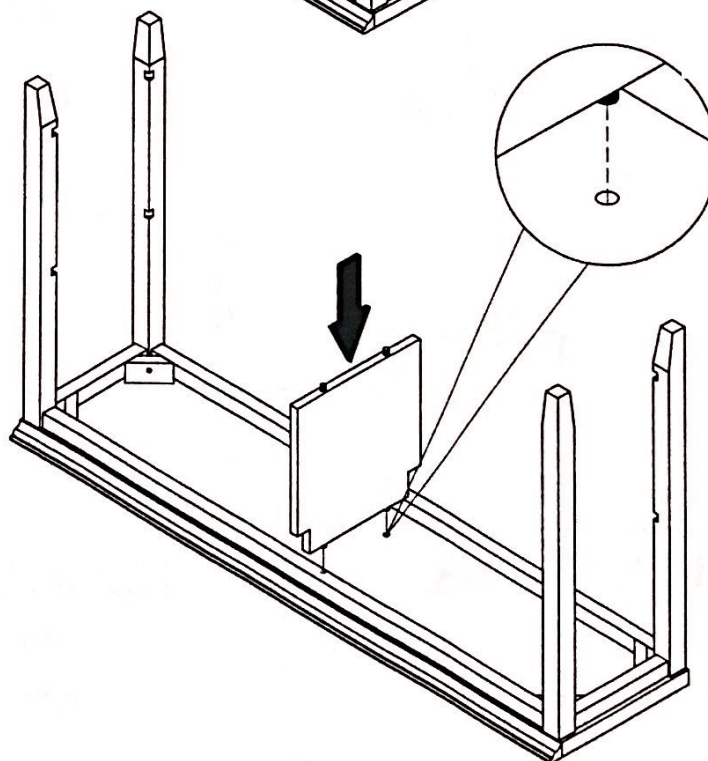
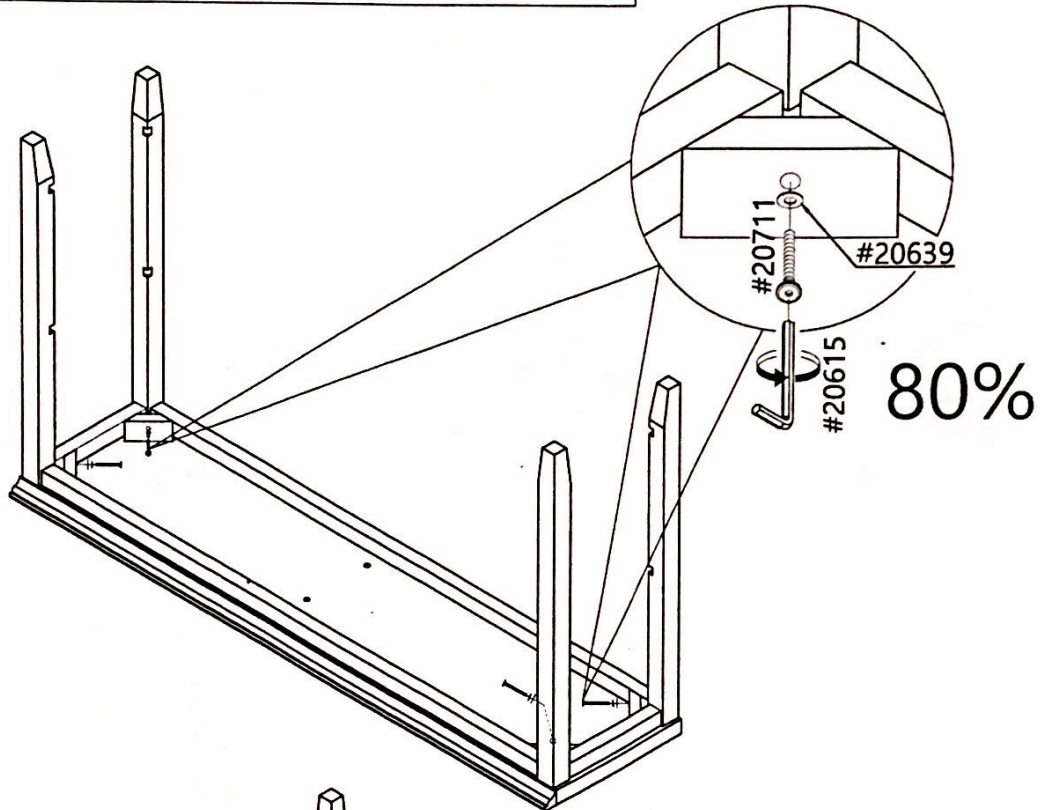
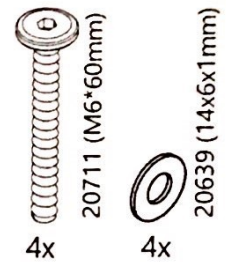
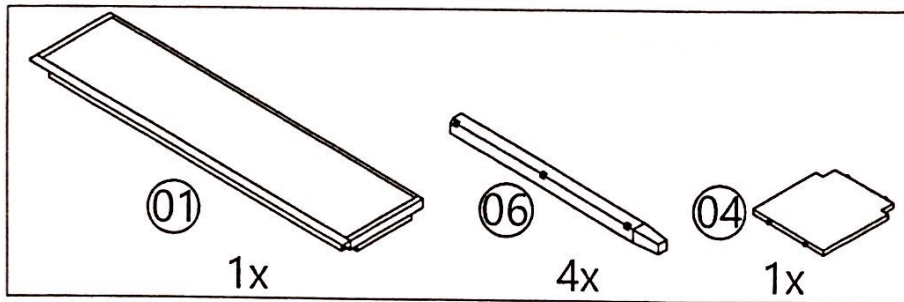


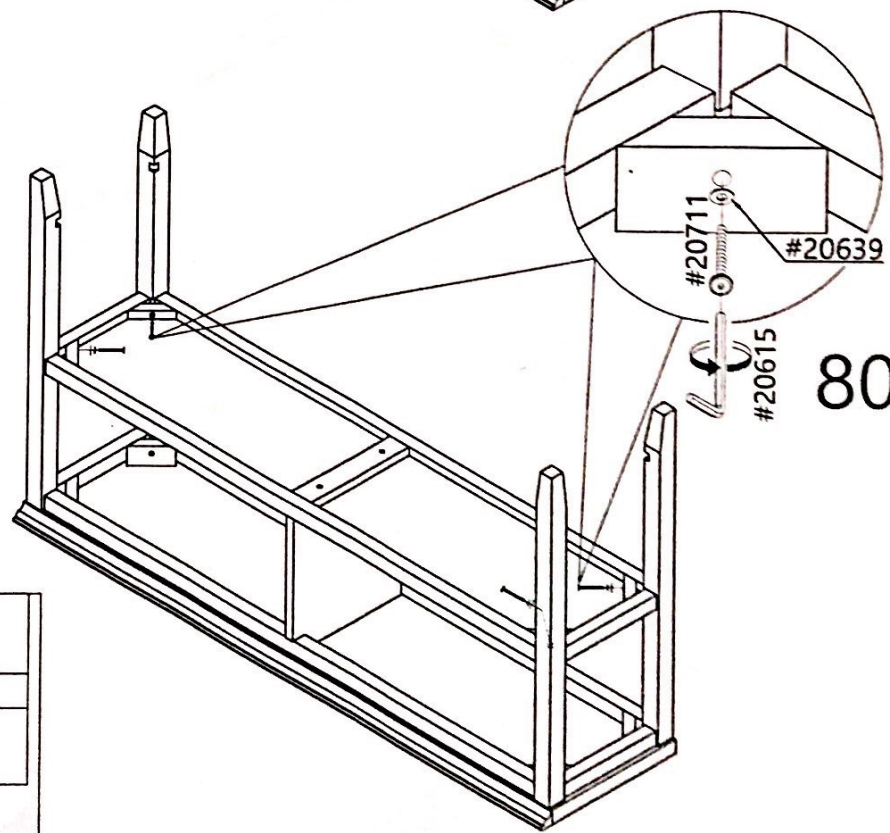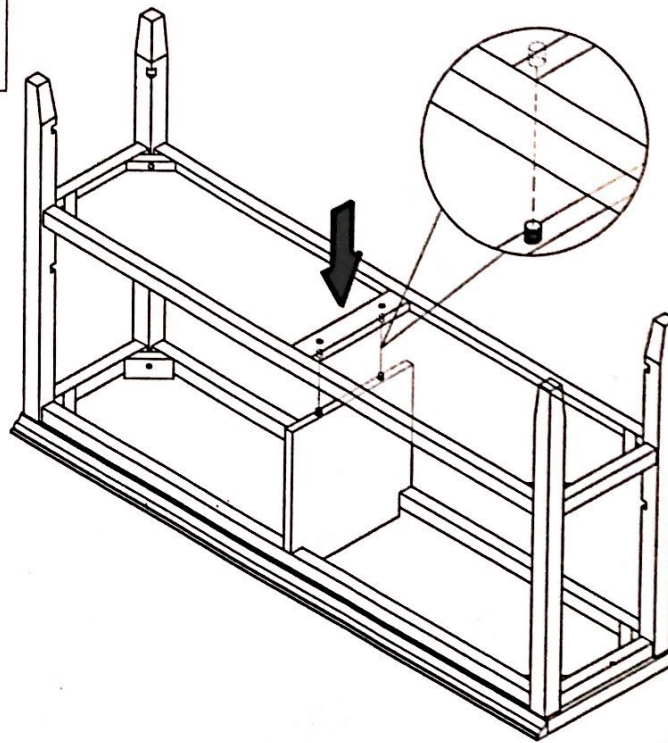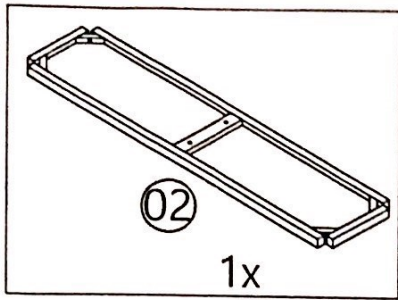

80%

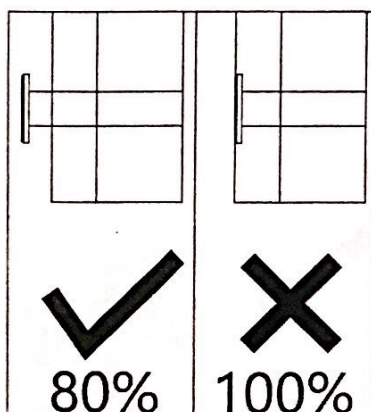 

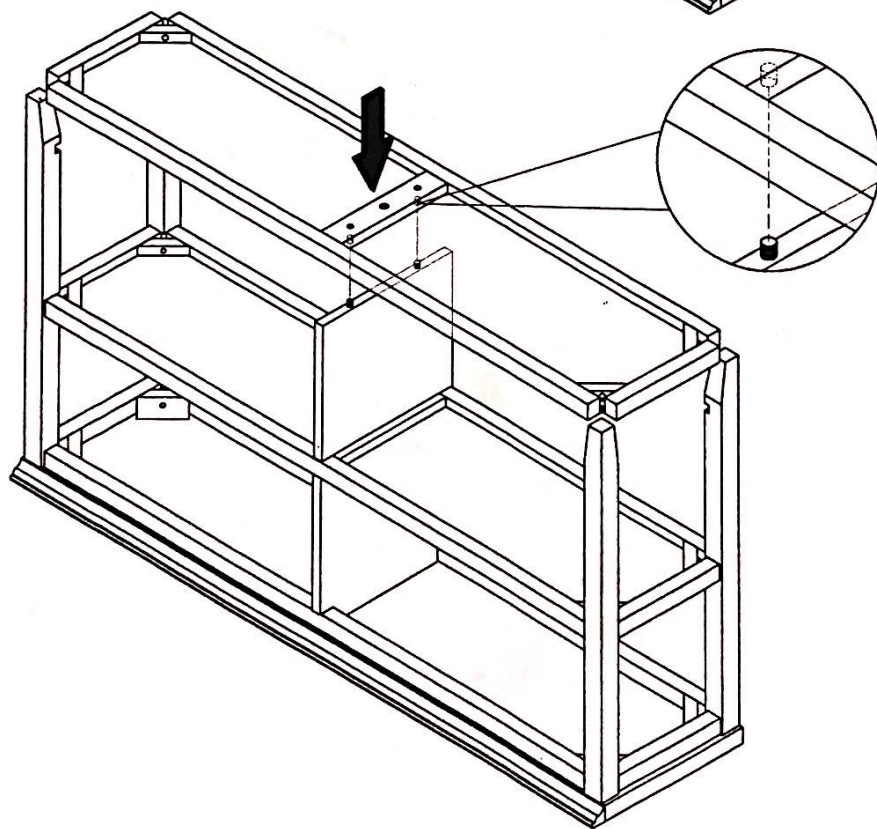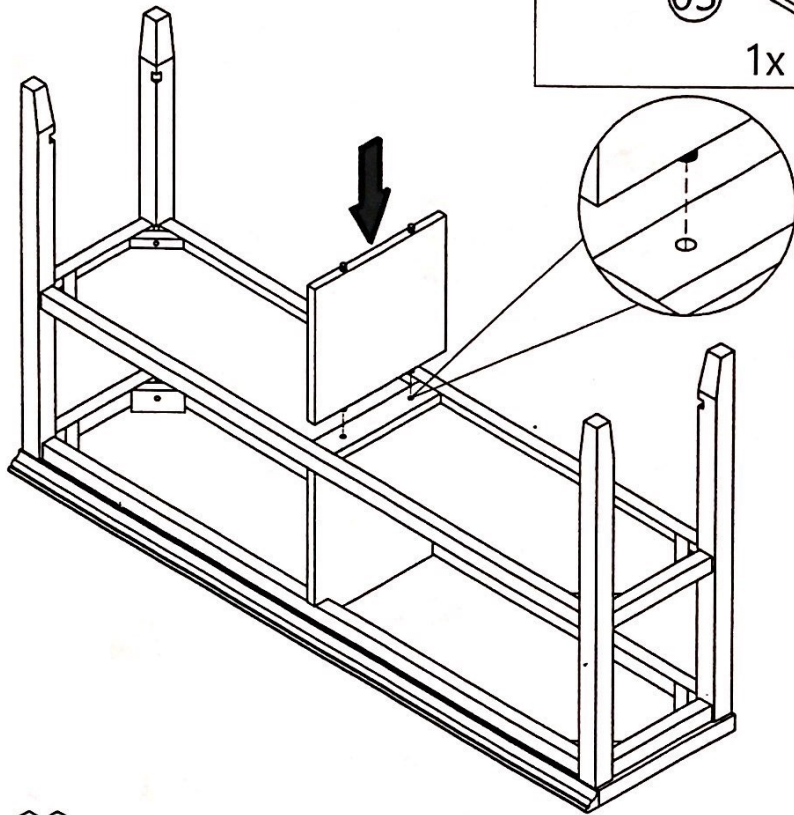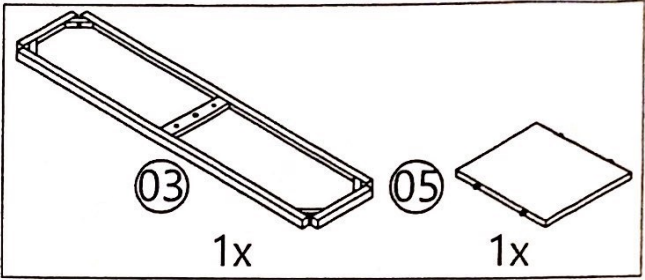   

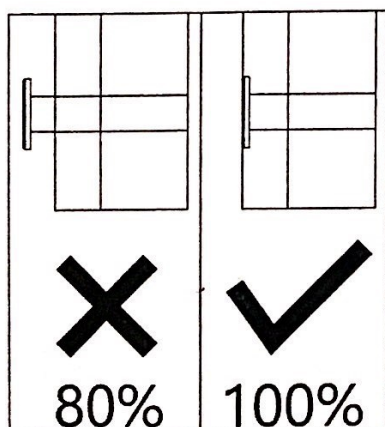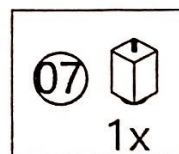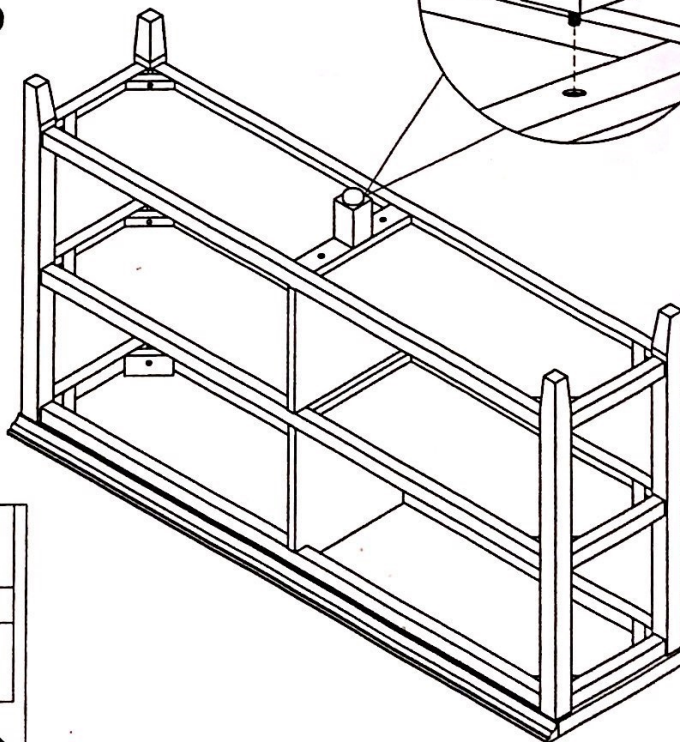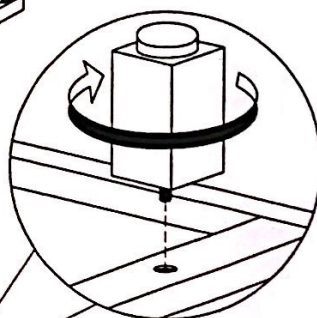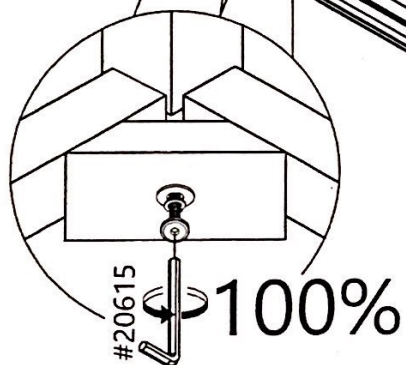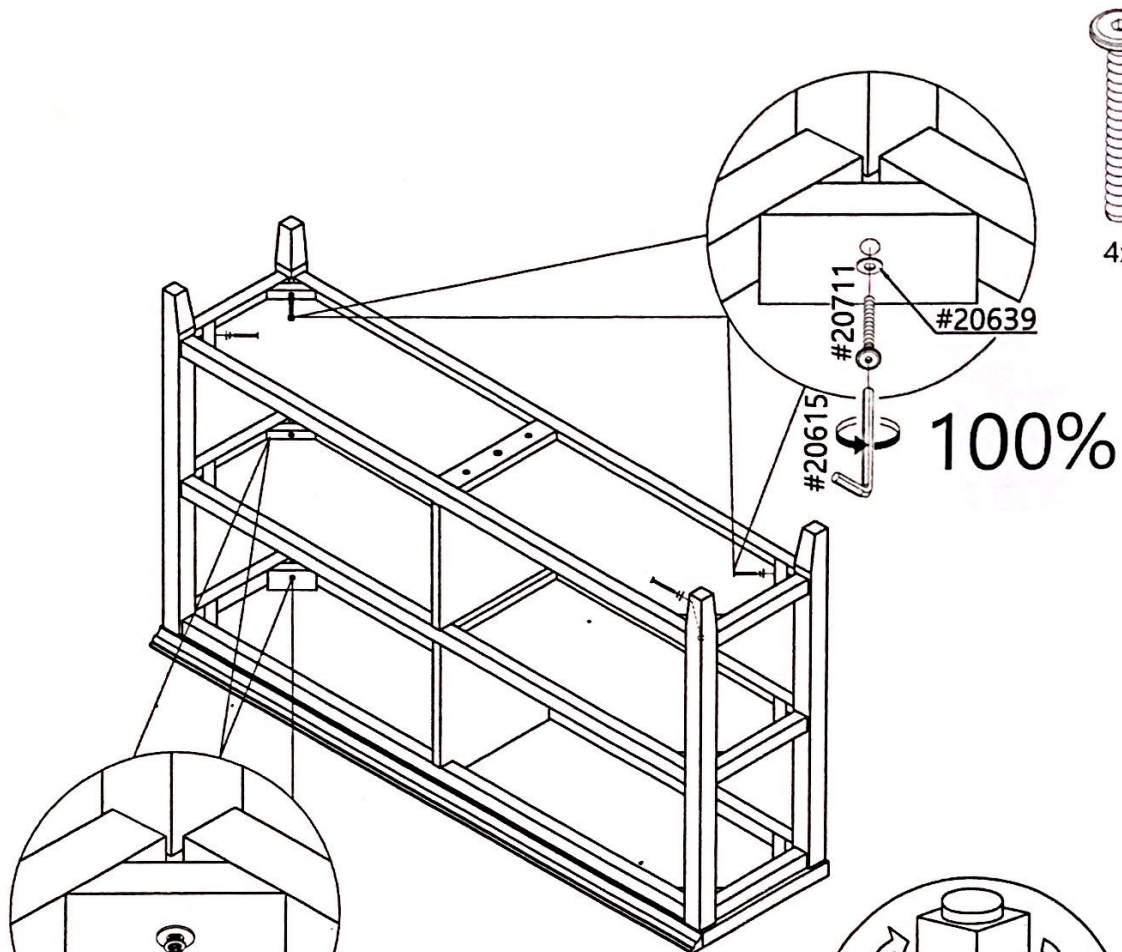       

**AN OPTIONAL TIPPING RESTRAINT DEVICE
IS PROVIDED FOR ADDITIONAL SAFETY**

- 1) See above Tipping Restraint Device
- 2) Open Tipping Restraint Device package and remove the screw, washer and strap.
- 3) Secure the strap under the top or middle shelf of the furniture with the provided washer and screw. Then connect the strap to the wall using an appropriate anchor, washer and screw (not included) for your wall.

