


LED Floor Lamp Remote Controller User Manual

Function Introduction

- ① Switch ON
- ② Lights up
- ③ Dimming (color temperature higher)
- ④ Lights down
- ⑤ Normal mode
- ⑥ Nature white light
- ⑦ Warm white light
- ⑧ Switch OFF
- ⑨ Match code
- ⑩ Dimming (color temperature lower)
- ⑪ Sleep mode
- ⑫ Cold white light

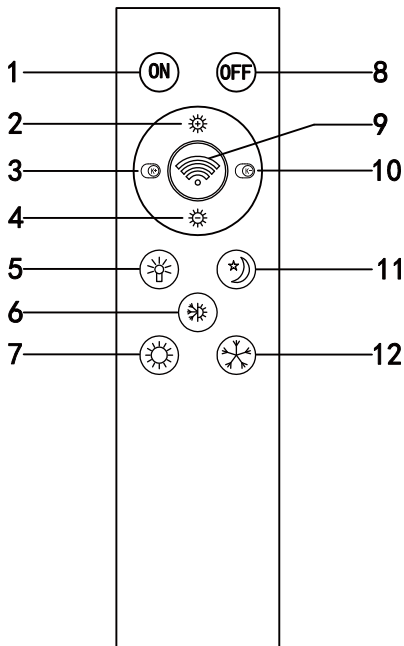

Notices

1. When the emitter is unable to remotely control the receiver, please check whether the emitter's batteries are in good contact, whether they are fixed properly and whether they run out of use.
2. When the emitter is unable to remotely control the receiver, please check whether there is other remote control products around the space and check whether the keys are pressed down, because same nature of remote control normalize the remote control function. (the infrared remote controller is not included).
3. Please use this product under applicable voltage. Too low voltage will lead to failure of the remote controller to work (Please refer to the product label for the voltage range and related parameters).
4. Please take out the batteries if you will not use this product for a long time.