 


ASSEMBLY INSTRUCTIONS

Bookcase

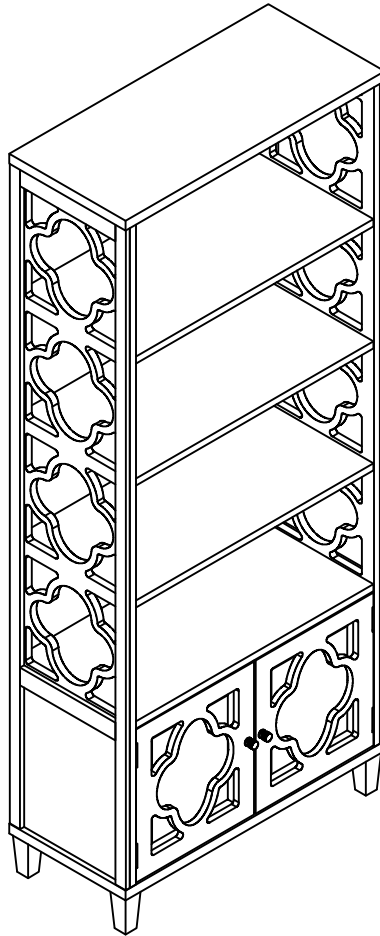 


ASSEMBLY REQUIREMENTS

2-Person
Assembly

2 Hours
Assembly Time
(Approximate)


Tools Required
(Not Provided)

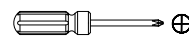

Phillips Screwdriver



 Flat Screwdriver

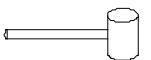

Mallet

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware.

We appreciate your business!

ASSEMBLY INSTRUCTIONS

Bookcase

ASSEMBLY PREPARATION

- Remove all packaging materials, staples and packing straps from the carton.
- Refer to Parts List and Hardware List, and ensure parts and hardware are complete before assembly. Contact customer service for missing parts.
- Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where the product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE



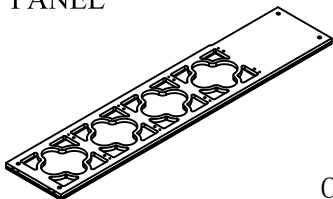
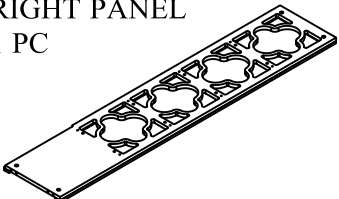
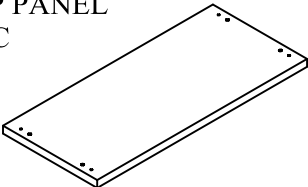
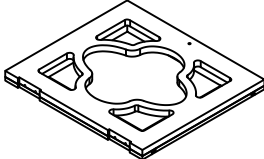
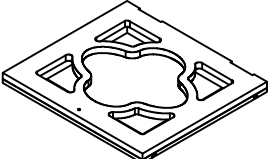
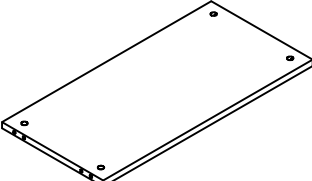
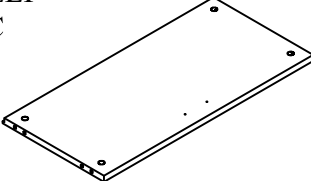
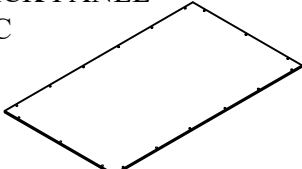
- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.

 
 


 

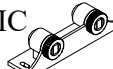 



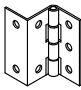 


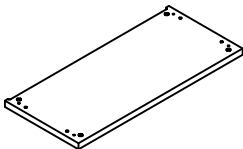




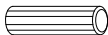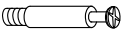

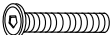
ASSEMBLY INSTRUCTIONS

Bookcase

 
PARTS LIST

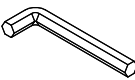BOTTOM PANEL 1 PC  <p>A</p>	LEG 4 PCS  <p>B</p>	LEFT PANEL 1 PC  <p>C</p>
RIGHT PANEL 1 PC  <p>D</p>	TOP PANEL 1 PC  <p>E</p>	LEFT DOOR 1 PC  <p>F</p>
RIGHT DOOR 1 PC  <p>G</p>	SHELF 3 PC  <p>H</p>	SHELF 1 PC  <p>I</p>
BACK PANEL 1PC  <p>J</p>		

HARDWARE LIST

WOOD DOWEL 28 PCS  D8*30 (1)	CAM-BOLT  D15 (2A) CAM-LOCK  (2B) 24 SETS	VELVET HOLE COVER 8 PCS  (3)	ROUND HEAD BOLT  M6*40 (4A) FLAT WASHER  (4B) 4 SETS
MAGNETIC CATCH  (5A) ROUND HEAD SCREW  M3*12 (5B) 1 SET	IRON CLASP  (6A) FLAT HEAD SCREW  M3*12 (6B) 2 SETS	HINGE  (7A) FLAT HEAD SCREW  M3*15 (7B) 4 SETS	KNOB  (8A) ROUND HEAD BOLT  M4*25 (8B) 2 SETS
ROUND HEAD SCREW 18PCS  M3*15 (9)	ALLEN KEY 1 PC  (10)	WASHER  (11A) STRAP  (11B) SCREW  M3. 5*15 (11C) 1 SET	ANCHOR  (12A) SCREW  M3. 5*30 (12B) 1 SET

 INSTRUCTIONS FOR CAM-BOLT & CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required

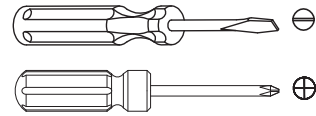


INSERTING AND TIGHTENING CAM-BOLT

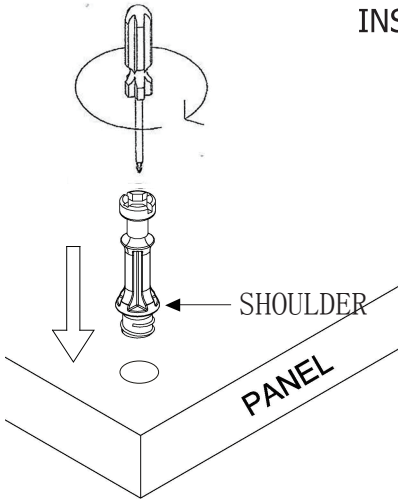

Place Cam-bolt on pre-drilled hole and screw in vertically

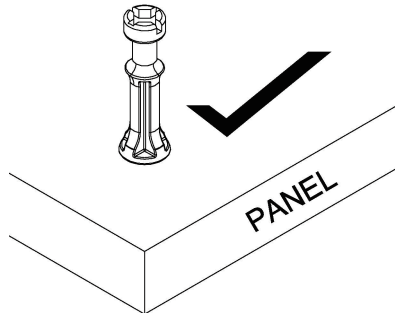


Shoulder is flushed (on the same level) with the panel.

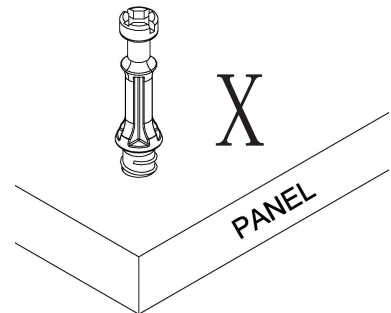

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

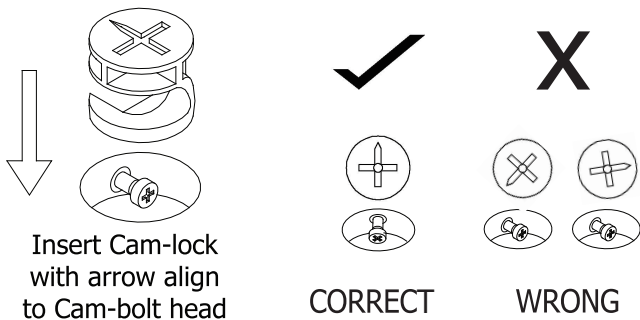


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

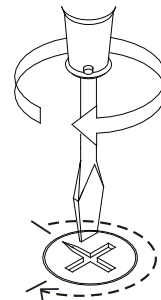


Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

STEP 1

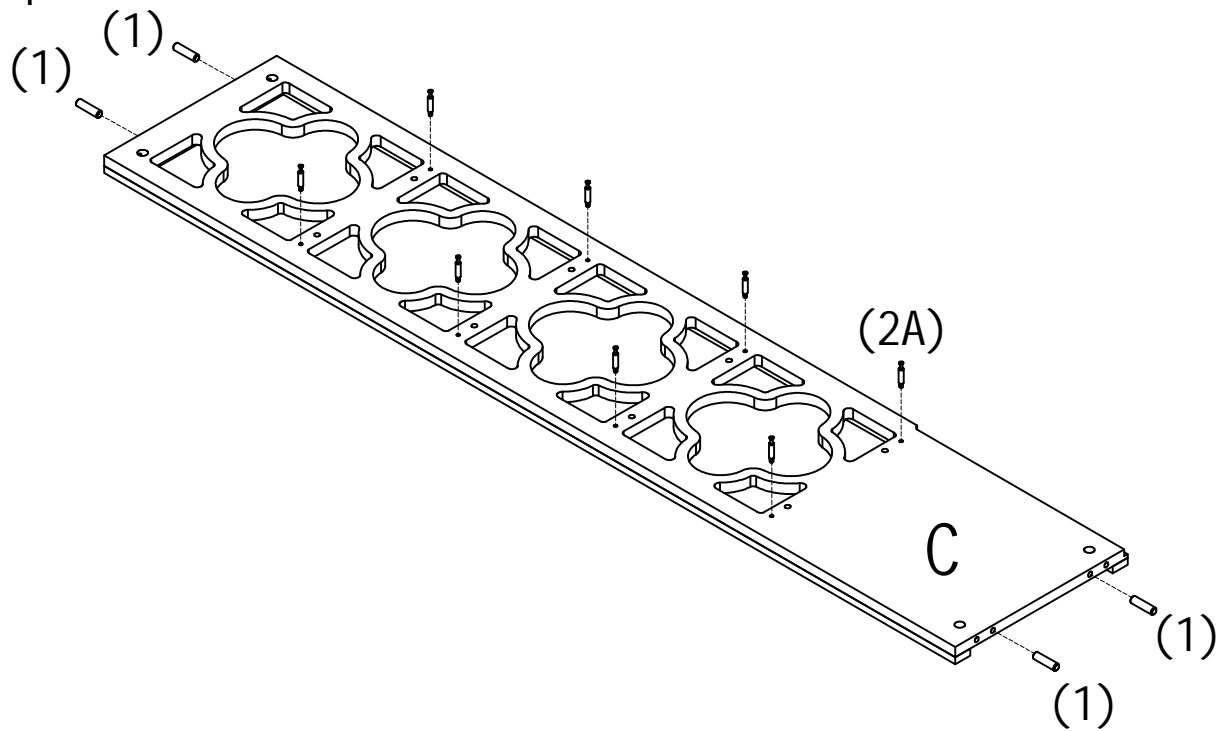


- Lay the inside-face of Left Panel (C) facing up on a material that does not scratch the exterior surface.
- Insert Wood Dowel (1) into the 2 inner holes at the top and bottom edge of (C).
- Screw in Cam-bolt (2A) into the outer 2 holes at each shelf level as shown. Refer to Page 3 for instructions on inserting and tightening cam-bolt.

STEP 2

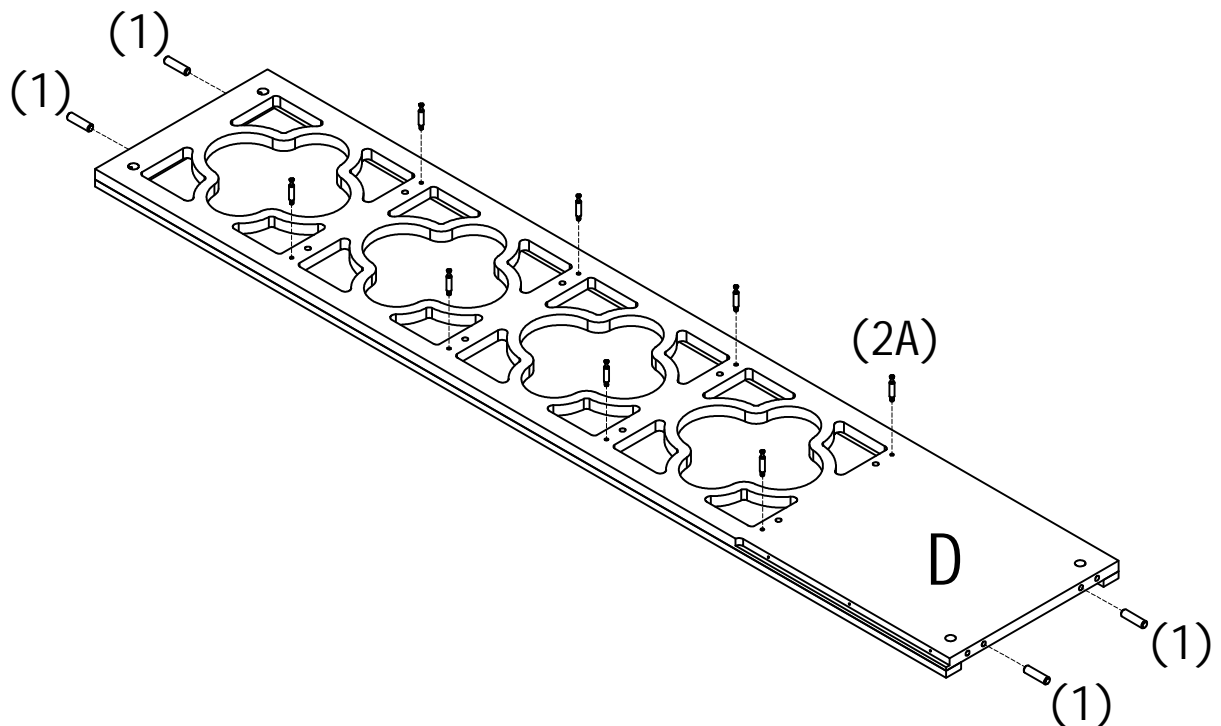

- Lay the inside-face of Right Panel (D) facing up on a material that does not scratch the exterior surface.
- Insert Wood Dowel (1) into the 2 inner holes at the top and bottom of edge (D).
- Screw in Cam-bolt (2A) into the outer 2 holes at each shelf level as shown.


STEP 3

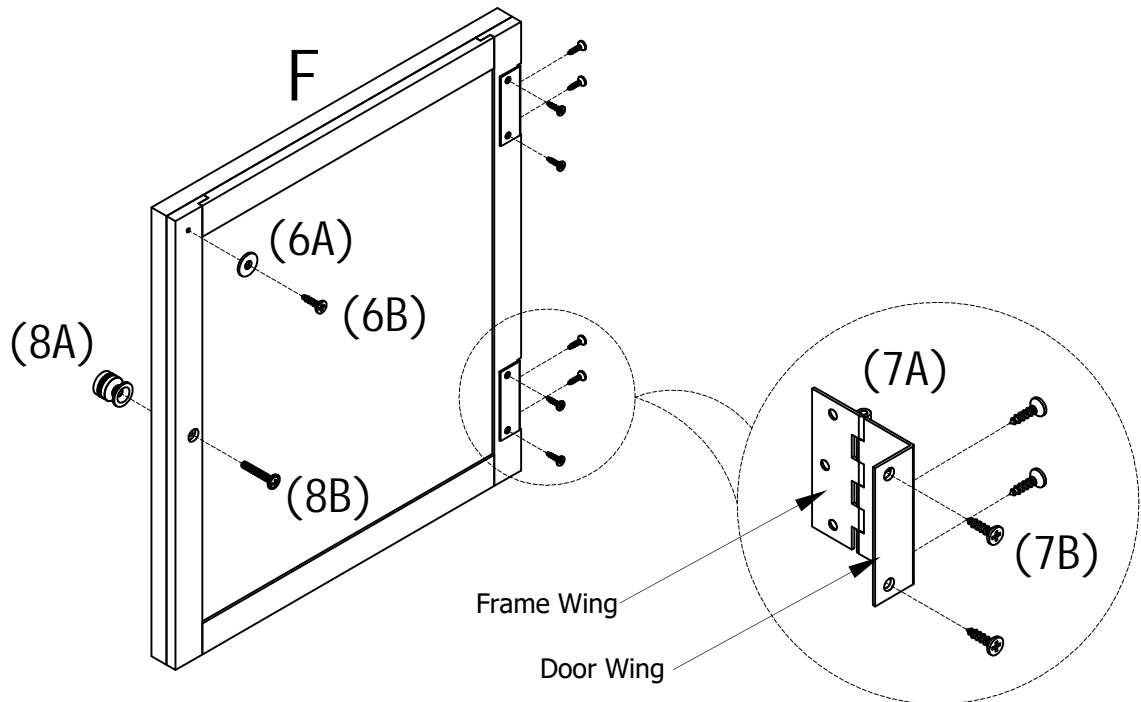


- Place door wing of Hinge (7A) (refer to enlarged drawing) against the side of Left Door (F) and align the screw holes on door wing to pilot holes on door.
- Use a Phillips Screwdriver to drive Screw (7B) to fasten door wing of hinge to door. Do not tighten the screw completely until all 4 screws on each door wing are in place.
- Fasten Iron Clasp (6A) to door by using Screw (6B).
- Use Screw (8B) to affix Knob (8A) to Left Door.

STEP 4

Use the same procedures and hardware in STEP 3 to assemble Hinge (7A), Knob (8A) and Iron Clasp to Right Door (G).

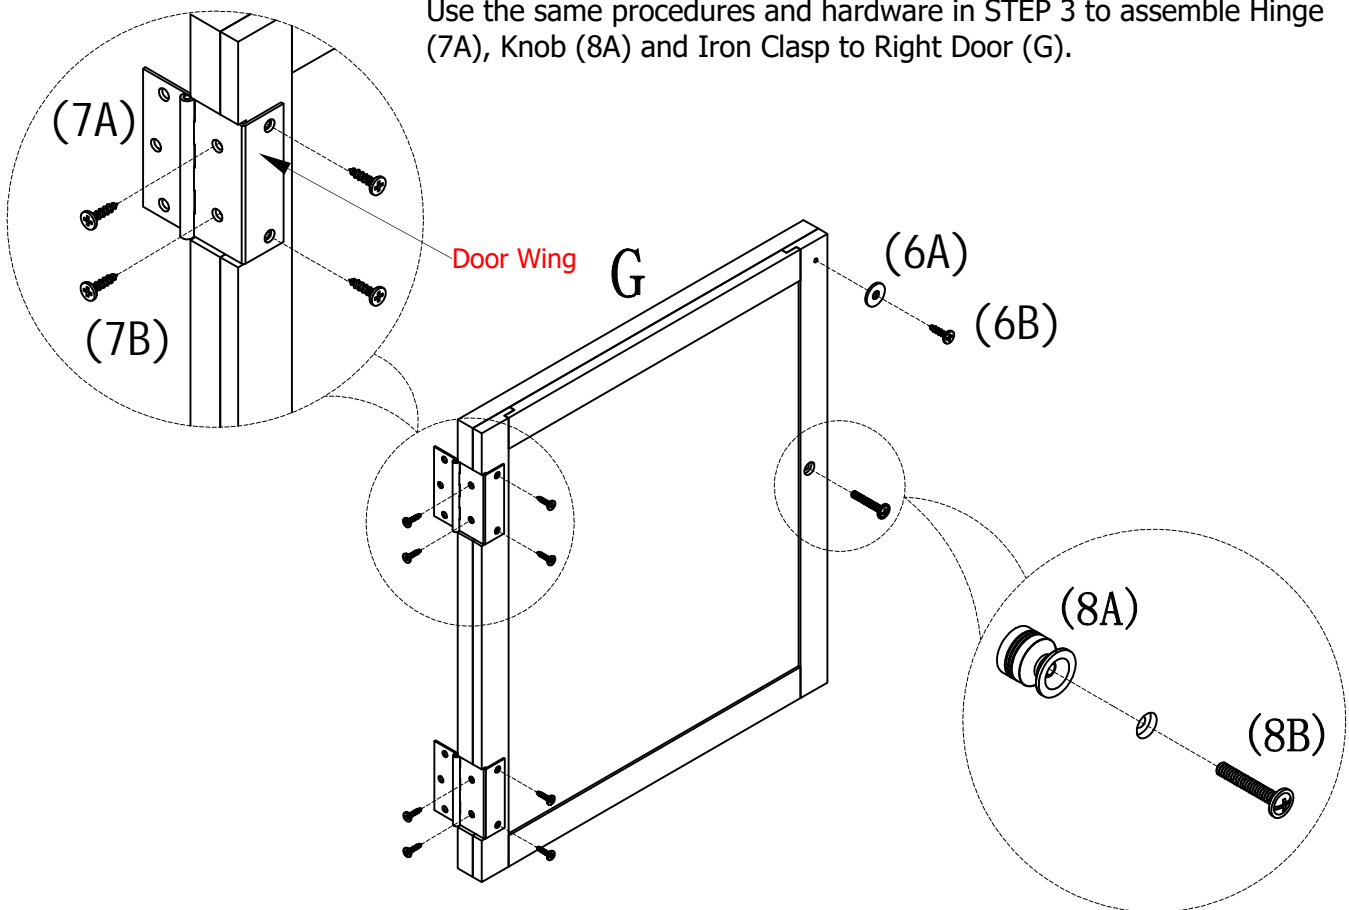


STEP 5

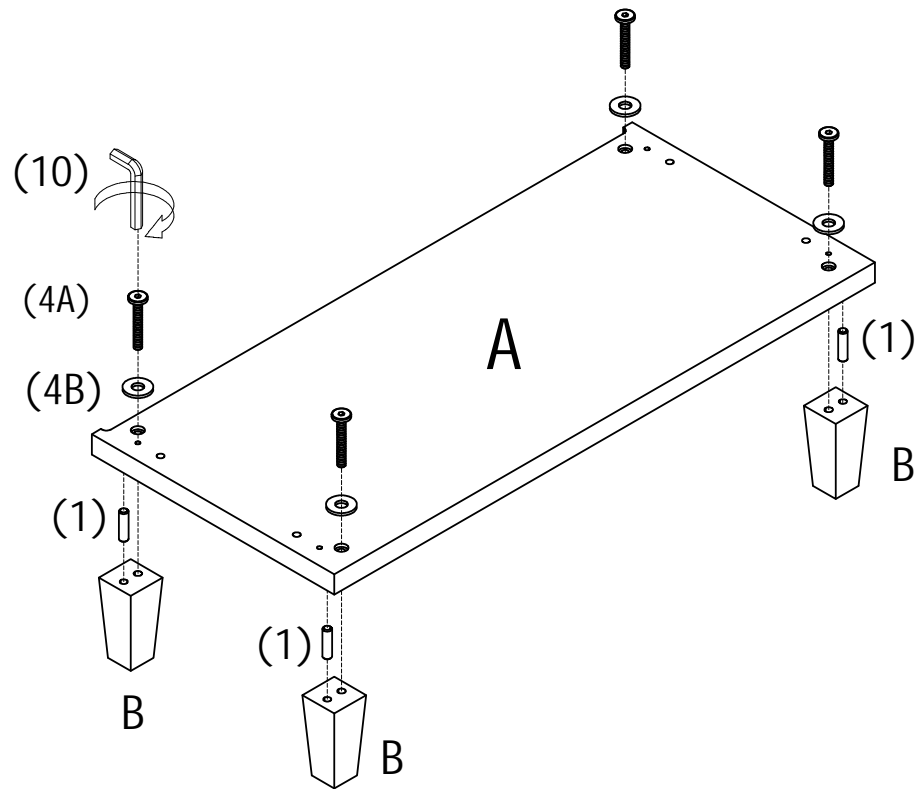


- Insert Wood Dowel (1) into designated hole on each Leg (B). Use a mallet to lightly tap in wood dowel if necessary.
- Attach Bottom Panel (A) to (B) via wood dowel on each leg, and use Bolt (4A) fitted with Flat Washer (4B) to fasten each leg to Bottom Panel. Use Allen Key (10) to drive the bolt and tighten completely.

STEP 6

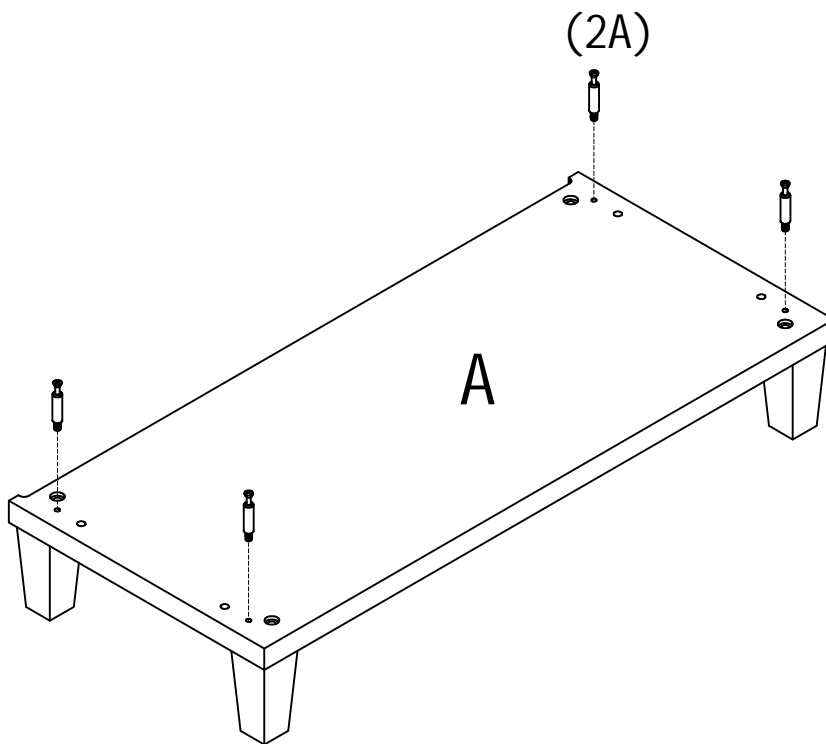


Screw-in Cam-bolt (2A) into designated holes on Bottom Panel (A) as shown.

STEP 7

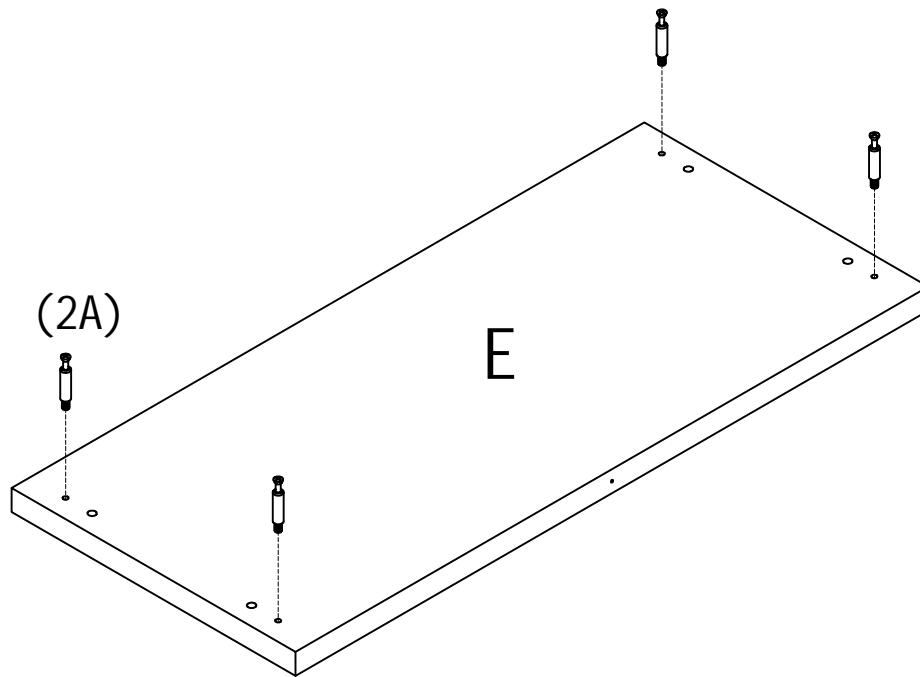


Lay Top Panel (E) bottom-side up on a material that does not scratch the exterior surface. Screw-in Cam-bolt (2A) into designated holes as shown.

STEP 8

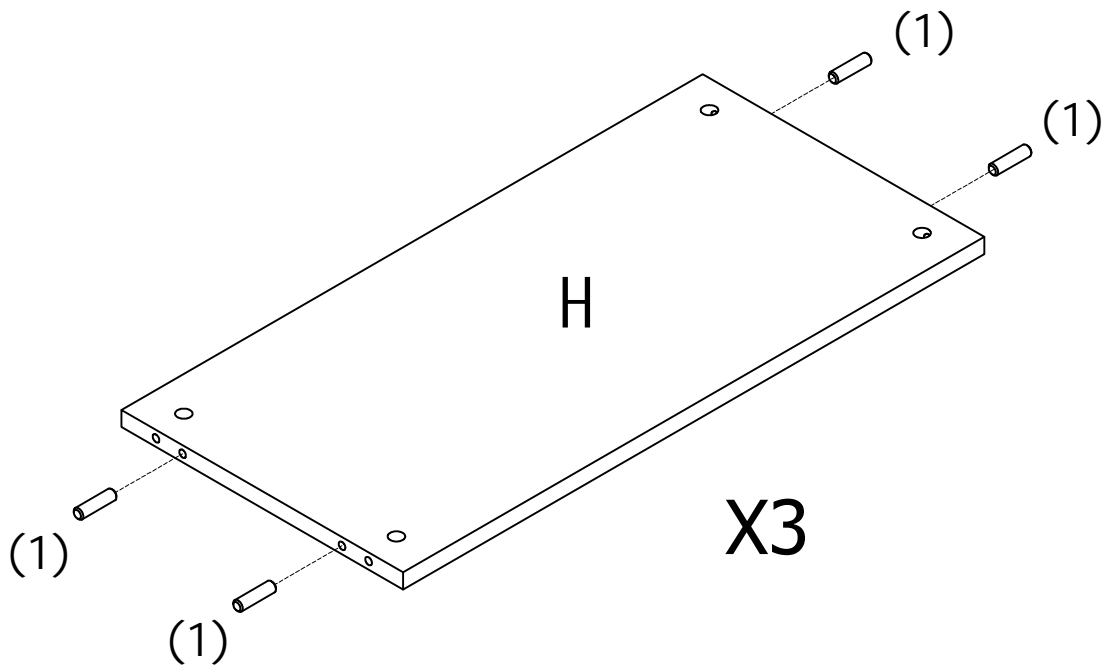

For the 3 pieces of Shelf (H), insert Wood Dowel (1) into the inner two holes at the short edge of each shelf.


STEP 9

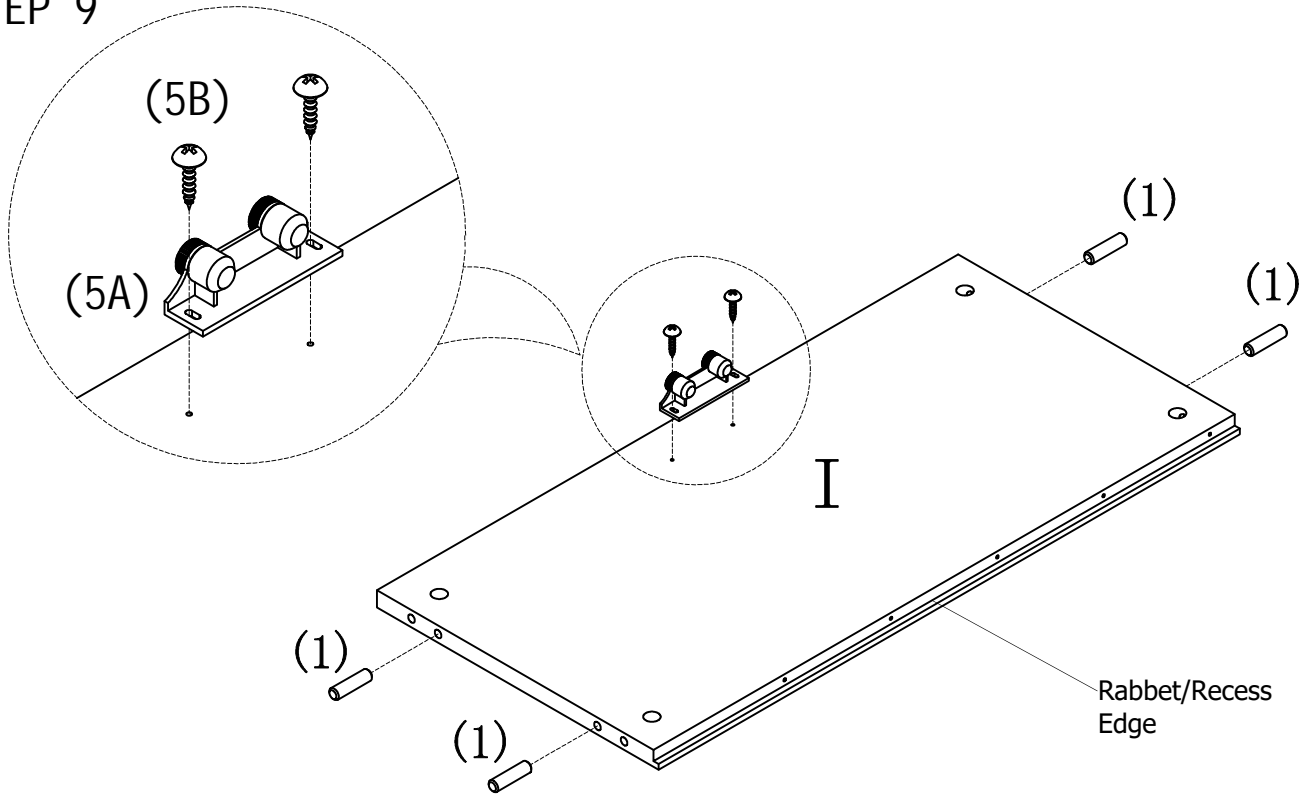

- Lay Shelf (I) bottom-side up (with the rabbet/recess edge facing up) as shown on a material that does not scratch the top surface.
- Use Screw (5B) to fasten Magnetic Catch (5A) to (I).
- Insert Wood Dowel (1) into the inner two holes on the short edge of shelf.

STEP 10

Note: Lay parts on a material that does not scratch the edge of each part.

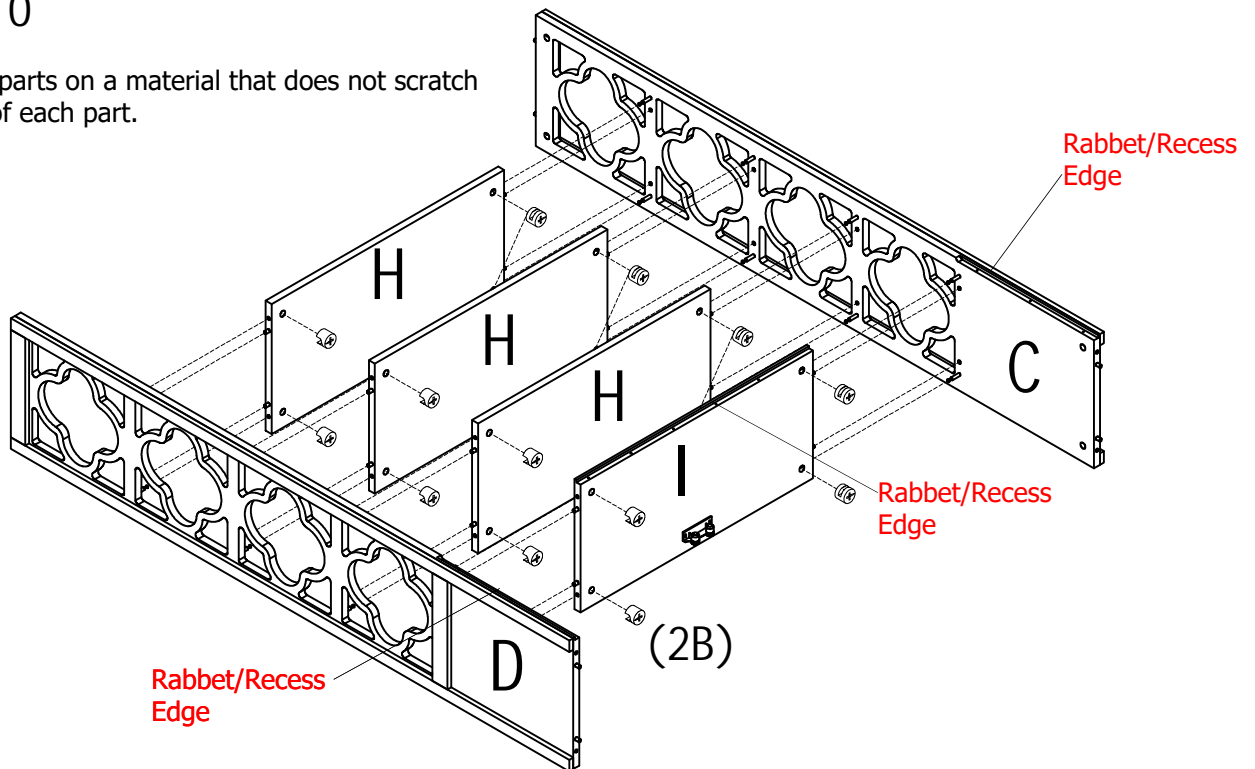


- Position Right Panel (D) with the rabbet/recess edge facing up, and attach Shelf (H & I) to (D) via wood dowels and cam-bolts on the respective parts.
- Attach Left Panel (C) with the rabbet/recess edge facing up, to Shelf (H & I) via wood dowels and cam-bolts on the respective parts.
- Insert Cam-lock (2B) into designated holes on each shelf and turn clockwise to lock onto cam-bolt. Refer to Page 4 for instructions on inserting and tightening cam-locks

STEP 11

STEP 11A - Assemble Top Panel


- Attach Top Panel (E) to Left & Right Panel (C & D) via wood dowels and cam-bolts on the respective parts.
- Insert Cam-lock (2B) into designated holes on (C & D), then turn clockwise to lock onto cam-bolts.
- Use Velvet Hole Cover (3) to conceal cam-locks.
- Use a Screw (11C) fitted with Flat Washer (11A) to fasten Strap (11B) to the Top Panel as shown.

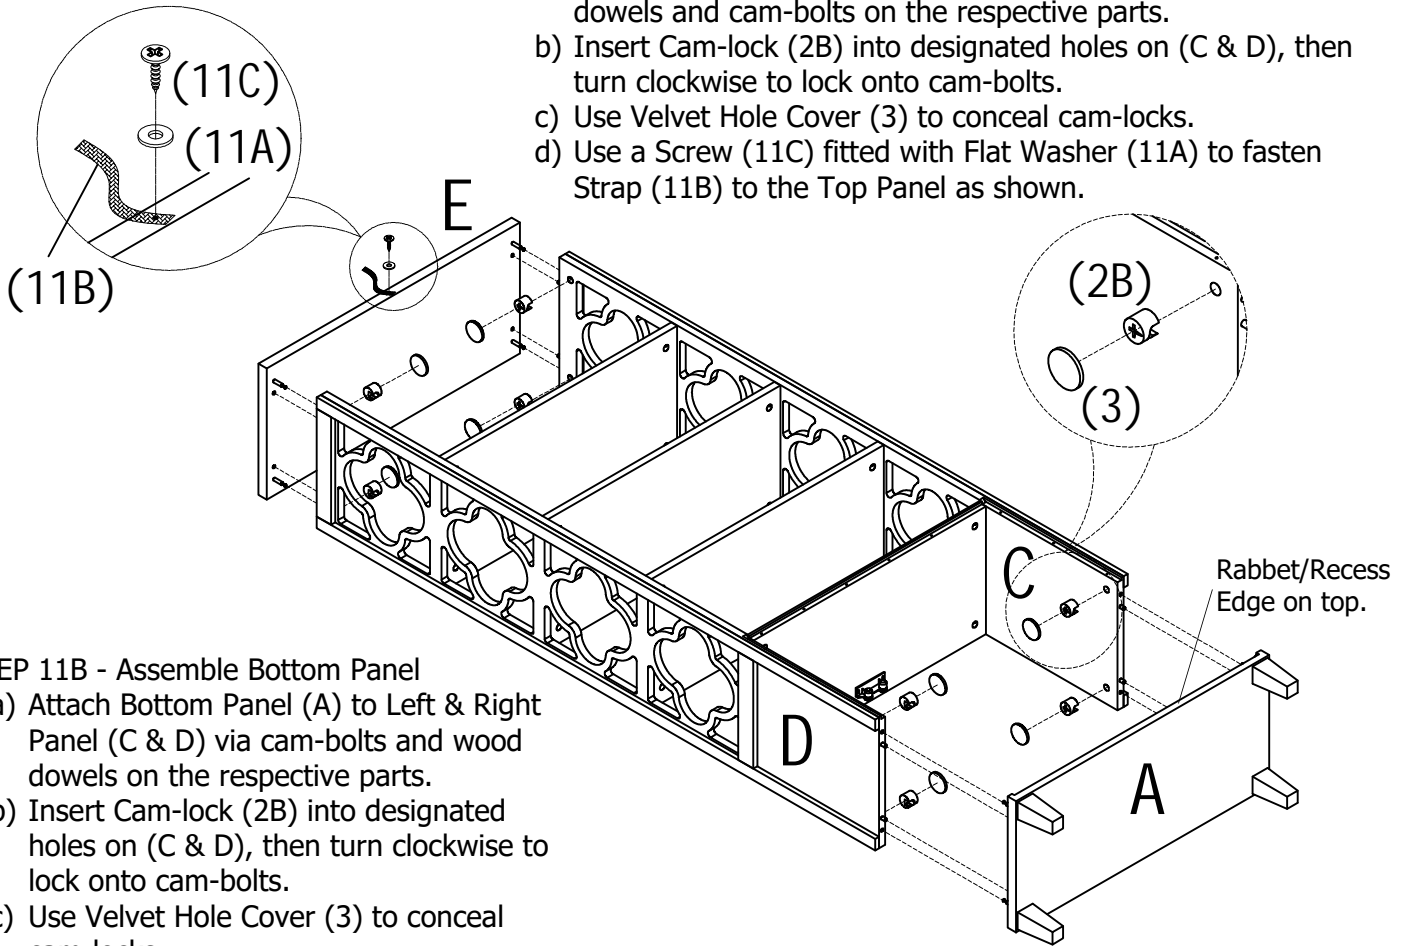

STEP 11B - Assemble Bottom Panel


- Attach Bottom Panel (A) to Left & Right Panel (C & D) via cam-bolts and wood dowels on the respective parts.
- Insert Cam-lock (2B) into designated holes on (C & D), then turn clockwise to lock onto cam-bolts.
- Use Velvet Hole Cover (3) to conceal cam-locks.

STEP 12

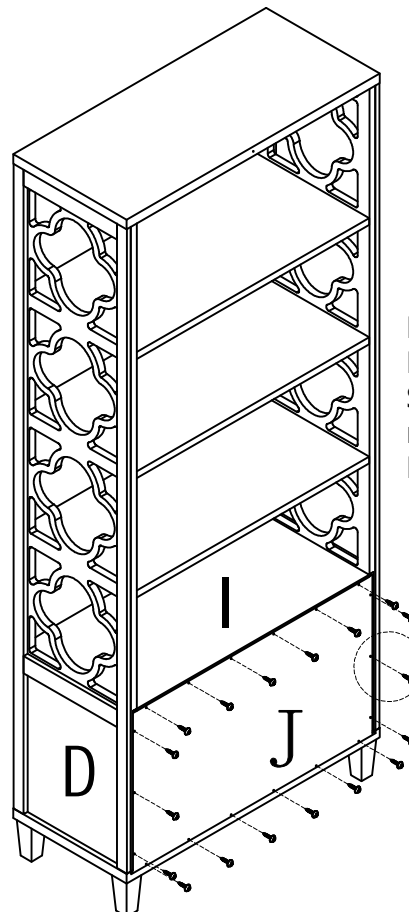


Follow the screw layout for Back Panel (J) as shown, and use Screw (9) to fasten (J) to rabbit/recess edge of Side Panels, Bottom Panel and Shelf (I).

STEP 13

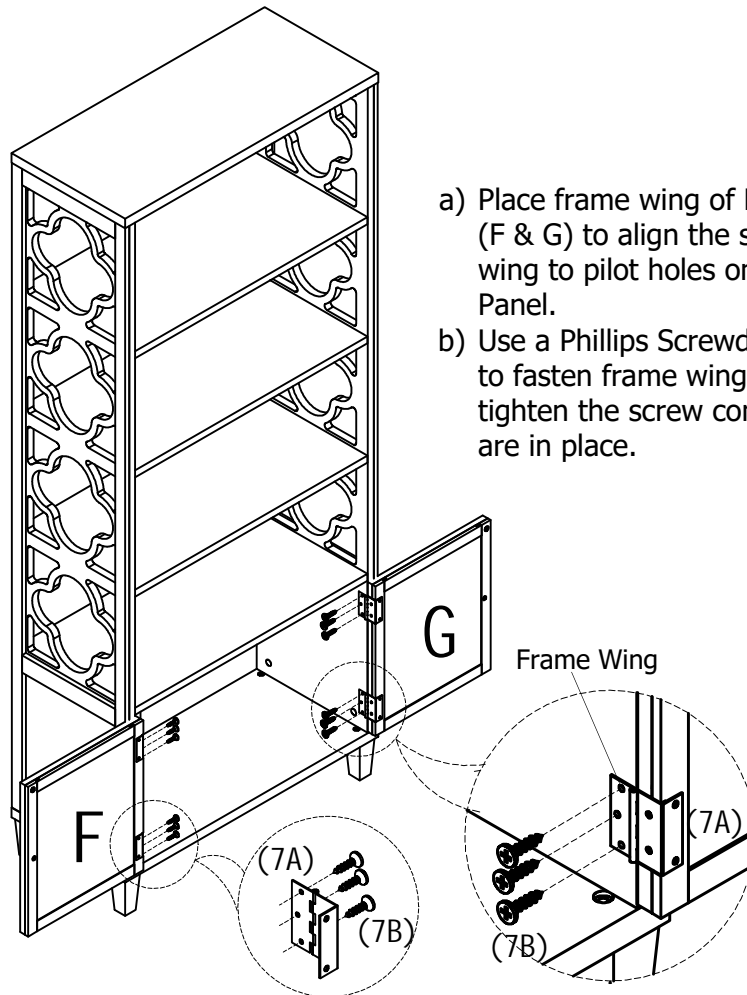

- Place frame wing of Hinge (7A) on each Door (F & G) to align the screw holes on frame wing to pilot holes on the respective Side Panel.
- Use a Phillips Screwdriver to drive Screw (7B) to fasten frame wing to each Panel. Do not tighten the screw completely until all 3 screws are in place.

STEP 14

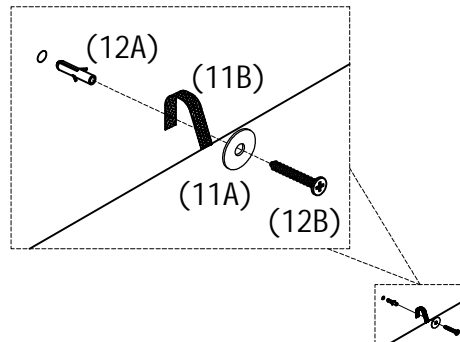

- Select location to place the cabinet.
- Drill a hole in the wall that would fit Anchor (12A) snugly.
- Push in or use a mallet to lightly tap in the Anchor. Ensure that the anchor fits securely in the wall.
- Use Screw (12B) fitted with Washer (11A) to screw through Strap (11B) to screw into Anchor.

The assembly of the Bookcase is complete.

