


Instruction for use

Angle adjustment method

 
- You can choose the Angle you like, according to the four stages in the picture from ① to ④.
- Press backrest backward like picture ④, tatami can back to picture ①.
- The free adjustment between ① (0 degrees) and ④ (45 degrees) is adjusted to 15 degrees for each stage, Seats can be rotated 360 degrees.

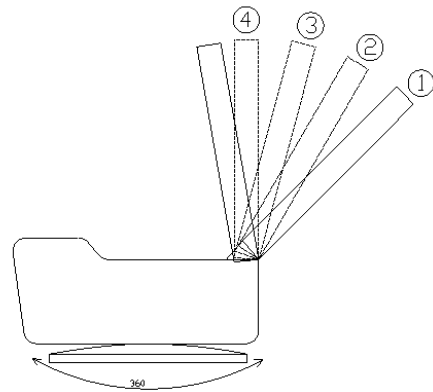

Don't jump on the product, otherwise you may get hurt and wear out the product.



Please be careful not to get hurt when children are in use.



Don't put it in an uneven place, or you may fall and damage the product.



Please use tatami in a flat place and place it on a carpet, in order to protect the floor surface.



Attention

- Don't force body moving in a product, otherwise it may fall down and slide.
- Please do not use backrest and seat cushion to play.
- Do not sit on the backrest or handrail of the product, otherwise it may fall off.
- To be safe, please do not reach the regulator with the adjustment Angle.
- Please don't open the zipper.
- Products should avoid direct sunlight and heat.
- If you are sensitive to the smell of the product, please place the product in a ventilated place. (the smell is not harmful.)