 
 


# ASSEMBLY INSTRUCTIONS

1. Open the carton, take out all accessories in turn

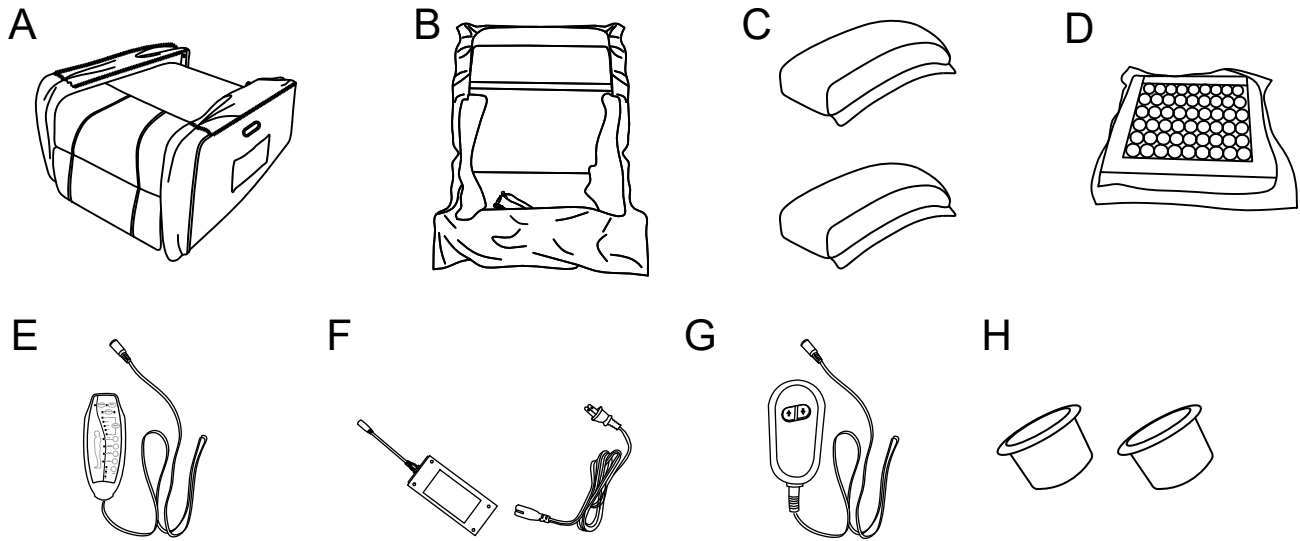


2. Pull the arms to both sides until hearing the click sound

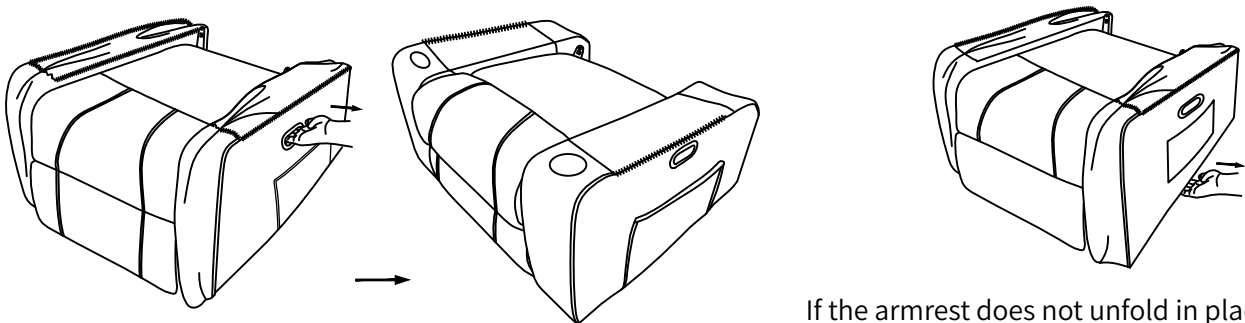


If the armrest does not unfold in place please re-fold it according to the figure above and then open it again


3. Insert the cups to the holders

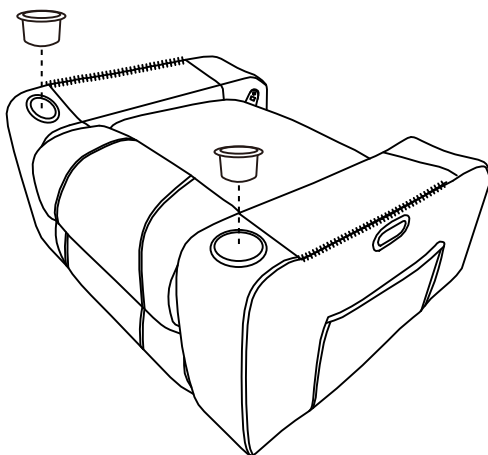

4. Install handrail bags, pull up the zipper and paste the velcro

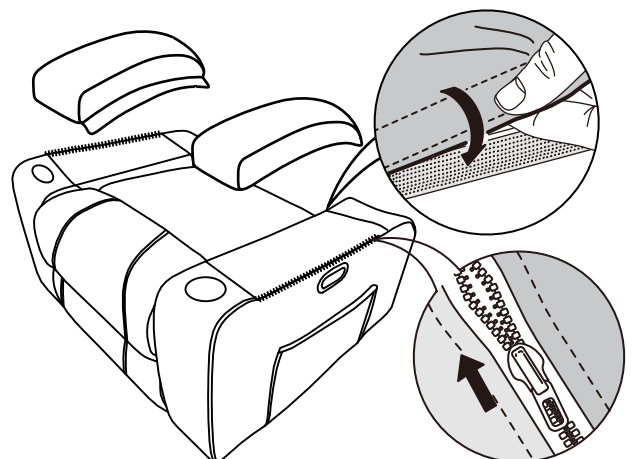


5. Open the seat cushion, install pocket spring to the cushion







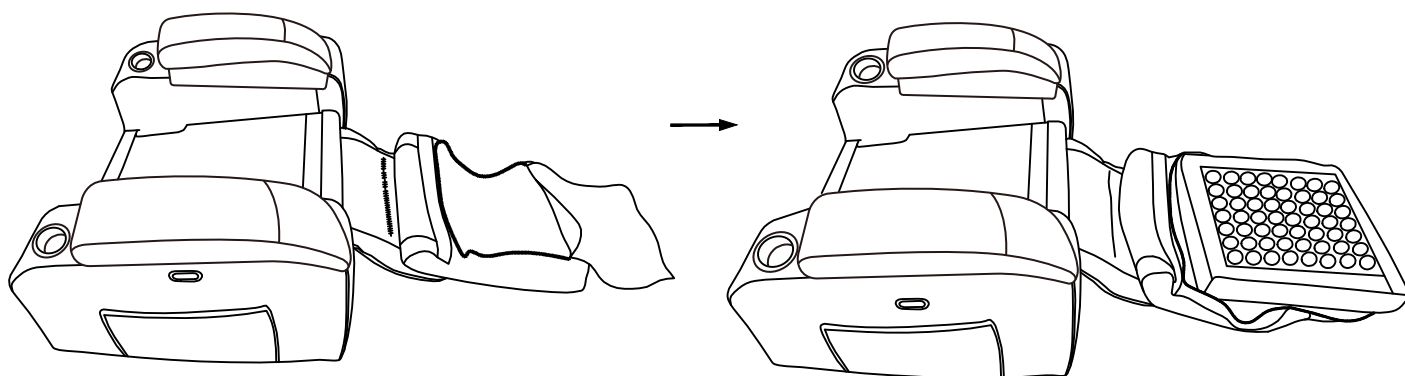


6. Pull up the zipper of seat cushion and paste the velcro

7. Install the back

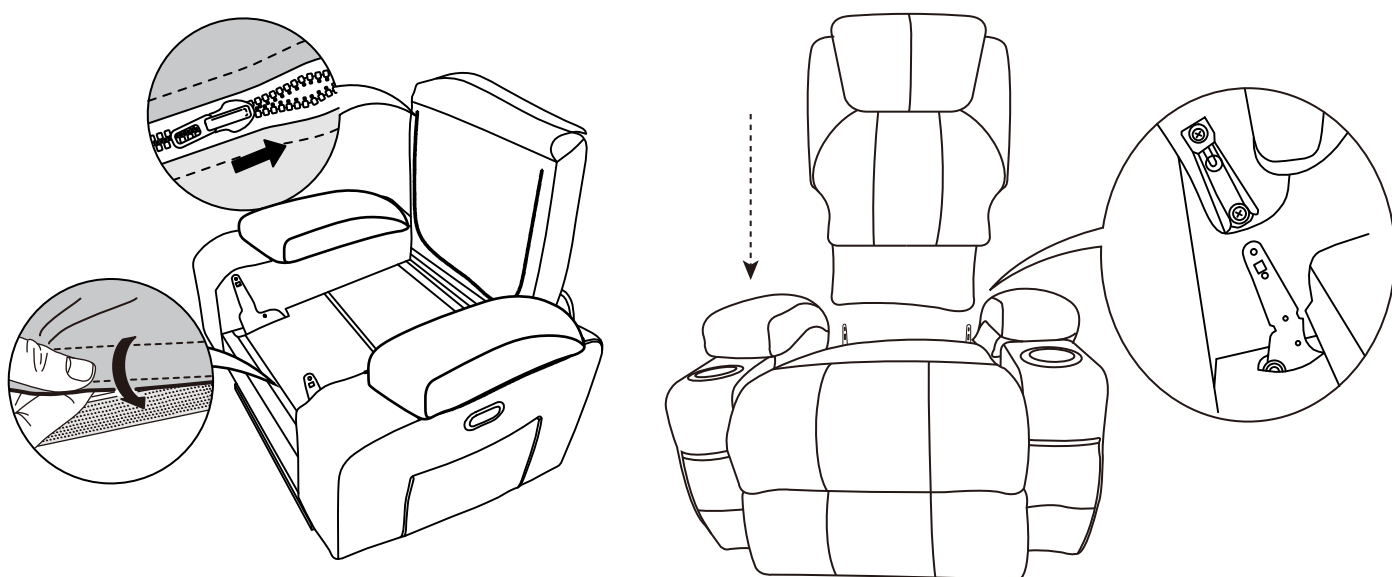


8. Match the plugs with the right numbers or colors.

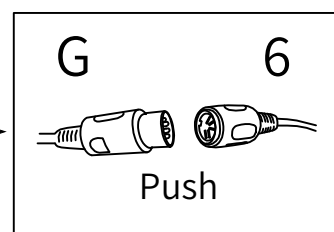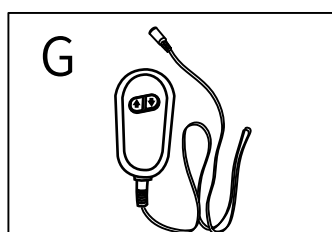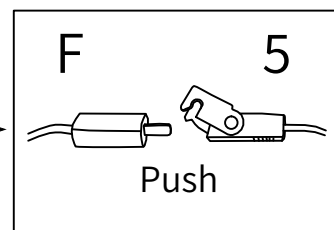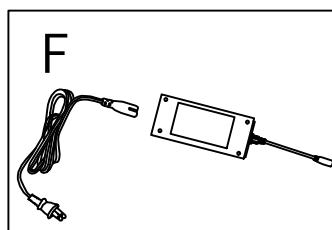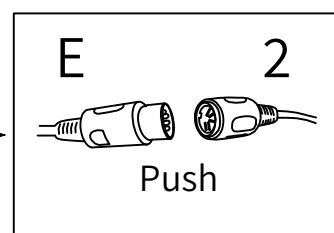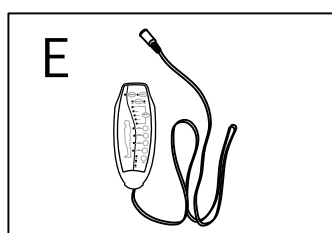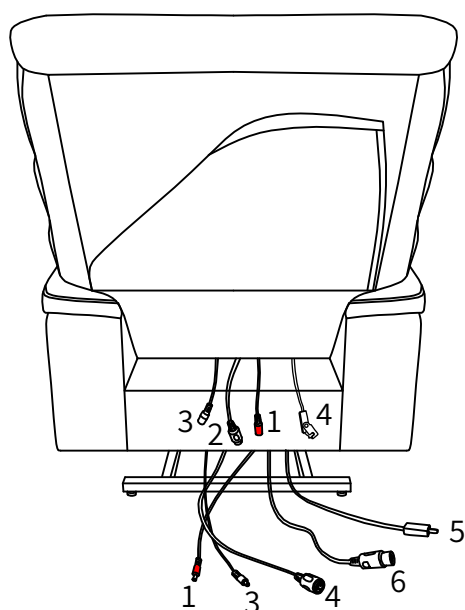

Connect the plug line with the switching power line white to white, red to red.


## 9. Congratulations

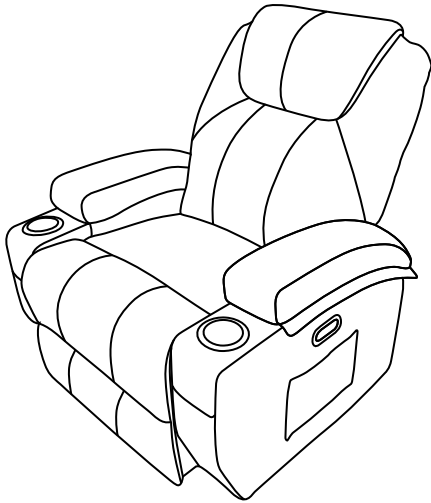


10. Use the controller to open the recliner.



11. Use the controller to lift the recliner up to support the person standing.

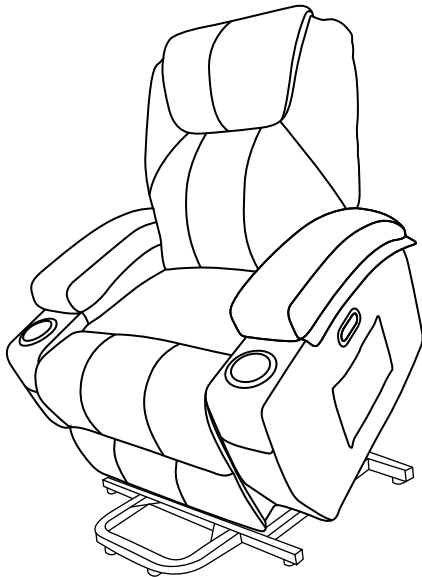

12. Use the controller to position the chair to recline position.

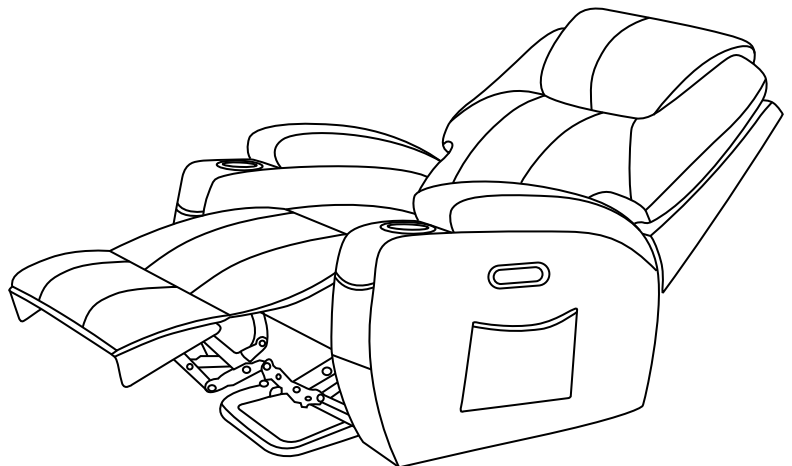

## Warning:

1. Do not stand on this chair, do not use this chair as a step ladder.
2. Use this chair only for seating one person at a time.
3. Do not use this chair unless all bolts, screws and knobs are firmly secured.
4. Check all bolts screws and knobs on a regular basis.
5. This chair should not be used with damaged or missing parts. Contact an authorised service provider to repair or replace parts damaged or missing.
6. Failure to follow these warnings could result in serious injury.

**Notice:** The remotes are placed in the small box under the chair bottom.  
Please handle the remote control with care.