


## Anti-Flood Burst Proof Connector Installation

### Installation instruction:

1. First, shut off the water valve. (see image #1)
2. Connect the Anti-Flood fitting to the hose's nut. (see image #2 & #3)
3. Then, turn the water valve back on once the installation is completed. (see image #4)

### Note:

1. Must turn off the water valve completely prior to installing the Anti-Flood fitting.
2. Do not turn on the water during installation of Anti-Flood fitting.
3. Do not use the Anti-Flood fitting if the product does not include the water restrictor.
4. Must comply with the water pressure range.
5. Anti-Flood fittings are not designed for oil or air gas products.
6. Anti-Flood fittings are only used for water.
7. Anti-Flood fittings are not reusable.
8. Comparison of the result for product with and without the Anti-Flood fitting. (see picture #5)
9. After installing the Anti-Flood fitting, add water slowly until the hose is fulfilled.

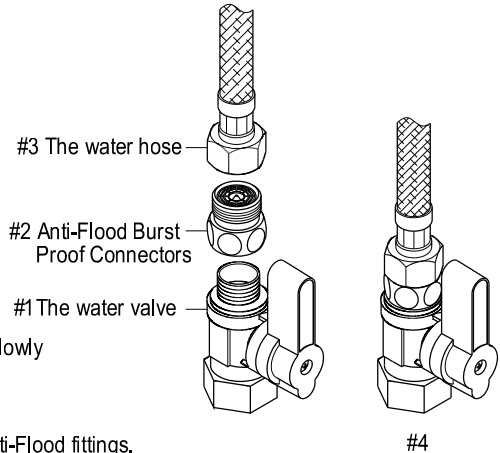

### Maintenance:


1. Turn off the water valve prior to repairing the Anti-Flood fittings.
2. Check if the fittings have been used or not.
3. Ensure the hose is not damaged or broken.
4. Replace the products and Anti-Flood fittings

### Anti-Flood fitting flow rate range in 1.5 gpm - 2.5 gpm

1. Product flow rate range: 4~35 kgf/cm<sup>2</sup> with PSI 6~8 kgf/cm<sup>2</sup>
2. Water temperature: 10~95°C
3. Fitting does not operate at : 2.5~3.5 gpm

### Anti-Flood fitting flow rate range on 1.2 gpm - 2 gpm

1. Product flow rate: 3~35 kgf/cm<sup>2</sup> with PSI 6~8 kgf/cm<sup>2</sup>
2. Water temperature: 10~95°C
3. Fitting does not operate at : 1.2~2.0 gpm
4. Minimum diameter for the hose 5.5 mm

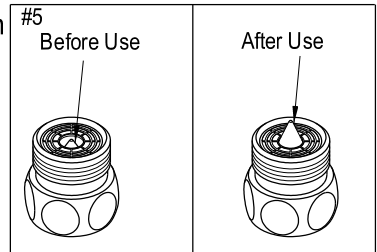

[www.kingstonbrass.com](http://www.kingstonbrass.com)

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: [service@kingstonbrass.com](mailto:service@kingstonbrass.com)

12775 Reservoir Street, Chino, CA91710