 
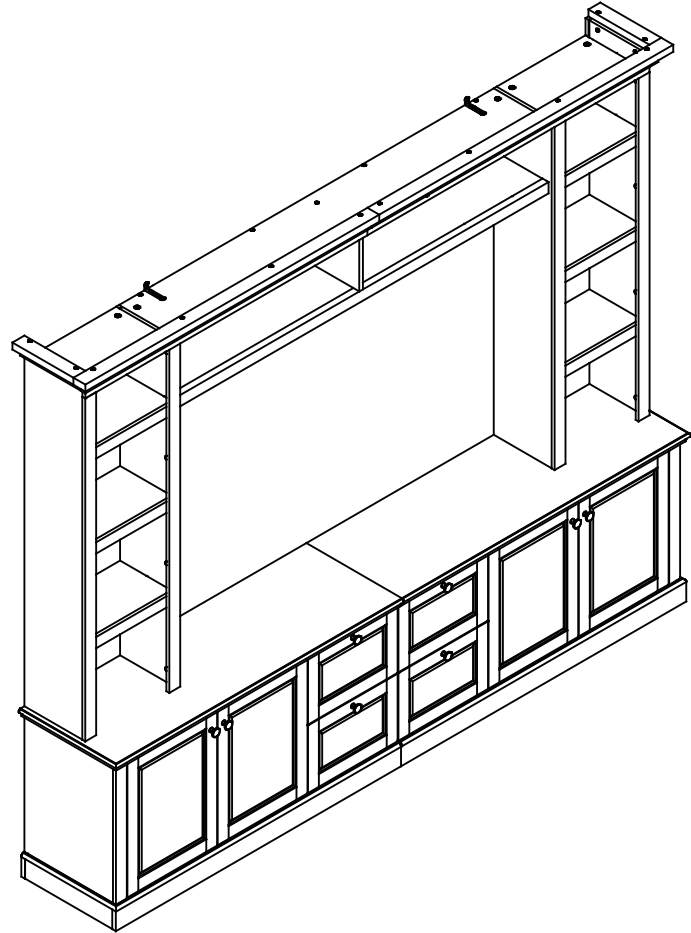 


TV Stand

Assembly Instructions - Please keep for future reference

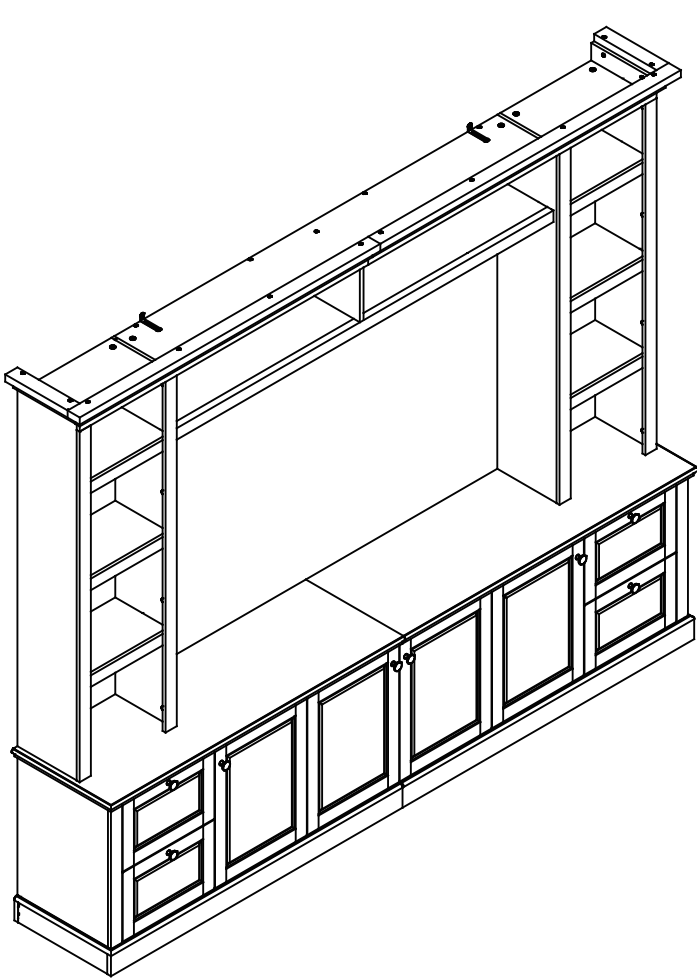

Dimensions

Width- 94.5inch

Depth- 15.75inch

Height- 75.5inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions

 
 
 
 
 
 
 
 
 
 
 
 
 
To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

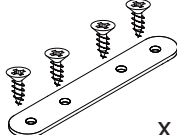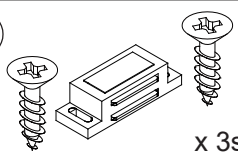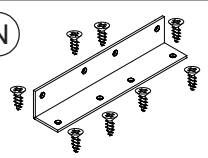 (A) Cam Bolt x 118+2	 (B) 6*30mm Dowel x 108+2	 (C) Cam lock x 120+2	 (D) 4*25mm Screw x 12+1
 (E) x 1set	 (F) x 2set	 (G) 4*30mm Screw x 34+2	 (H) 3.5*14mm Hinge x 4set
 (I) 4*20mm Screw x 12+1	 (J) Anti-tipping Device x2	 (K) 4*40mm Screw x 28+2	 (L) 6*40mm Dowel x 8+1
 (M) x 3set	 (N) x 2set	 (O) Shelf support pin x 12+1	 (P) 4*20mm Handle x 8set
 (Q) x 6set	 (R) x 20set	 (S) Foot pad x12	 (T) 3.5*14mm half-overlay hinge x 8set
 (U) Allen key x 1	 (V) Perfect fit x 90		

 Tools required Not Included



Phillips screwdriver
(medium & large)

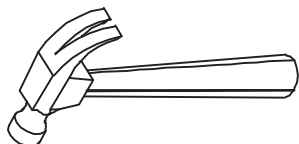  


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1

 
DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

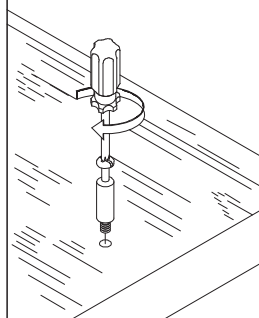

Step 2

Push the male camlock into the entry hole.

 2

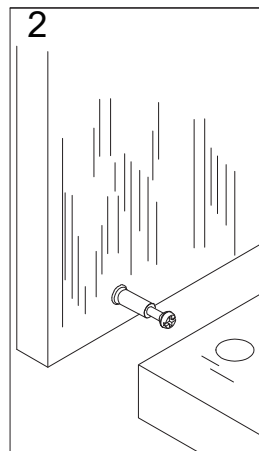


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

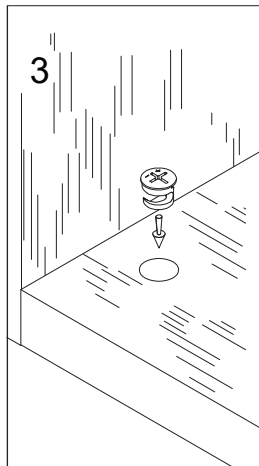


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

 4

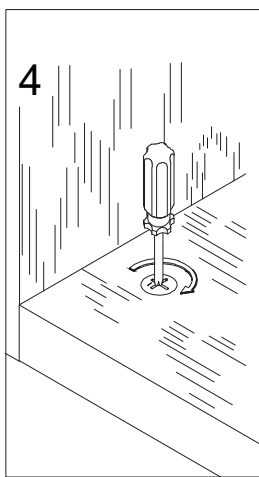

















Assembly Instructions

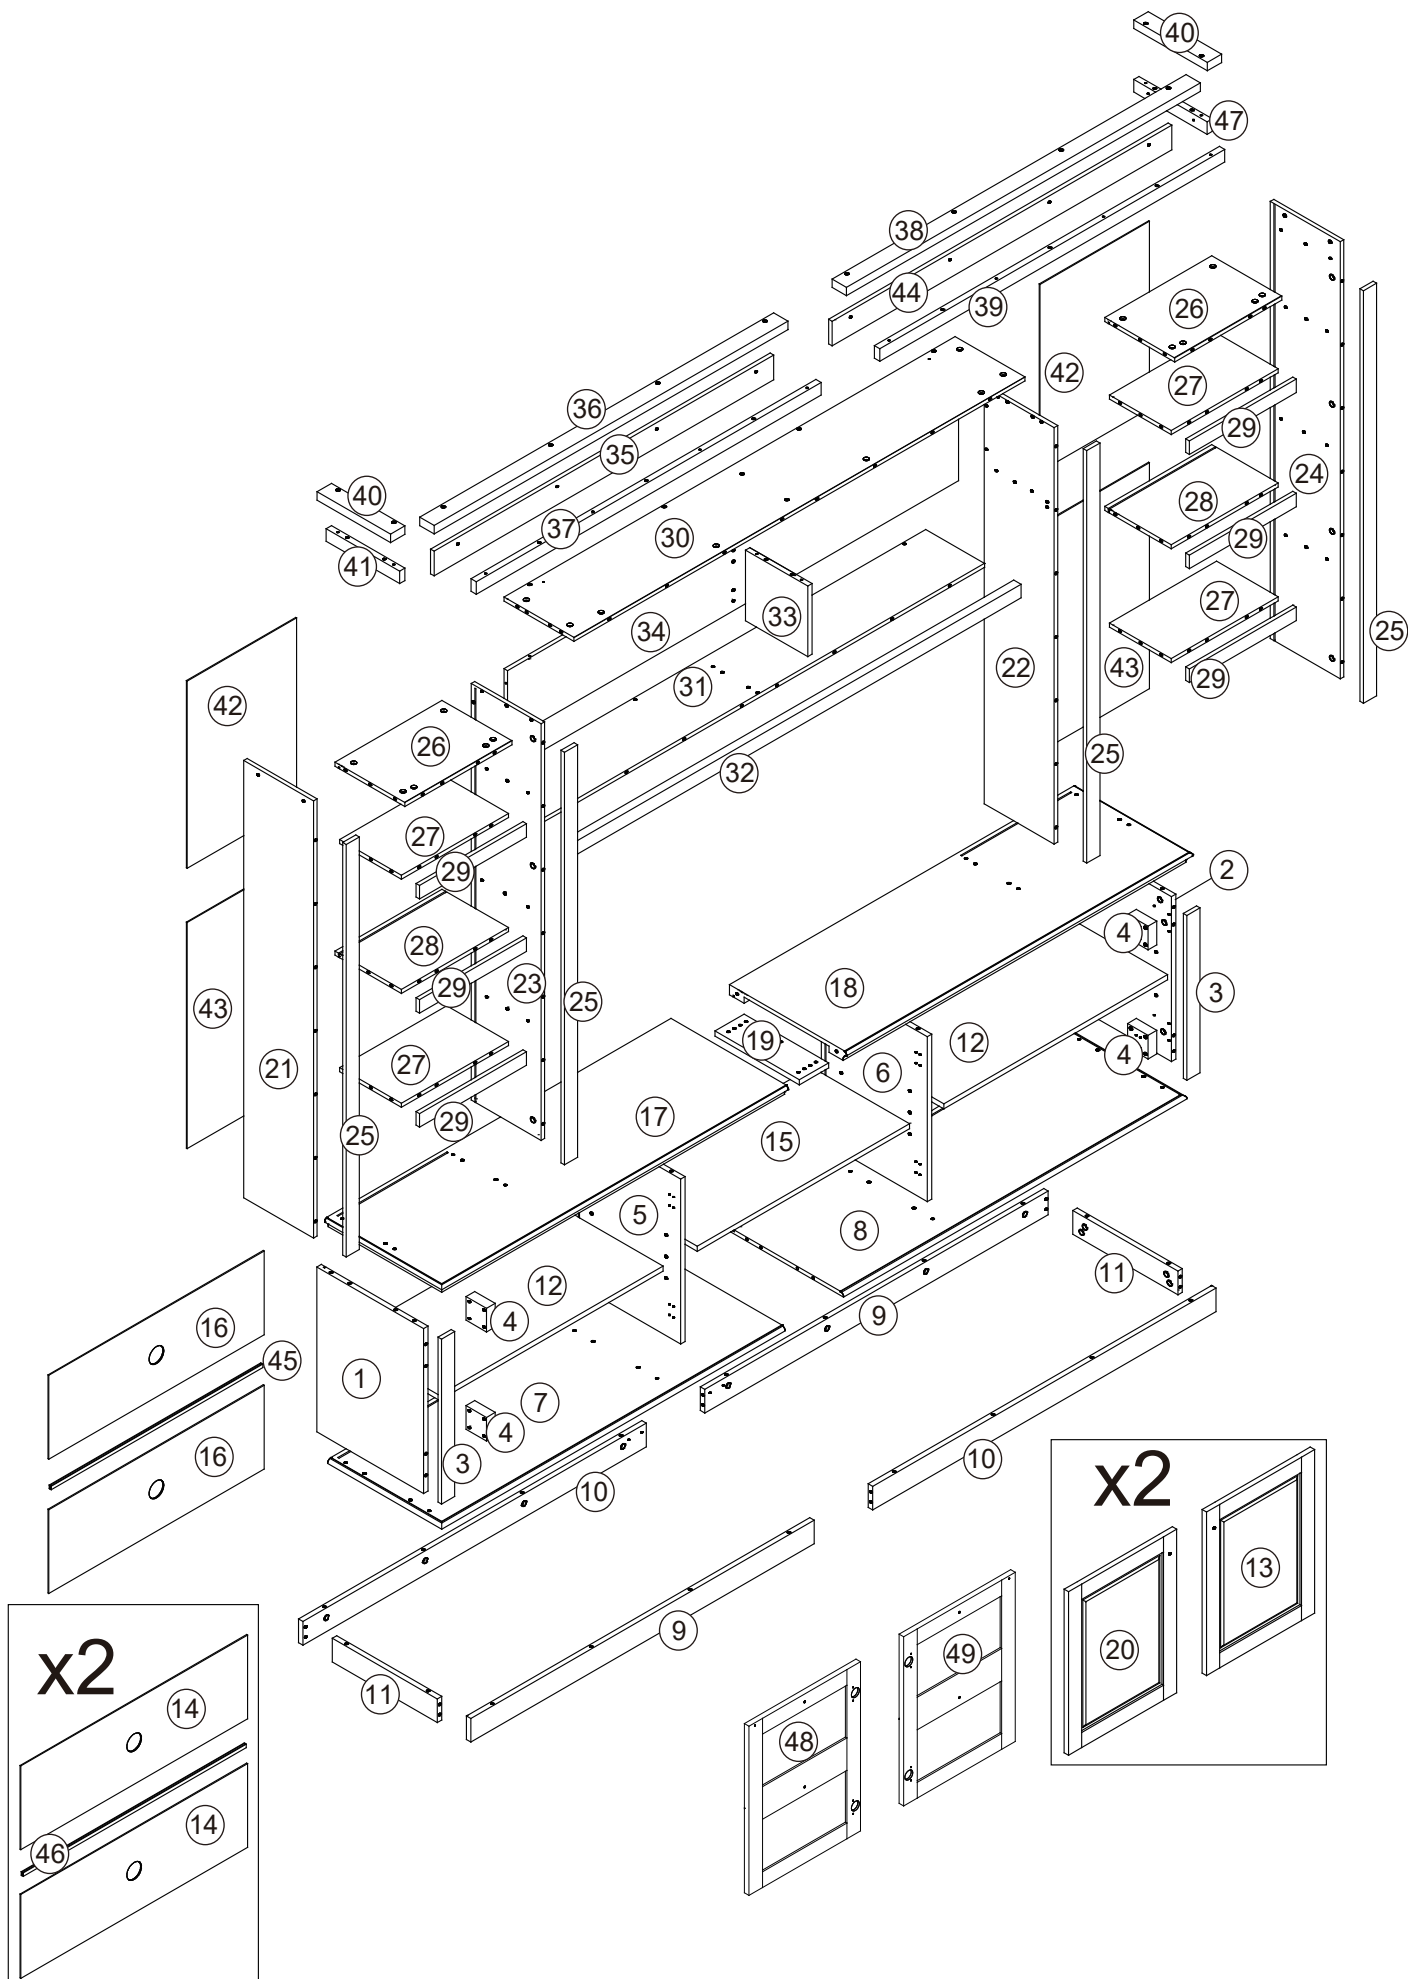 

PART LIST

This product comes in 2 box.



 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
N710P390119

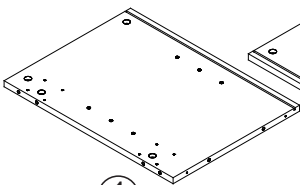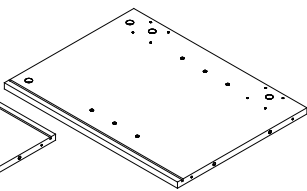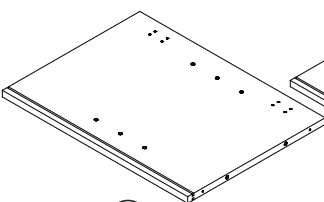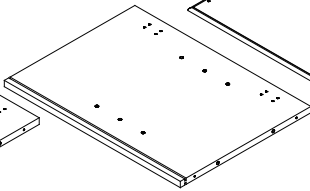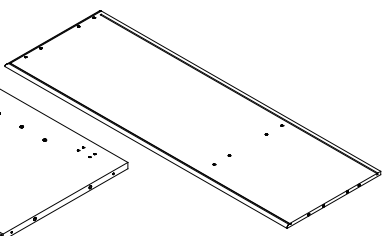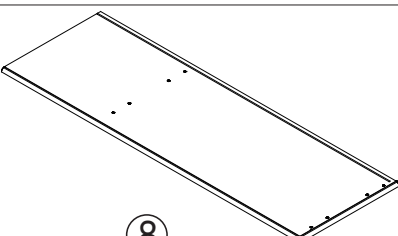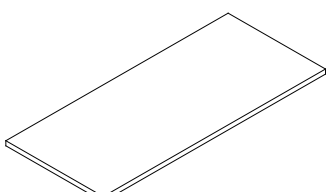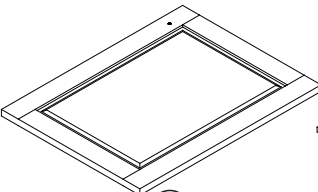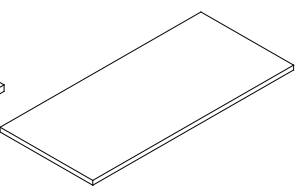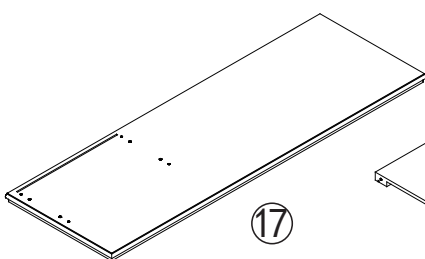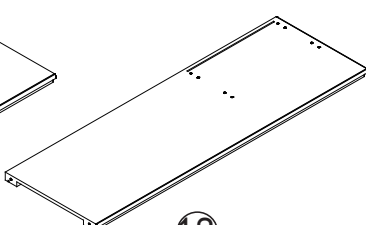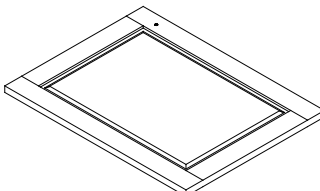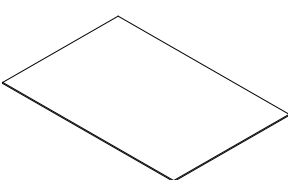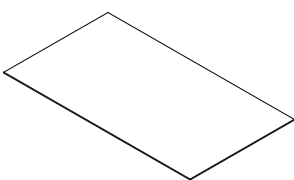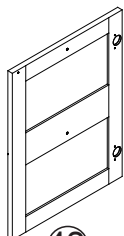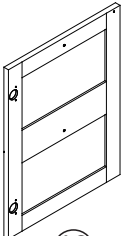				
① x1 488x365x15mm	② x1 488x365x15mm	⑤ x1 488x362x15mm	⑥ x1 488x362x15mm	⑦ x1 1174x390x12mm
				
⑧ x1 1174x390x12mm	⑫ x2 765x335x15mm	⑬ x2 484x369.5x15mm	⑮ x1 726x335x15mm	
				
⑰ x1 1184x400x30mm	⑱ x1 1184x400x30mm	⑳ x2 484x369.5x15mm	㉔ x2 554x374x3mm	
				
㉓ x2 669x374x3mm	㉔ x1 484x369.5x15mm	㉕ x1 484x369.5x15mm		

PART LIST

This product comes in 2 box.

    
 
 
 
 
 
 
 
 
 
 
 
 
 
 
N710P390120

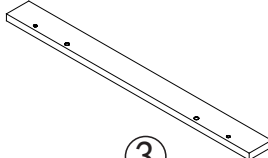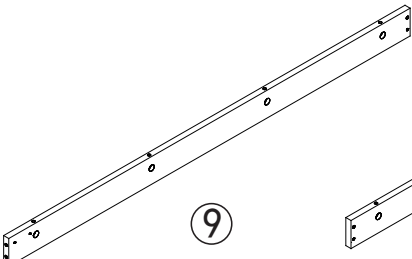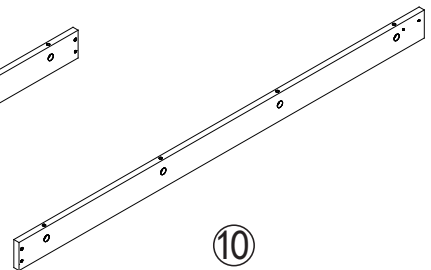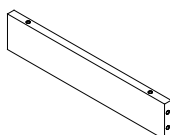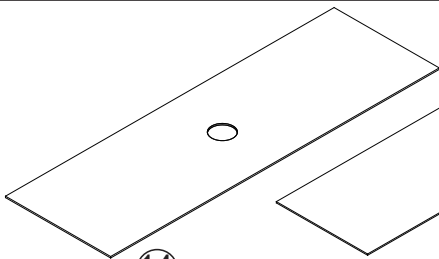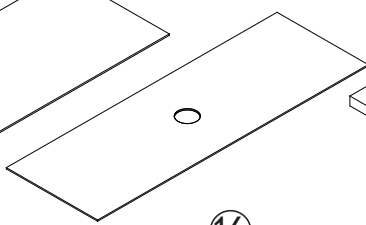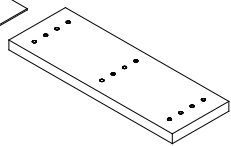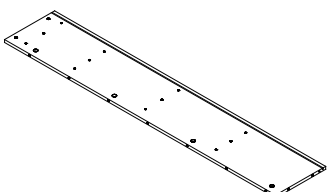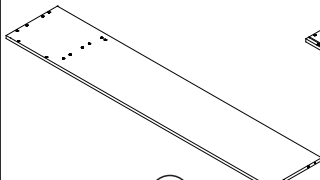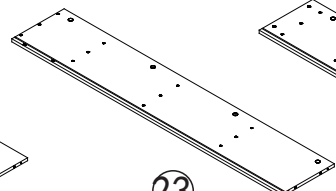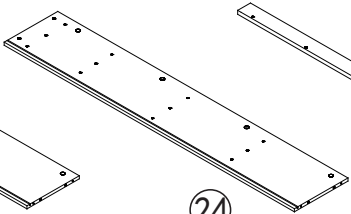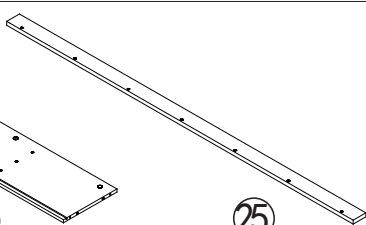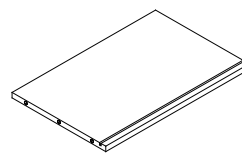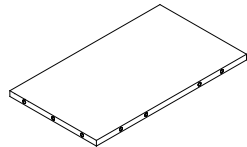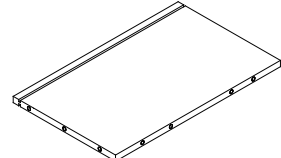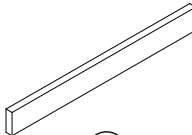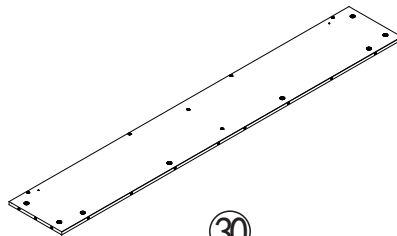 ③ x2 488x45x12mm	 ④ x4 70x70x30mm	 ⑨ x2 1174x70x15mm	 ⑩ x2 1174x70x15mm	
 ⑪ x2 359x70x15mm	 ⑭ x4 775x248x3mm	 ⑯ x2 736x248x3mm	 ⑲ x1 289x100x15mm	 ⑳ x1 1294x239x12mm
 ㉒ x1 1233x239x12mm	 ㉓ x1 1233x239x12mm	 ㉔ x1 1294x239x12mm	 ㉕ x4 1221x45x12mm	 ㉖ x2 366x239x12mm
 ㉗ x4 366x211x12mm	 ㉘ x2 366x227x15mm	 ㉙ x6 366x40x12mm	 ㉚ x1 1542x239x12mm	

PART LIST


This product comes in 2 box.

               N710P390120

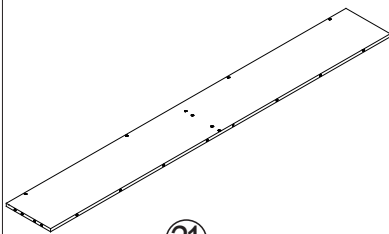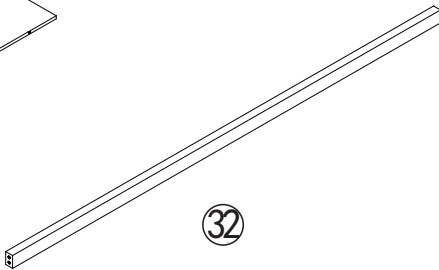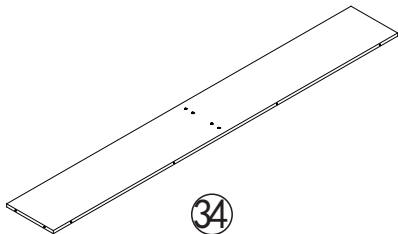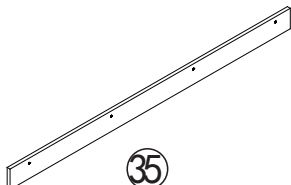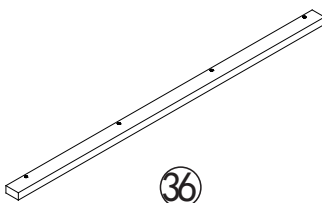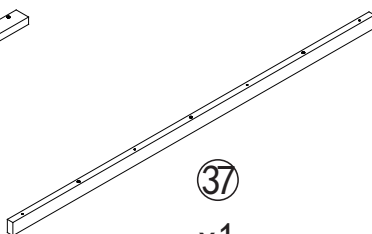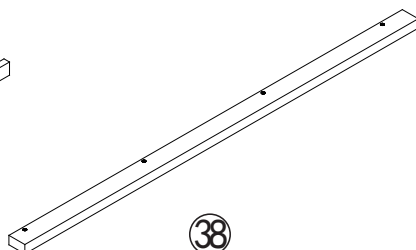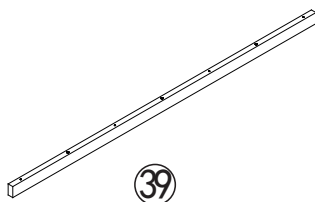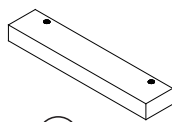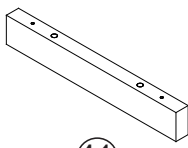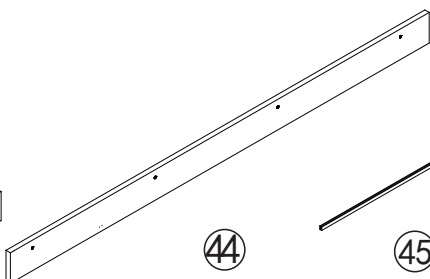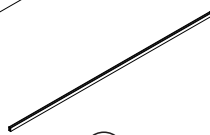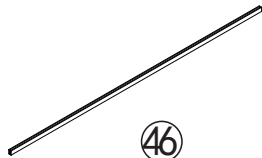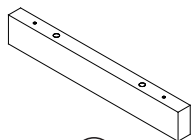 ③① x1 1542x201x12mm	 ③② x1 1542x40x25mm	 ③③ x1 213x209x15mm	 ③④ x1 1542x209x12mm	
 ③⑤ x1 1161x73x12mm	 ③⑥ x1 1210x49x25mm	 ③⑦ x1 1179.5x37x18mm	 ③⑧ x1 1210x49x25mm	
 ③⑨ x1 1179.5x37x18mm	 ④⑩ x2 251x49x25mm	 ④① x1 251x49x18mm	 ④④ x1 1161x73x12mm	 ④⑤ x1 723mm
 ④⑥ x2 762mm	 ④⑦ x1 251x49x18mm	 Hardware kit x1		

Assembly Instructions

 Step 1

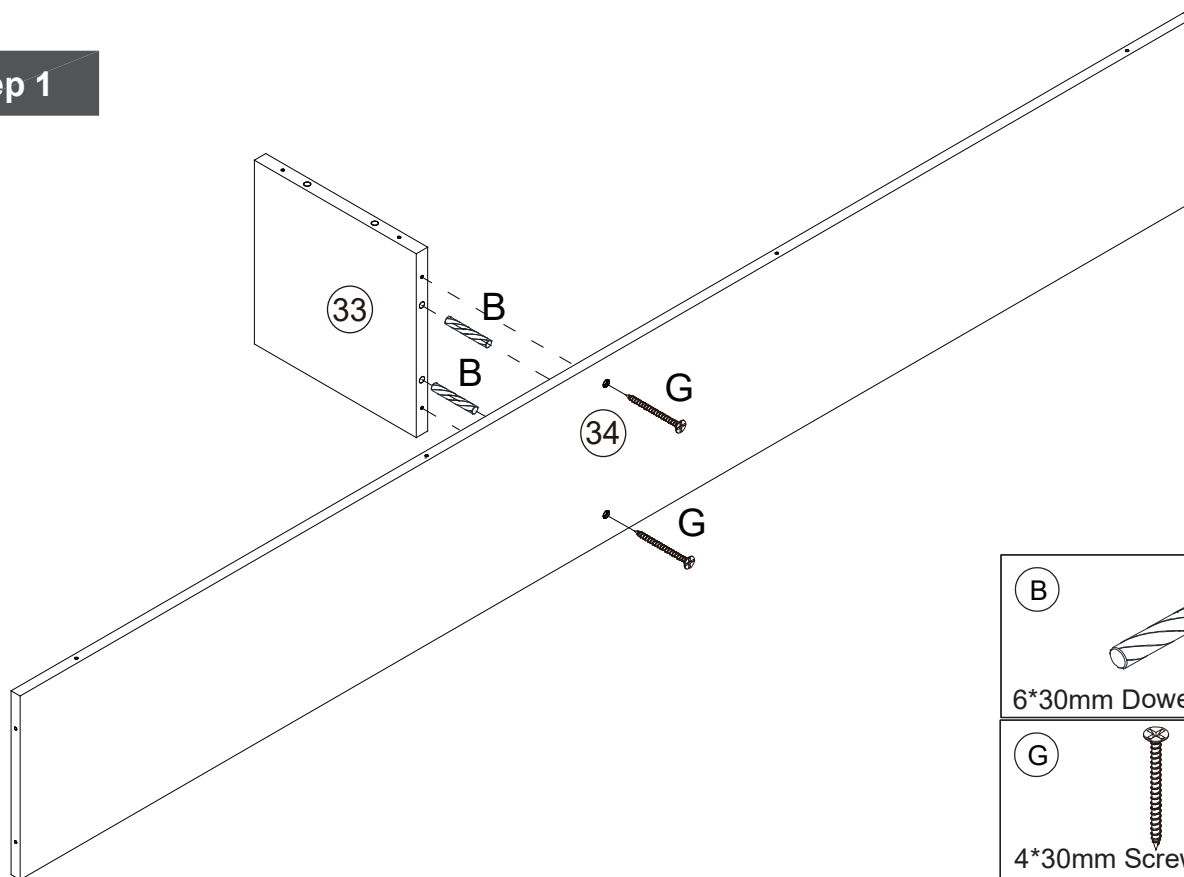

(B)



 
6*30mm Dowel x 2

(G)



4*30mm Screw x 2

Step 2

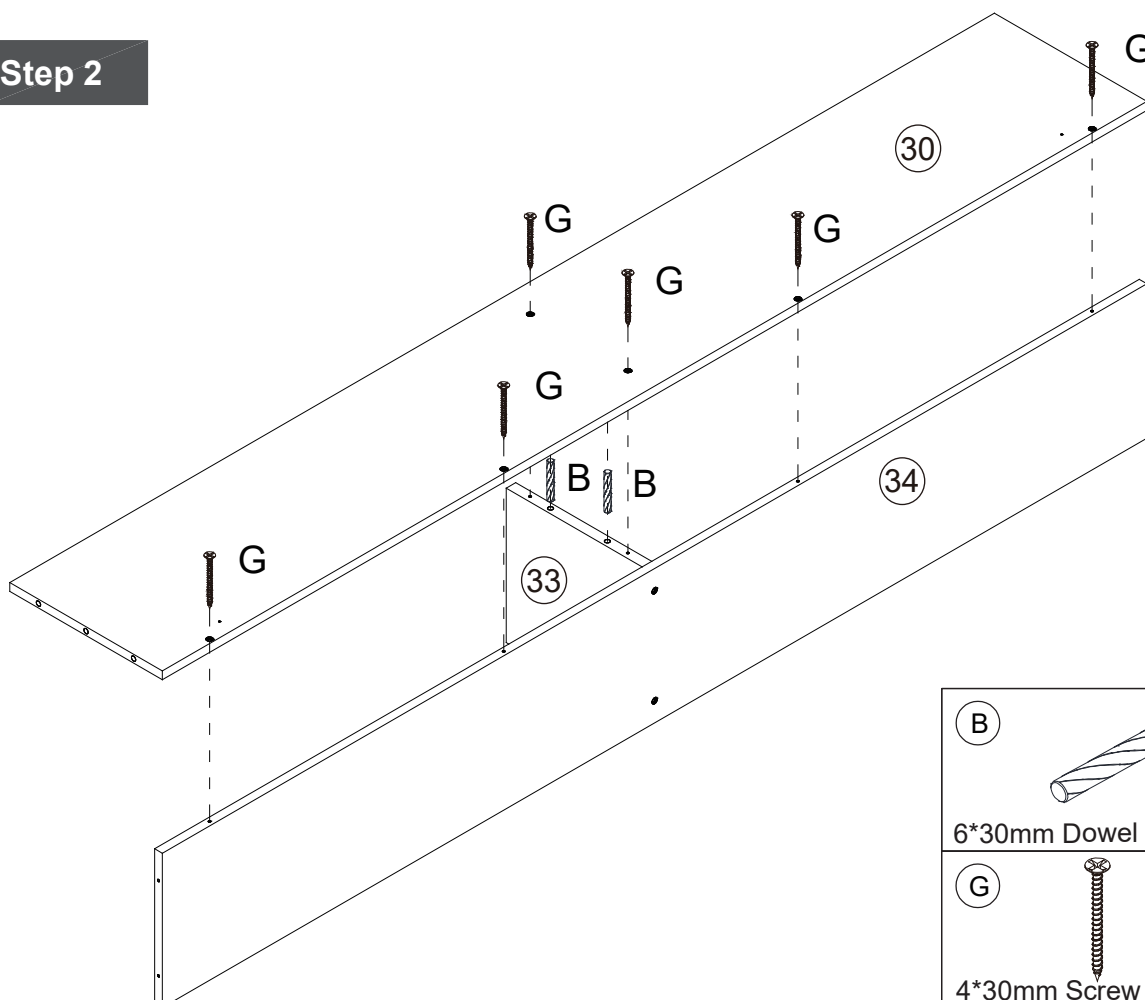

(B)



6*30mm Dowel x 2

(G)



4*30mm Screw x 6

 
Assembly Instructions

Step 3


step1

step2

step3

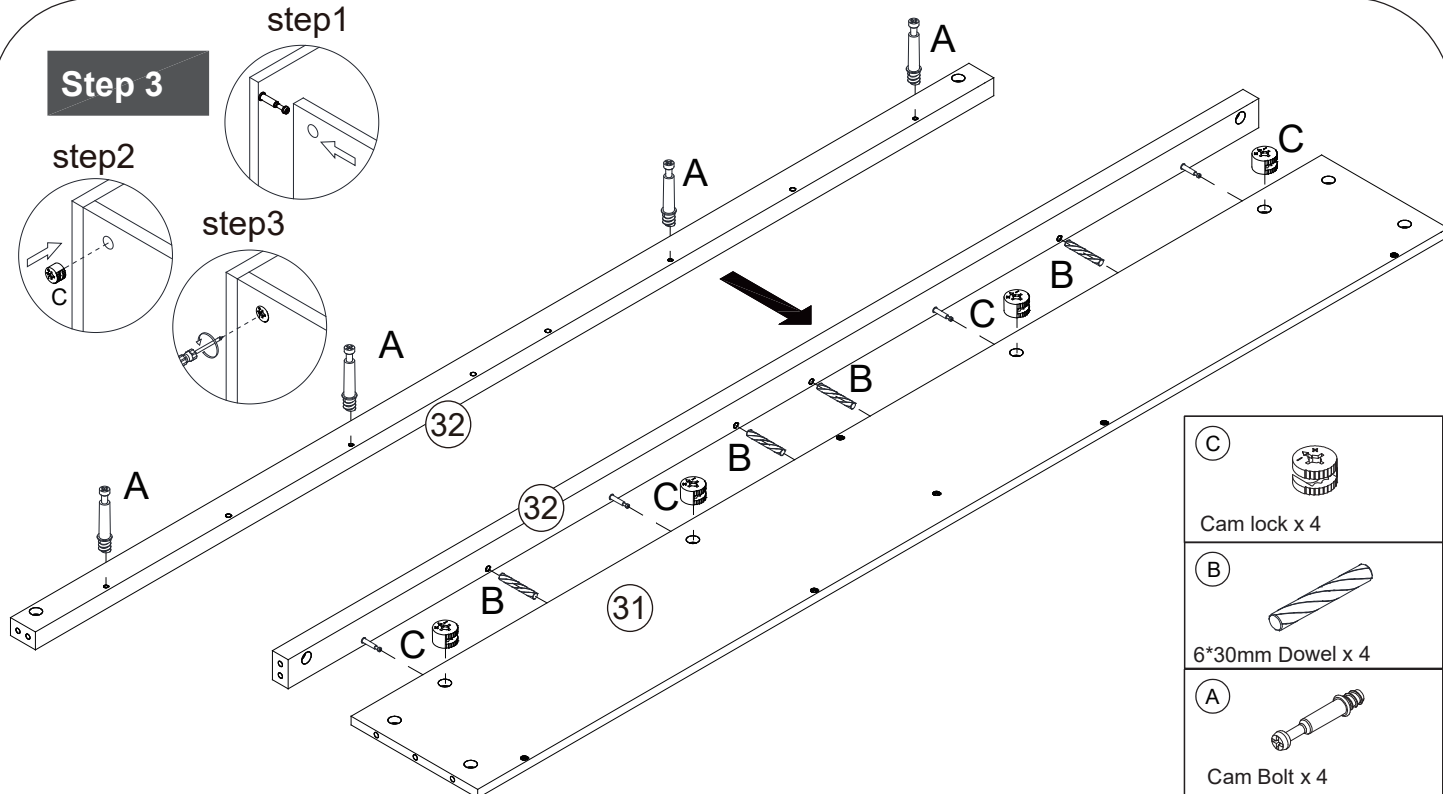


 
Step 4

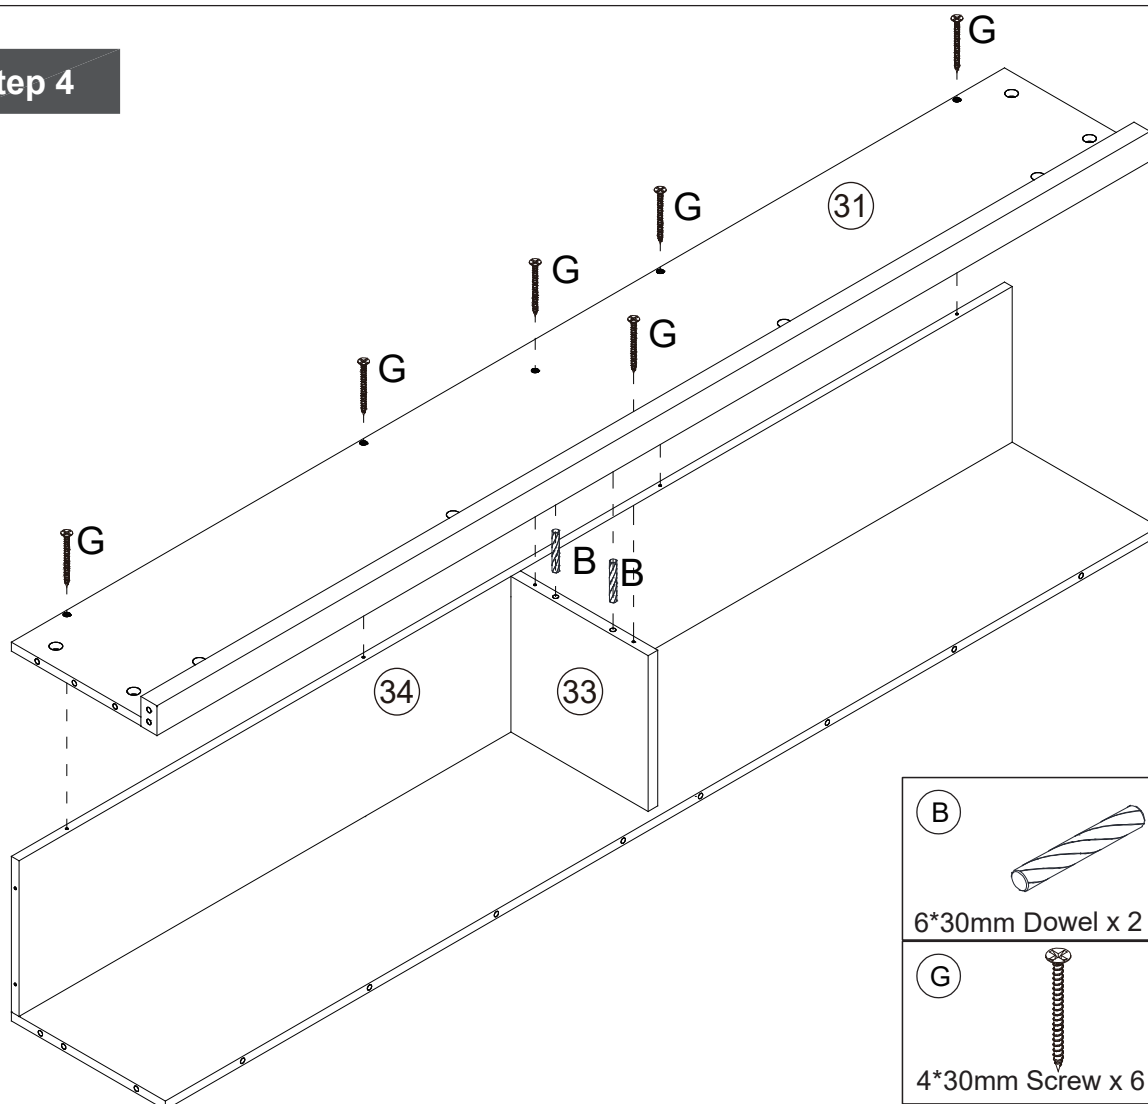

Assembly Instructions




Step 5

  x6

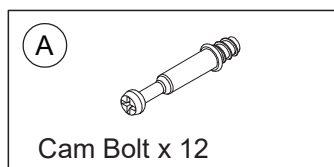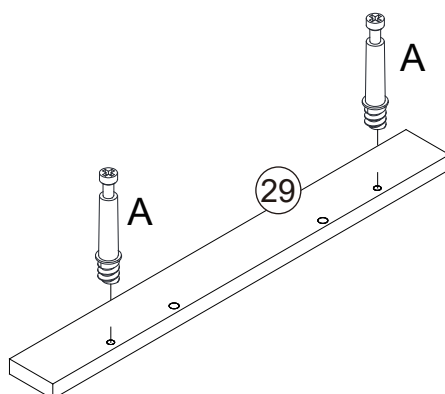



Step 6

   x4

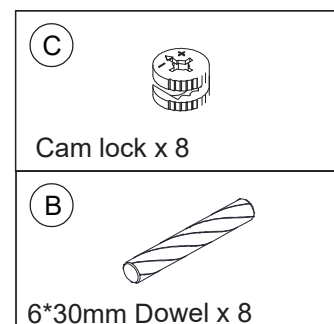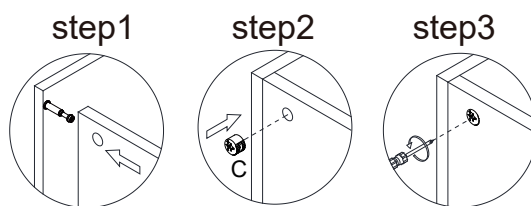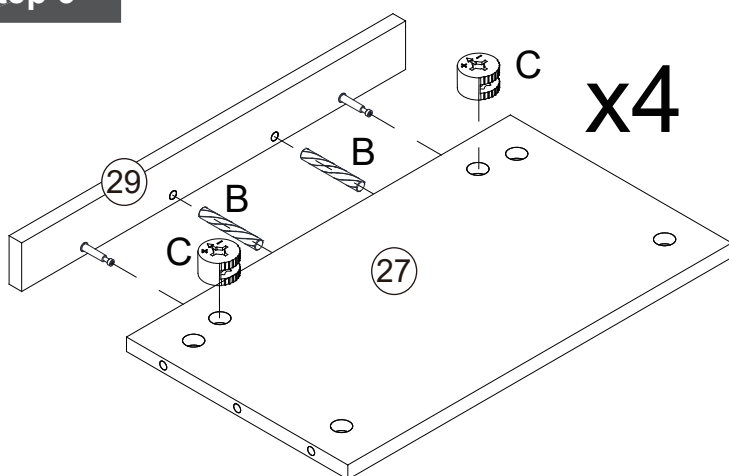

Step 7

  
x2

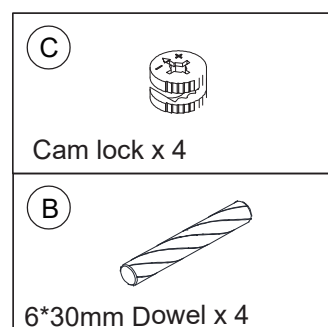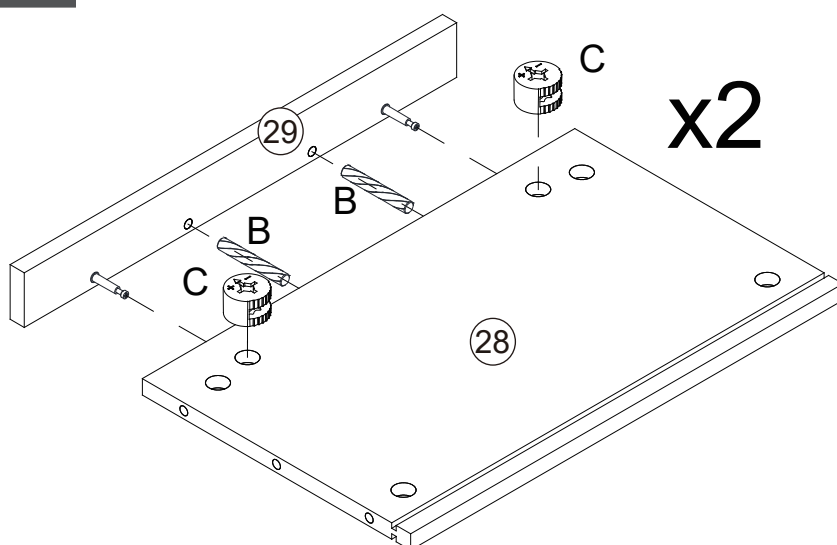


10

Assembly Instructions

 Step 8

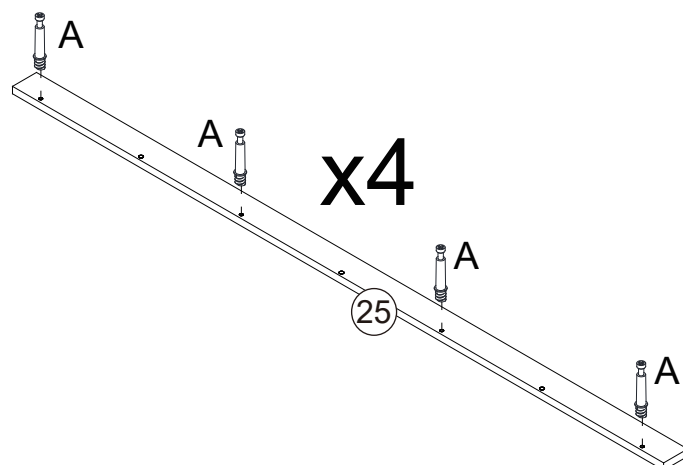


A

 

Cam Bolt x 16

 Step 9

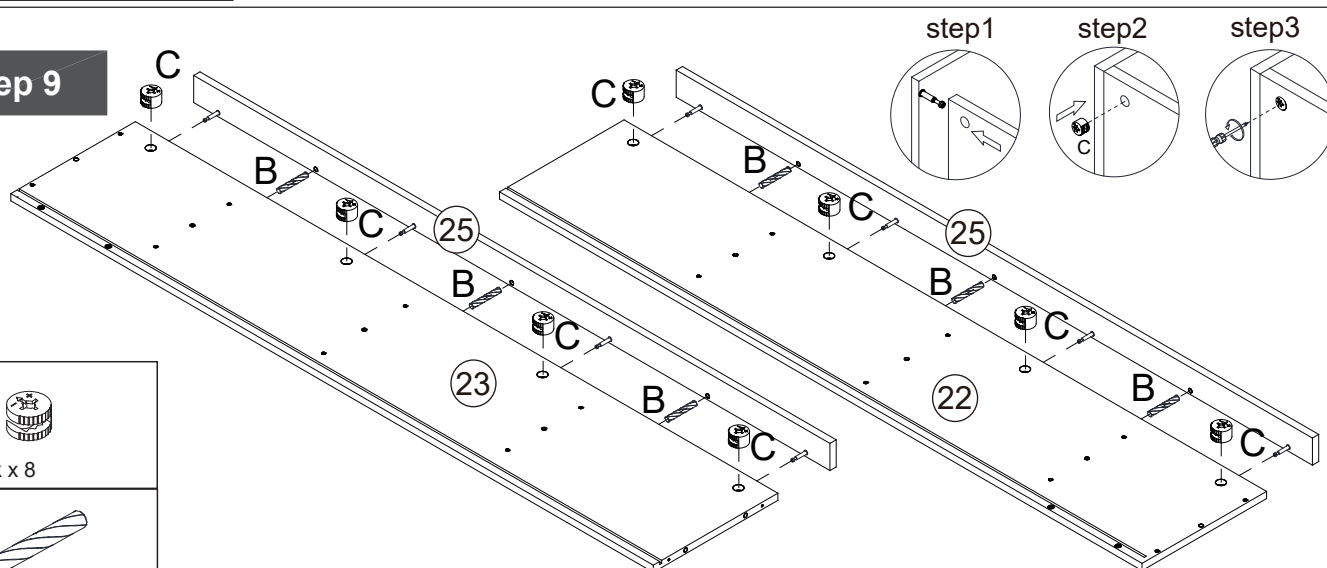

C



 
Cam lock x 8

B




6*30mm Dowel x 6

Step 10

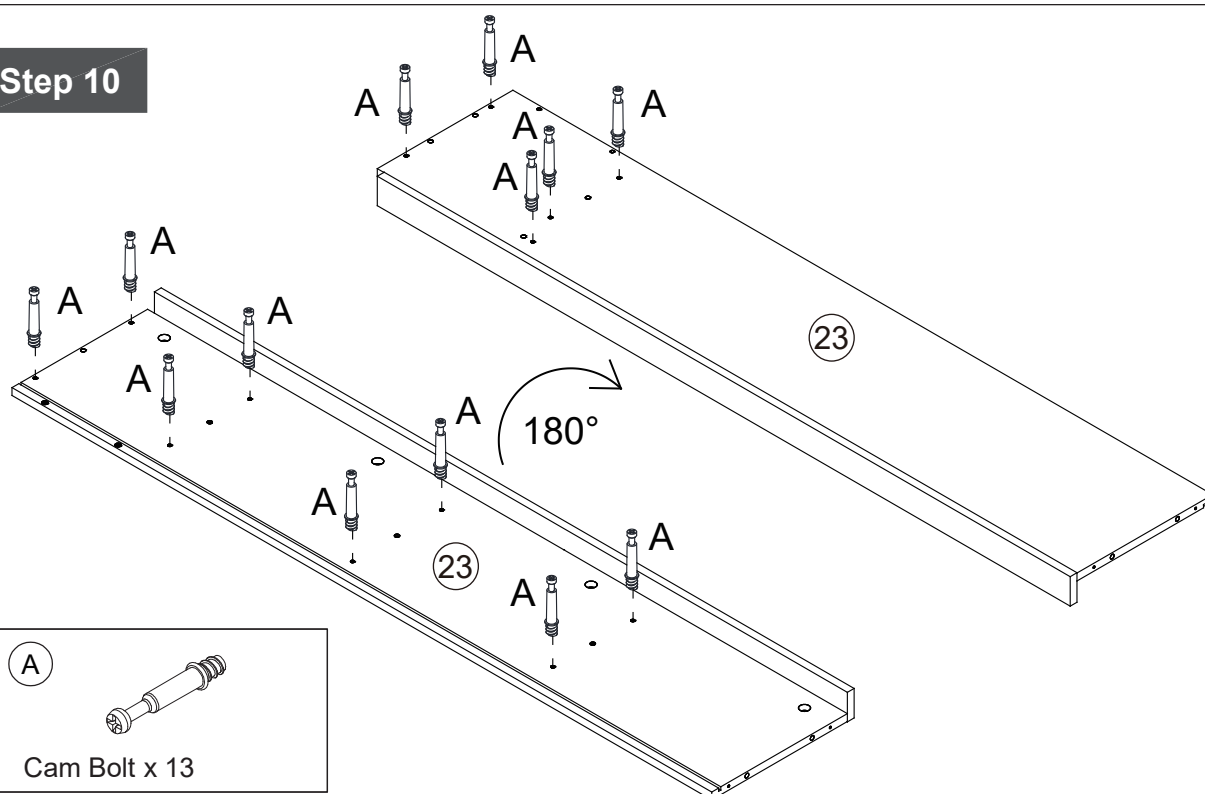


A

 


Cam Bolt x 13

Assembly Instructions

 Step 11

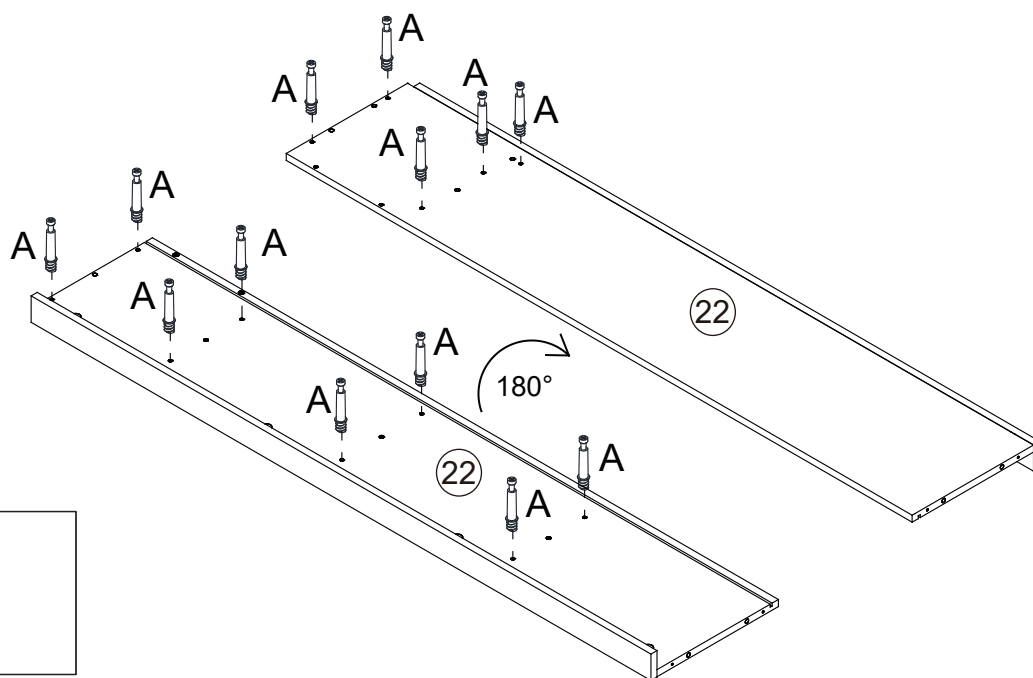


A

 


Cam Bolt x 13

Step 12


 
step1

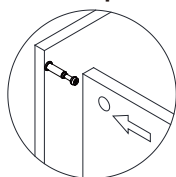

 step2

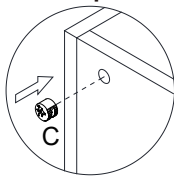

  step3

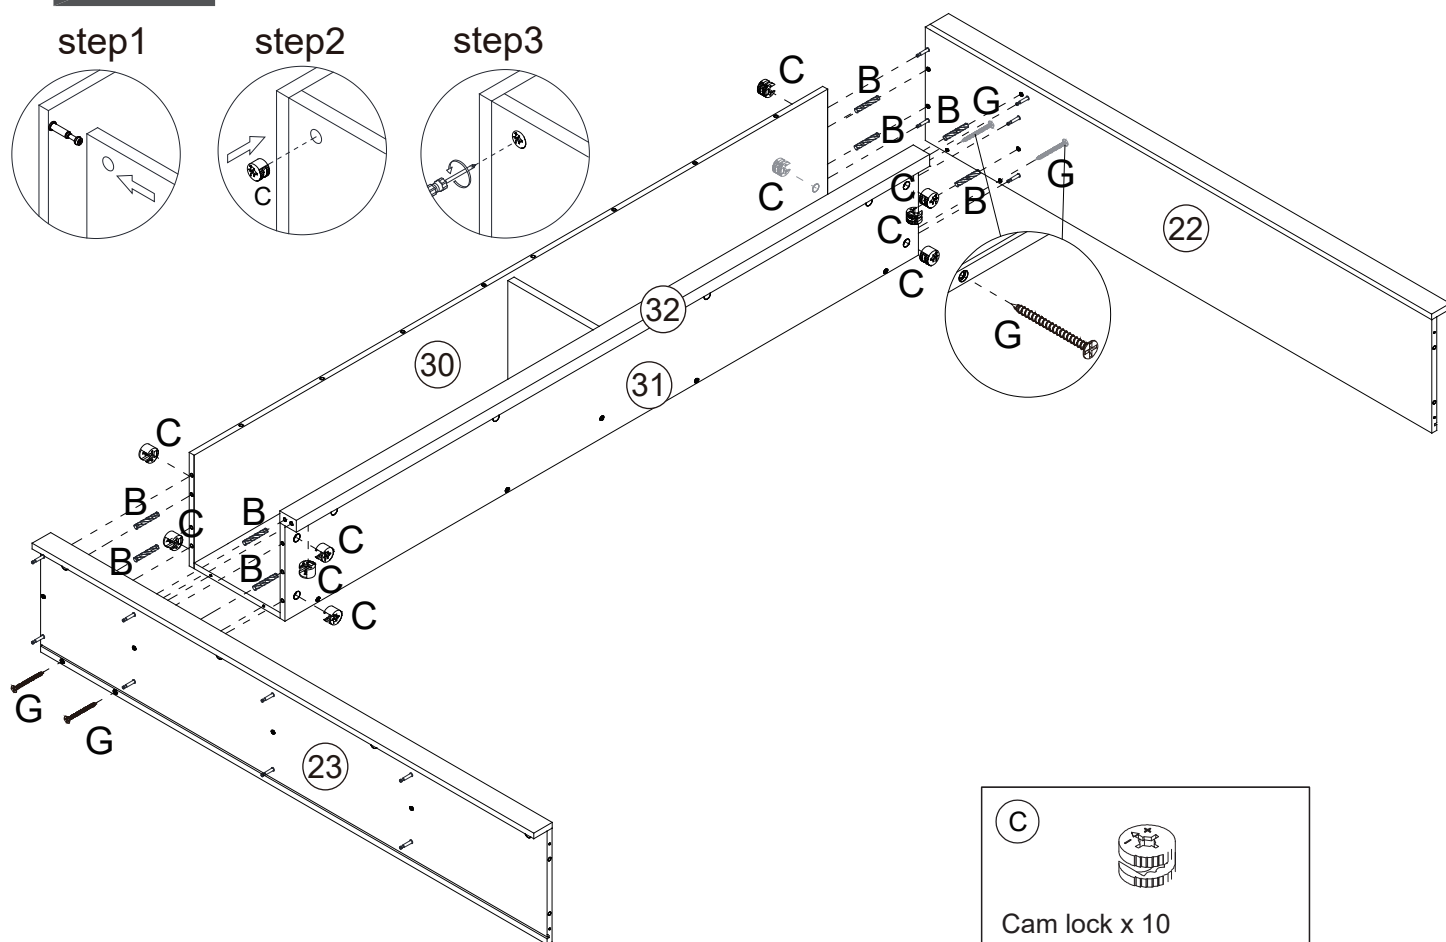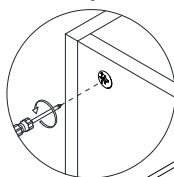

C



Cam lock x 10

G



4*30mm Screw x 4

 
B




6*30mm Dowel x 8

Assembly Instructions

Step 13

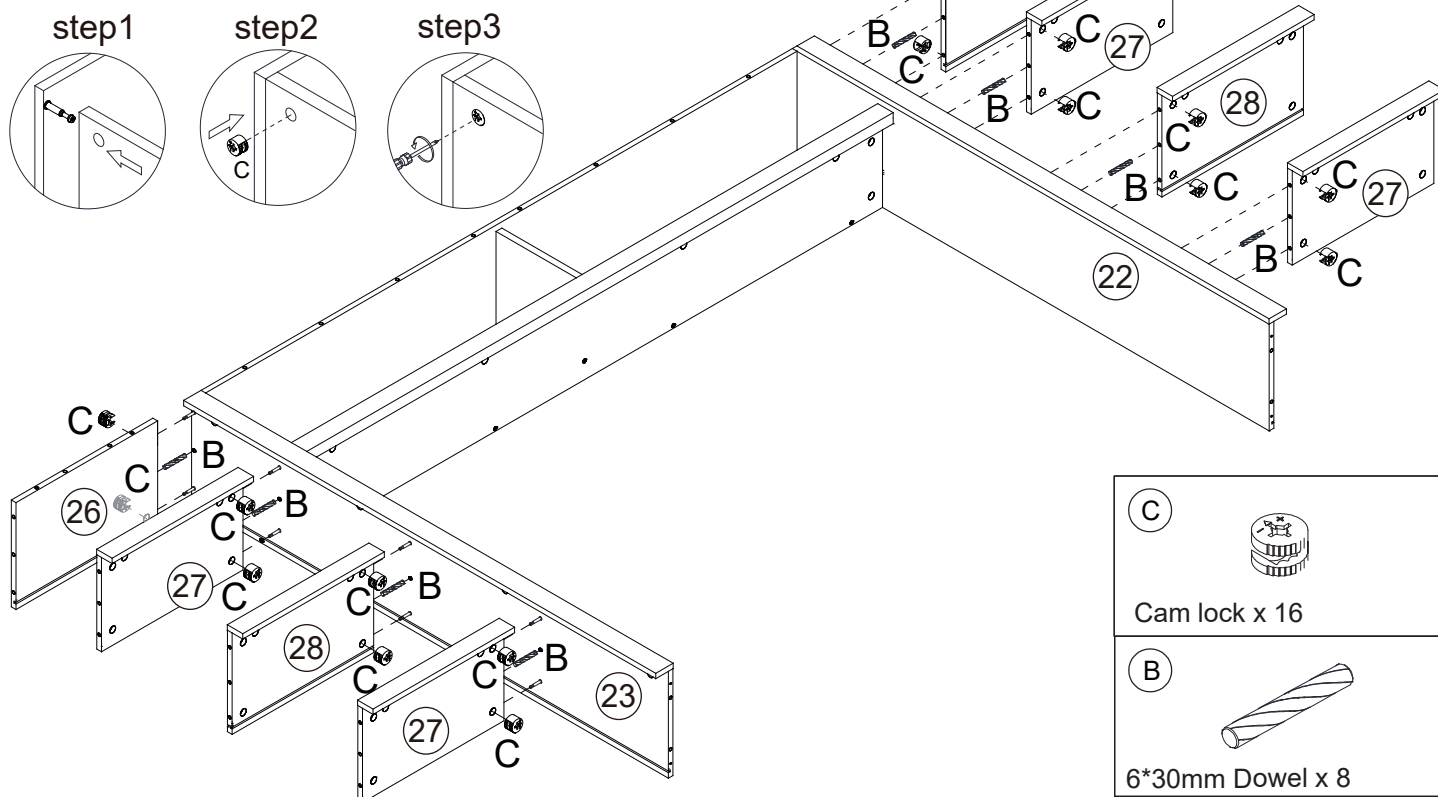


 Step 14

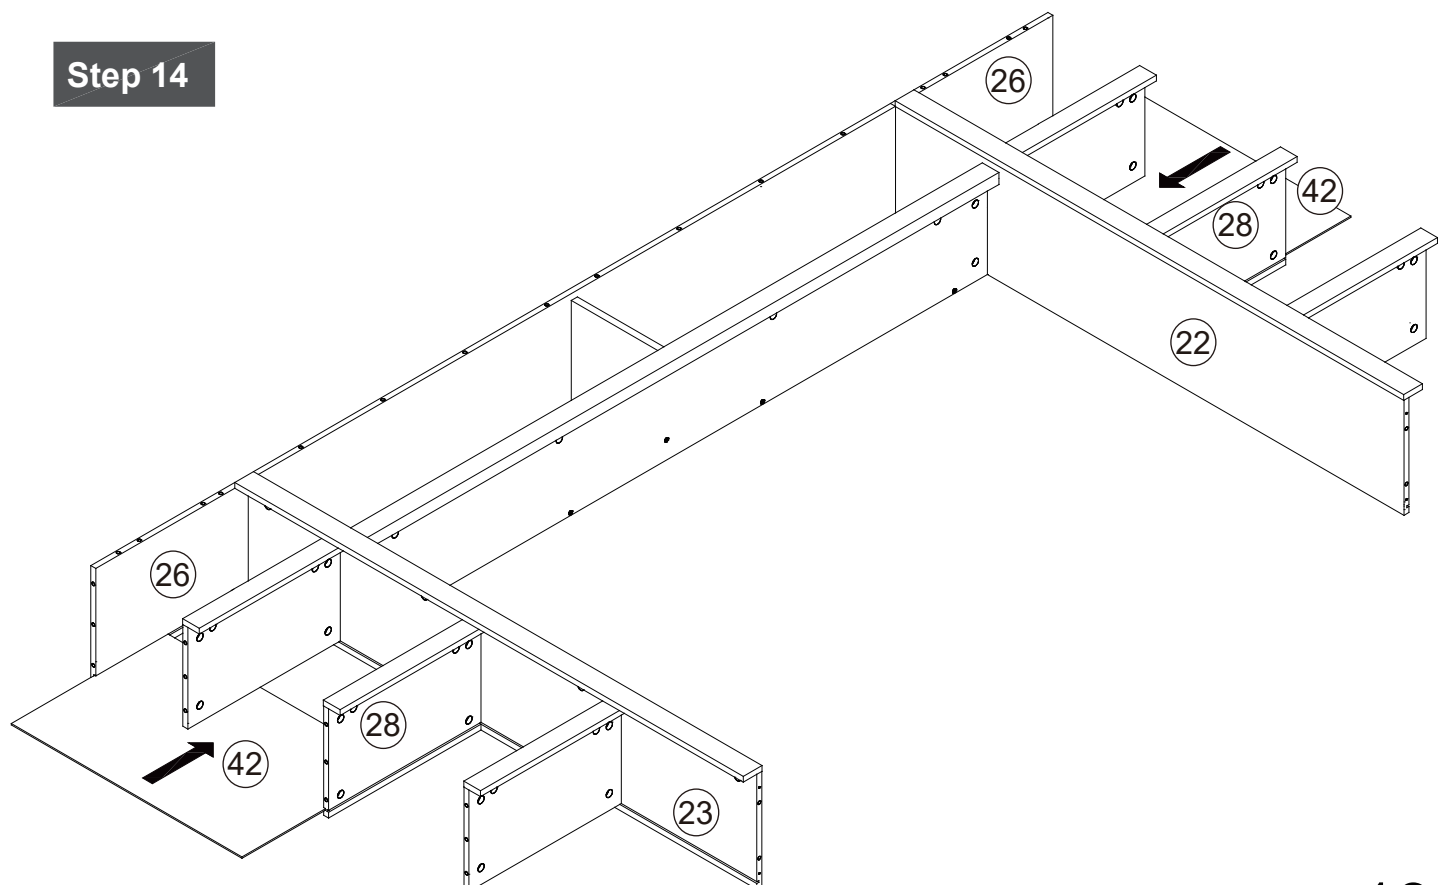


Assembly Instructions

 
Step 15

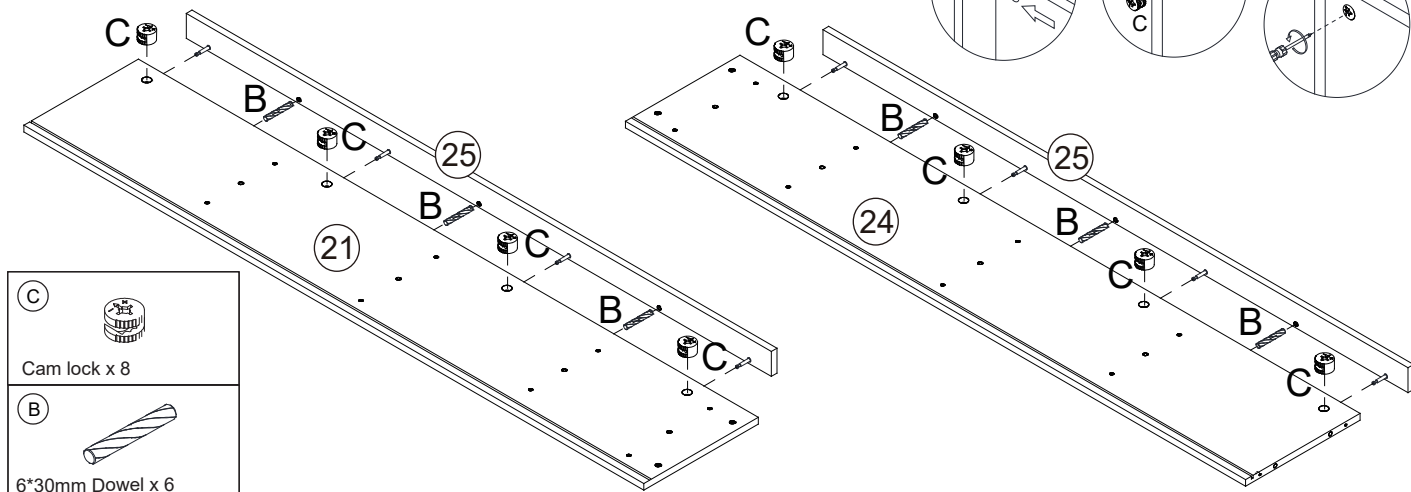

 Step 16

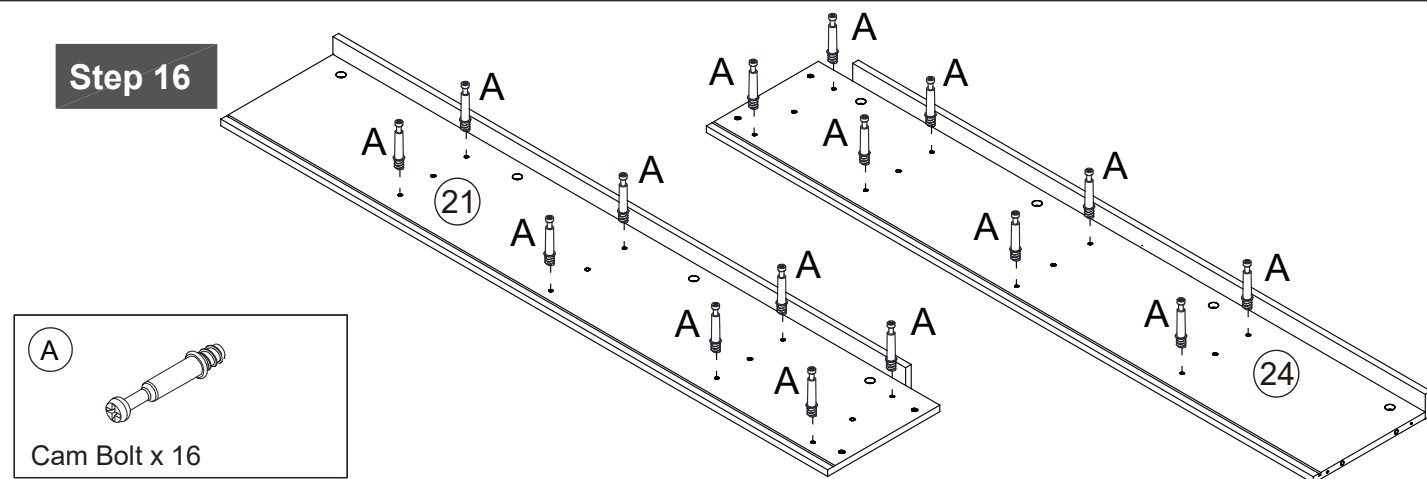


 Step 17

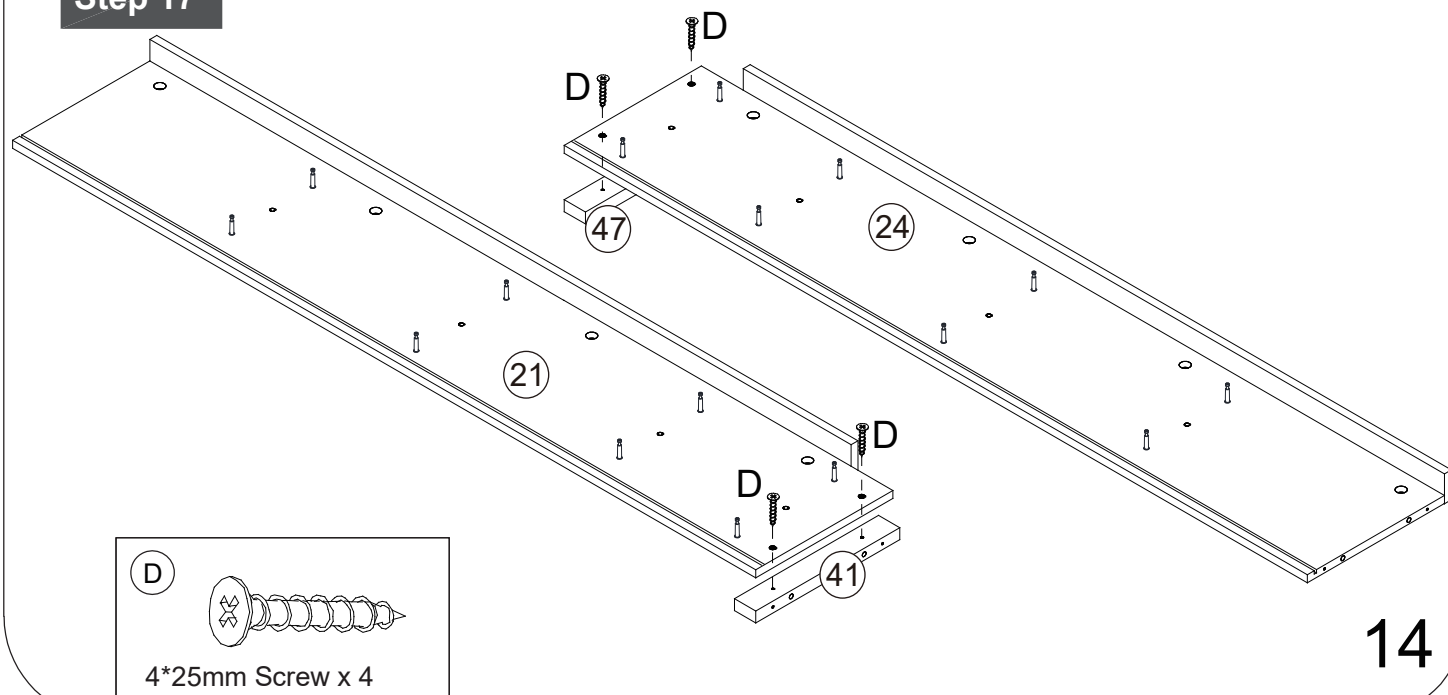


Assembly Instructions

 Step 18

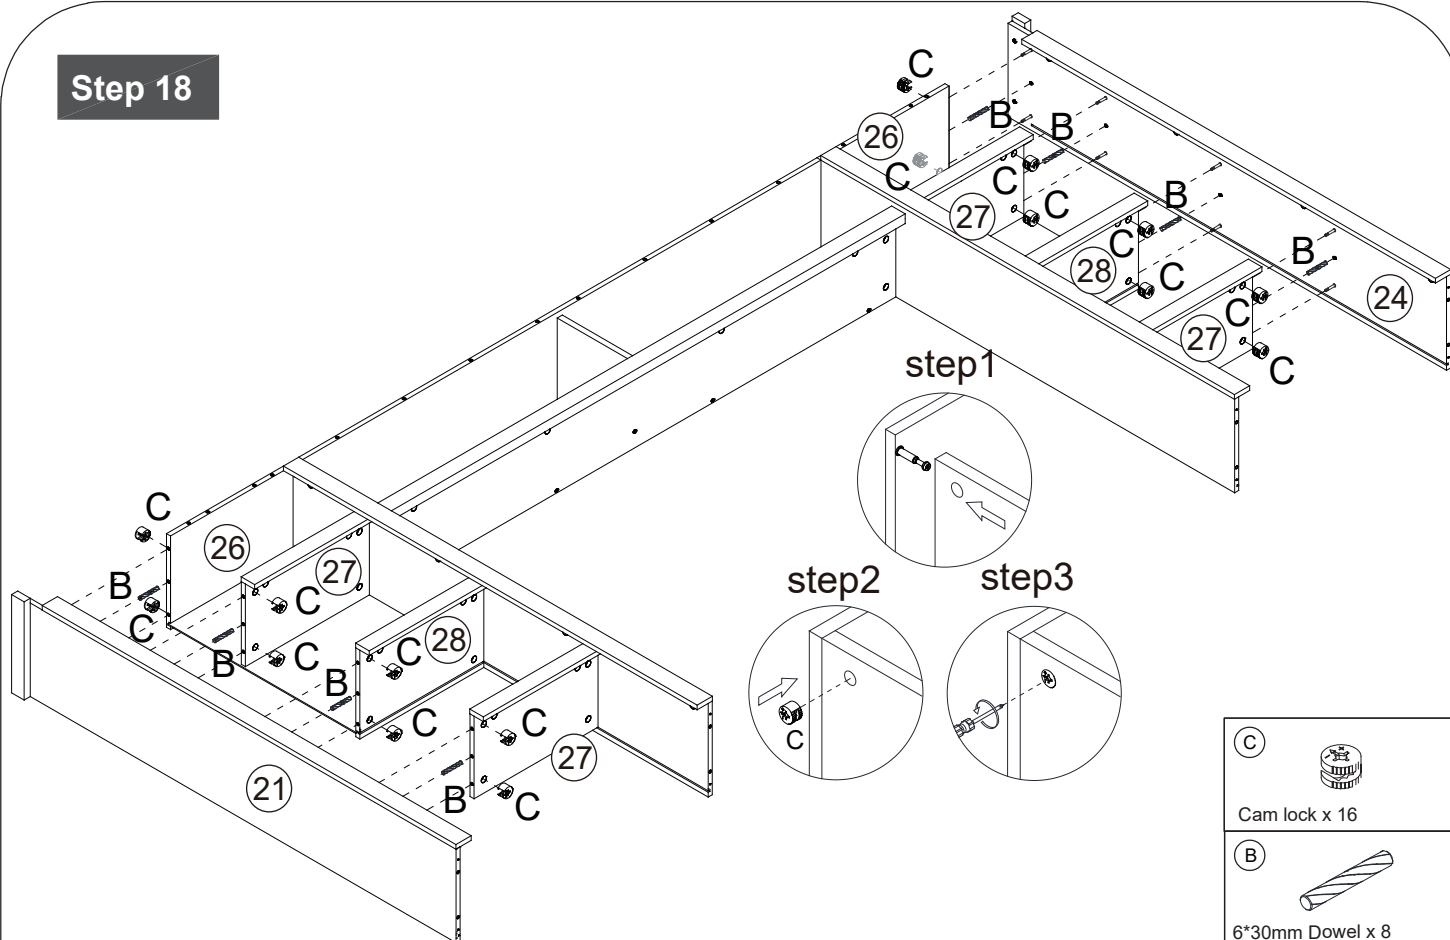


 Step 19

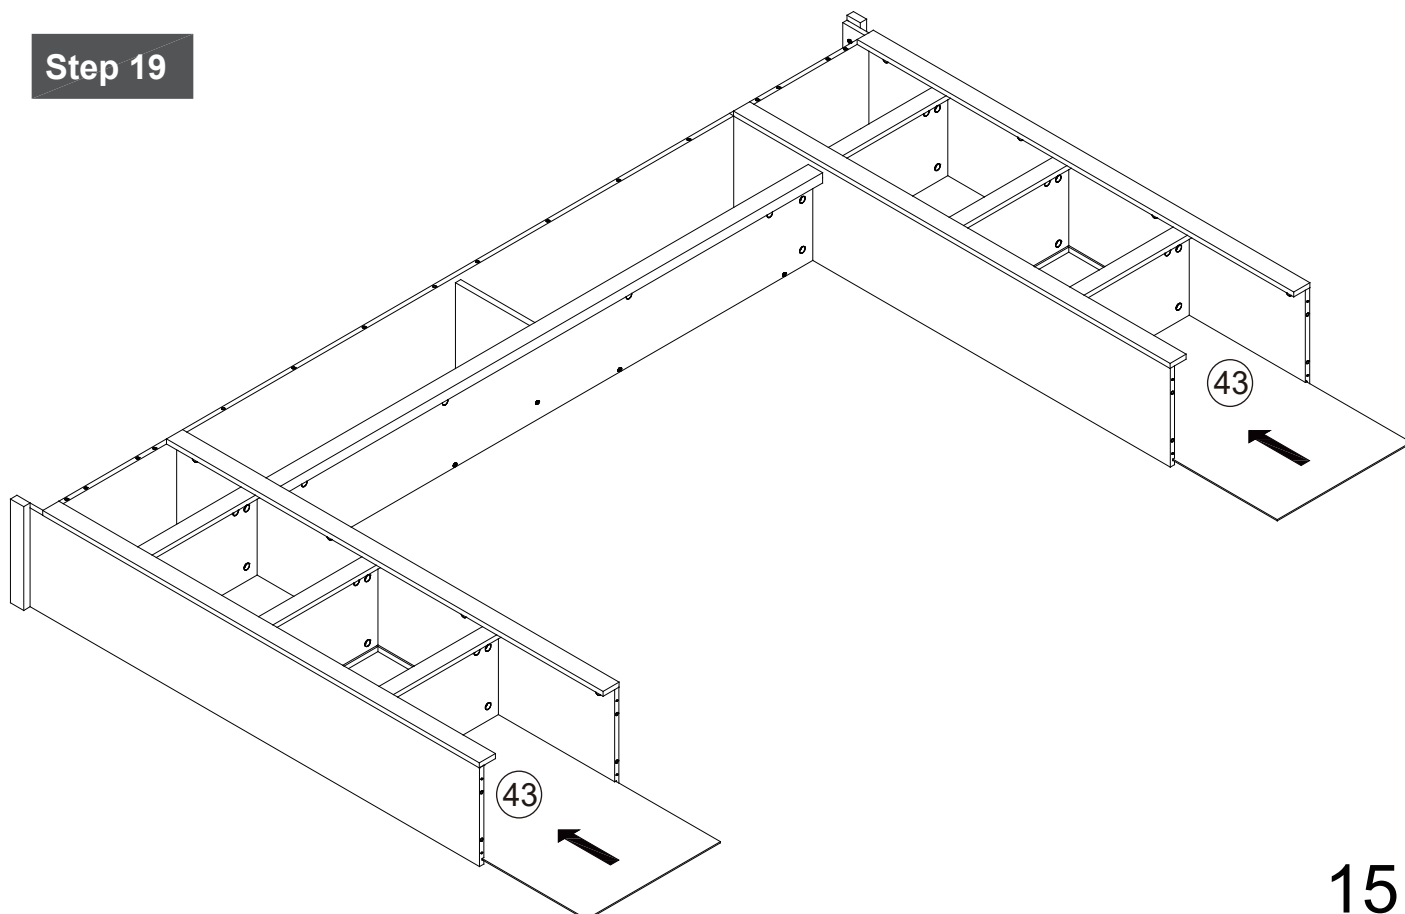


Assembly Instructions

 Step 20

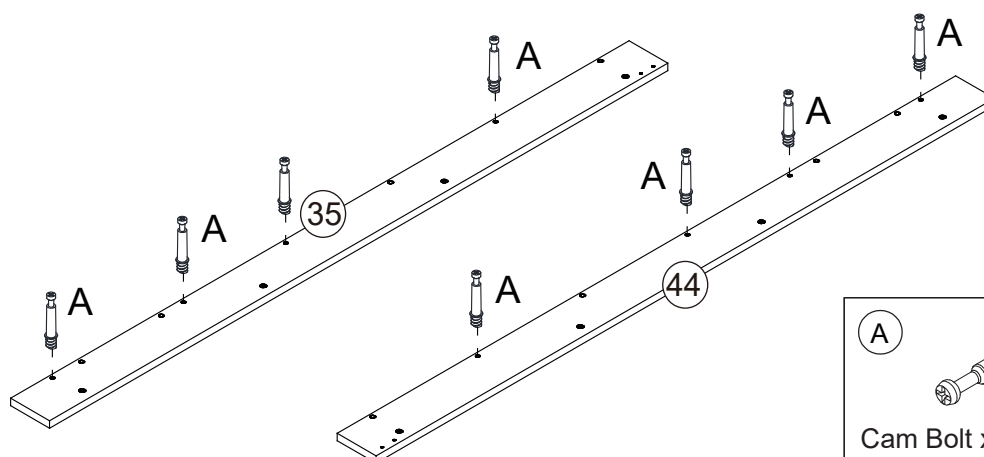


A

 


Cam Bolt x 8

 Step 21

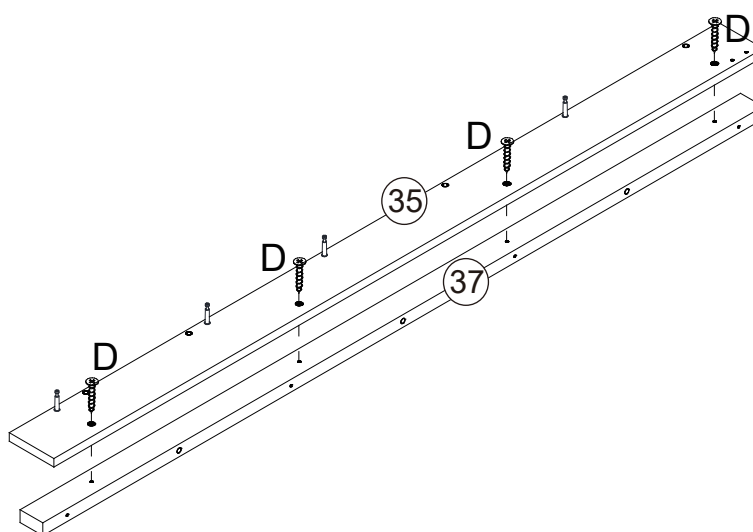


D

 


4*25mm Screw x 4

 Step 22

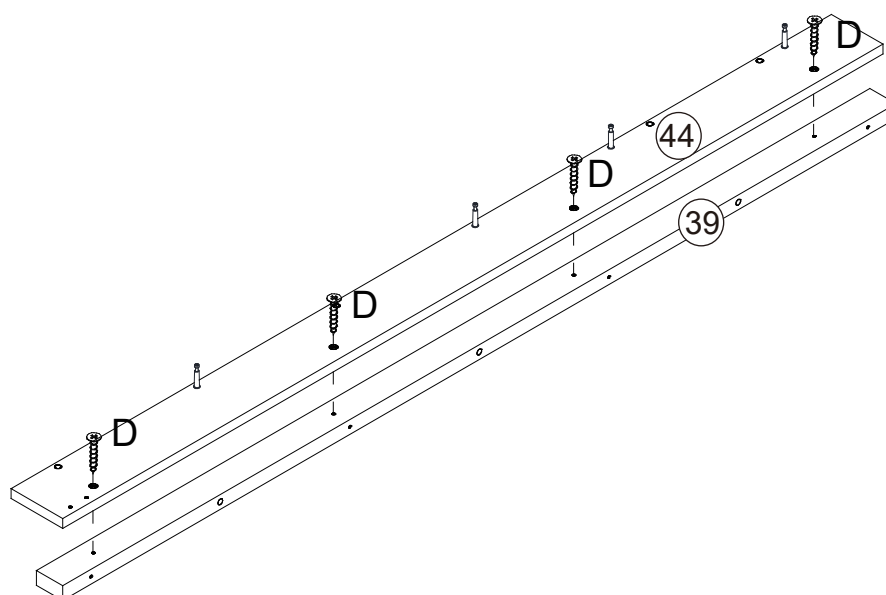


D

 


4*25mm Screw x 4

Assembly Instructions

 Step 23

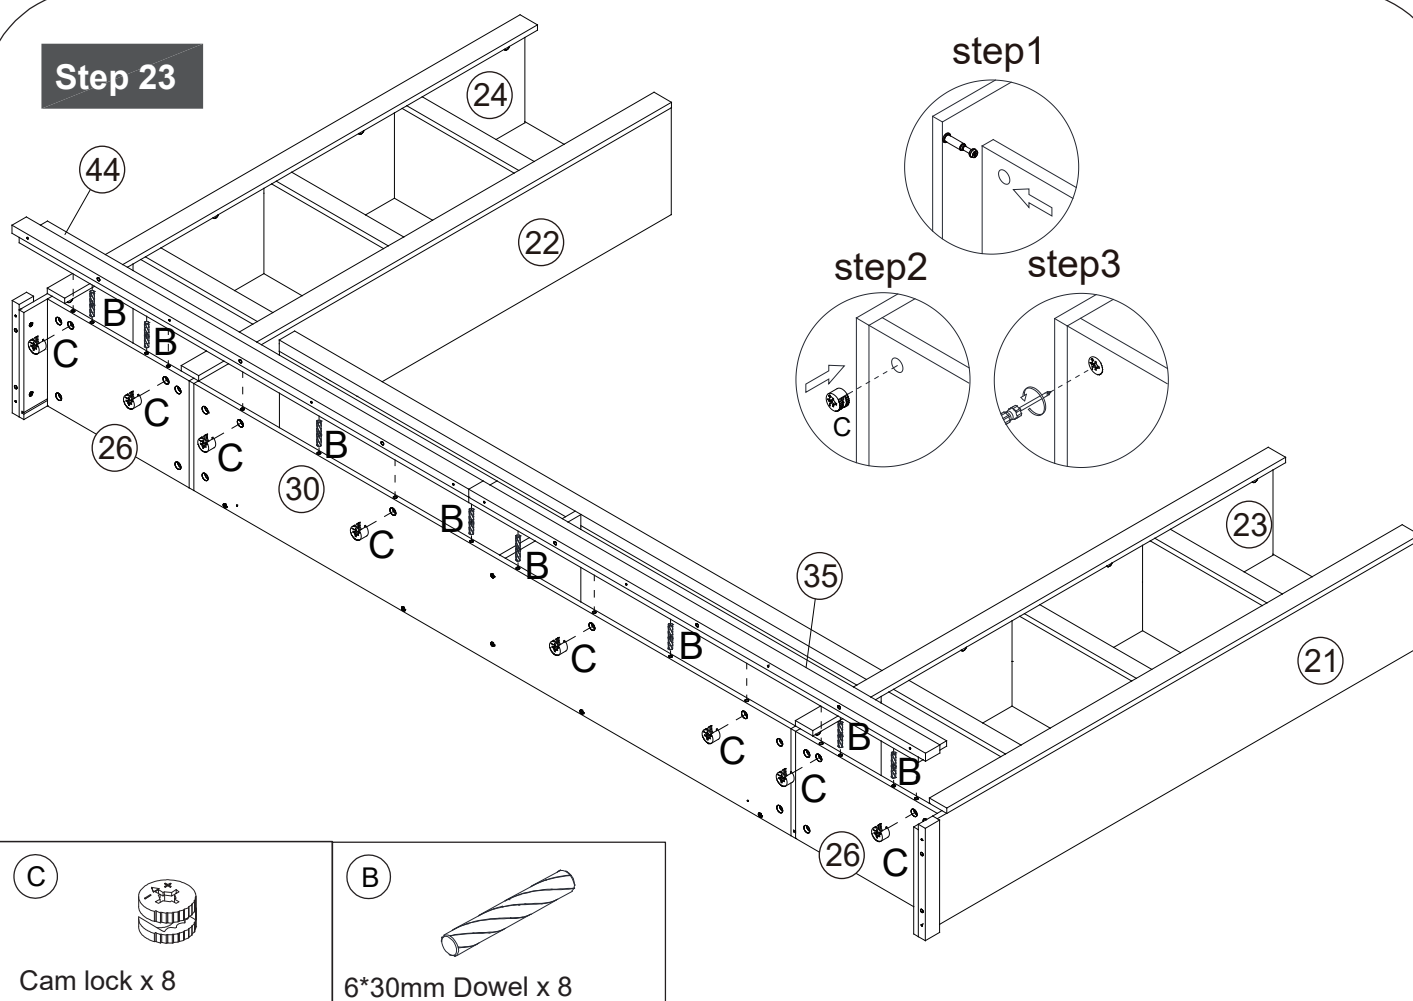


 Step 24

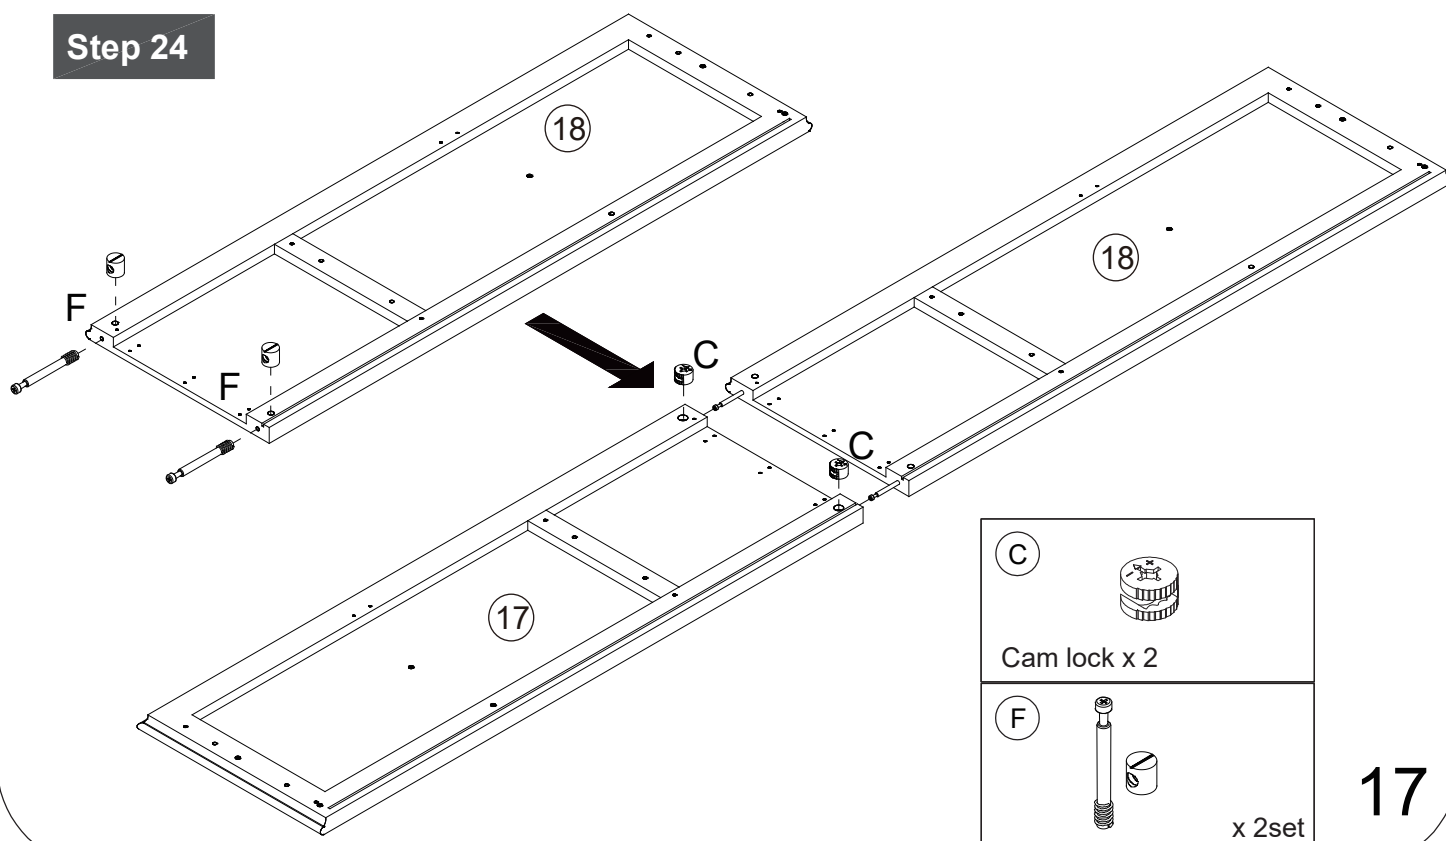


Assembly Instructions

 Step 25

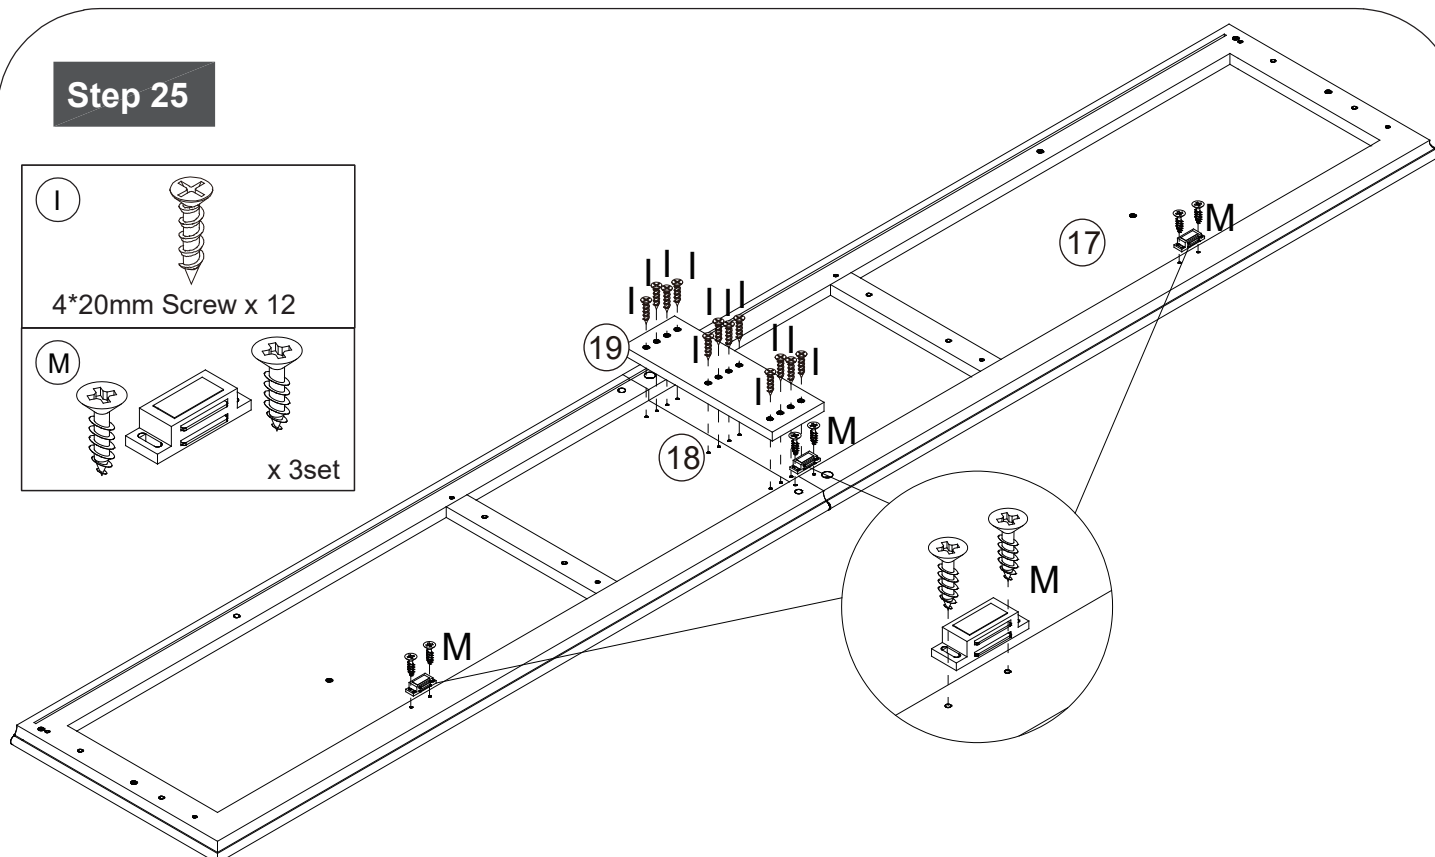


 Step 26

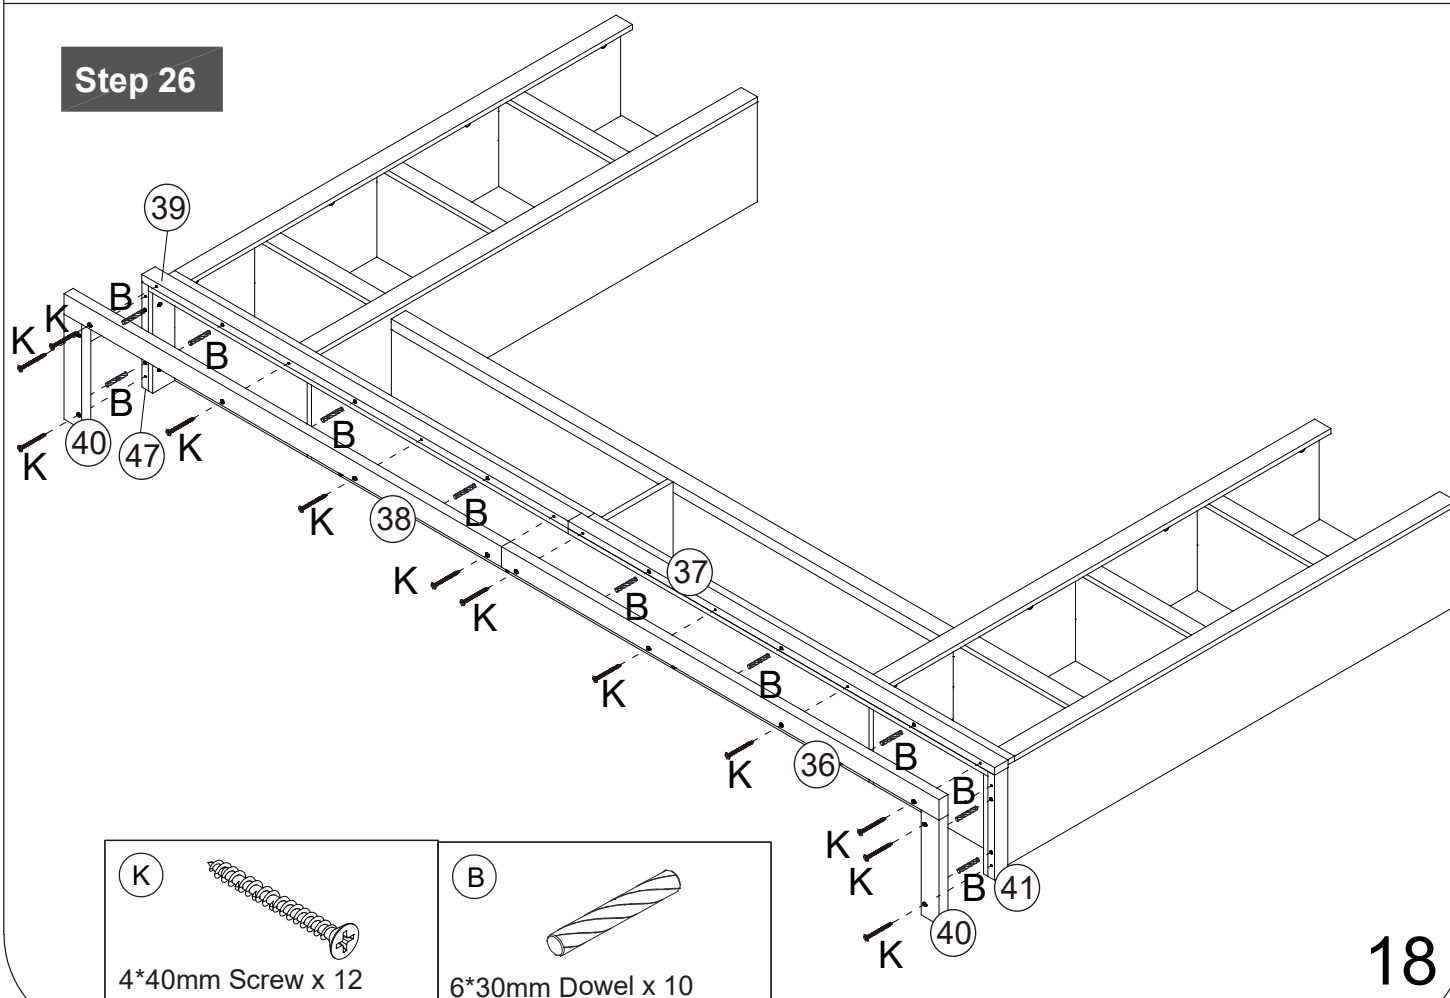


Assembly Instructions

 
Step 27

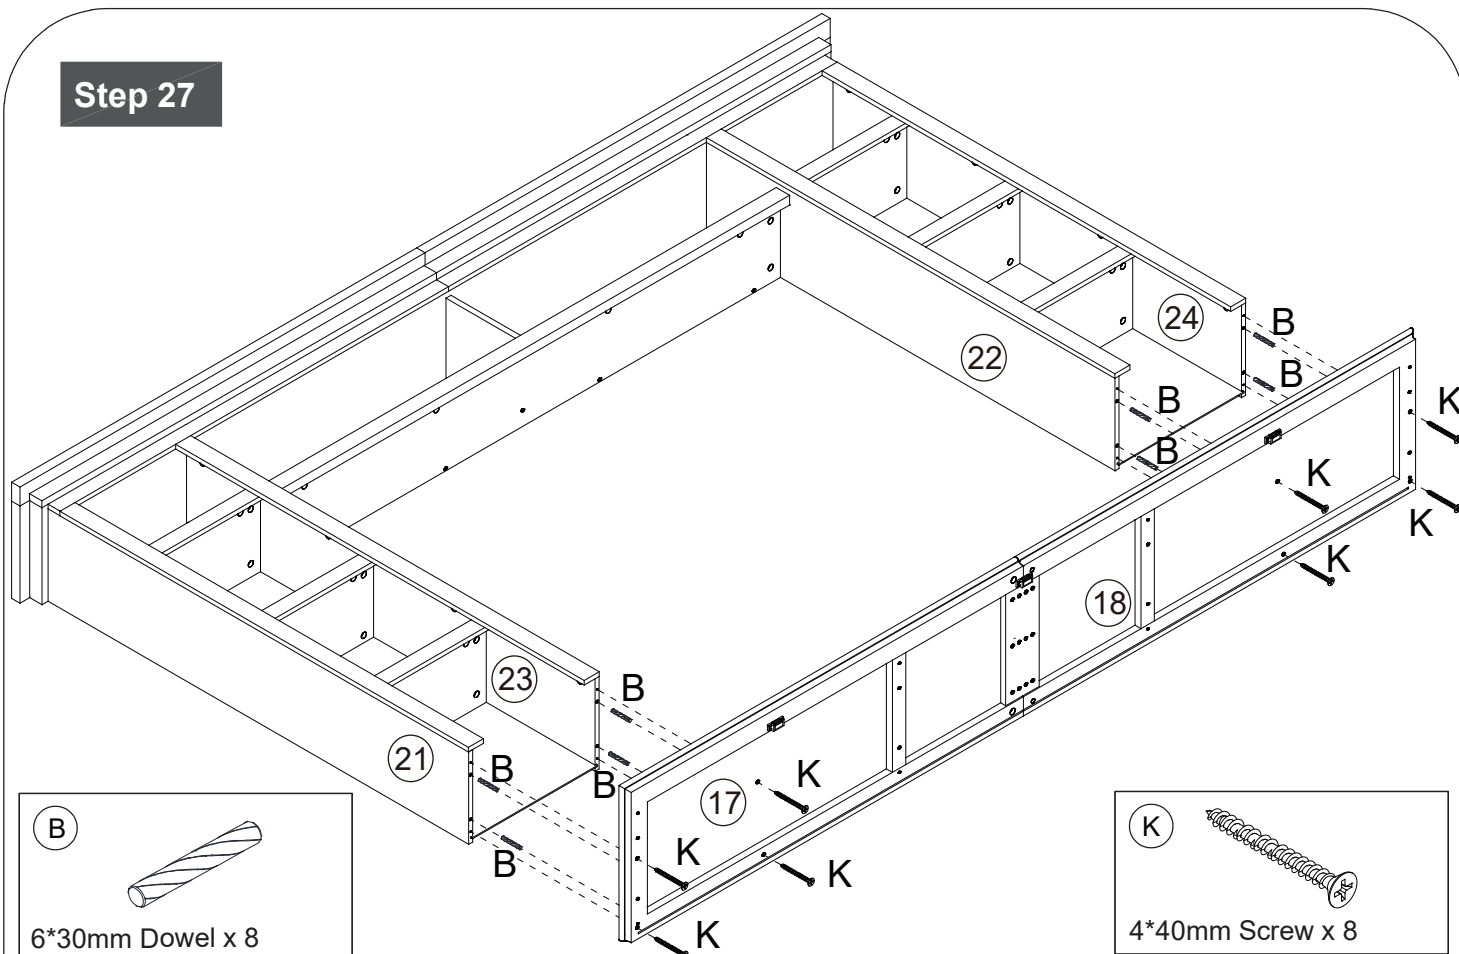

 Step 28

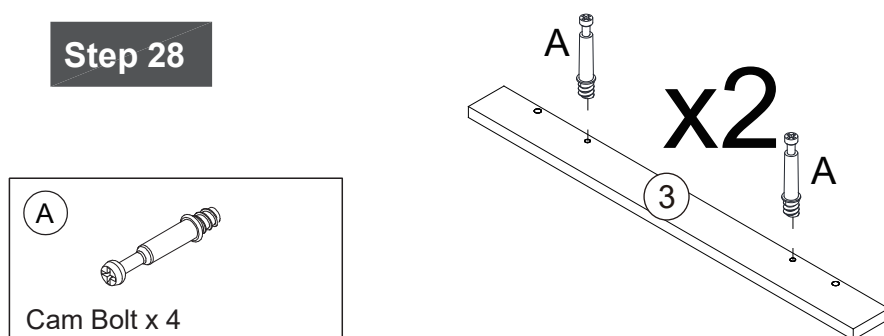


 Step 29

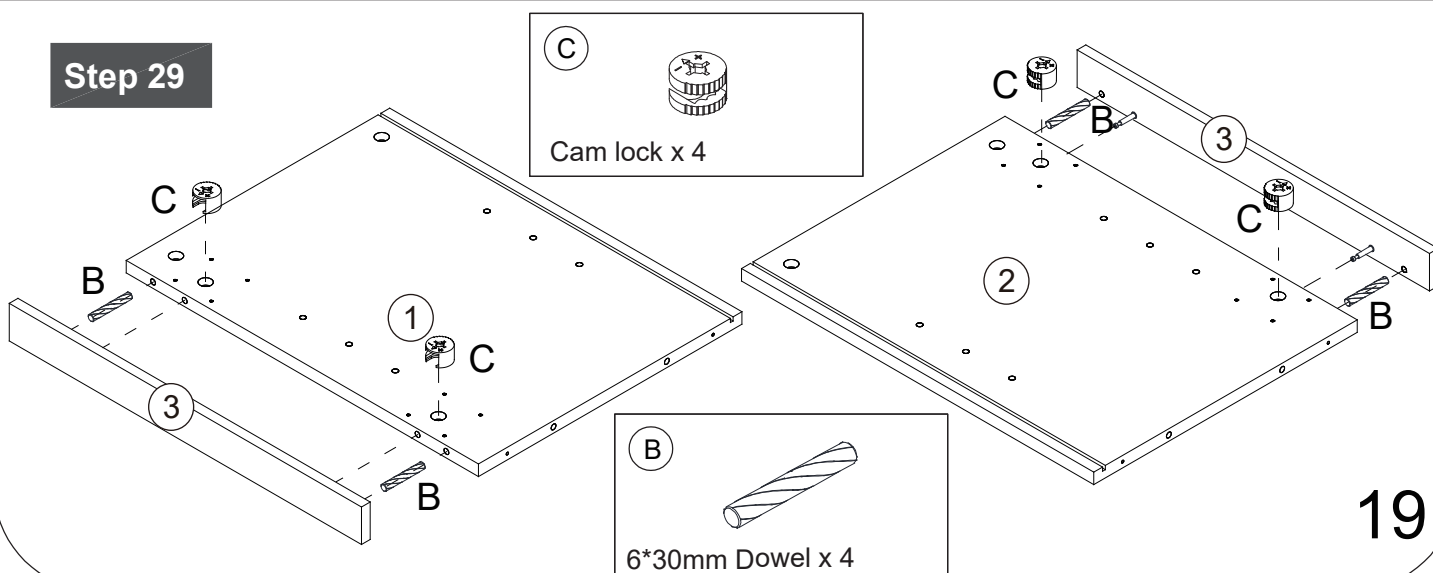


Assembly Instructions

 
Step 30

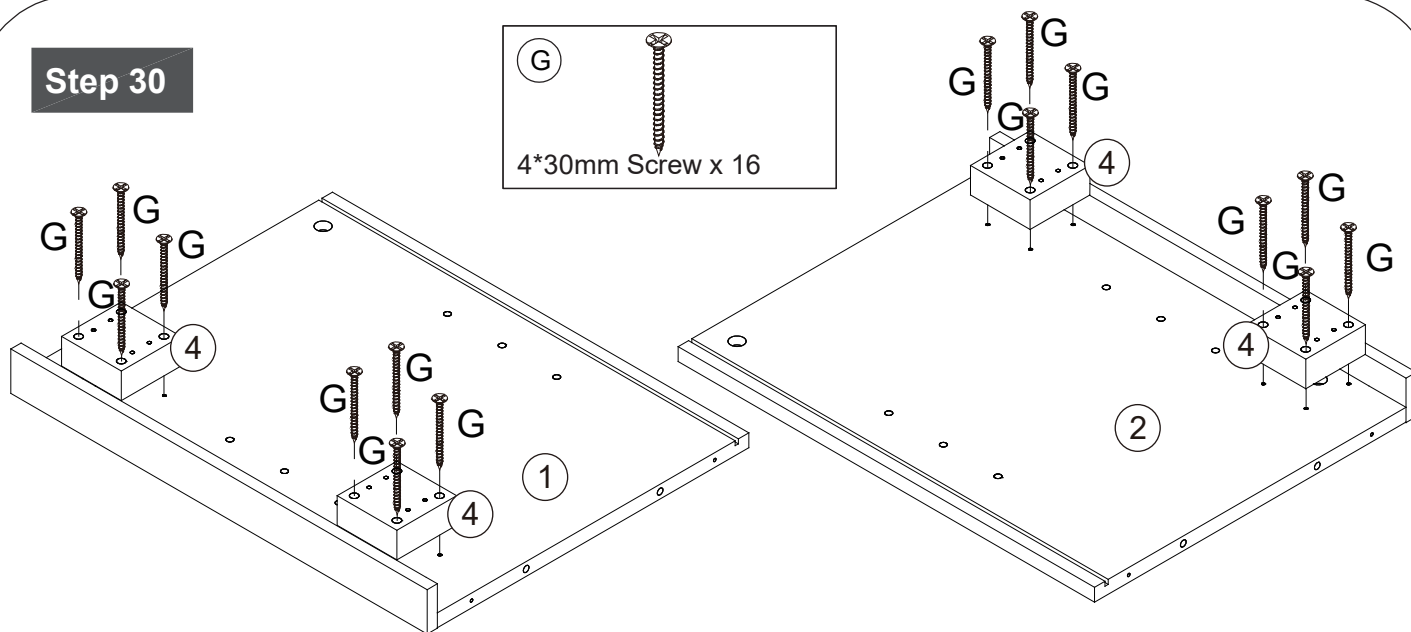

 Step 31

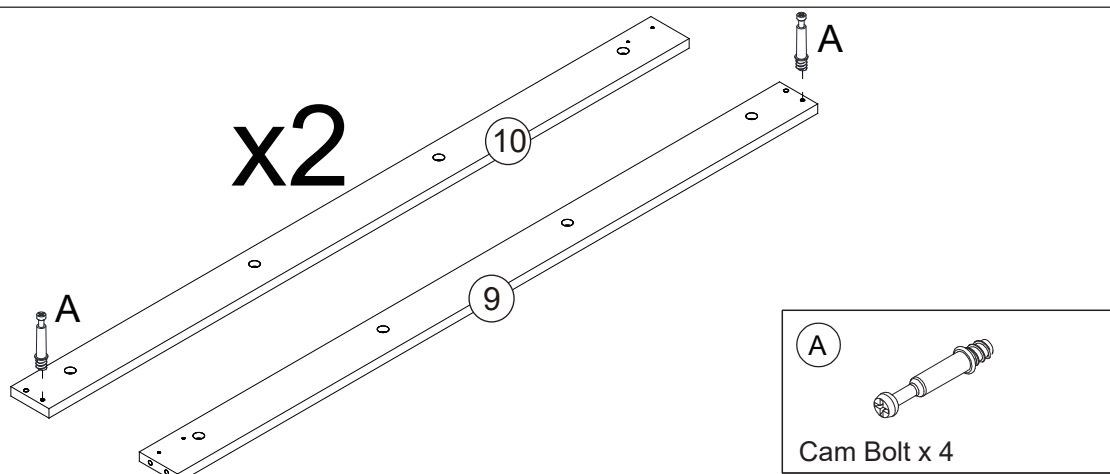


 Step 32

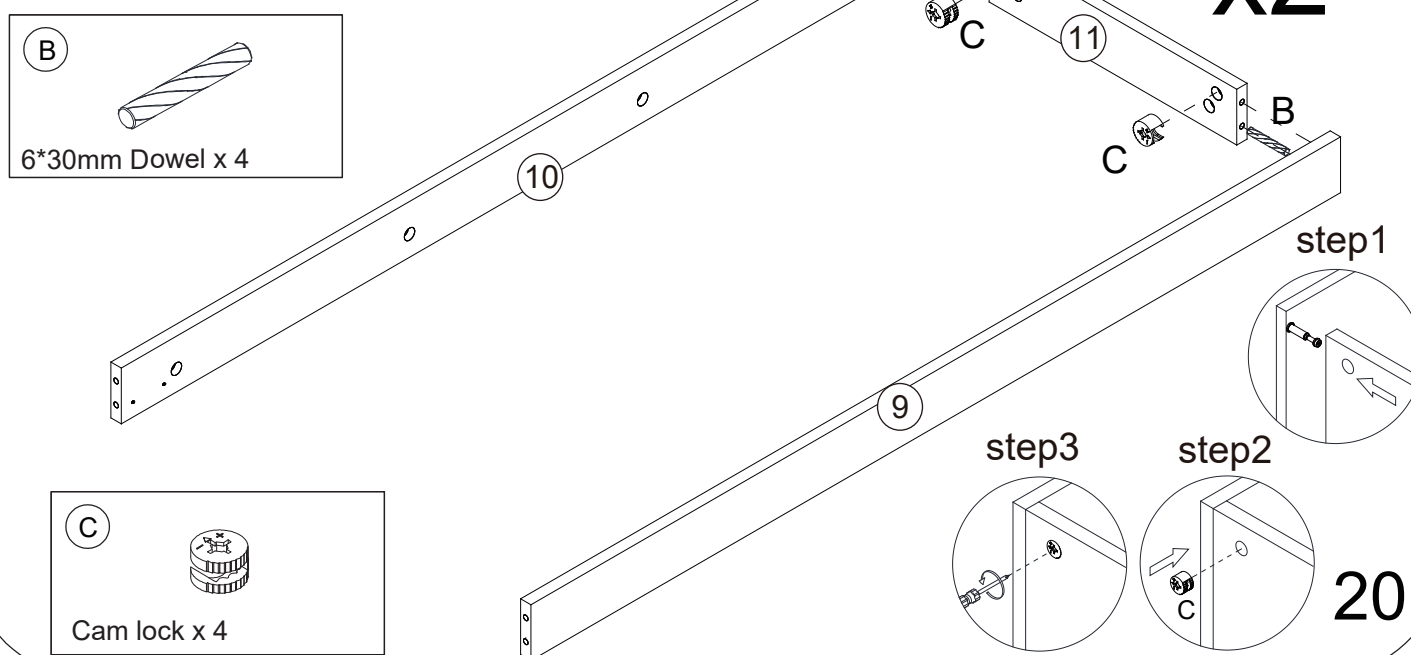


Assembly Instructions

 
Step 33

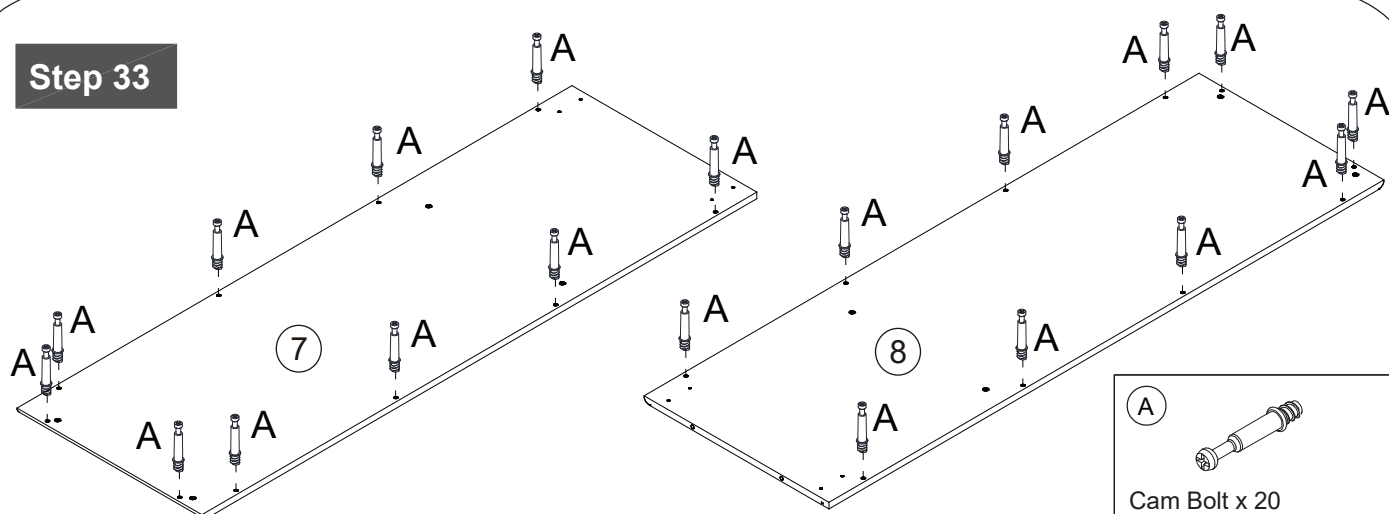

 Step 34


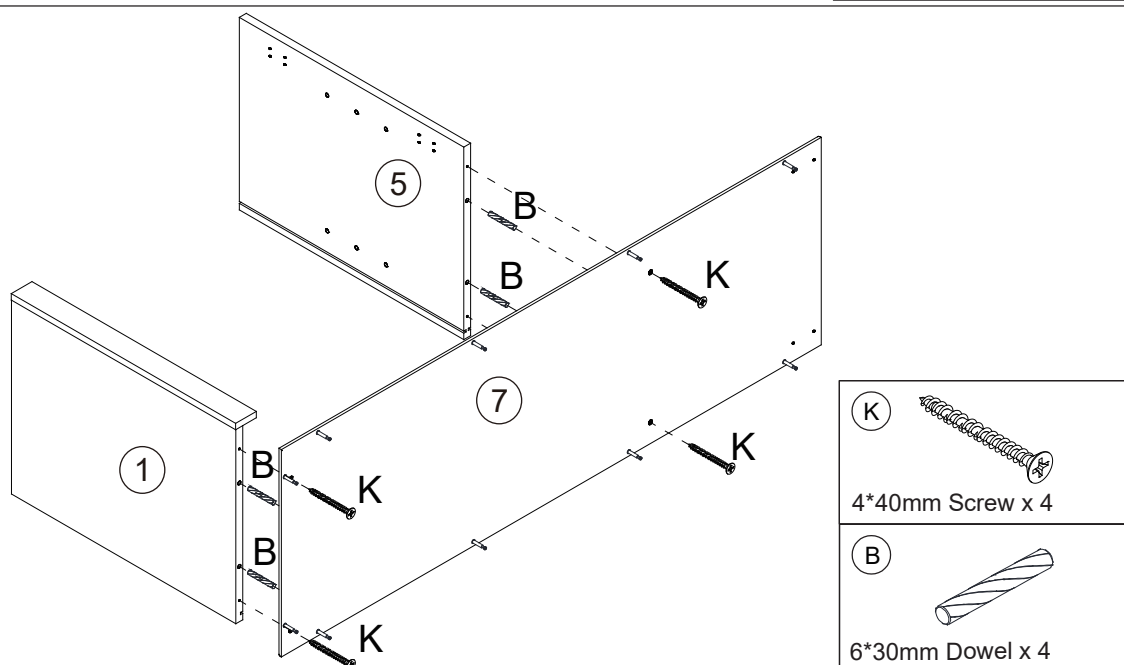


 Step 35



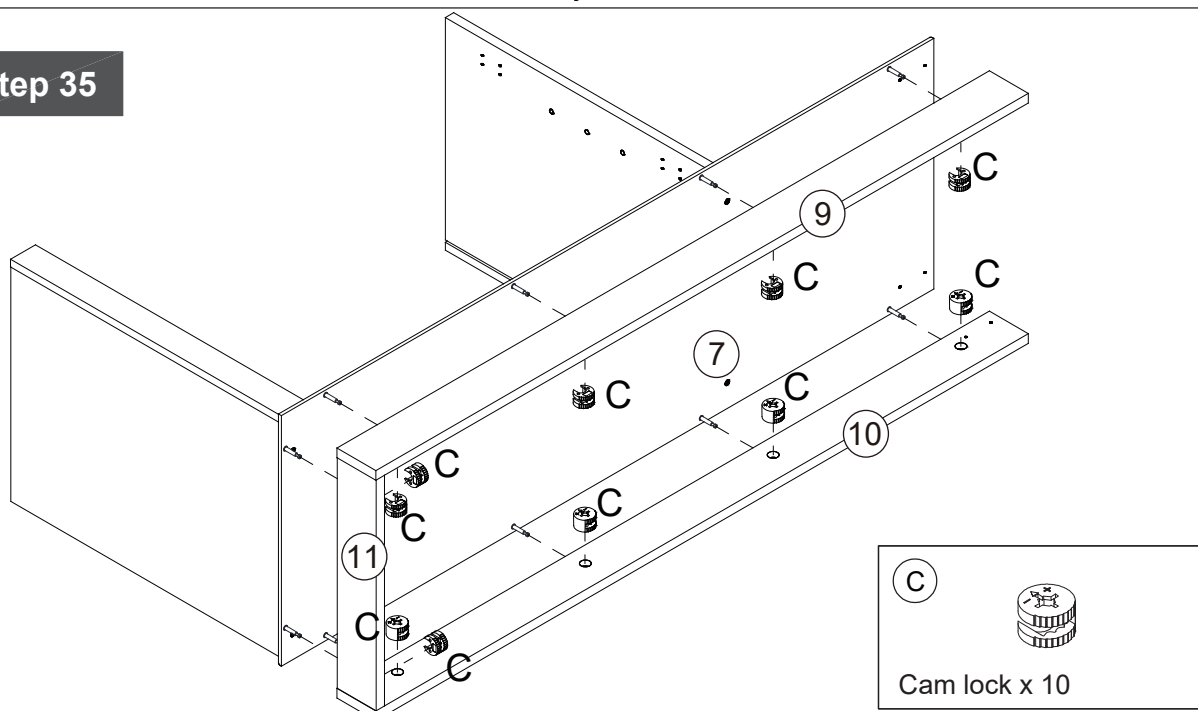


Assembly Instructions

  Step 36

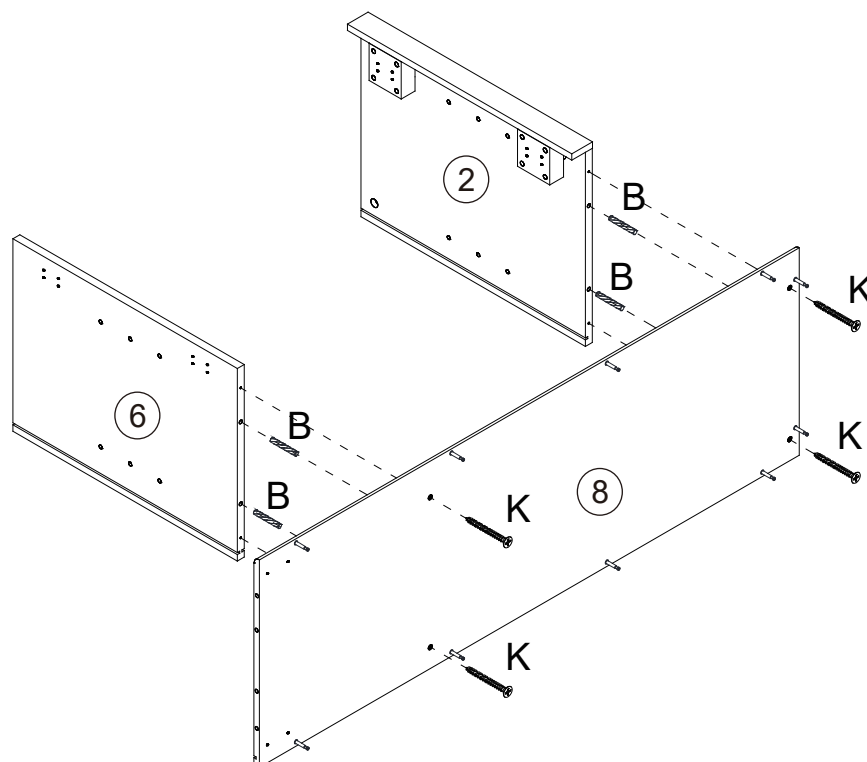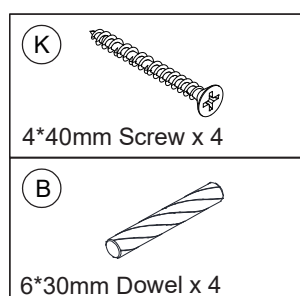


   Step 37

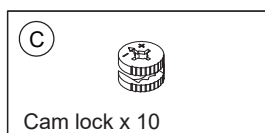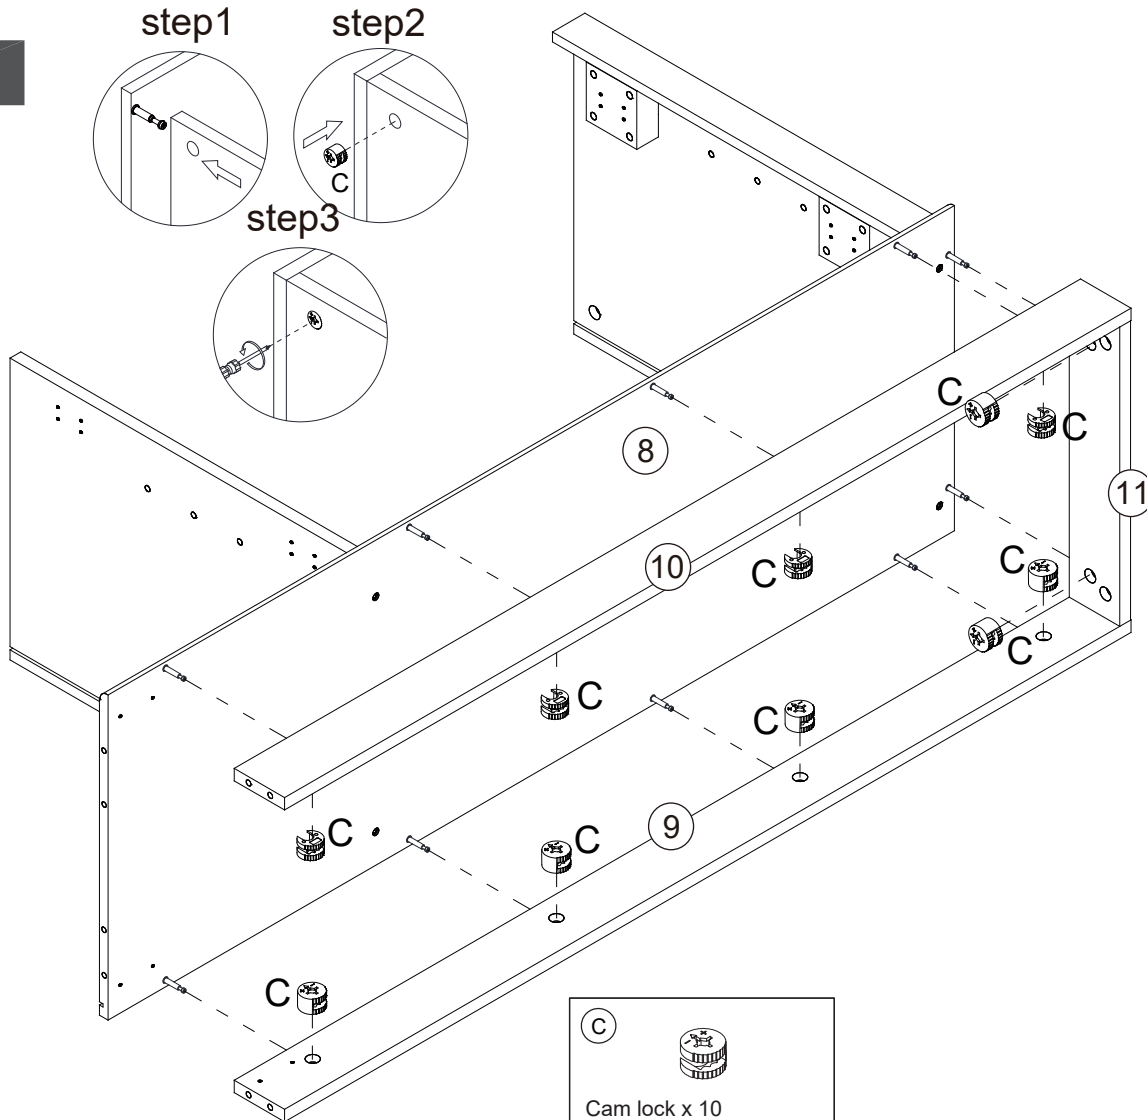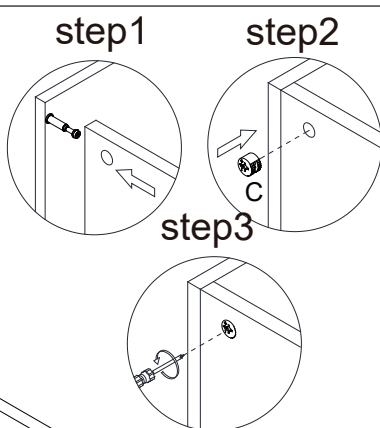


Assembly Instructions

 Step 38

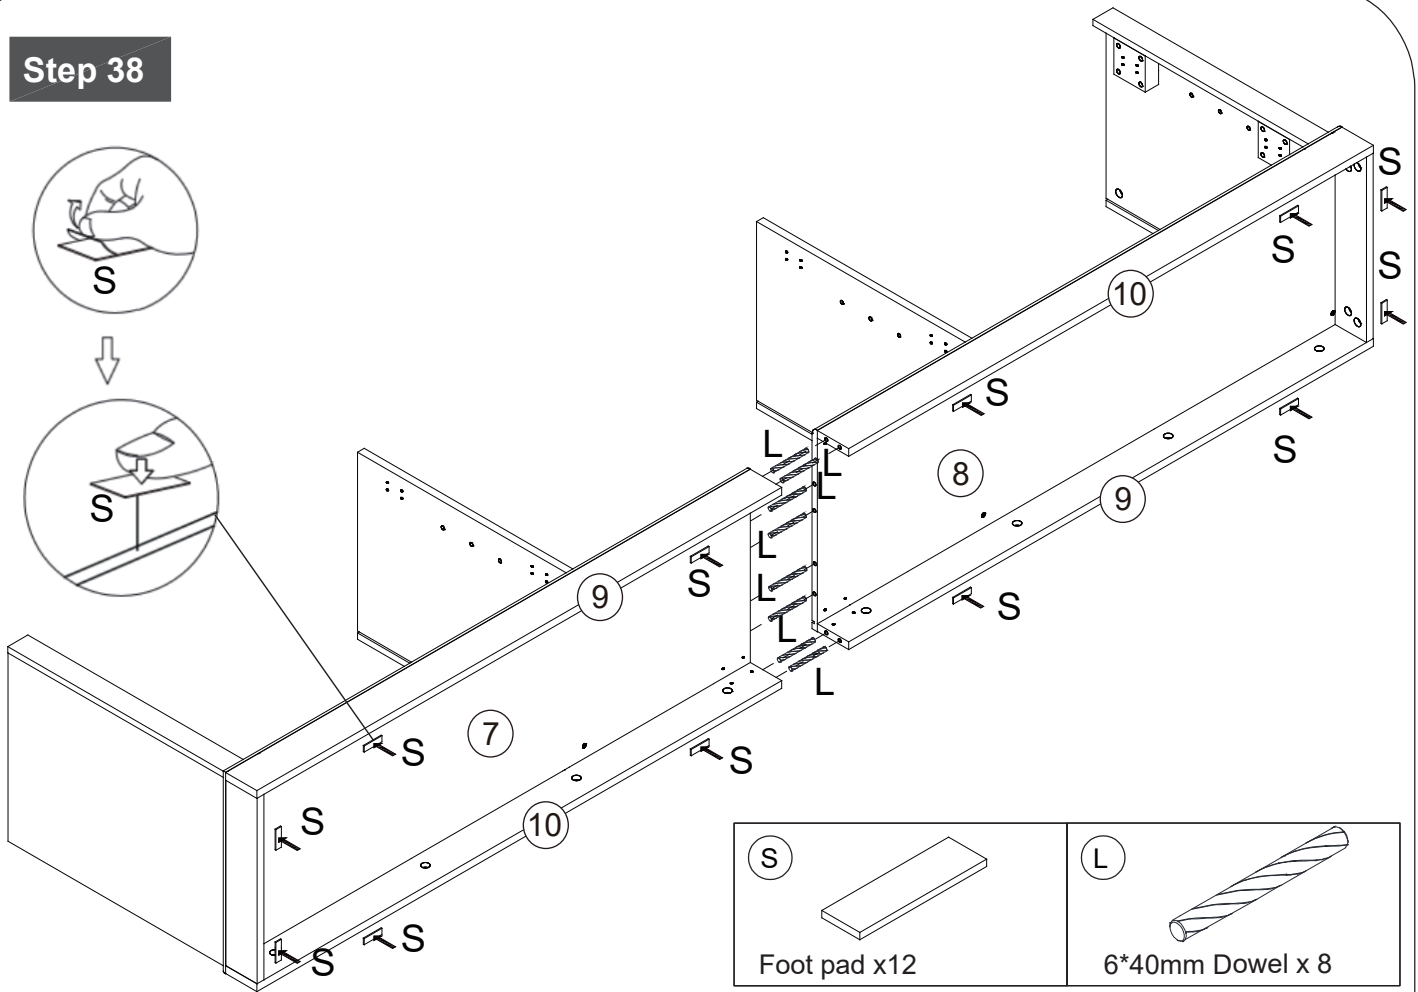


 Step 39

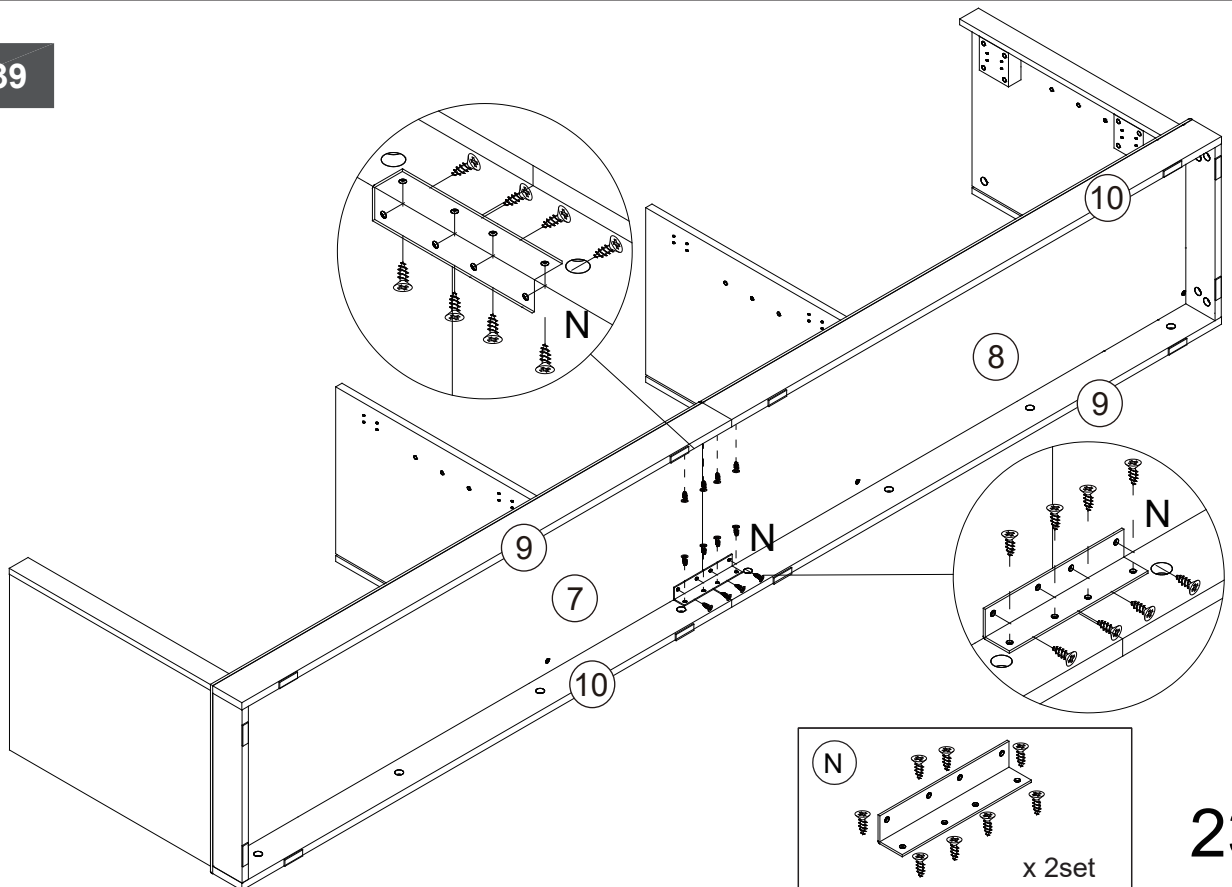


Assembly Instructions

 
Step 40

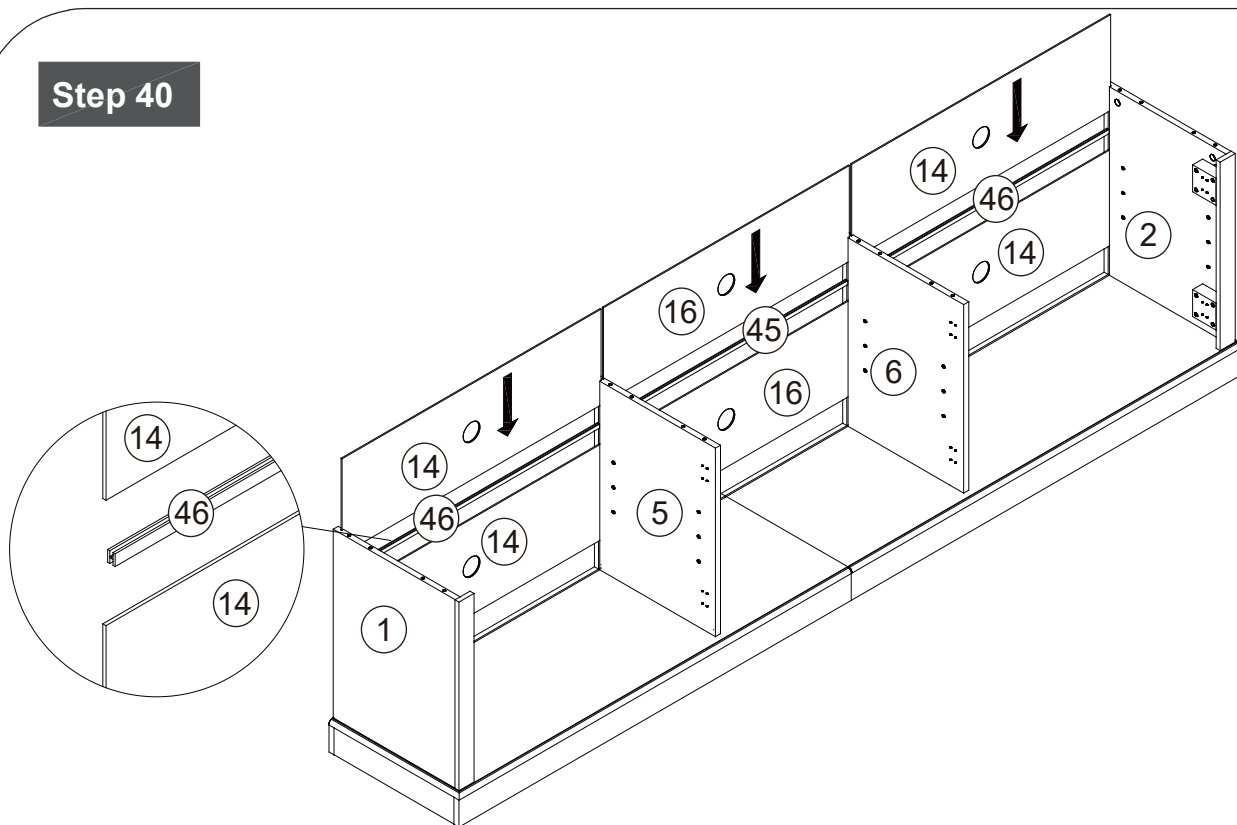

 Step 41

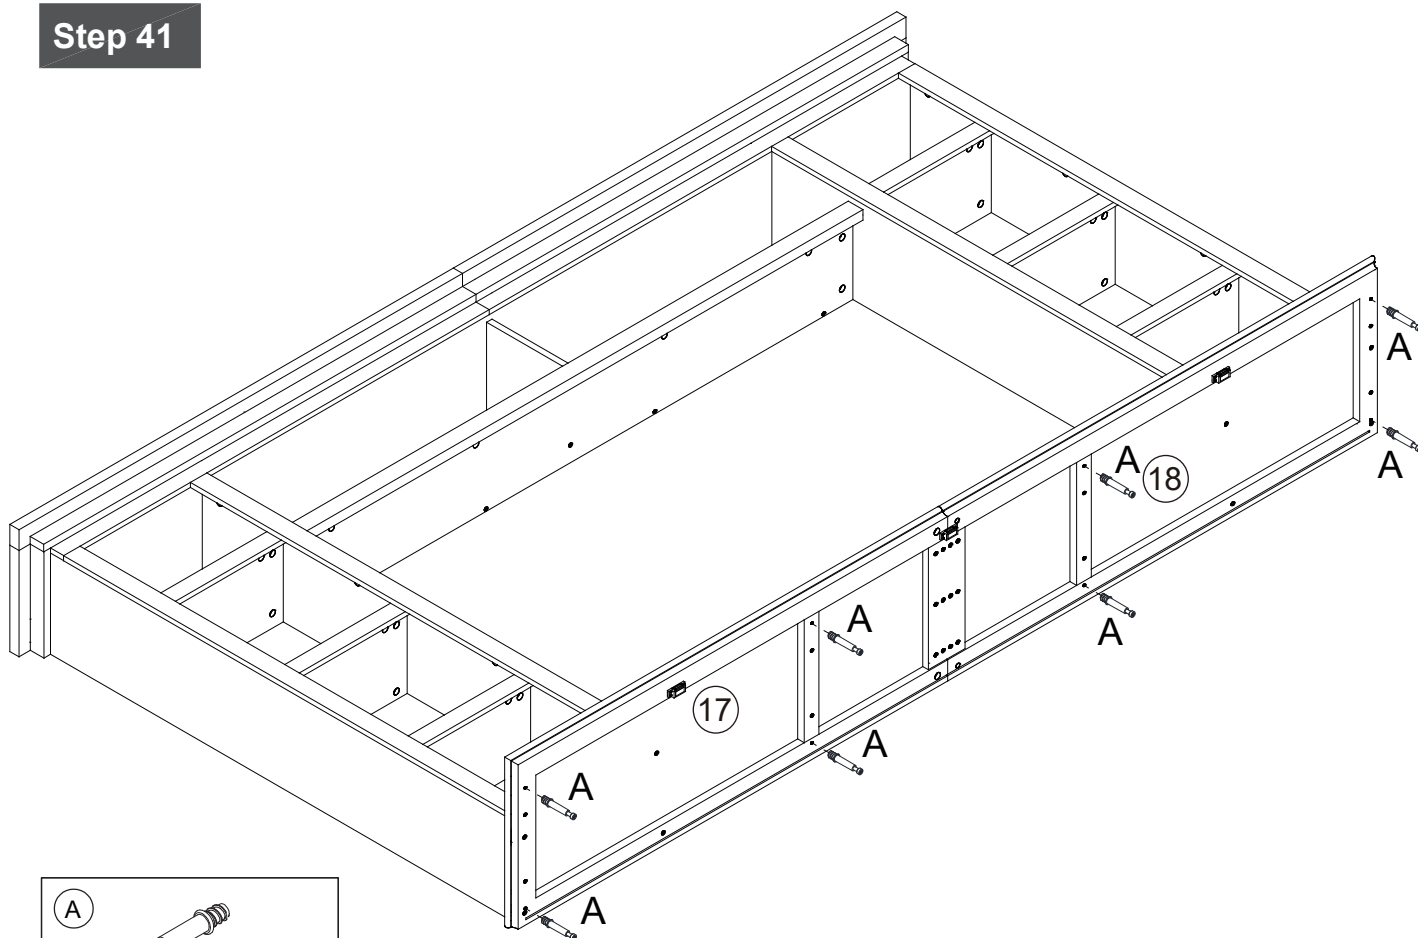




A

 

Cam Bolt x 8


Assembly Instructions

   Step 42

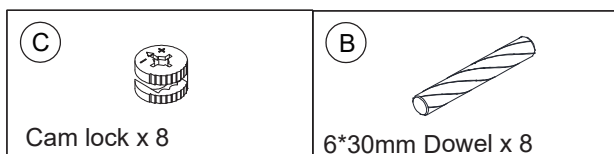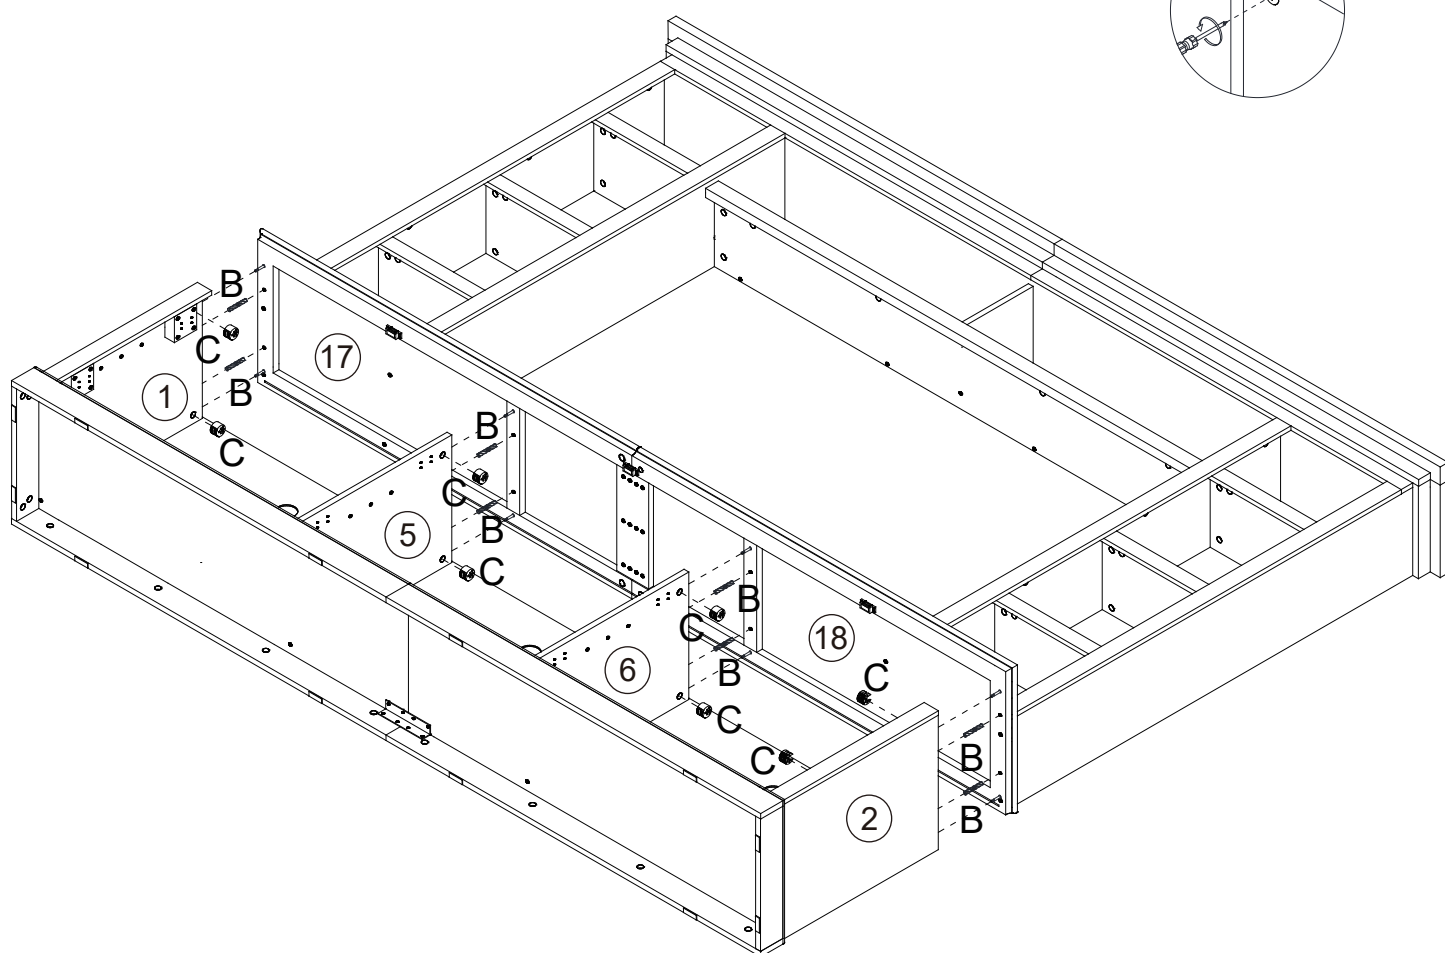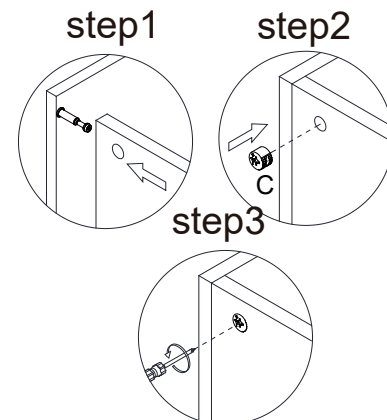



Assembly Instructions

 Step 43

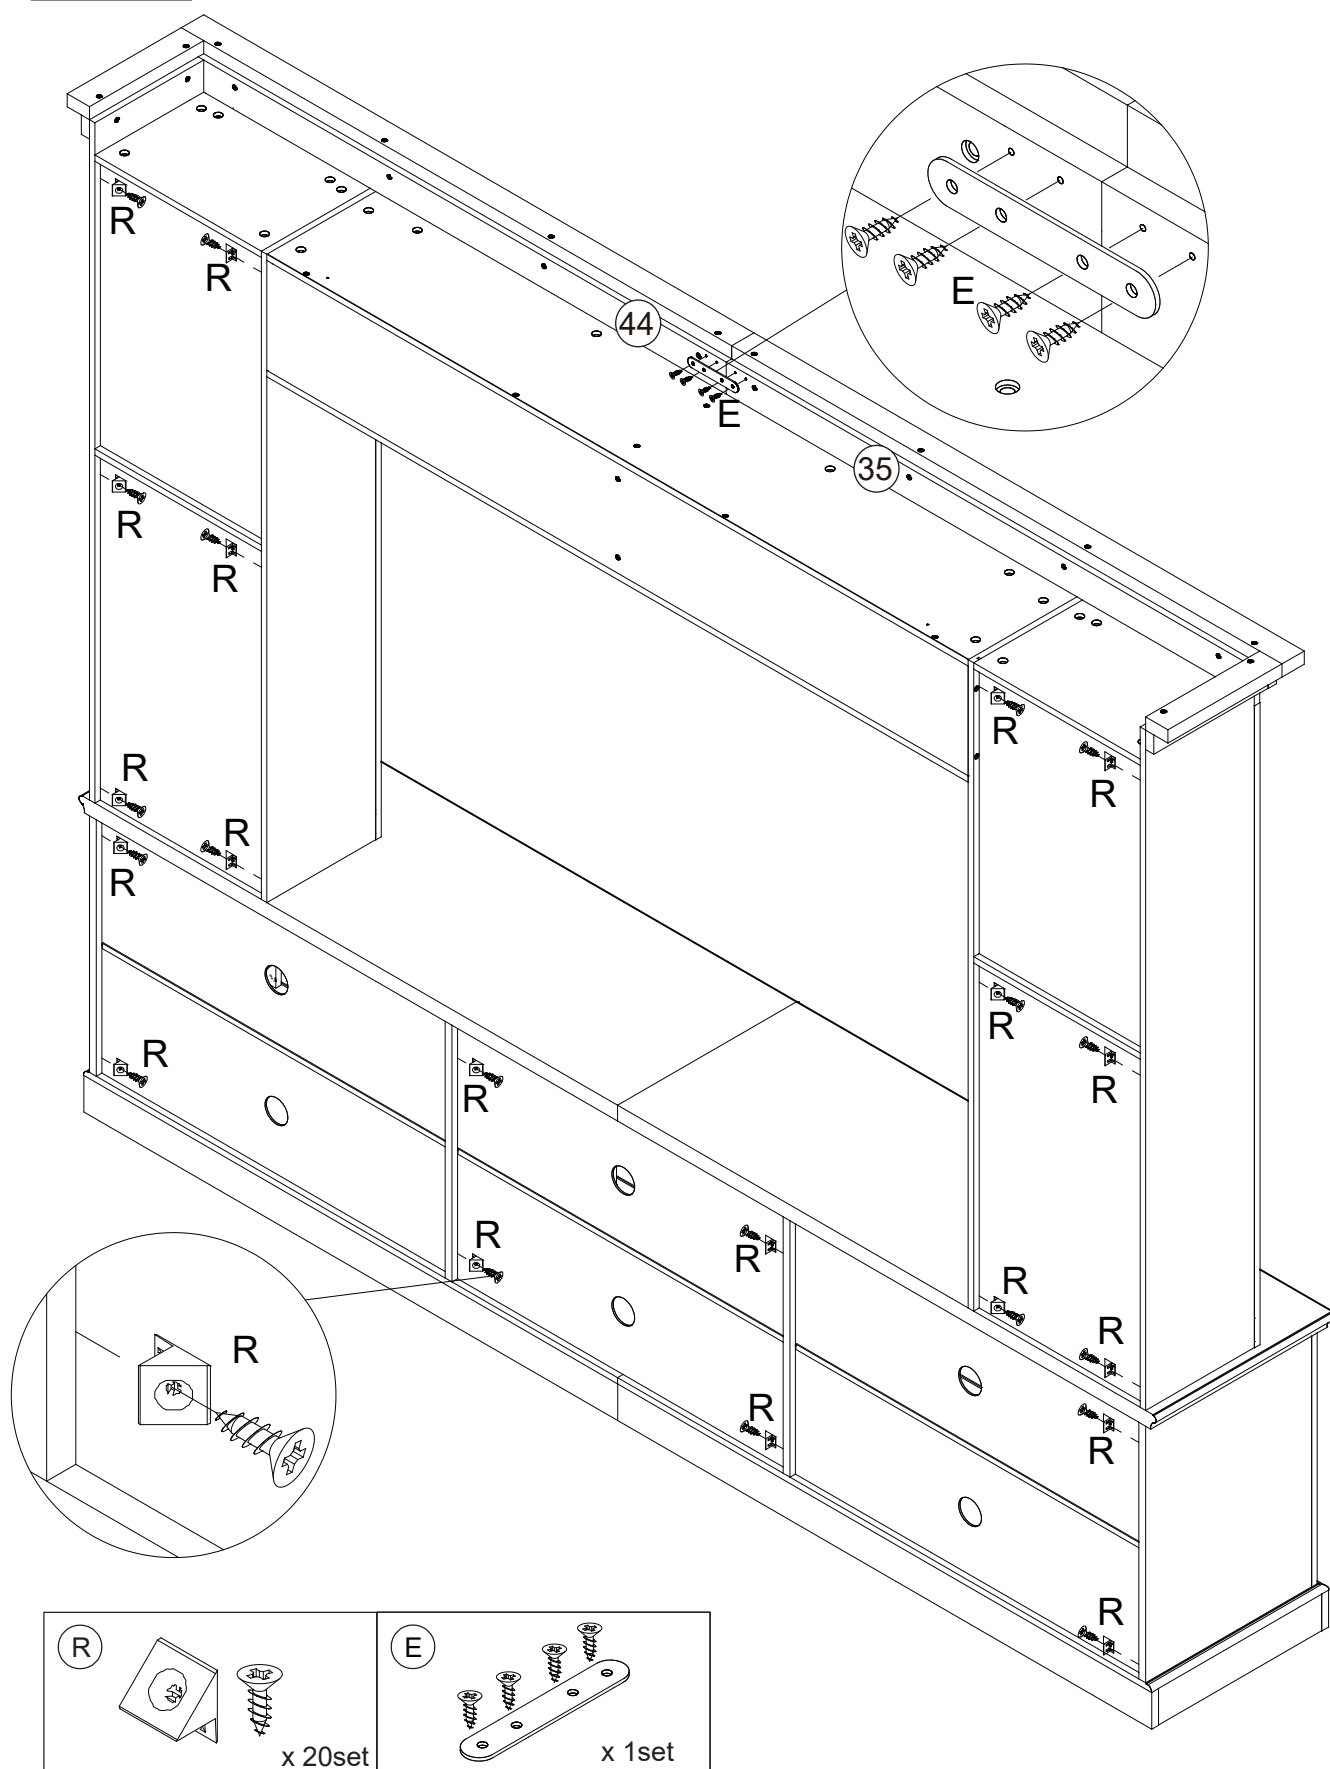


Assembly Instructions

  Step 44

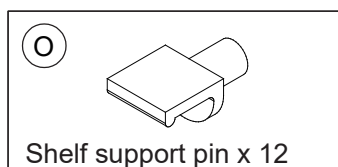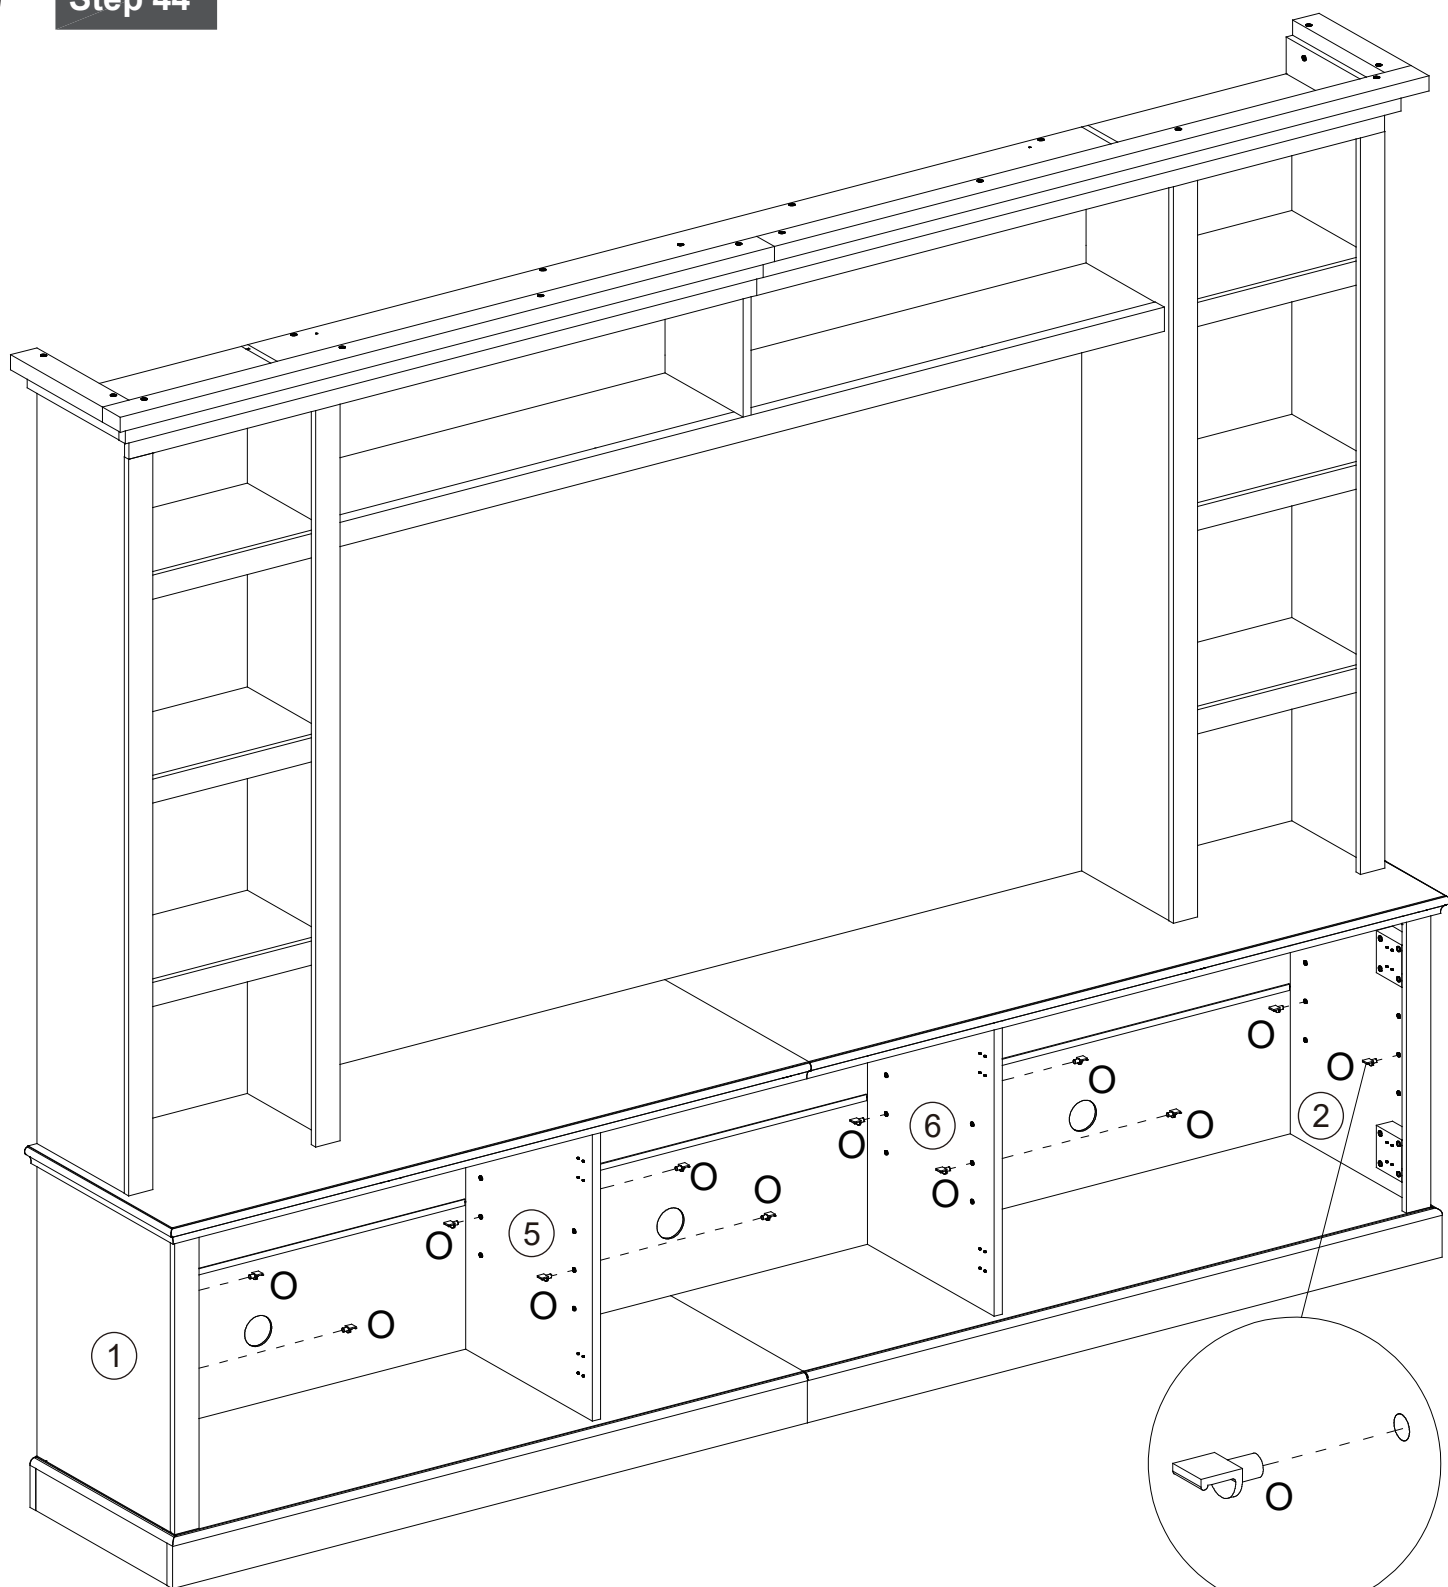

Assembly Instructions

 
Step 45

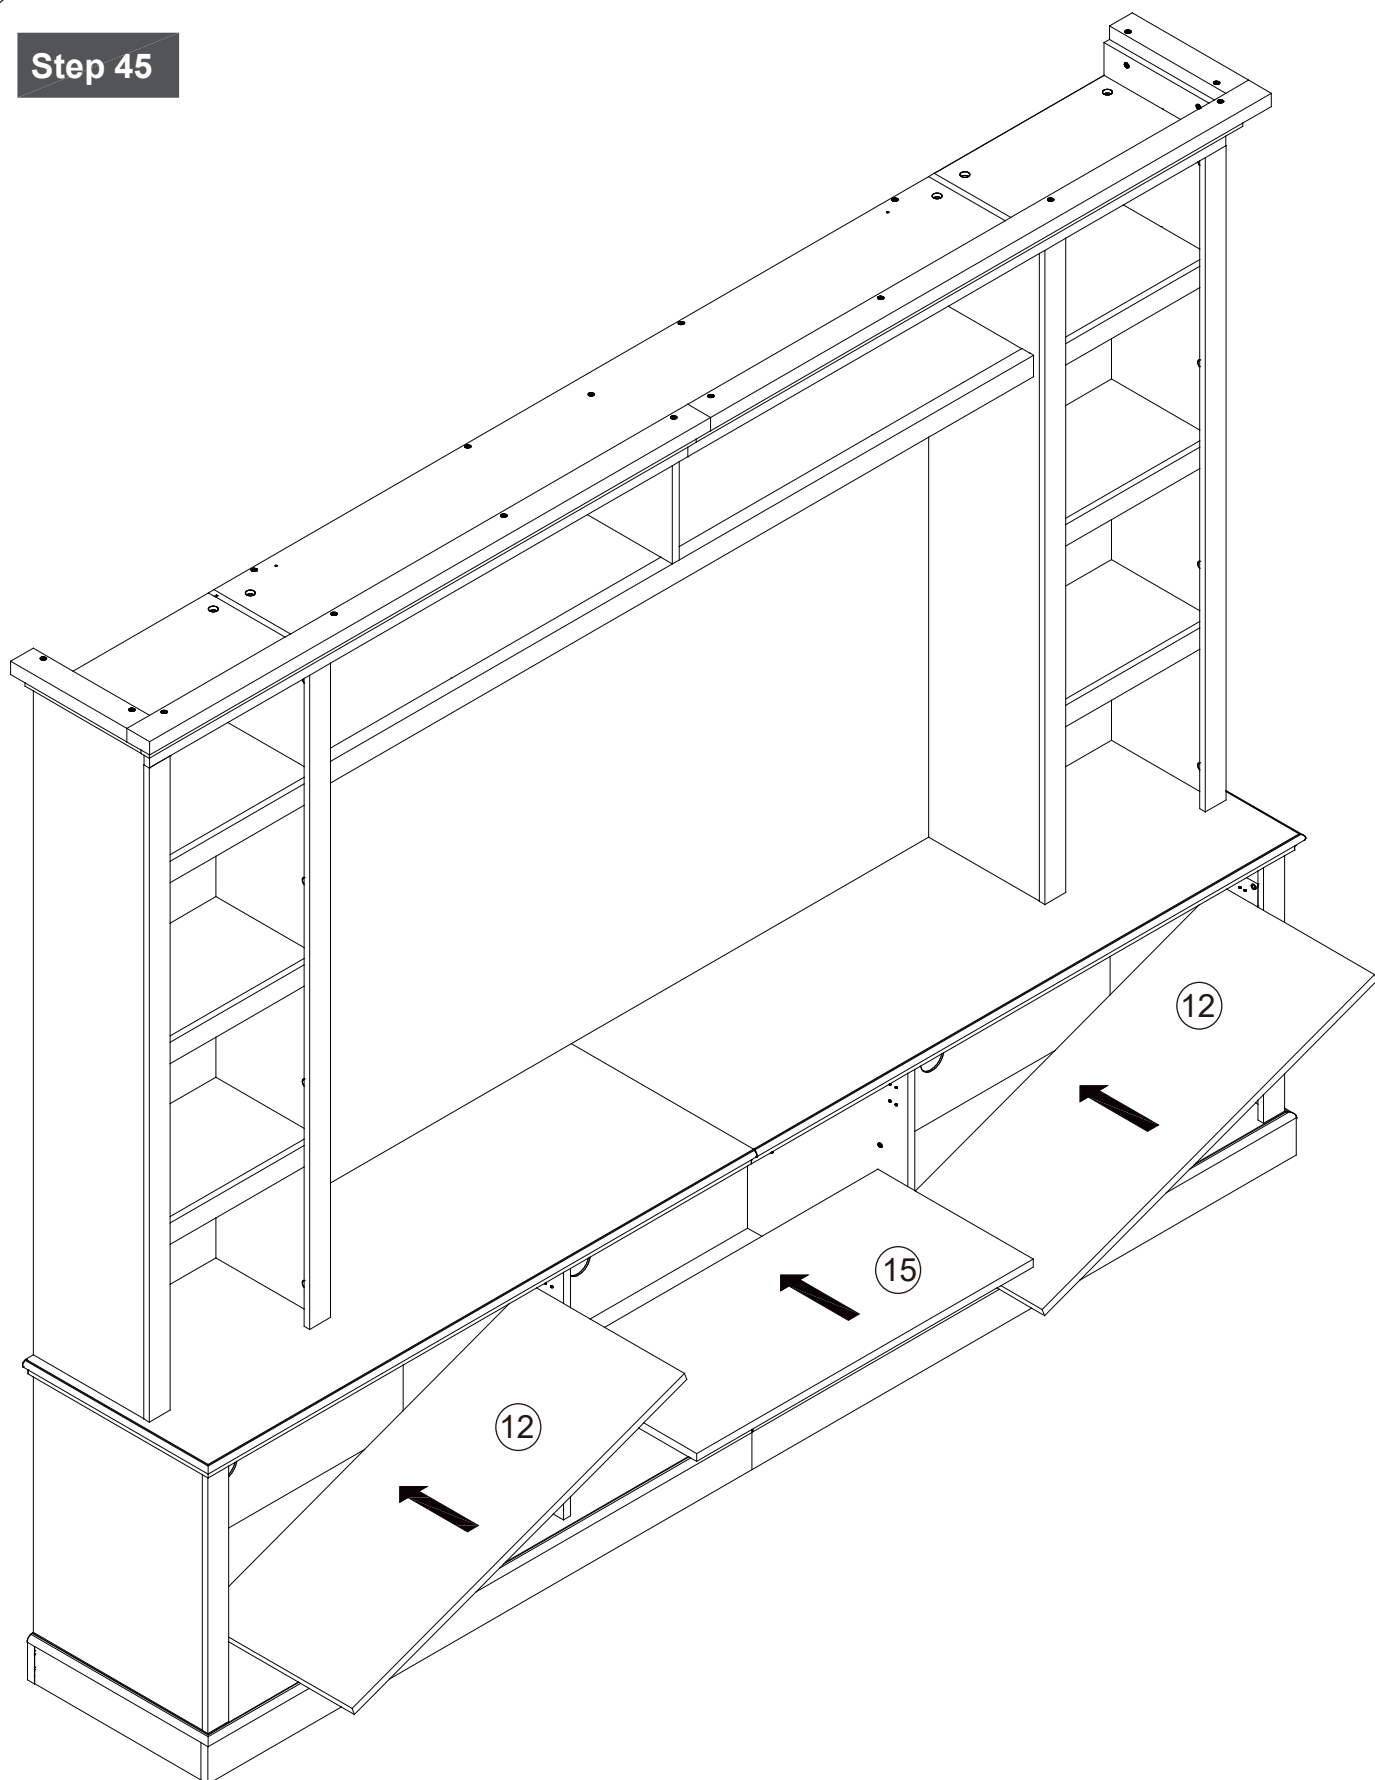


Assembly Instructions

Note: This unit supports two door configurations.

 If you are installing the doors in Configuration 1, refer to steps 46-50.


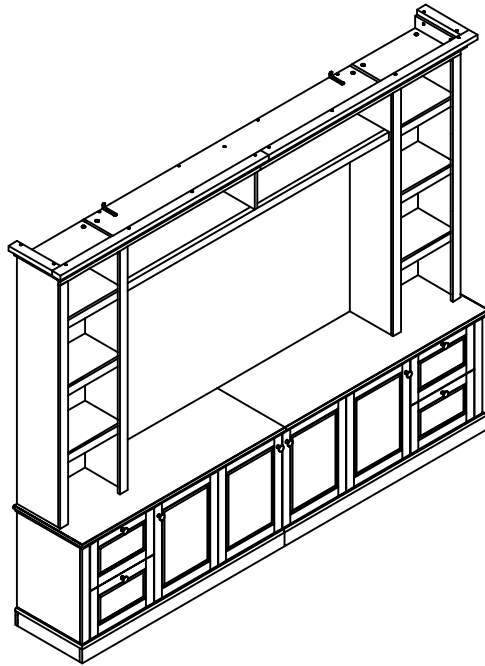


 If you are installing the doors in Configuration 2, refer to steps 52-56.


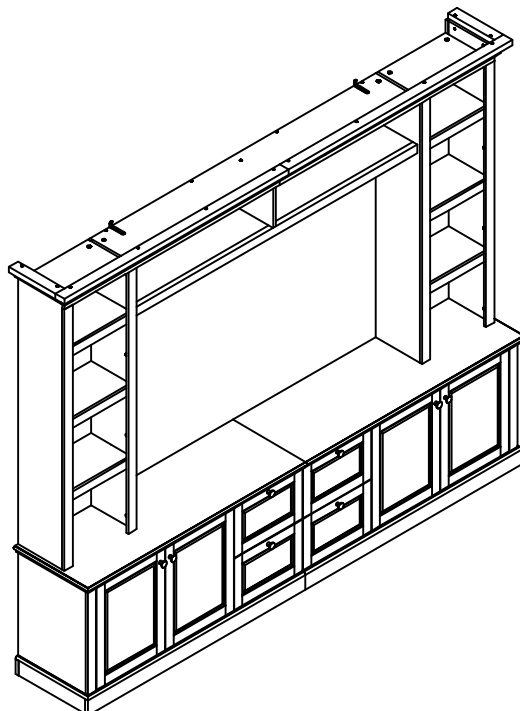


Assembly Instructions

  Step 46

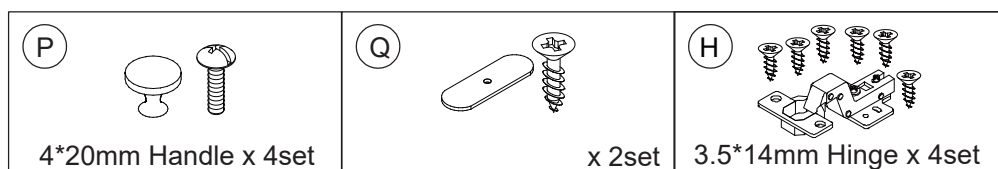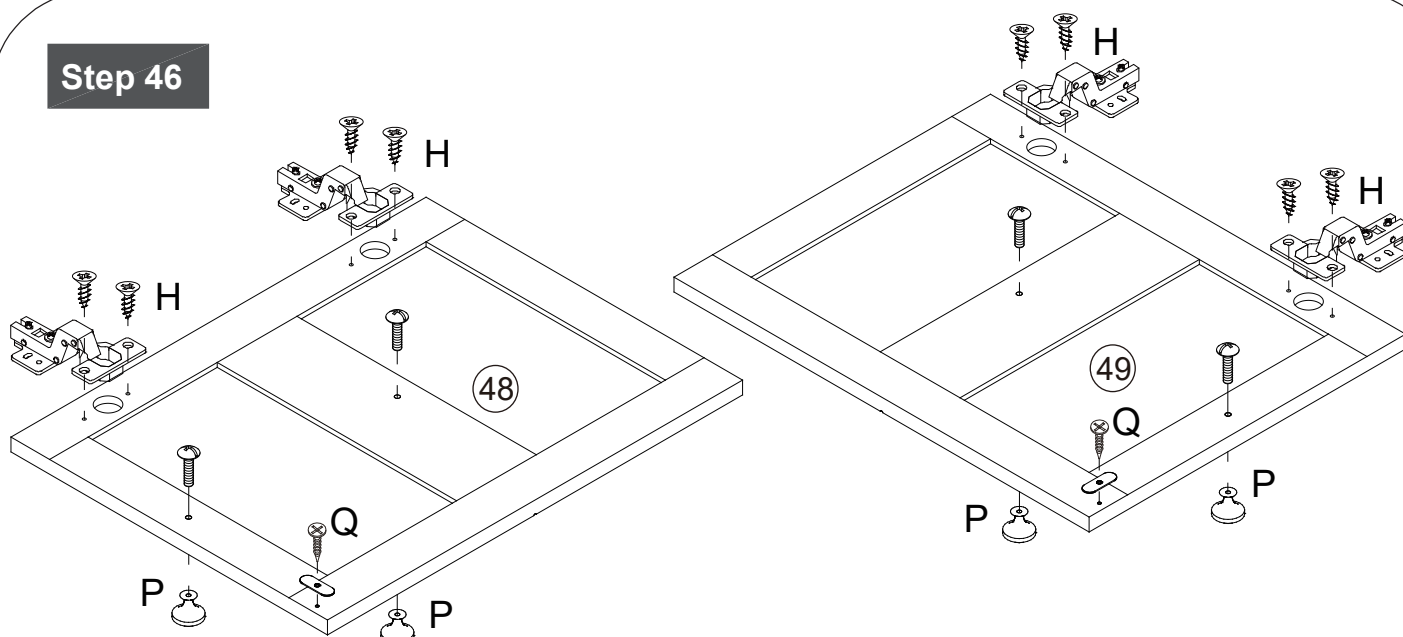


  Step 47

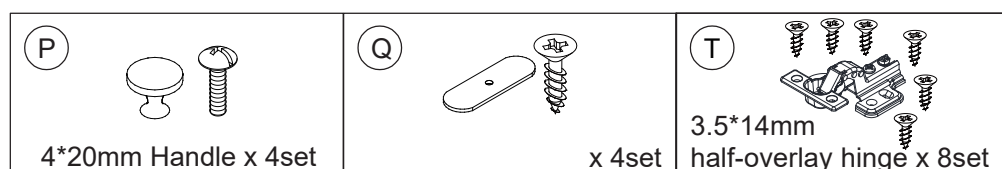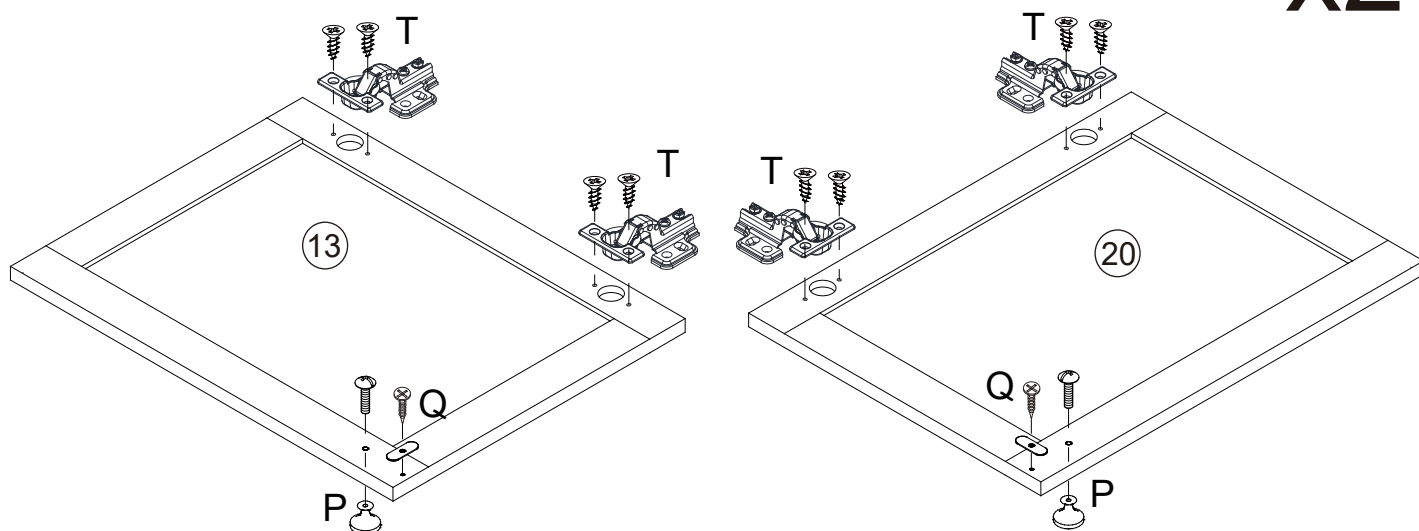


Assembly Instructions

 
Step 48

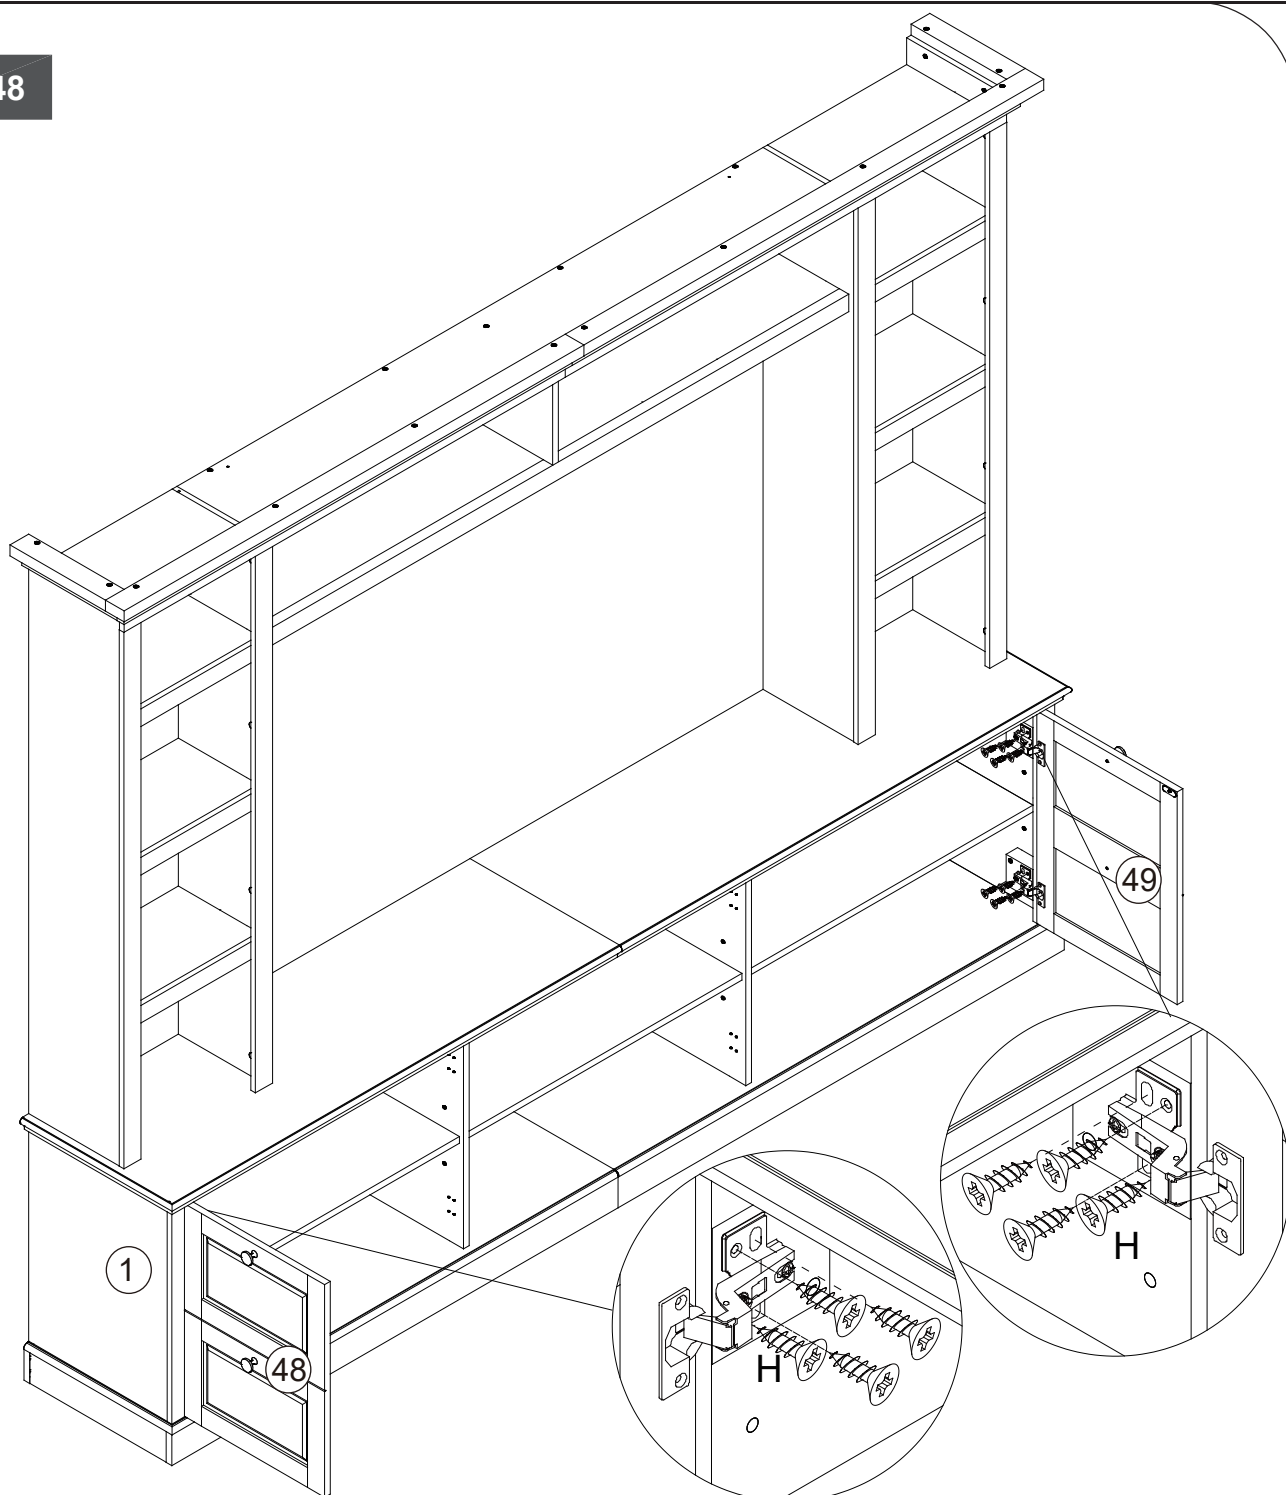

 
If the door can't close, please adjust the hinges as below.

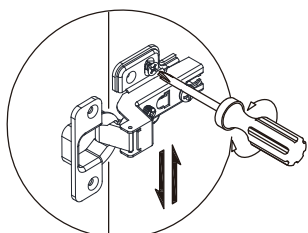

 This is used to adjust the door panel in the up and down direction.

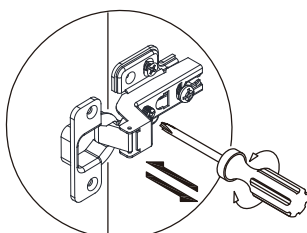

 
This is used to adjust the door panel in the left and right direction.

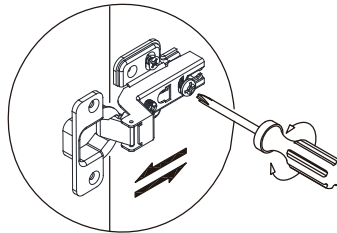


This is used to adjust the door panel in the front and rear.

Assembly Instructions

 
Step 49

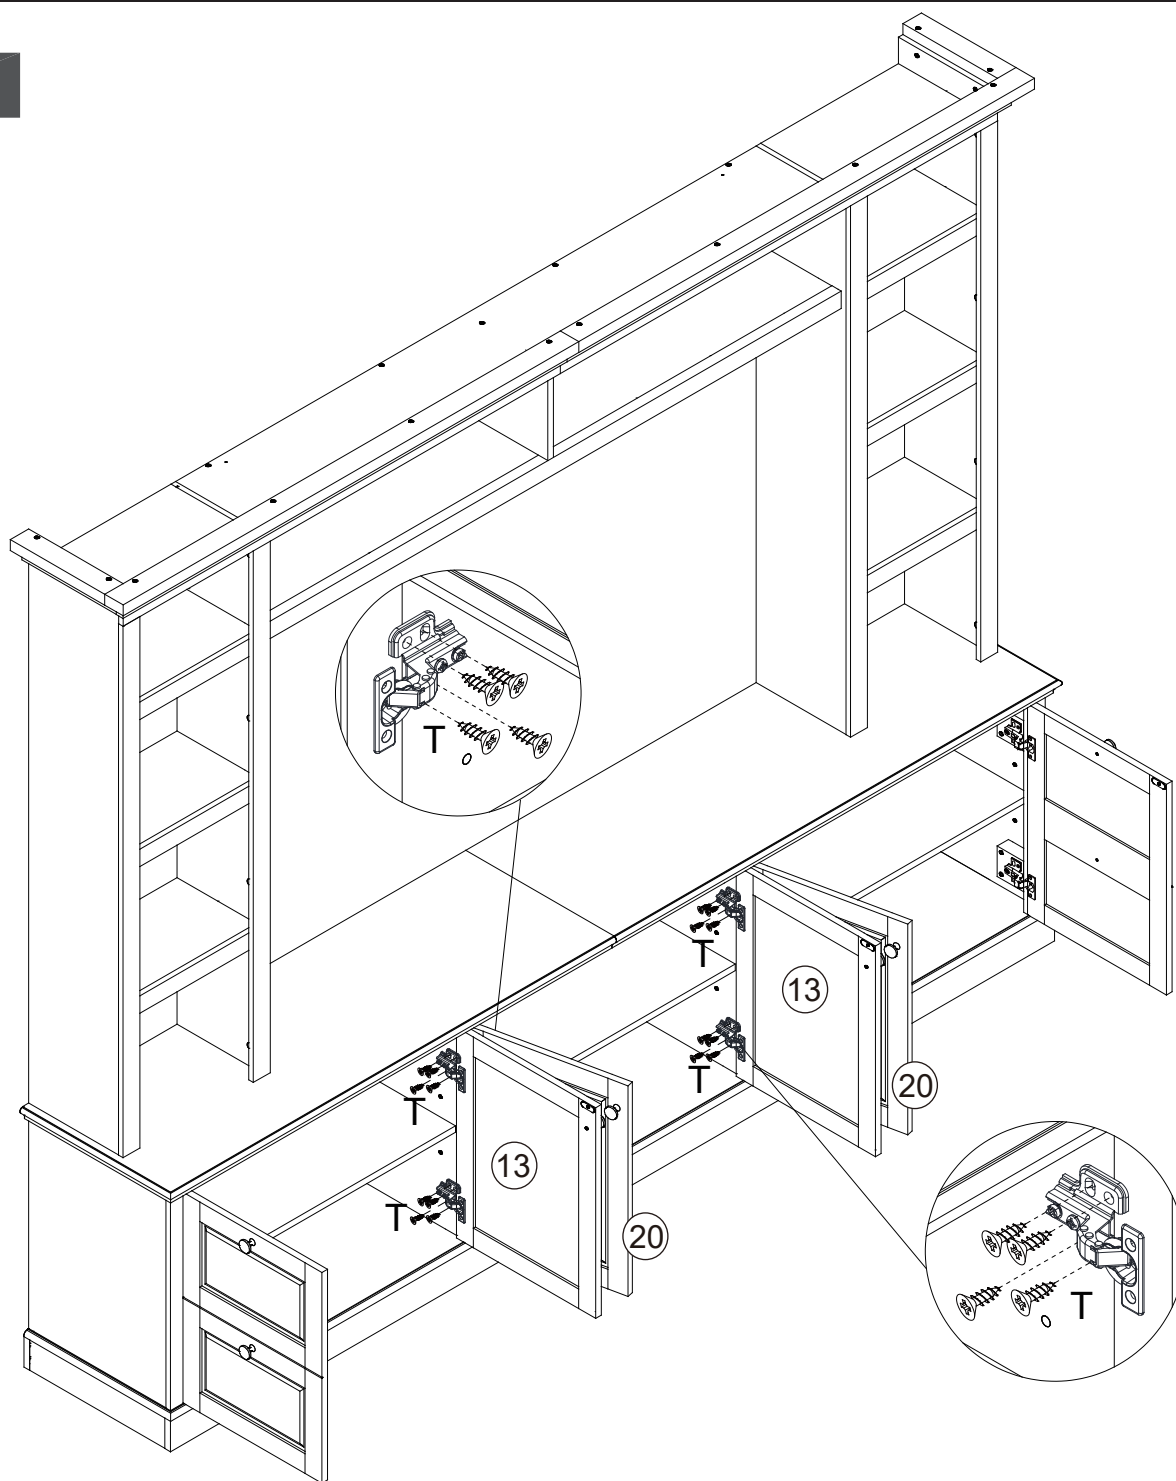

 
If the door can't close, please adjust the hinges as below.

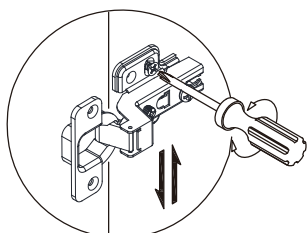

 This is used to adjust the door panel in the up and down direction.

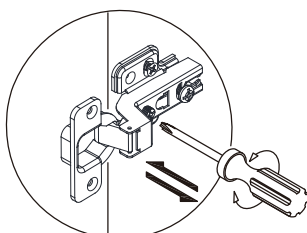

 
This is used to adjust the door panel in the left and right direction.

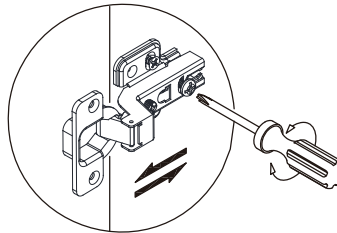



This is used to adjust the door panel in the front and rear.

Assembly Instructions

 Step 50

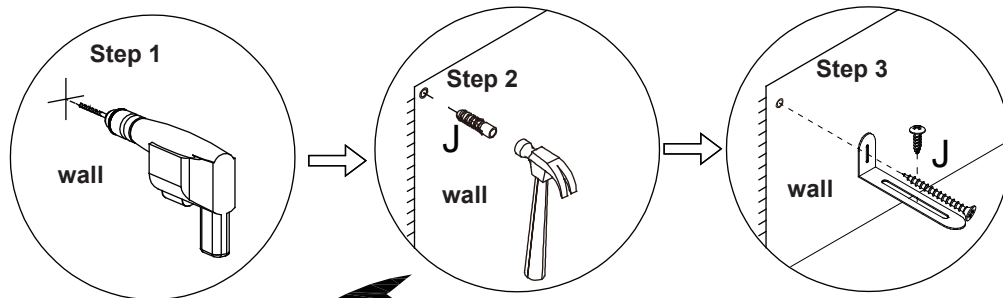


WALL

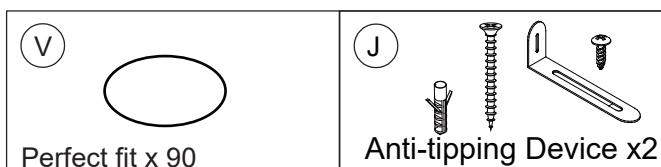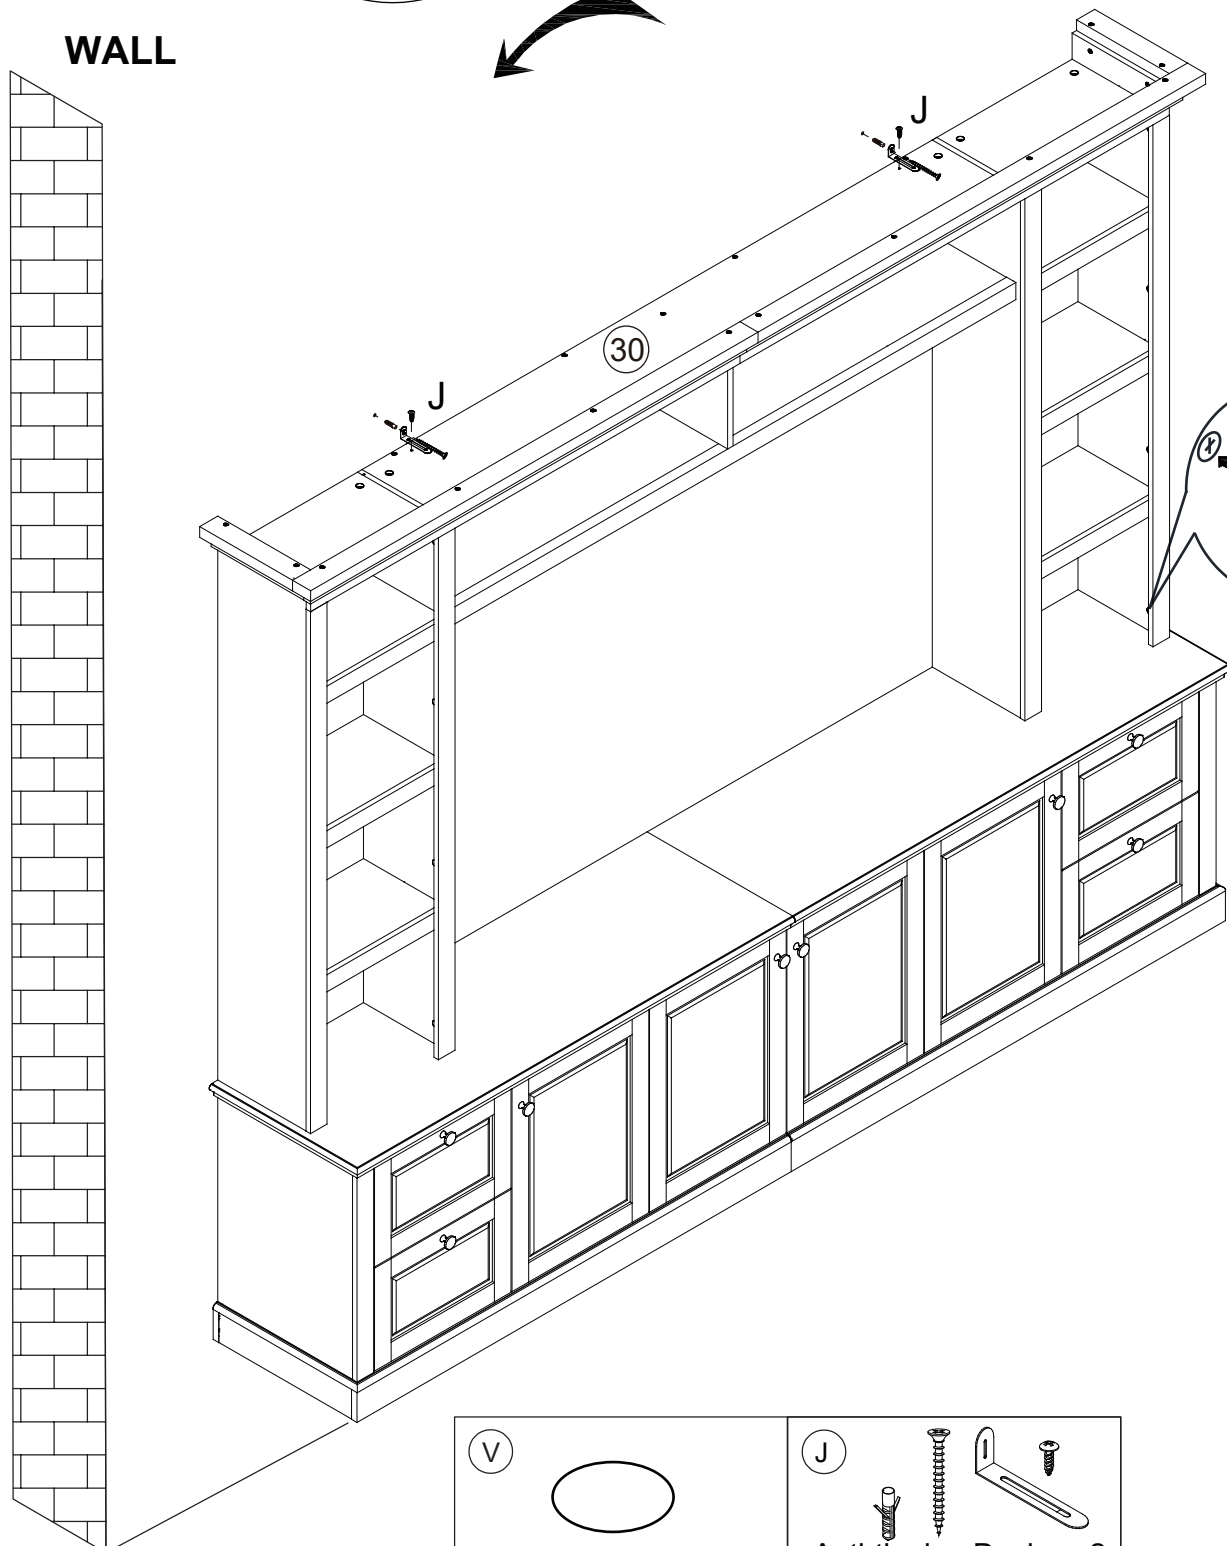  



Assembly Instructions

 Step 51

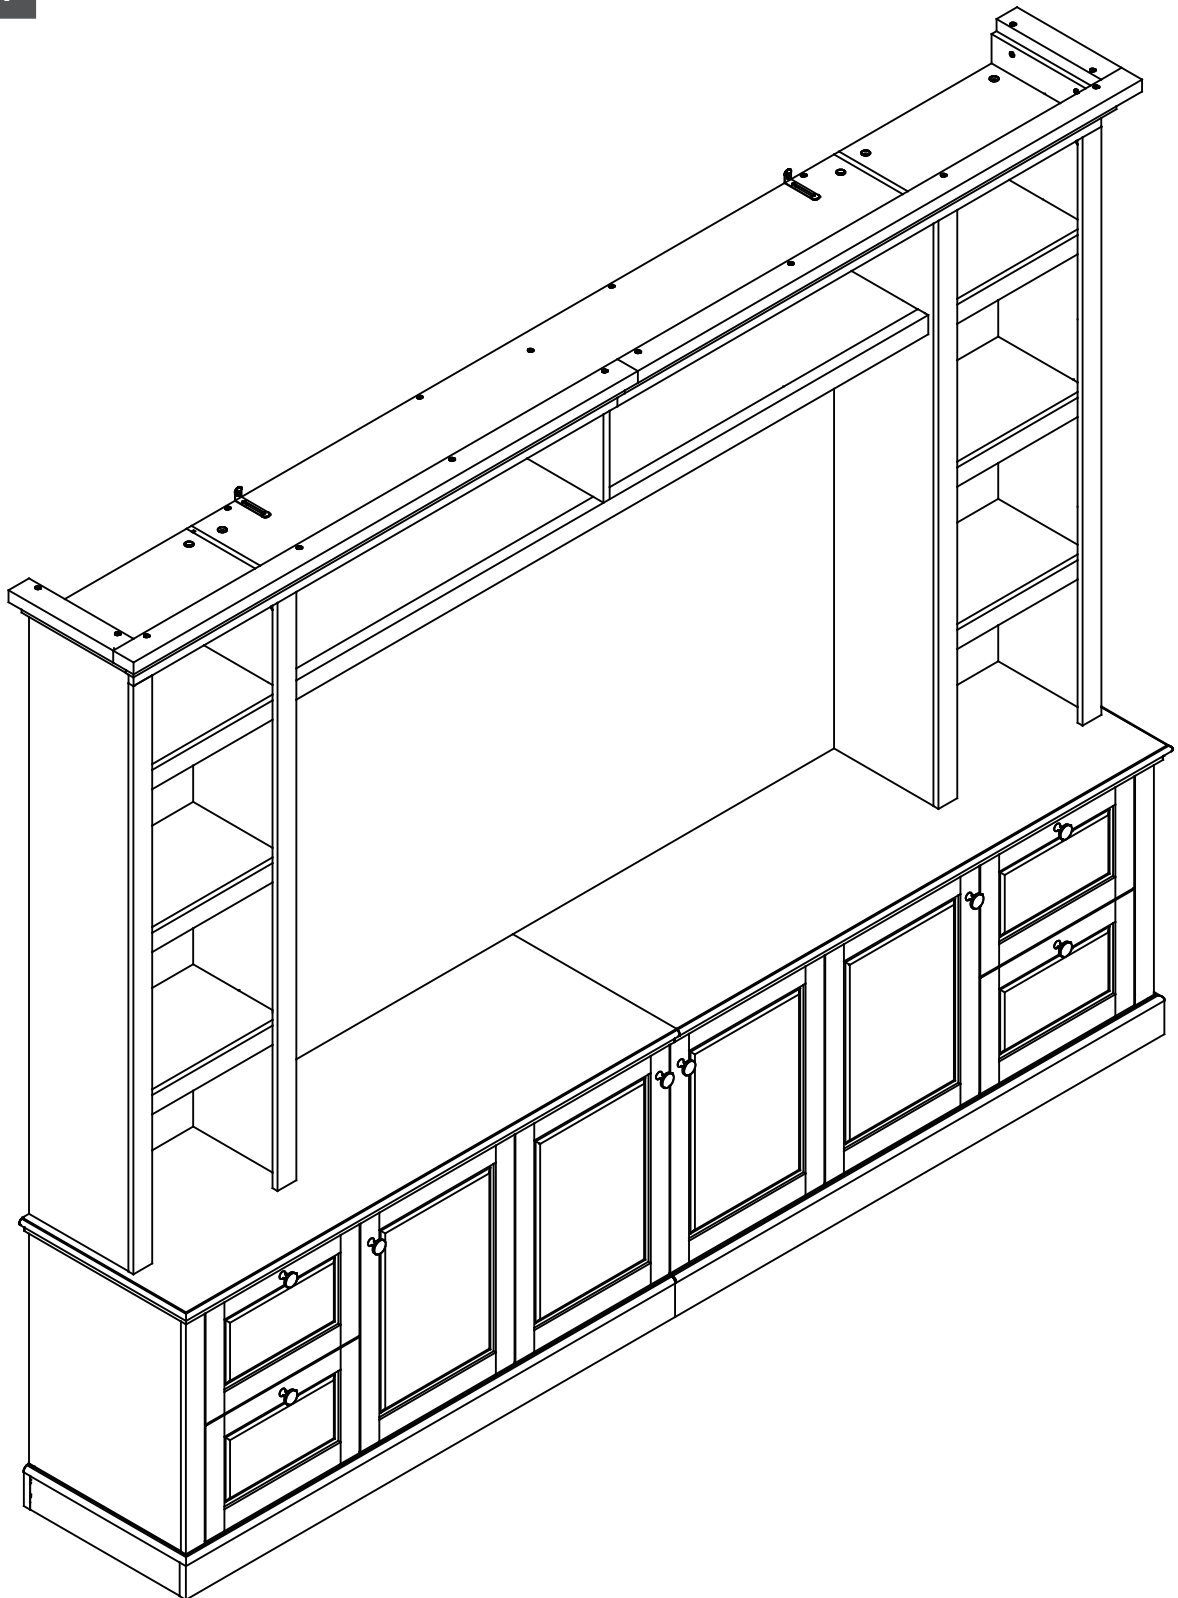


Assembly Instructions




 
 
Step 52

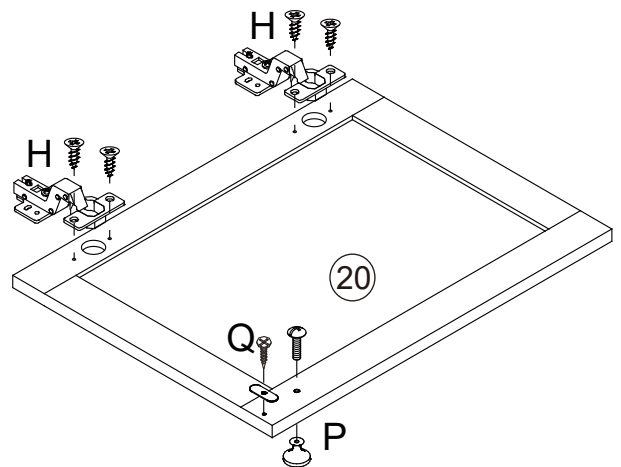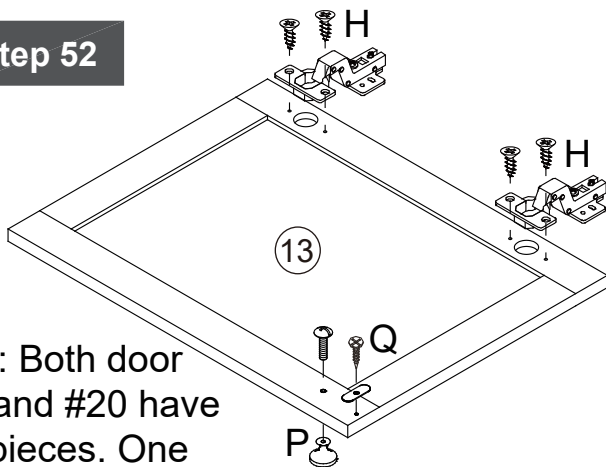

 Note: Both door #13 and #20 have two pieces. One piece requires Hinge #H, the other requires Overlay Hinge #T. Double-check the hinge type before installing each piece.

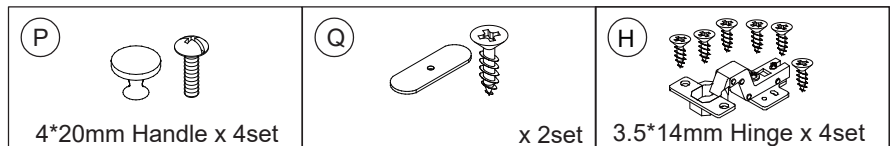


     Step 53

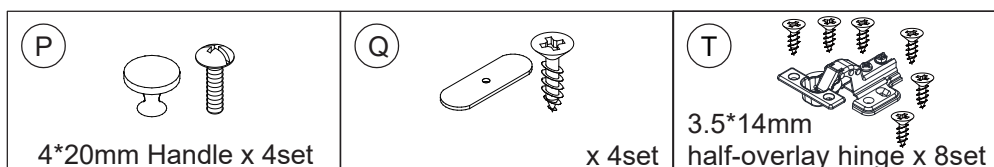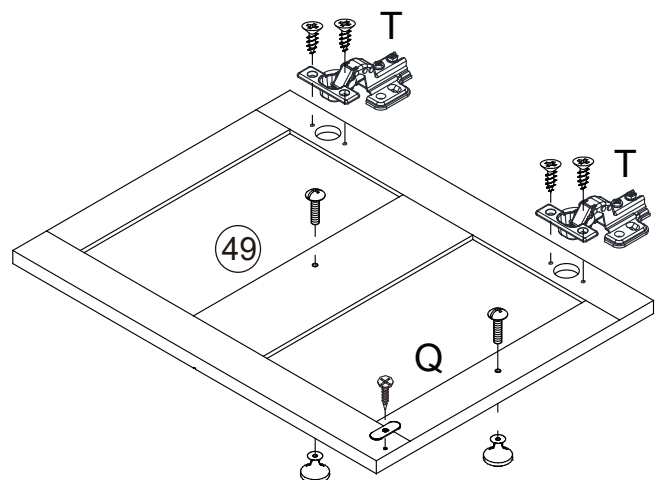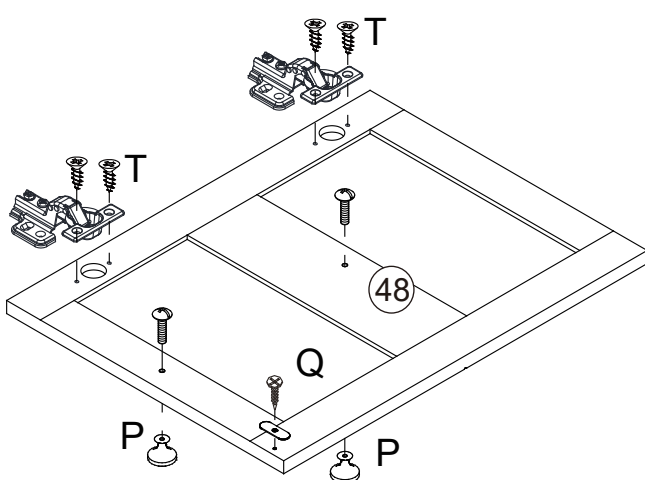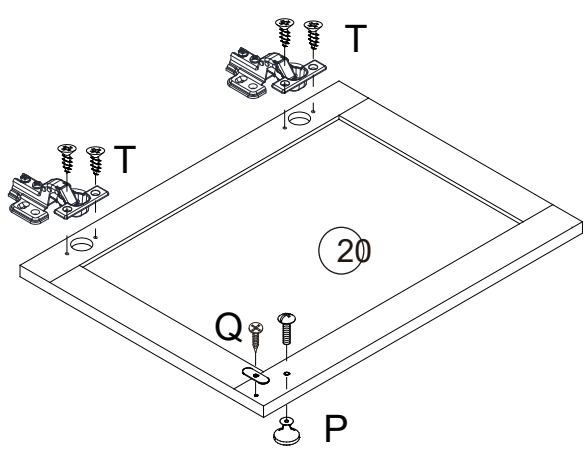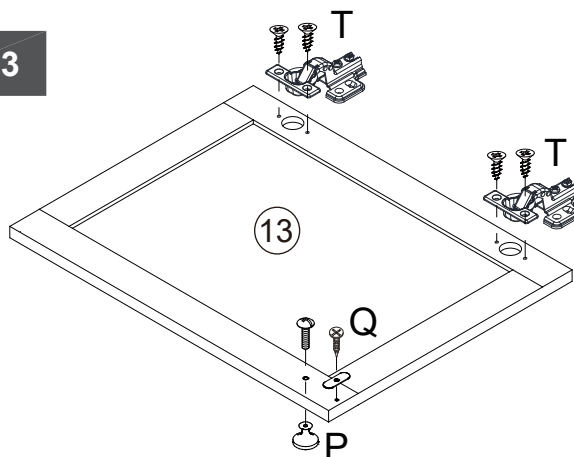


Assembly Instructions

 
Step 54

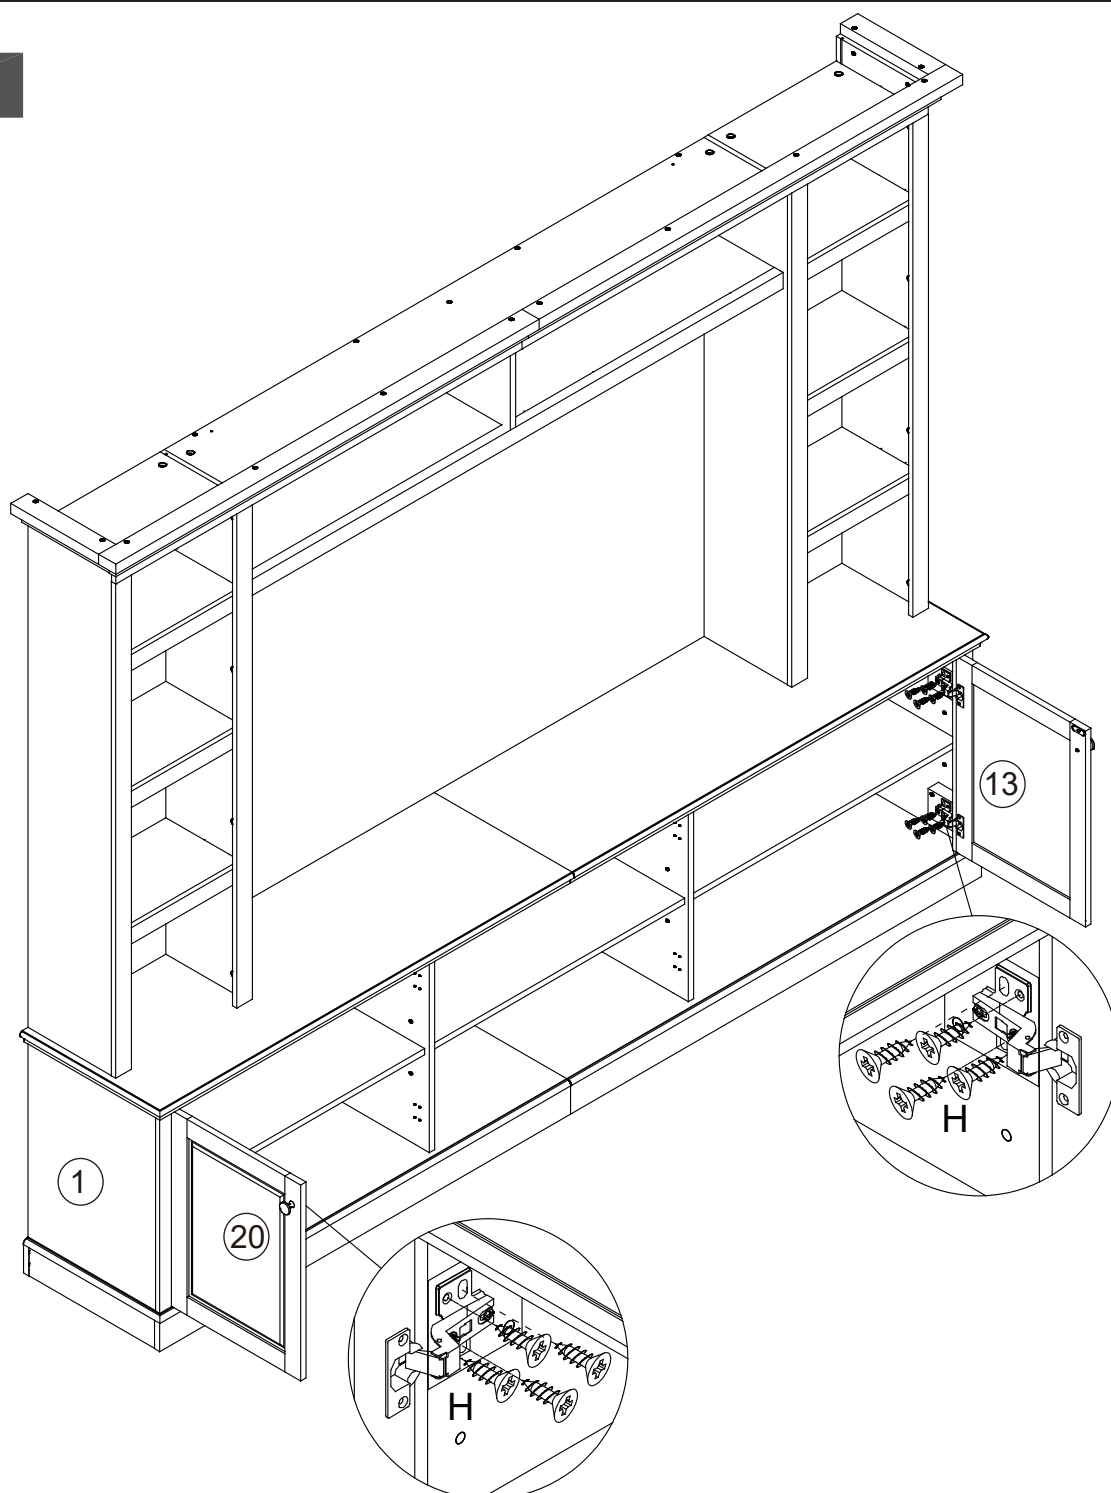

 
If the door can't close, please adjust the hinges as below.

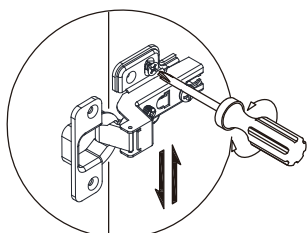

 This is used to adjust the door panel in the up and down direction.

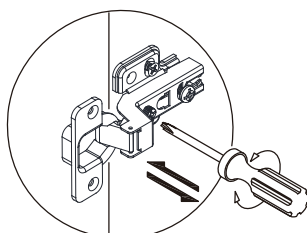

 
This is used to adjust the door panel in the left and right direction.

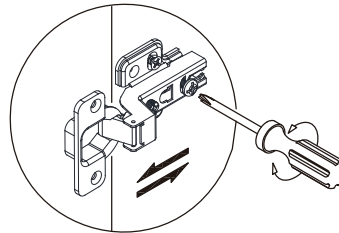


This is used to adjust the door panel in the front and rear.

Assembly Instructions

 
Step 55

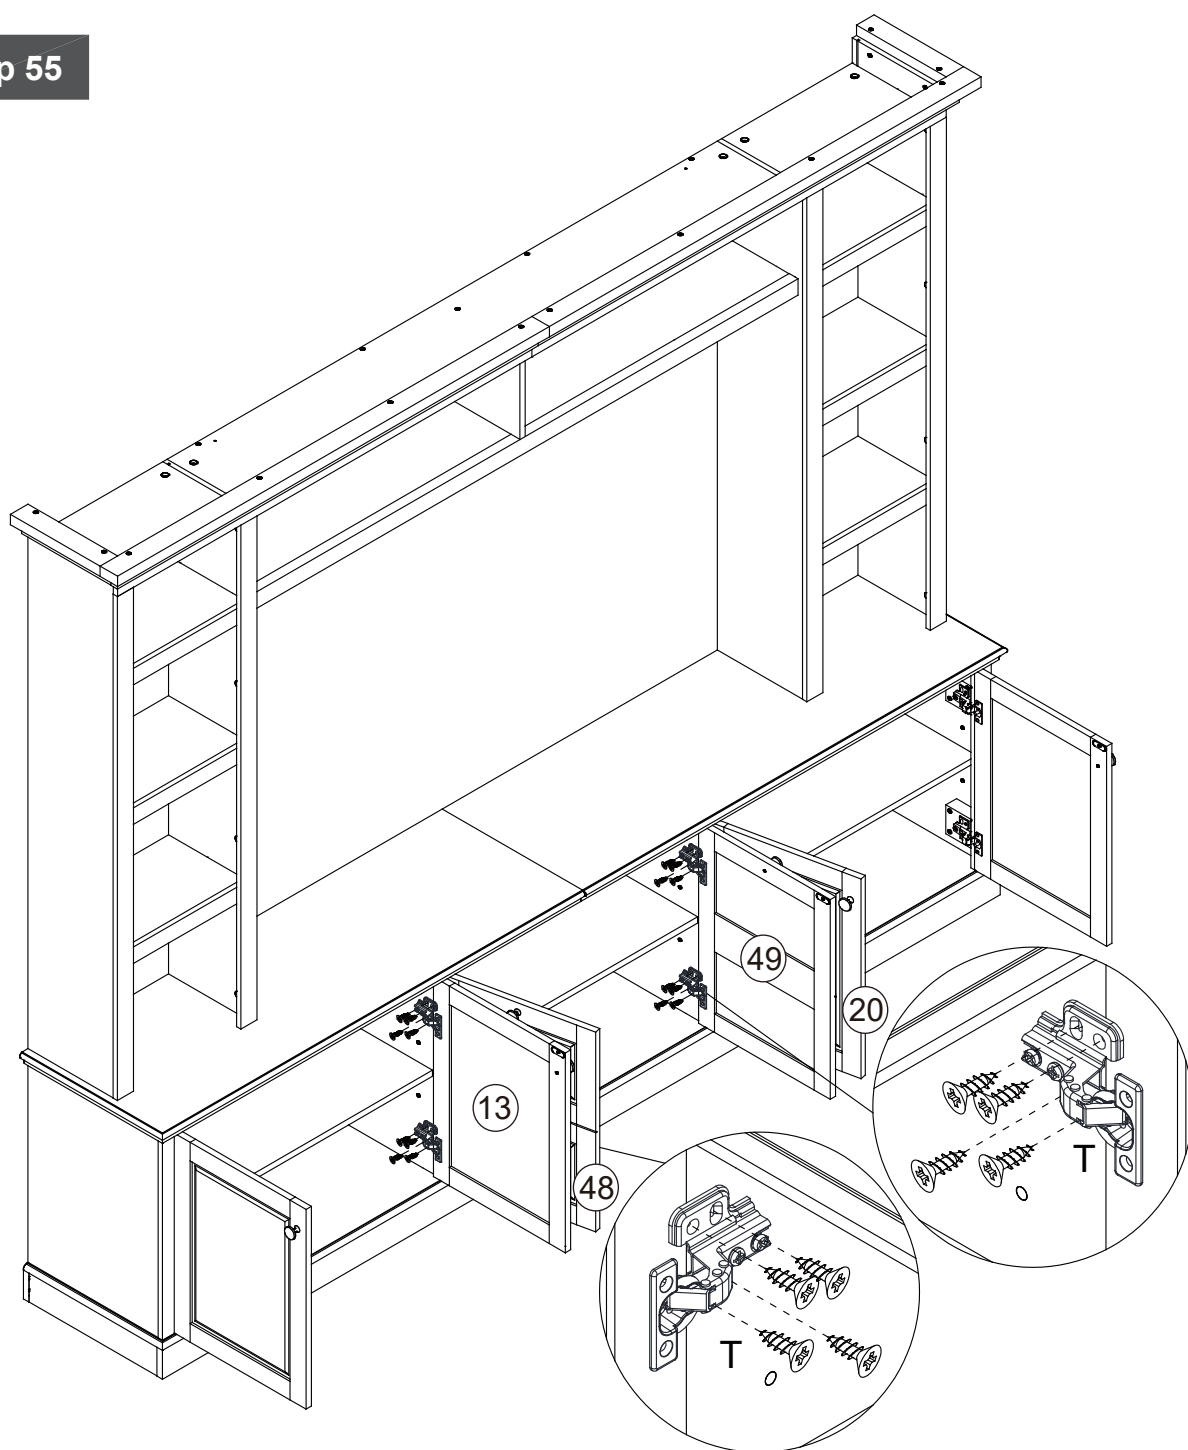

 
If the door can't close, please adjust the hinges as below.

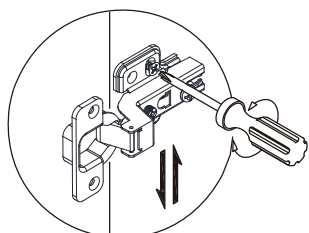

 This is used to adjust the door panel in the up and down direction.

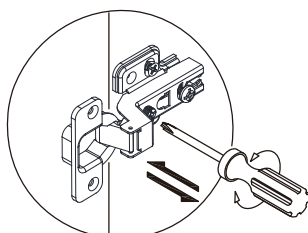

 
This is used to adjust the door panel in the left and right direction.

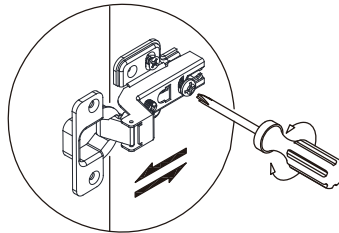



This is used to adjust the door panel in the front and rear.

Assembly Instructions

 Step 56

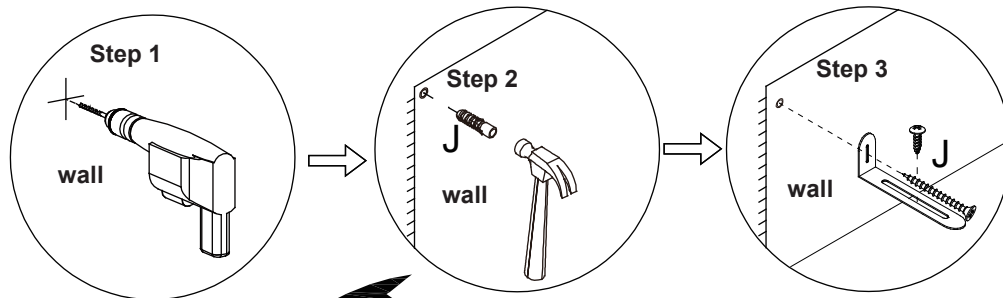

WALL

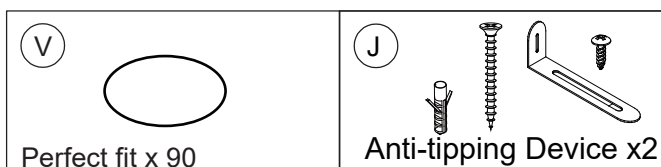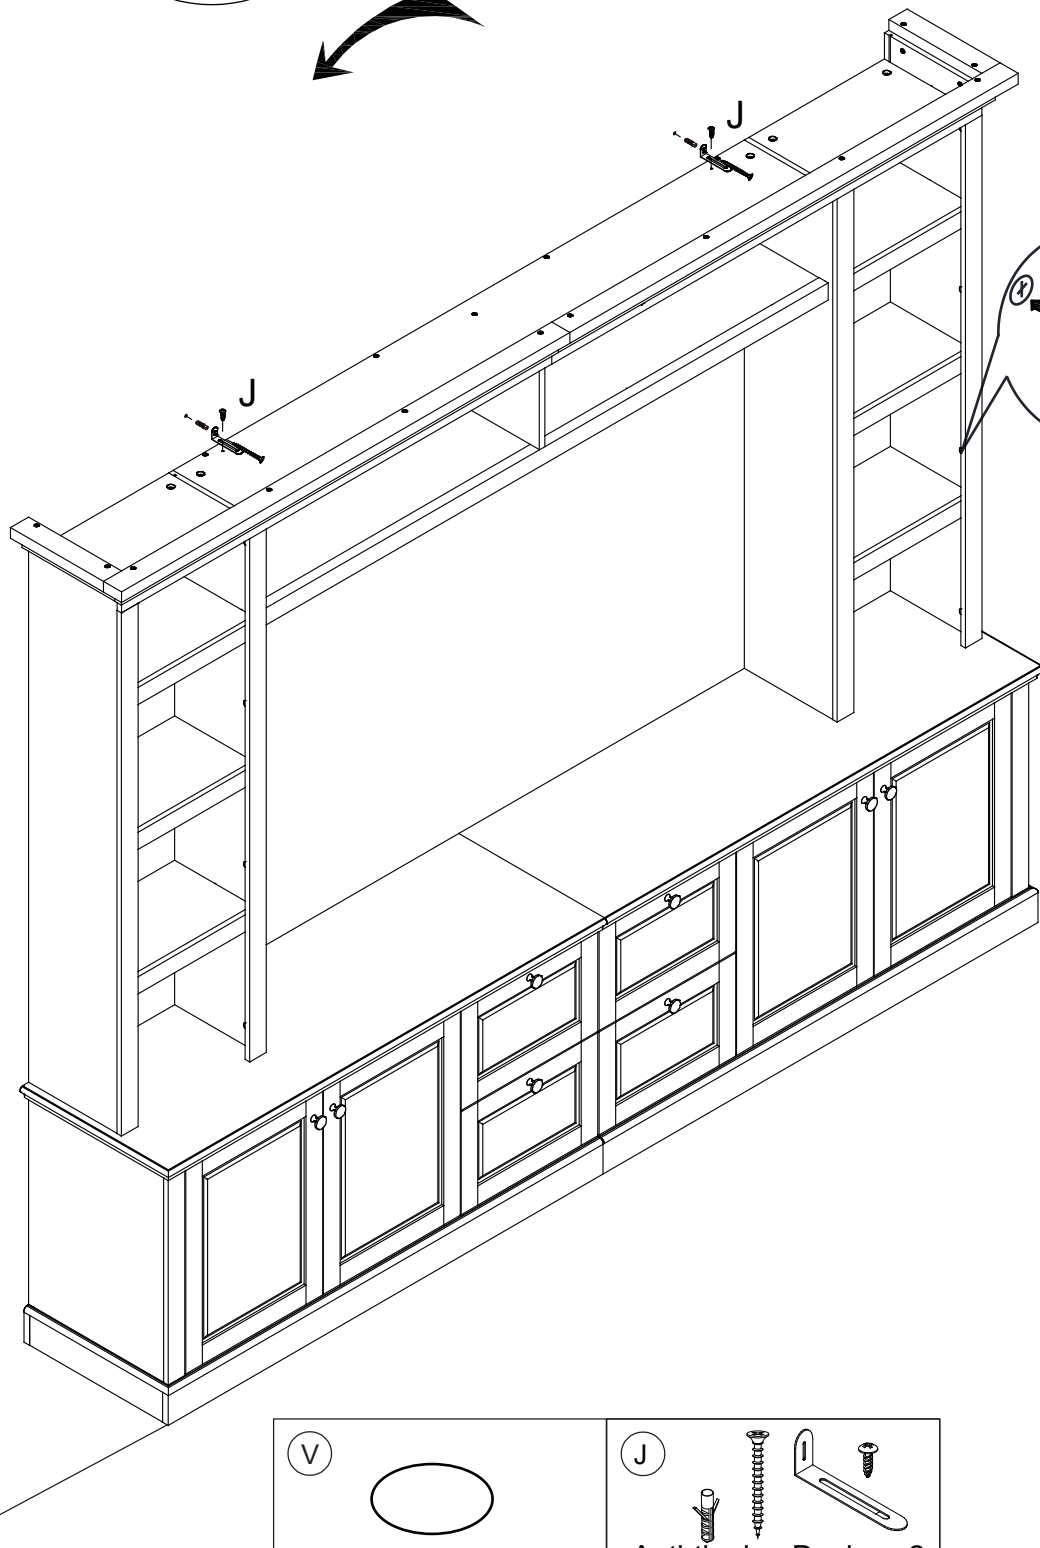  

Assembly Instructions

Finish

