 


Luxury multifunctional massage chair

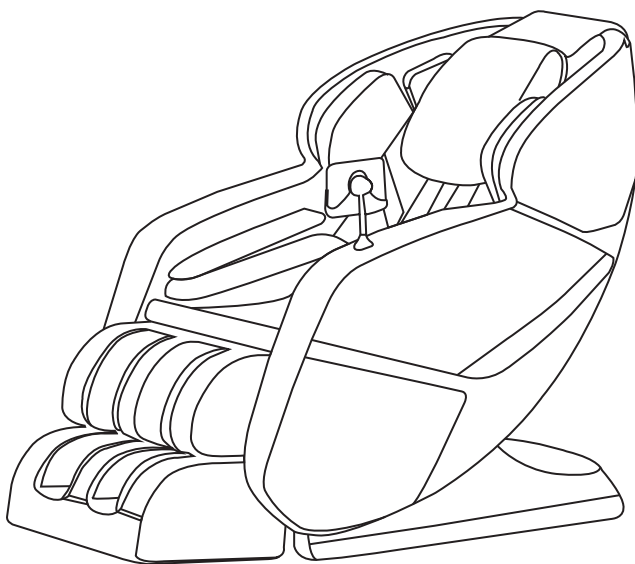

User's manual

Thank you for choosing this product. Before you use it, please read this instruction manual in order to master the correct use of this product. When referring to it, please pay special attention to important safety warnings. At the same time, keep the instruction manual for future reference.

Note: The company reserves the right to change and explain the design of the product. If there is any change without notice, the color of the product is subject to the actual product.

Contents

Safety and maintenance matters.....	1-2
Use safety warning	3
Part Name	4
Product Features	5
Hand control introduction	6
Button function of hand control	7
Instructions	8-9
Product specifications	9

Safety and maintenance matters

1. Important safety warning

- Do not allow children to approach the movable part of this appliance;
- Please use a well-grounded power source that matches this appliance;
- Please unplug the power plug after use or before cleaning, so as not to cause equipment or personal damage;
- Please use this appliance according to the instructions in this manual;
- Do not use unrecommended accessories and accessories;
- Do not use this appliance outdoors;
- Please read this operation manual carefully before starting to use;
- It is forbidden to use this appliance for other purposes not listed in this manual;
- The recommended use time is 20 minutes;
- Do not use this appliance when the cover cloth is broken or damaged;
- Do not use this appliance when the outer shell or outer cover of this appliance is damaged;
- Do not use any objects to cover the cooling holes of this appliance;
- Do not let any objects fall into this appliance;
- Do not sleep during the use of this appliance;
- Do not use this appliance when you are drunk or feel unwell;
- Do not use this appliance within one hour after eating;
- Do not use excessive force when using this appliance to avoid injury;
- It is forbidden to carry fragile, explosive and flammable items such as mobile phones and lighters in the massage and compressed areas.

2. Use environment

- Do not use this appliance in a highly humid environment;
- Do not use this appliance immediately when the ambient temperature changes sharply;
- Do not use this appliance in an environment with severe dust or corrosive gas;
- Do not use this appliance in a small space or a place with poor air circulation;
- Normal room temperature 0C to 35°C;
- At a relative humidity of 20% to 80%, do not use this appliance in an excessively humid room (such as a bathroom);
- Do not use this appliance outdoors;
- Avoid direct sunlight;
- Keep this appliance away from heat sources (such as the side of the stove, the air outlet of the air conditioner);
- Do not use this appliance in thunder and lightning;
- Do not use this appliance in places with excessive dust.

3. Those who are not suitable to use massage chairs

- Patients with osteoporosis;
- Those who have heart problems and wear electronic medical devices such as pacemakers;
- Those who have a high fever;
- Pregnant women or menstruating women;
- People with physical trauma or body surface disease;
- Children under the age of 14 and unconscious persons are prohibited from using this product when unsupervised;
- Those who need to recuperate or feel unwell after being ordered by a doctor;

Safety and maintenance matters

- Do not use this appliance when the body is wet;
- The appliance has a heating surface, so people who are not sensitive to heat must be careful when using it.

4. Safety matters

- Check whether the voltage meets the specifications of this appliance;
- Do not use wet hands to pull or plug the power plug;
- Do not allow water to enter this appliance to avoid electric shock or damage to this appliance;
- Do not pull the power cord when plugging or unplugging the power plug, and don't be too rough;
- Do not damage the wire or tamper with the circuit of this appliance;
- Do not use a damp cloth to clean the live parts such as the power switch and plug of this appliance;
- In the event of a power failure, you should leave the appliance to avoid injury when the power is suddenly restored;
- If you feel that this appliance is abnormal during use, please stop using it immediately and consult your local supplier;
- If you feel an abnormality during the use of this device, please stop using it immediately and consult a healthcare practitioner;
- This device is not intended to be used by people (including children) who are physically disabled, sensory or neurologically defective, or lack experience and common sense, unless they are supervised and guided by those responsible for their safety on how to use the device . Children must be supervised to ensure that they do not use equipment to play with;
- If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments.

5. Product care and maintenance

- This appliance can only be repaired by the service center designated by the manufacturer, and the user cannot disassemble or repair it by himself;
- Please remember to turn off the main power switch after use;
- Do not use this appliance when the power socket is loose;
- If the appliance will not be used for a long time, the power cord of this appliance should be rolled up and stored in a dry and dust-free environment;
- Do not store this appliance near high temperature or open flame, and do not expose it to direct sunlight for a long time;
- Please clean this appliance with a thousand cloth, do not use thinner, benzene or alcohol;
- The mechanical device of this appliance is specially designed and manufactured without special maintenance;
- Do not pierce this device with sharp objects;
- Do not roll or drag this appliance on uneven ground, it needs to be lifted and moved;
- Please use it intermittently. Do not allow this appliance to run continuously for a long time.

6. Treatment of common phenomena

- Motor sound during operation: it is a normal operation sound;
- The controller cannot work normally: Check whether the power plug and the power socket are connected reliably; check whether the power switch is turned on;
- The operation of the appliance stops: when the rated time is up, the appliance will automatically activate the shutdown button; if the appliance has been working continuously for too long, the temperature control protection switch will automatically shut down, allowing the appliance to rest for half an hour before using it.


7. Storage conditions

- Storage room temperature -5°C~35°C;
- Relative humidity 20% to 80%, no corrosive gas and well ventilated indoor.

Use safety warning


warn

When the calf frame of the massage chair rises, people must not apply gravity to the calf frame to prevent the massage chair from falling forward to avoid product damage or personal injury.

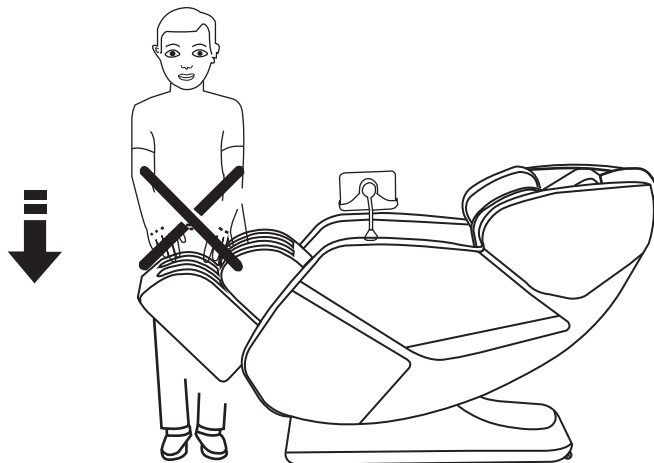


warn

Before sitting on the massage chair, it is necessary to confirm that the massage manipulator cannot stay in the cushion position, so as to avoid discomfort to the buttocks and damage to the massage manipulator during the downward pressure of the human body.

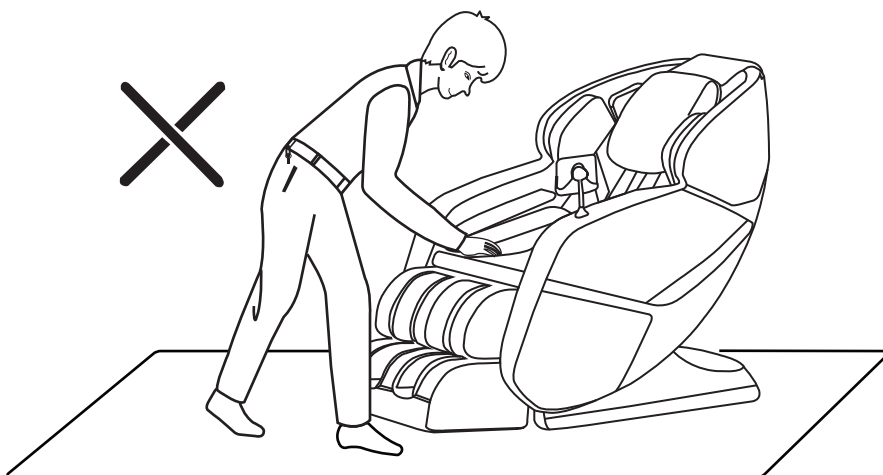

Part Name

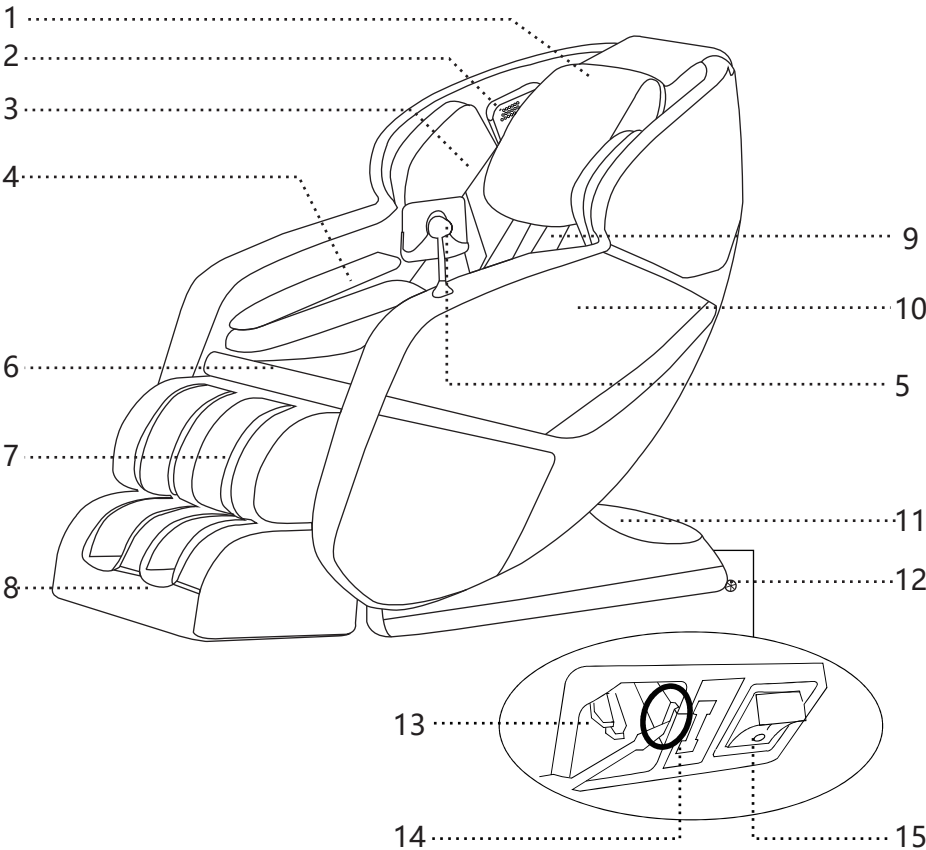

- | | | |
|-----------------------------|----------------------------|---------------------------------|
| 1, Head cushion | 2, 3D digital audio | 3, Shoulder pneumatic component |
| 4, Arm pneumatic component | 5, Large screen controller | 6, Cushion |
| 7, Calf Pneumatic Component | 8, Foot Roller | 9. Back cushion |
| 10, Armrest | 11, Power box back cover | 12, Moving wheel |
| 13. Power cord jack | 14, Fuse | 15, Power switch |

Product Features

- This product has designed a group of massage heads that can walk up and down, with silent design.
- Designed with automatic shoulder position detection and micro-adjustment function; The function of automatic detection of human body curve and massage acupressure points can automatically adjust the stretching amount of the manipulator back and forth according to the detected human body curve and massage acupressure points, which makes the massage more humanized and scientific.
- Featured automatic massage function: five kinds of automatic massage functions: President's health care, Queen's slimming, shoulder improvement, waist and back care, and sleeping.
- Manual massage range selection with massage head: including fixed-point, upper back, lower back, local, whole range, etc.
- It is equipped with massage adjustment function: including three kinds of massage adjustment function options, such as 3-speed adjustment, 3-speed adjustment of air pressure intensity and 6-speed adjustment of time.
- Equipped with upper body air pressure massage function: palm air pressure massage function, shoulder air pressure massage function, arm air pressure massage function, three-gear air pressure intensity adjustment.
- It has lower body air pressure massage function: lower leg air pressure massage function, three-gear air pressure intensity adjustment.
- The backrest frame is designed with the curve amplitude of human body, completely fitting the curve of human back, and can enjoy close-fitting massage from head to thigh.
- Equipped with back and leg heating function: using carbon brazing for heating.
- Music playback system, with built-in 3D digital audio in left and right upper arms. You can use the Bluetooth function of smart devices to wirelessly connect and play music.
- Backrest frame linkage lifting adjustment function, zero gravity automatic reclining angle adjustment function.
- It is equipped with foot sole roller massage function, and the speed can be adjusted in three gears.
- The lower leg is equipped with elastic yellow telescopic adjustment function. The extension length of the foot is determined according to the user's leg length, and the foot retracts by spring force.
- Shutdown automatic sitting function, manipulator automatic reset function.
- Equipped with large-screen hand controller , the operation is easier.

Button function of hand control

Boot up

- Standby key: Press the "⏻" key to turn on/off the massage function of the whole machine.
- When the power is turned on, press this button to lie down to the initial angle. After completion, the first automatic program "President Health Care" will run by default. The default working time is 20 minutes. Press this button again and wait for another 20 seconds. Turn off all functions of the massage chair.

Automatic mode

- Automatic massage program key: According to your physical condition and massage time, you can choose any of the five types of massage: "Royal Treatment", "Queen Slimming", "Neck& Shoulder", "Waist & Spine", "Relax" Program for targeted massage.

Other functions

- Neck: press the "Neck" key to open/close the neck massage head massage program;
- Neck lifting: Press the "Neck lifting" key to adjust the neck massage head to rise .
- Neck lowering: press the "Neck lowering" key to adjust the neck massage head to lower .
- Back: Press the "Back" key to have 5 kinds of back massage techniques. Turn off the back massage function at the 6th gear and cycle in turn;
- Intensity: Press the "Intensity" key to adjust the massage intensity of the waist back massage head. The massage intensity can be adjusted in 3 levels.
- Heating 🔥 : Press the "🔥" key to turn on/off the waist heating function. Long press for 3 seconds to turn off the atmosphere lamp. Long press for 3 seconds again to turn on the atmosphere lamp.
- Foot roller: press the "👤" key to adjust the force of foot roller for 3 gears in total, and turn off the foot roller for 4 gears in turn;
- Timing: press the "Timing" key to select 5 minutes/10 minutes/15 minutes/20 minutes/25 minutes/30 minutes of timed massage;
- Zero gravity: press the "Zero gravity" key to turn on/off zero gravity, long press the "👤" key to raise the backrest, long press the "👤" key to lower the backrest;
- Airbag part: press the "Airbag part" key to massage the arm, shoulder, calf, etc. at a fixed point;
- Airbag force: press the "Air bag force" button to adjust the air bag massage force in three gears;
- Local massage: press the "Local massage" button to massage the waist movement at a certain position;
- Hip roller: press the "Hip roller" button to adjust the hip roller massage force for three gear massage, and turn off the hip roller massage for the fourth gear and cycle in turn;

Instructions


1. Bluetooth audio playback operation instructions

(1) Bluetooth is turned on by default when it is turned on and voice prompts;


(2) Turn on the Bluetooth function of the mobile phone, find that the Bluetooth connection of

2. Handrail disassembly

When the doorway is too small and the chair cannot be moved into the door, the armrest can be removed and transported separately.




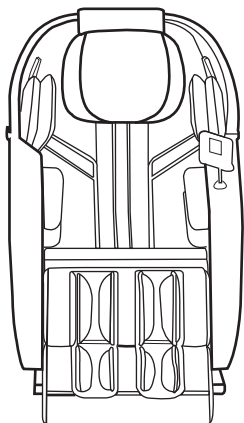


1. Unscrew the hexagon socket screws on both sides
2. Unplug the speaker connector

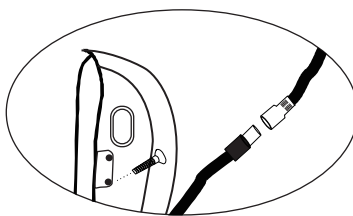

1. Connect the trachea in Figure 2 according to the color;


2. Then fit the two card slots of Figure 1 and Figure 3 together. When the two card slots are installed, the air should be managed smoothly and bend carefully;

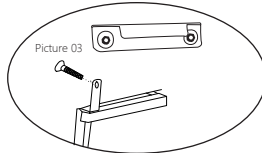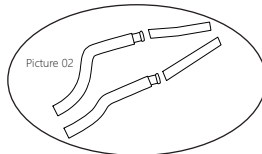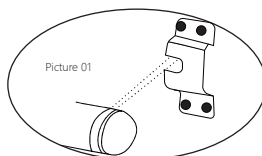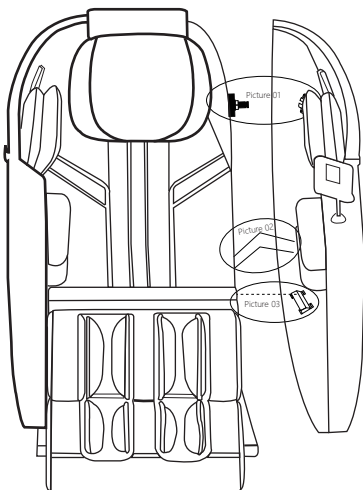

Instructions

3. Moving method

After confirming that all the wires are pulled out of the massage chair, press the backrest down to a certain angle (when the center of gravity falls on the pulley), you can push the massage chair forward with your hand, and then move the massage chair to a suitable position. Back to normal angle. (Note: When moving, be sure to turn off the power switch before unplugging the power cord).

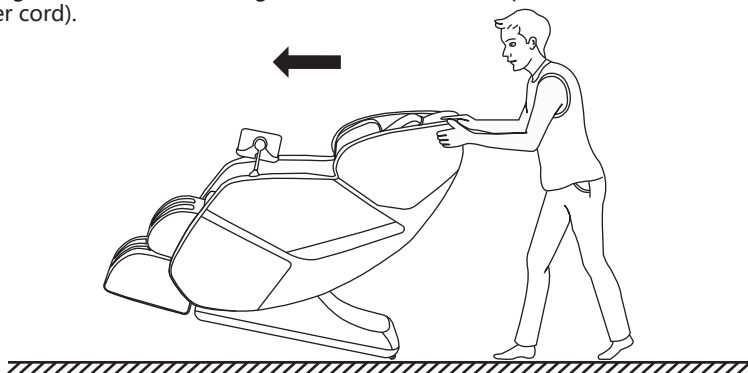

warn

The moving pulley behind the massage chair is only suitable for short-distance and slow-speed pushing. For long-distance transportation, please use other auxiliary moving tools to move the massage chair!

Product specifications

Product name: luxury multifunctional massage chair

Rated voltage: 110-220V~

Rated frequency: 50/60Hz

Rated power: 60W

Rated working time: 15-30min

Executive standard: IEC 60335-2-32 / IEC 60335-1

Product safety design: Class I

Hand control introduction

