

 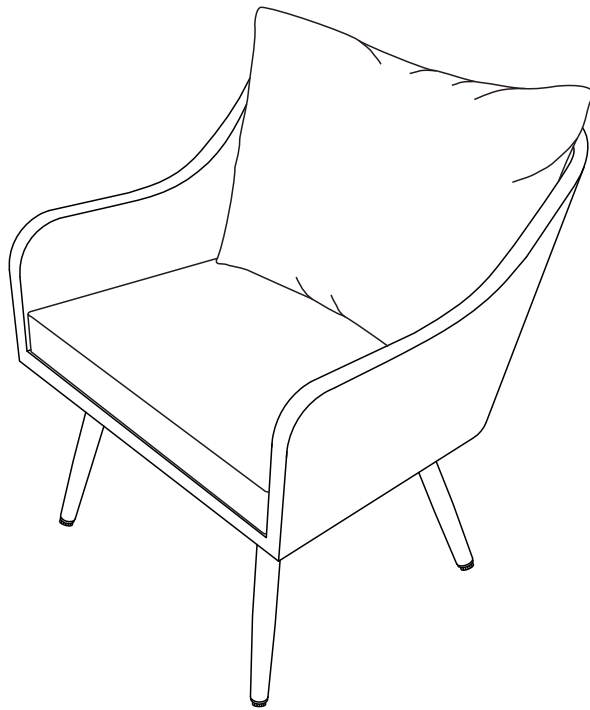
 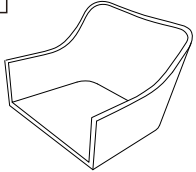
 



 


Outdoor Chair

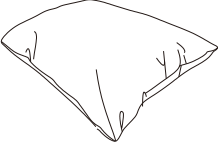

PART LIST


<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>Seat Panel 2 PCS</p>	<p>Front Leg 4 PCS</p>	<p>Back Leg 4 PCS</p>	<p>Seat Cushion 2 PCS</p>	<p>Back Cushion 2 PCS</p>

HARDWARE LIST

<p>#1</p>  <p>M6*15mm</p>	<p>#2</p>  <p>M6mm</p>	<p>#3</p>  <p>M6mm</p>
<p>Bolt 32 PCS (Extra 1)</p>	<p>Flat Washer 32 PCS (Extra 1)</p>	<p>Allen Wrench 1 PC</p>

Step 1. Lay seat panel (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach front legs (part B) and back legs (part C) to seat panel (part A) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.

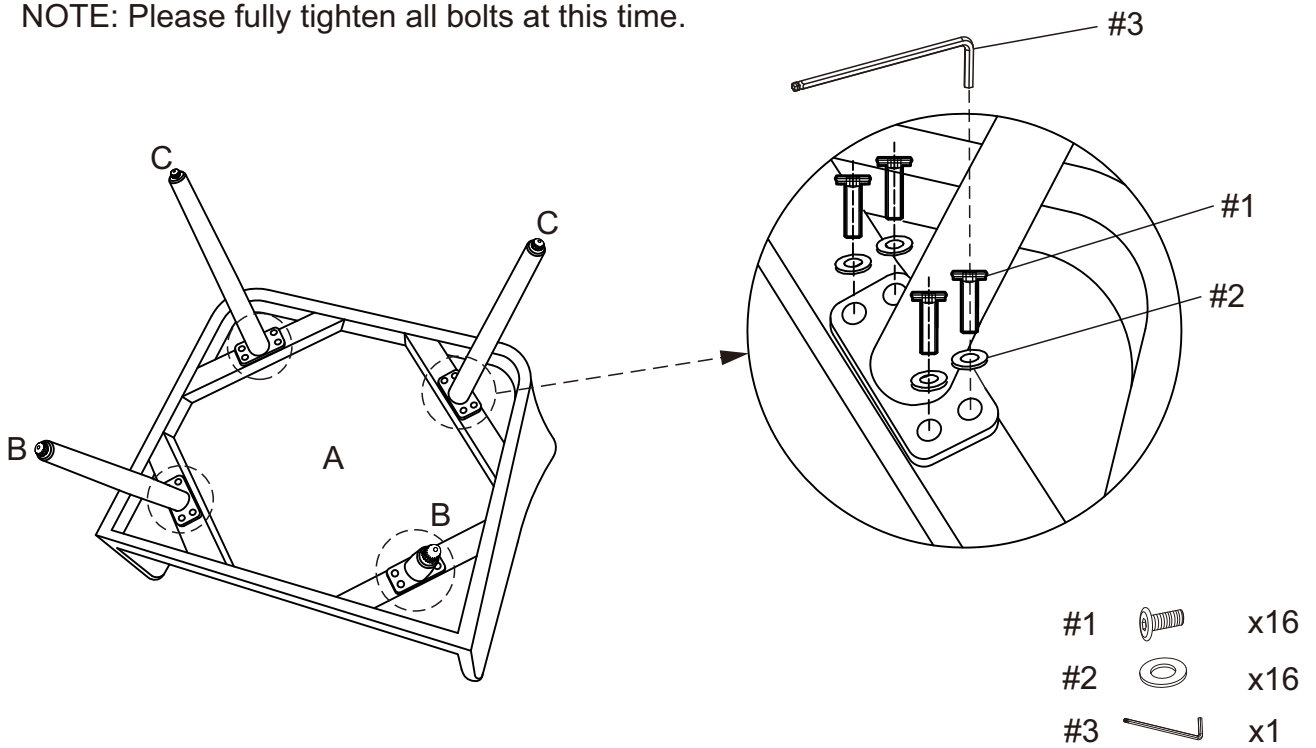

Step 2. Carefully turn unit upright. Add seat cushion (part D) and back cushion (part E) as shown below. Repeat step 1 to assemble remaining chair.

