 
 


SIDE TABLE

OPTION 1 (DOOR RIGHT)

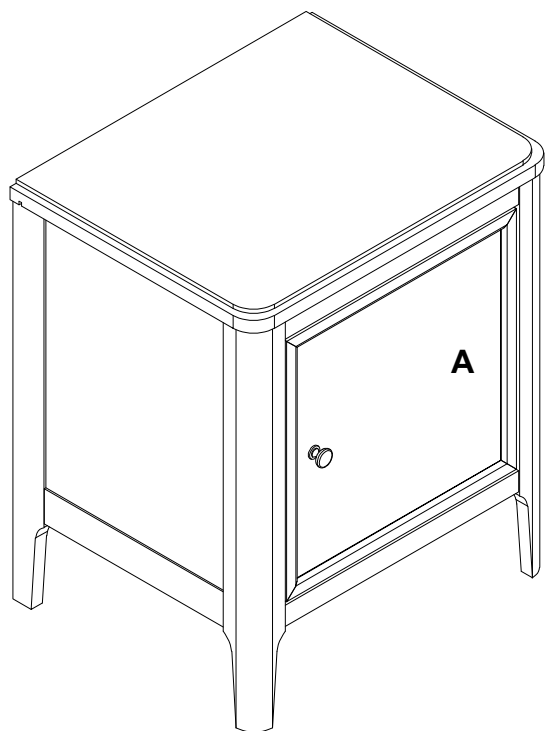

OPTION 2 (DOOR LEFT)

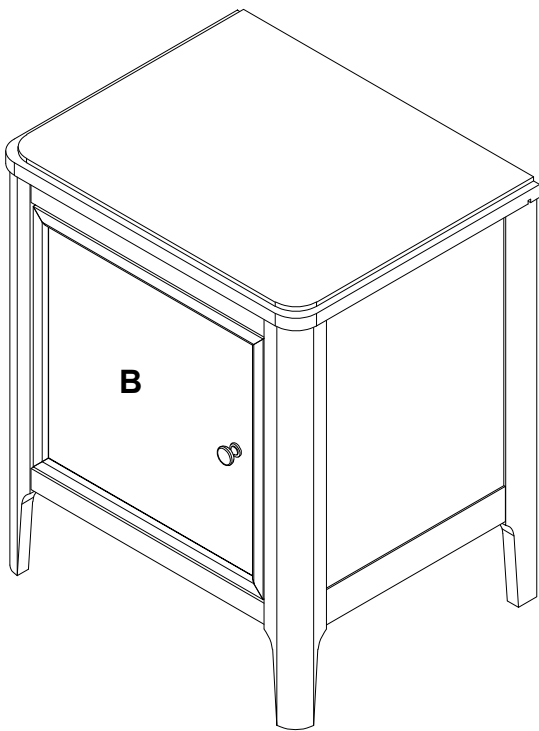

Dimensions	No. people	Assembly Time
Width: 49.6cm Depth: 40.0cm Height: 59.4cm		45 MINS (approx.)

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Warning : Do not over tighten the handle screw that way break the mirror.



Care and Maintenance

- Please clean using cloth with glass cleaner, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING

 


Children have died from furniture tip-over. To reduce the risk of furniture tip-over:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

Exploded View

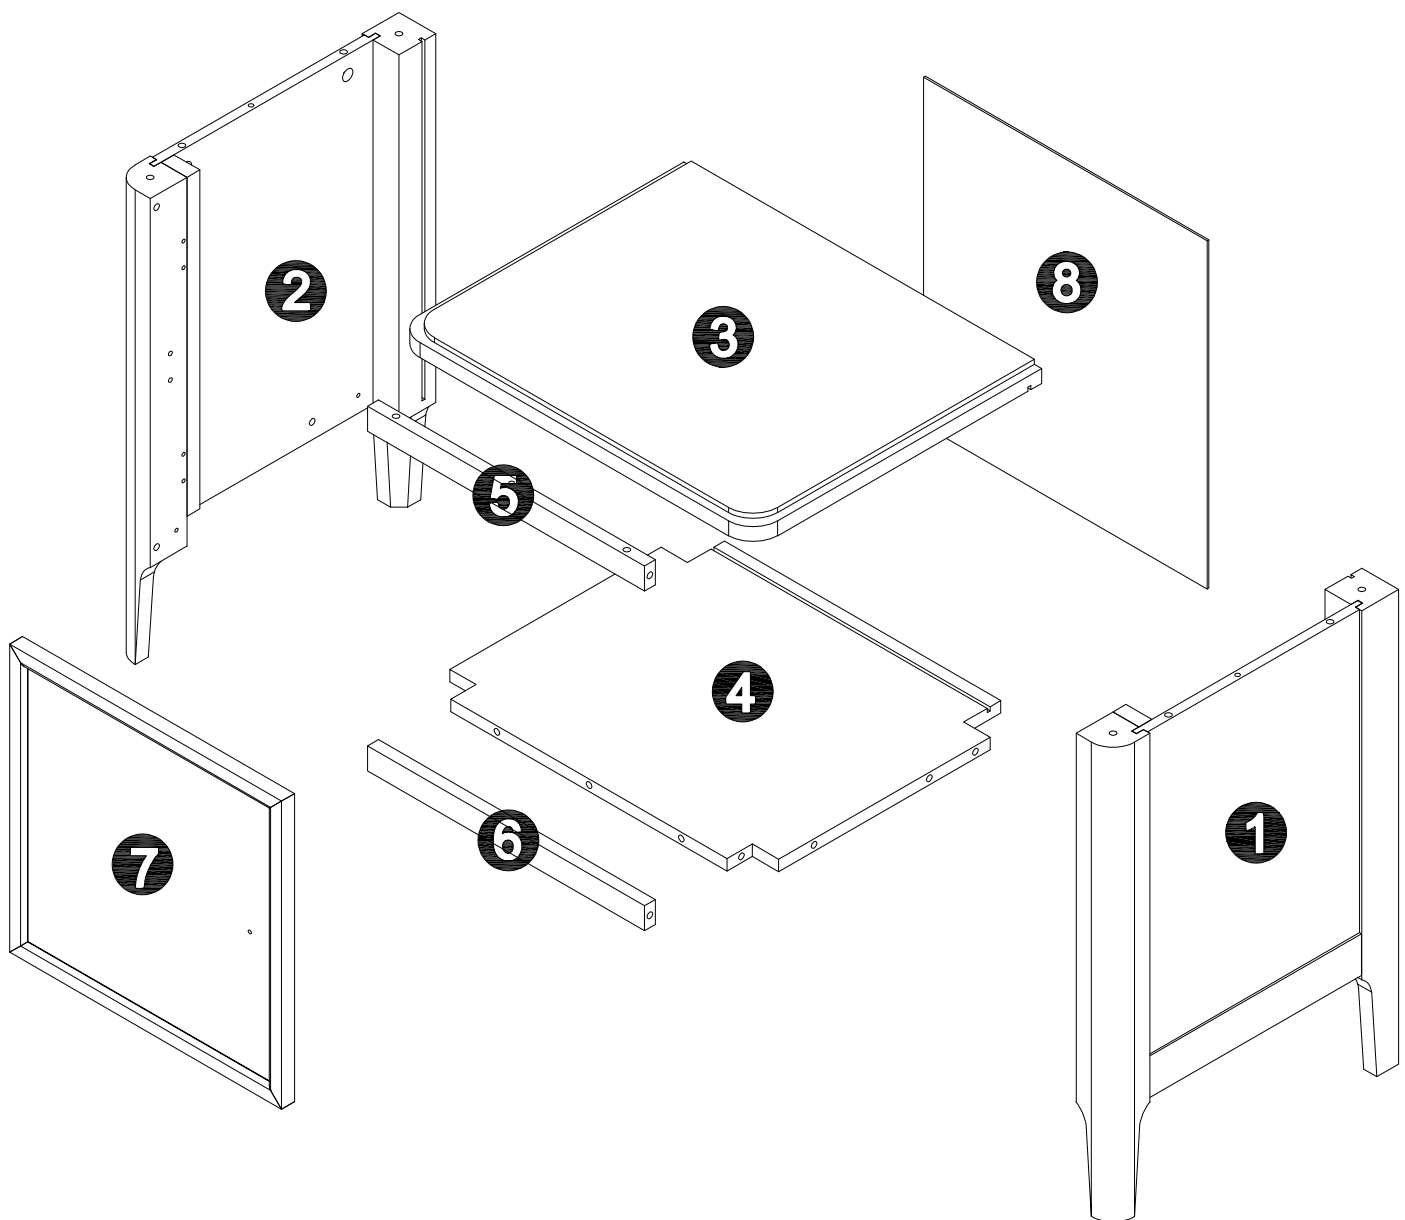

Components - Panels





Please check that you have all the components listed below before constructing your items.

Part No	Description	Qty
1	Side Panel (Left)	1
2	Side Panel (Right)	1
3	Top Panel	1
4	Bottom Panel	1
5	Front Panel Top	1
6	Front Panel Bottom	1
7	Door Panel	1
8	Back Panel	1


Components - Fixings

Please check that you have all the components listed below before constructing your items.

    
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

*Hardware packed separately according to the code.							
(A)	CSK M3.5 X 12MM	(B)	CSK M3.5 X 15MM	(C)	EURO SCREW M6 X 13MM	(D)	JCBC(W) M6 X 40MM
							
	4 unit		4 unit		4 unit		1 unit
(E)	WOOD DOWEL Ø6 X 20MM	(F)	WOOD DOWEL Ø8 X 25MM	(G)	BOLT DOWEL 20 X 5MM	(H)	CAM 15/15
							
	2 unit		16 unit		9 unit		5 unit
(J)	CAM 15/12	(K)	HINGES (7/8") W / SPRING (THIN CUP)	(L)	PLASTIC DOOR STOPPER	(M)	METAL KNOB (MC4 X 18MM)
							
	4 unit		2 sets		1 unit		1 sets
(N)	WHITE DIE CUT	(P)	ROUND STICKER (Ø18MM)	(Q)	ALLEN KEY M4	(R)	BACKPLY STOPPER
							
	4 unit		4 unit		1 unit		4 unit

 Tools Required

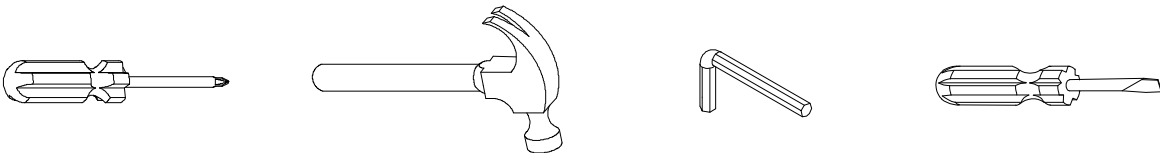

 
Ruler - Use this to measure your screws (mm)

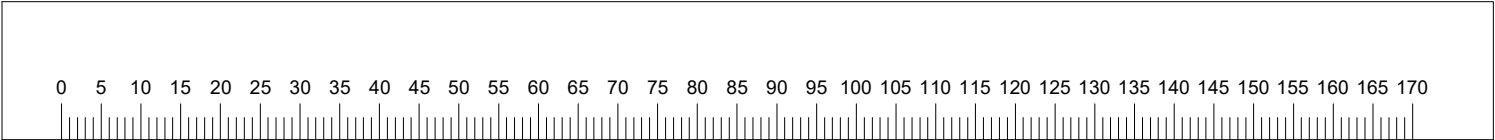

Using Camlocks

SPECIAL TIPS FOR FITTING CAM-LOCKS AND CAM-BOLTS


 
CAM-LOCK

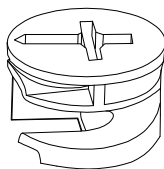

Align with long point of cross

WHEN FITTING CAMS

  
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-BOLTS
TURN CLOCKWISE UNTIL SECURE

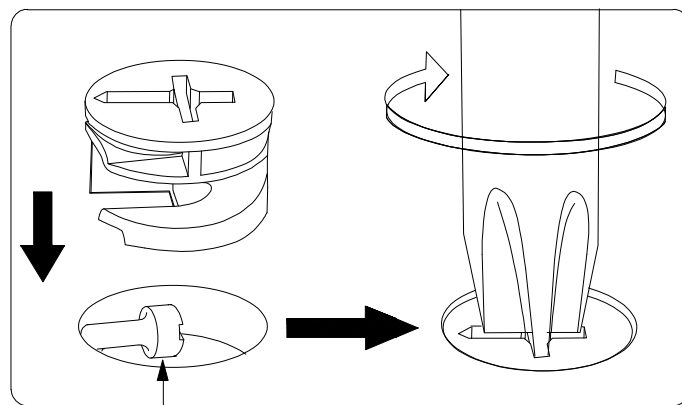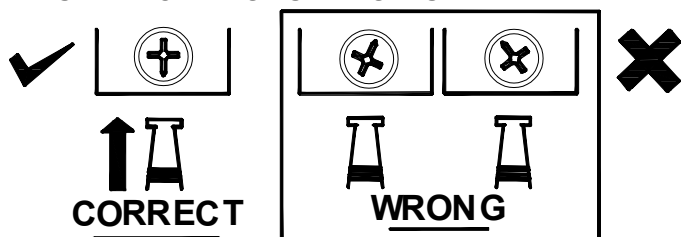


Lock head needs to be in centre

CAM-BOLT

 
Tighten until shoulder is flush
with panel. Do not overtighten
or undertighten (see example
below)

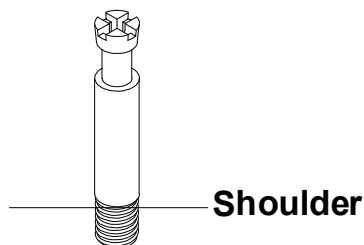

Shoulder

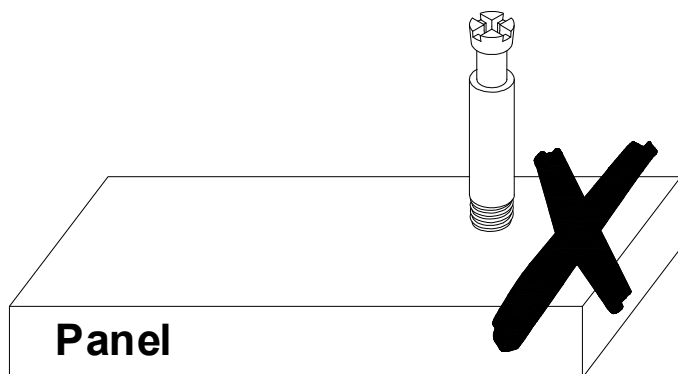 

Panel

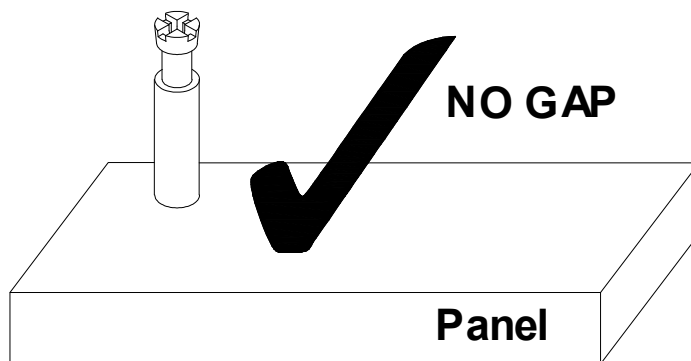 



NO GAP

Panel



Assembly Instructions

  Step 1

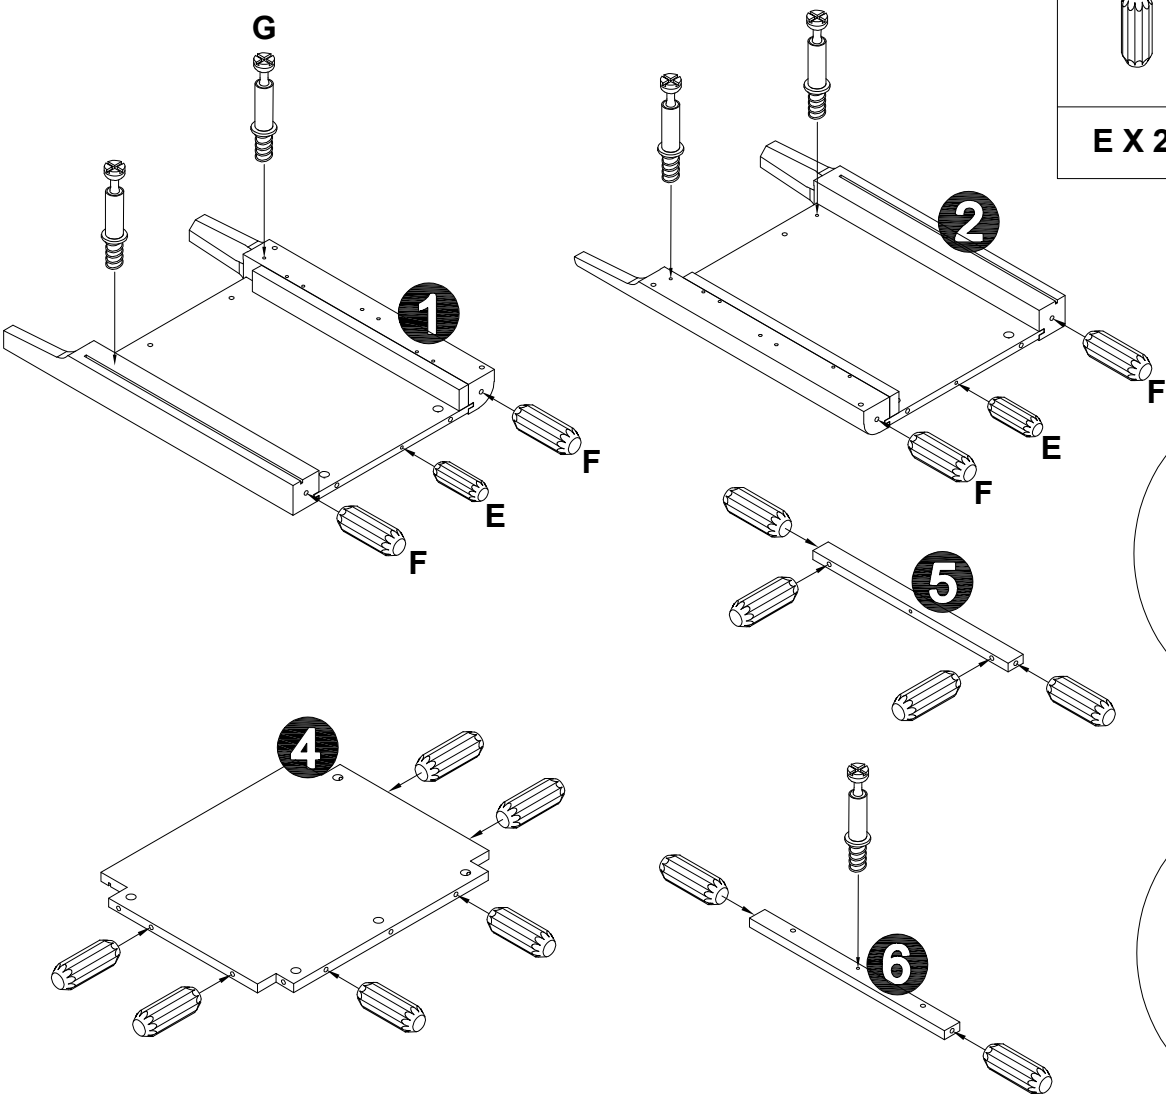

		
EX 2	FX 16	GX 5

  Step 2

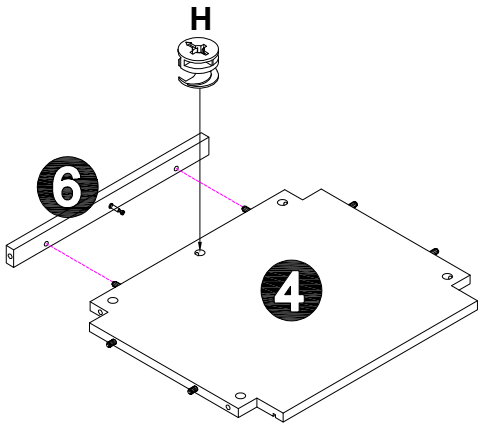
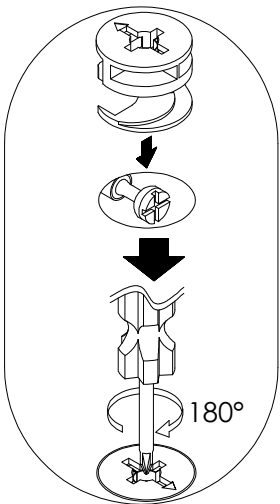


HX 1

Step 3



 
 
H X 4

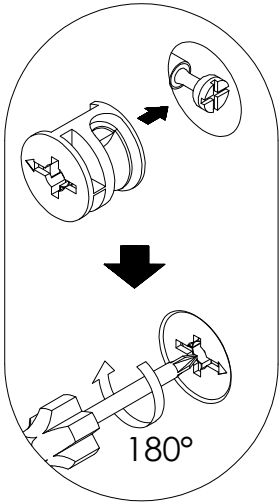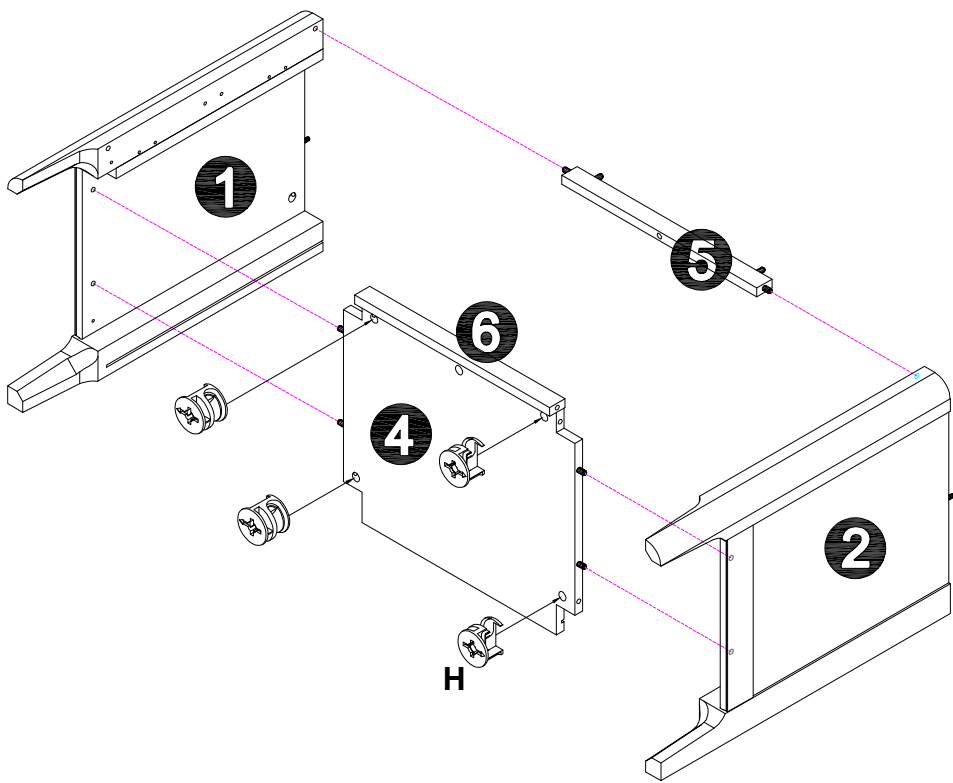

Step 4



  N X 4

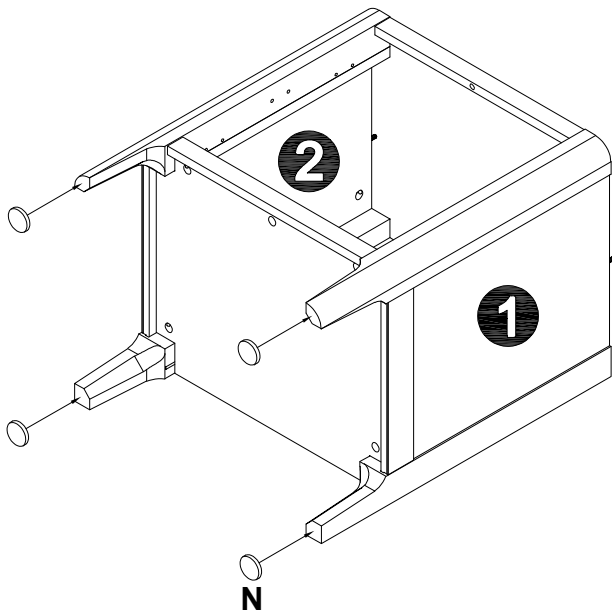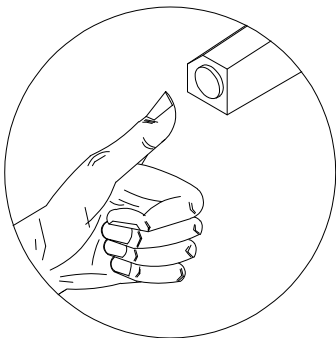



Step 5



Step 6



  G X 4

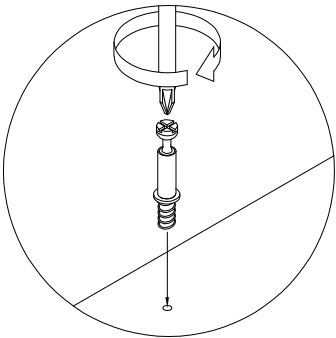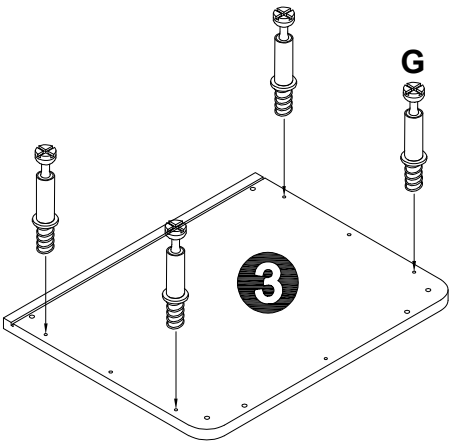



Step 7





J X 4




  P X 4

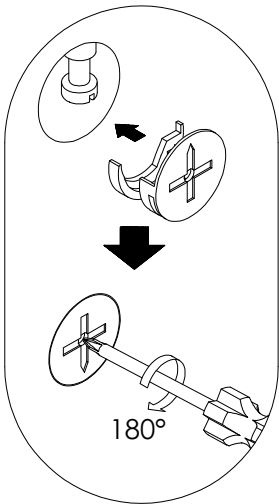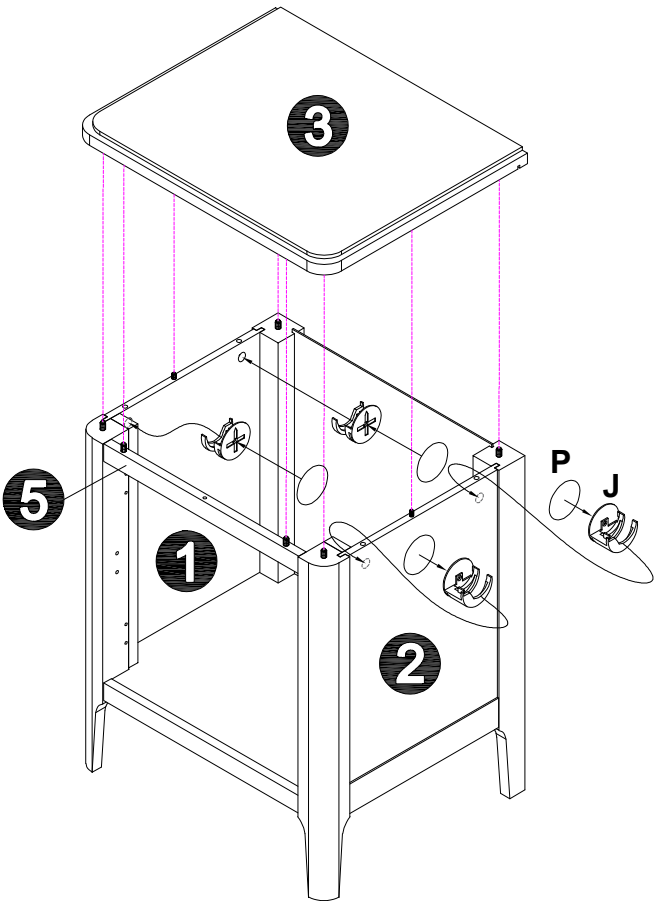


 
 
Step 8

	
D X 1	Q

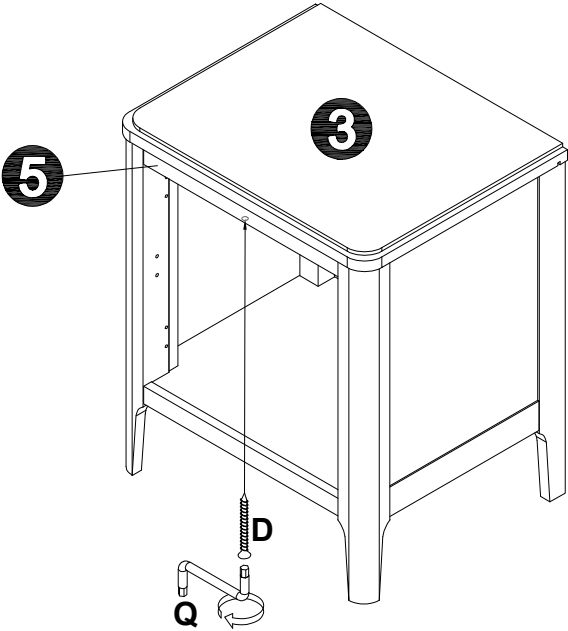 

 Step 9


	
A X 4	K X 2SETS

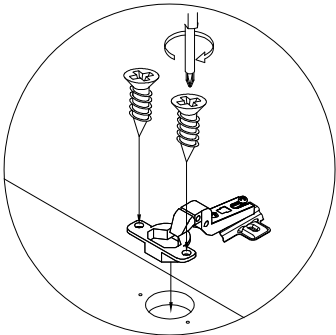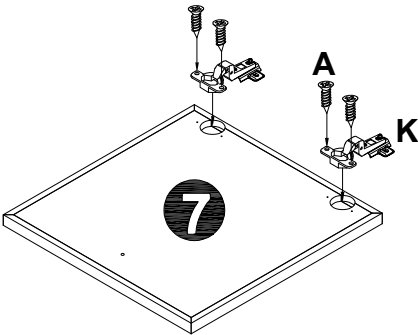  





Step 10

		
C X 4	L X 1	M X 1

 
OPTION 1 (DOOR RIGHT)

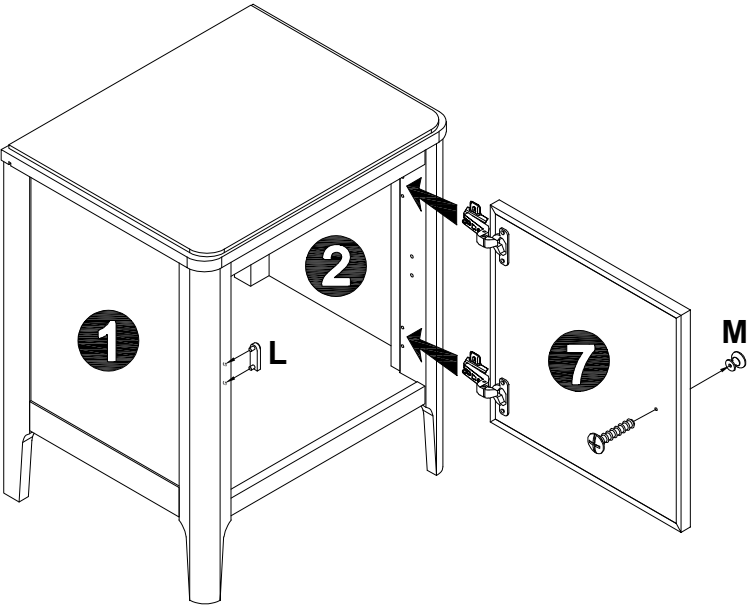


OPTION 2 (DOOR LEFT)

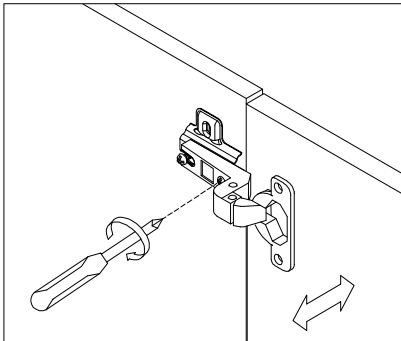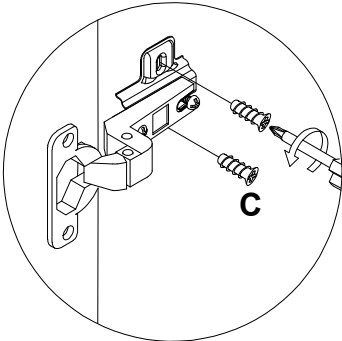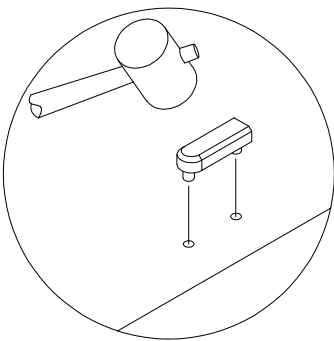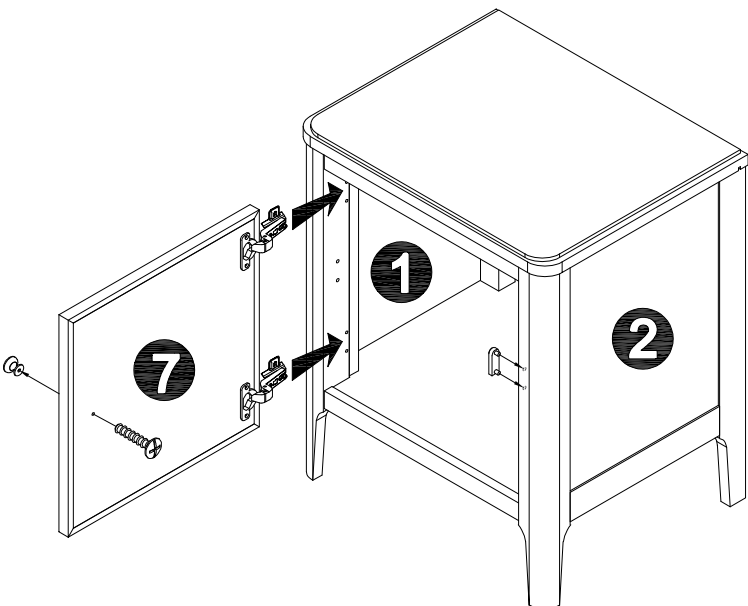    

 A. Lateral adjustment
by screw adjusting

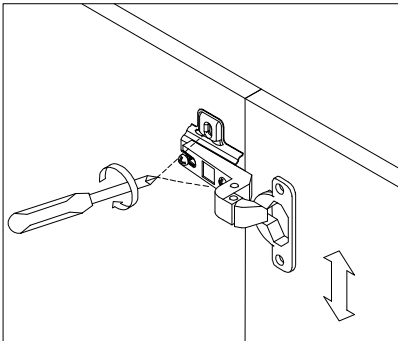


 
B. Vertical adjustment via
slot in the mounting plate

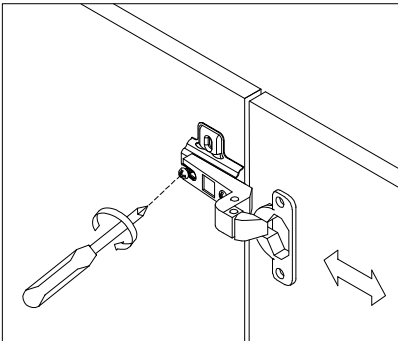

C. Front-to-Back by the slacking
the hinge arm mounting screw

Step 11

	
B X 4	R X 4

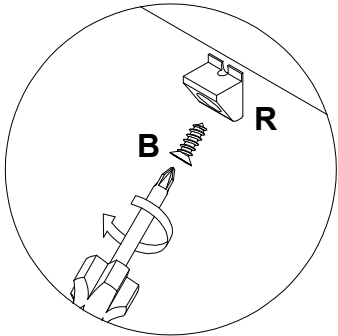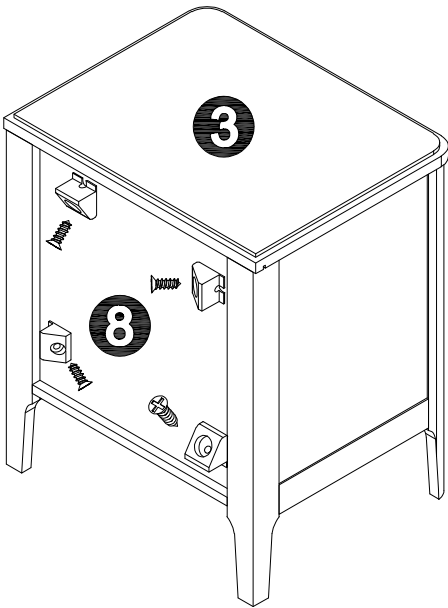  

Step 12

WALL

