

# **ASSEMBLY INSTRUCTIONS**

**Description:** April Accent Bench

### Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

#### Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

#### Parts List

Item	Description		QTY
P1	Bench Top		1
P2	Right Leg		2
P3	Left Leg		2
P4	Stretcher		2

#### Hardware List


Item	Description		QTY
H1	Bolts Ø5/16"*2-3/8"	0	8
H2	Lock Washer Ø5/16"	0	8
H3	Flat Washer Ø5/16"*3/4"	9	8
H4	Allen Wrench 4mm		1
H5	Screws M4*1-1/2"	Ømmm-	4
H6	Screwdriver (Not provided)		1

## DISCLAIMER:


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

#### **Assembly Procedures:**


Step 1. Assemble the Bench on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Assemble Leg (P2) to Bench Top (P1). Do not tighten Bolts.

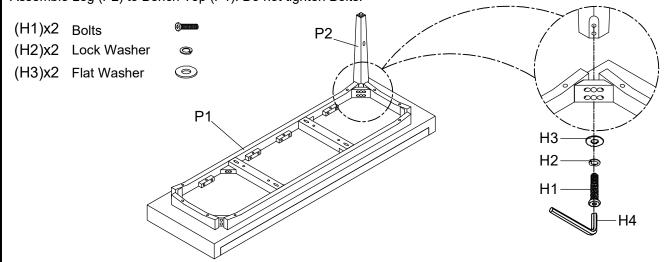

Step 2. Insert Stretcher (P4) to Leg (P2) & (P3) then attach (P3) to Bench Top (P1). Tighten all Bolts. Then secure Stretcher (P4) to Leg (P2) & (P3) as shown below:

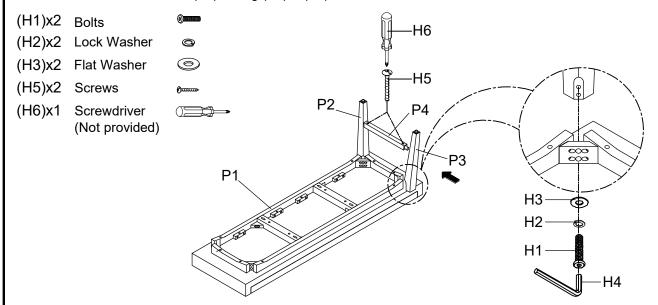


Step 3. Repeat Step 1 & Step 2 for the rest Legs and Stretcher

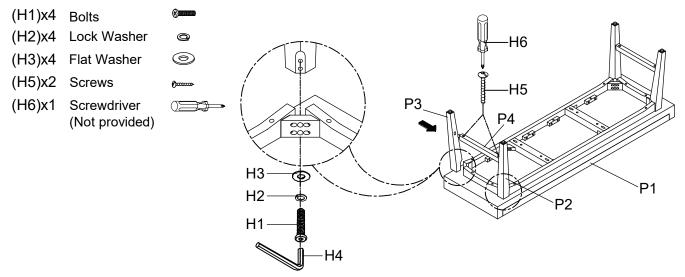

# Step 4:

- a. Turn the Bench over and place it upright on a level surface.
- b. Assembly is complete.

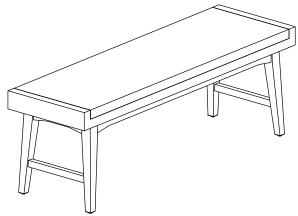

ADDITIONAL NOTE ABOUT SAFETY:

**BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.** 

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase