

ABOUT MOTION SENSING OUTDOOR WALL SCONCE


- 1. The sensor detects across a detection range of 120 degrees. Detection distance up to 20 feet.
- 2. It may cause to flicker with non-dimmable light bulbs since the sconce has different brightness, so please choose a incandescent bulb or dimmable led bulb.

FUNCTION AND OPERATION

- 1. Preheating mode: First turn on the power of the main fuse or circuit breaker box, and the light will immediately turn on (100% brightness).Wait for about 15 seconds, allowing the sensorAfter preheating, the indicator light will automatically enter TEST mode.
- 2. Test mode: In test mode, the light will be on at low brightness (40% brightness).When motion is detected, the light will turn to high brightness (100% brightness) and stay on as long as the motion continues.When motion is no longer detected, the light will return to low brightness after 5 seconds.The time for TEST mode is approximately 120 seconds, and then the indicator light will automatically enter the TWO-STAGE mode.
- 3. Two-stage mode: At dusk, the lights will turn on at low brightness (40% brightness).When motion is detected, the lights will turn to high brightness (100% brightness) and stay on as long as the motion continues.After 120 seconds, when motion is no longer detected, the lights will return to low brightness.When you receive the lantern, this mode will be automatically set.The lights will automatically turn off at dawn.
- 4. Single-stage mode: At dusk, the lights will not turn on. When motion is detected, the lights will turn on at high brightness (100% brightness) and stay on as long as the motion continues.After 120 seconds, when motion is no longer detected, the lights will return to no brightness.The lights will automatically turn off at dawn.
- 5. How to switch lantern mode:Switch the mode of the indicator light by pressing the key switch in front of the sensor.Press once, the LED indicator flashes once, the light becomes 100% brightness for 5 seconds and then turns off. The fixture enters ONE-STAGE mode.Press once, the LED indicator flashes twice, the light becomes 100% brightness for 5 seconds, and then becomes 40% brightness.The fixture enters a two-stage mode.
- 6. Dusk mode: Within 2 seconds, the wall switch is turned "OFF-ON" (turned off and turned back on), the LED indicator flashes 6 times, the light will turn to dusk mode, maintaining 100% brightness for 6-8 hours, and automatically turning off at dawn, returning to the original one- or two-segment mode.

ATTENTION

- 1. No matter day or night, no matter in any mode, the product needs to re-enter the test mode every time when you press the key switch on the sensor.
- 2. TWO-STAGE mode when you receive the product.
- 3. The product has the memory function. After power off and reset, it will keep the ONE-STAGE or TWO-STAGE mode before power off.
- 4. To ensure the above functions work properly, keep the wall switch in the "ON" position at all times (including during the day).
- 5. When the wall switch is turned off and re-opened 10S later, the lantern will re-enter the warm-up and test mode.
- 6. TWO-STAGE mode must be used with incandescent bulbs or dimmable LED bulbs because it displays different brightness variations. ONE-STAGE mode can be paired with any E26 base bulb (60 watt MAX)
- 7. The installation environment should not have other strong lighting effects. If you buy two or more fixtures at the same time, please make sure that the mounting distance between your two sensor wall lights is ≥ 5ft to ensure that the sensors can work properly.

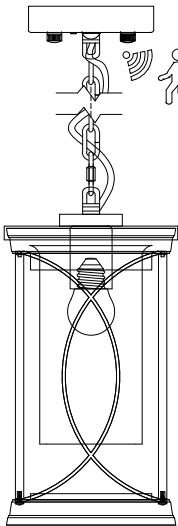

RELATED TO INSTALLATION

GENERAL

- * * * * *
- 1.To ensure the success of the installation, be sure to read these instructions carefully before beginning.
- 2.Before installations, prepare the required tools, such as Blade screw driver, Adjustable wrench, Step ladder, Wire cutter.
- 3.All electrical connections must be in accordance with the National Electrical Code. Qualified licensed electricians are required to conduct the installation of electrical wiring.
- 4.The outlet box that is connected to the lighting must be directly supported by the building structure.
- 5.Before starting the installation, disconnect the power to prevent electrical shock.
- NOTE:The important safeguards and installations appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors which can not be built into any product. There factors must be applied by the person(s) caring for and operating the fixture.
- * * * * *

INSTRUCTIONS

- 1.Take out all lamp parts. The picture below shows the exact items that you receive in this product. Please note that this picture may look different from the computer generate part table. The parts in the part table are not assembled but some parts in this part picture are assembled, so there may be fewer items in the picture than in the table.
- 2. Part Table
- Please note: The parts in this table are completely unassembled, for illustrative purpose. In the actual product that you receive, some parts are assembled and attached together.

CANOPY MOUNTING & WIRE CONNECTION ASSEMBLY STEPS

Junction Box

Green Grounding

White(N)

Black(L)

Wire Nuts X 2

Ground Wire

Motion Sensor

Lock nut X 2

Bulb

Glass

ON	1	2
TYPE		
QTY	3pcs	2pcs

E26 Max.60W
Suggested Dimmable Bulbs
(Not included)

CAUTION

- 1.Rated 120V/60HZ,E26 MAX 60W.
- 2.Care should be taken to avoid damage to the surface of lighting and wire, wearing gloves are remmended when installing.
- 3.Keep lighting away from acid, alkali and other corrosive chemical or gas,clean the lighting with clean soft cloth only.
- 4.Installation must be carried out by qualified electrician only.
- 5.Disconnect the power before installing, cleaning and replacing lighting.
- 6.Never cover the lighting when power is connected.