

## USER'S MANUAL Washing Machine

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and do better!**

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

 
**Follow Costway**

Visit us: [www.costway.com](http://www.costway.com)



## PARTS

### NAME OF PARTS

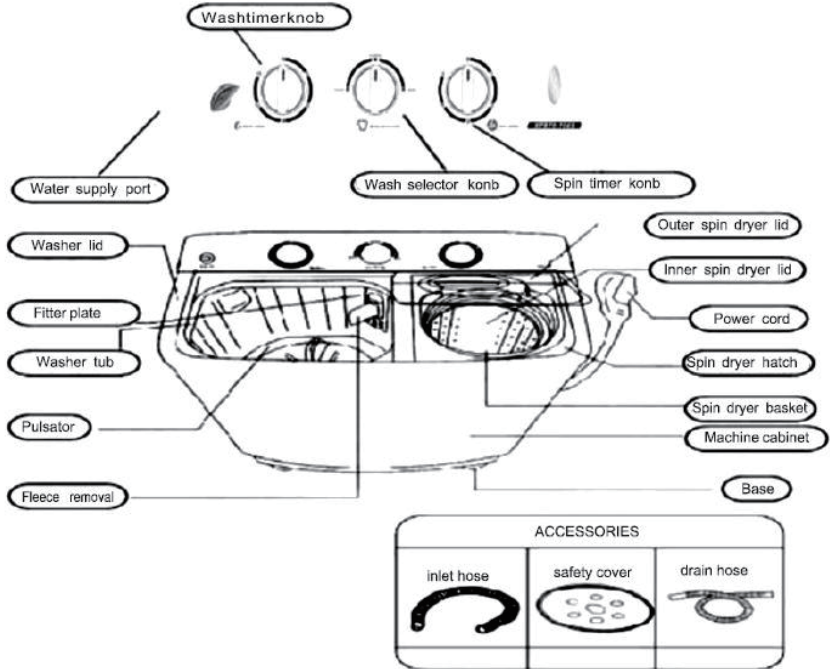

### FUNCTION AND FEATURE

PERFECT DESIGN AND FULL MODELS WITH THE PLASTIC AND ALUMINUM ALLOY BODY AND NEVER RUSTY WITHIN WASHING, DOUBLE WATER STREAM AND THE HAND WHEEL DESIGN GET THE CLOTHING MORE CLEAR. WASHING WITH THREE WATER STREAM, DISHING FIRE WAVE FORM NEW STREAM, GET THE CLOTHING OUT OF TWINING, HIGHLY CLEAN WITH LOWER FRAY.

DISSOLVE WASH POWDER QUIKUKLY AND THE HIGH CLEAN MORE THAN THE COMMON DOUBLE-TUBE WASHING MACHINE.

WITH HIGH FUNCTION AND QUIET SOUND, HAND WHEEL AND NEVER FRAY.

## INSTALL

### Install It In The Firmly And Smooth Place

- ★ Washing machine should be installed in the firmly and smooth ground, 2° level is allowed.
- ★ Put the washing machine deviate from the wall for more over 5cm, so that have no noise.







### Connect the intake pipe method





- ★ Put the intake pipe correctly.
- ★ Put the affusion spigot into the affusion hole.

 


### Before washing

	1. Take out the coin, nails or other things from the garments		2. Never put the garments which with the chemical reagent together with the cloths
	3. Turn out the inside cloth during washing the garments with the floss.		4. Put the good garments into the pocket during washing

## Washing operation method

 <p>Connect the intake pipe with the water spigot</p>	<p>Nut the wire into the plug</p> 
<p>Put down the drain pipe</p> 	<p>Put the garments into the washing tube then put into the wash powder</p> 

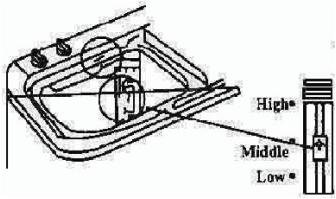


- ★ Choose the water level according to the quantity of the garments, high, middle and low.
- ★ For the water level of the double water stream, it's the best position of the middle and high.







- Choose the washing method  (Turn "current transform" switch")

Turn the current transform switch according to the quantity and the material of the garments, then choose the washing current in "normal, gently"

- Choose the washing time 

Turn the washing timer in sequence when the water reach the level, then the washing machine begin to work.

Choose the wash method	Gently	Normal
Material of the garments	Silk or floss clothing	Linen or very dirty garments
Washing time	3-5min	5-9min 9-15min
Water level		Quantities of the wash powder
High		40-57g
Middle		30-48g
Low		25-40g
<p> Drain </p> <p>When finish washing turn the current transform to the drain position and then begin to drain.</p> <p> Choose the drying time </p> <p>★ When finish drain,move the garments into the drying tube then cover the lid on the garments          ★ Cover the drying inside lid and the drying cover.          ★ Turn the drying timer in sequence and the washing machine begin to work</p>		
Sort of the garments		Drying time
Shirt (synthetic fibre)		1-2min
Underwear		3-5min
Work clothes		5min

## Second washing

- ★ Perform the washing procedure for two times, wash, drying and then wash and drying
- ★ After drain then begin to the second washing meanwhile save the electric and the water

## Second washing while affusion

 
Perform the washing procedure for two times, open the water spigot and then affusion the water into the washing tube.

## Drain notice



- ★ Press well the plastic cover on the garments strike the machine while drying.
- ★ Never drying while drain, should finish drain and then move the garments into the drying tube to avoid to damage the machine

- ★ Press well the plastic cover of the spin drier to avoid the garments fly out of the tube.
- ★ Never put the hands into the drying tube while working especially for the children.



## After finish washing

Pull down the plug, close the water spigot and then hang up the drain pipe.  
Clean the drying tube and open the plastic cover to make tube dry.

## Clean the filtrate netting

Please clean the filtrate netting after finish working every time



★ Pull down the filtrate netting and press down as the picture



★ Clean the filtrate netting into the water



★ First put the bottom into the hole and then press it

## Notice



Don't install it in the bath-room  
and other inclined ground



Don't pour the water on  
the switch.



When you use warm water,  
the temperature should not  
exceed 50 centigrade



Never brush the machine  
use gasoline, alcohol and  
other organic solvent.

## Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!  
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you  
**EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office: Fontana, California

UK office: Ipswich



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History

## *5 Star Rating*



We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.

THANK  
you  
☺

