


Warm Tips:

If the telescopic rod gets stuck in part B, you can install the finial to adjust the length more easily.



Step1 : Screw on the end caps of the B rod

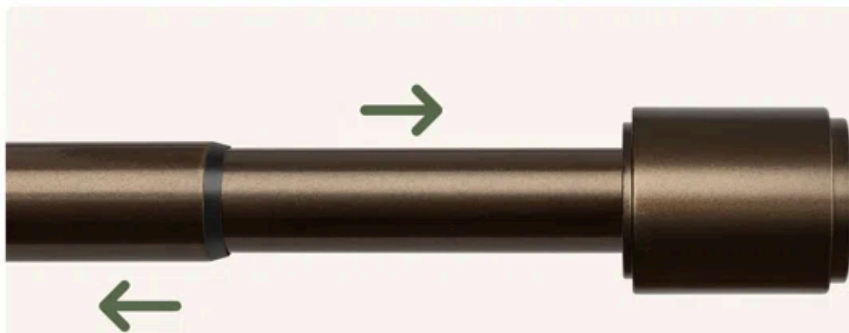

Step2: Pull out the telescoping rod B to adjust the rod length