

## AJ-DJ504717

 Please read this instruction manual carefully before using the product

# Work Uniquely Play Unbound

Installation takes  x 2~4hour

 
# Package Contents

Plates and  
iron components


Assembly tool kit

Instruction manual


## ⚠ Precautions

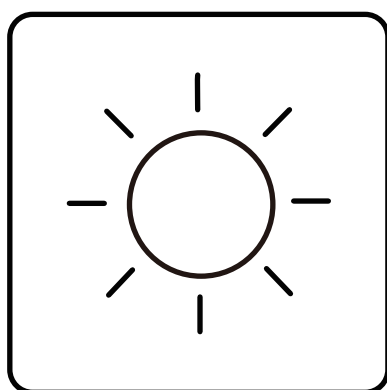

 
1. Avoid extended periods of direct sunlight exposure.

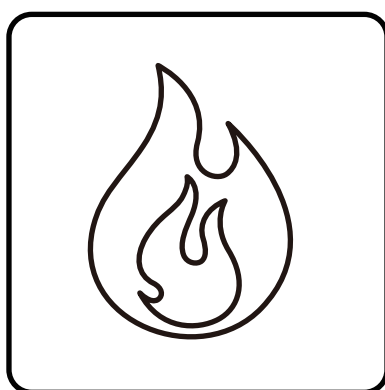

 2. Stay away from fire.

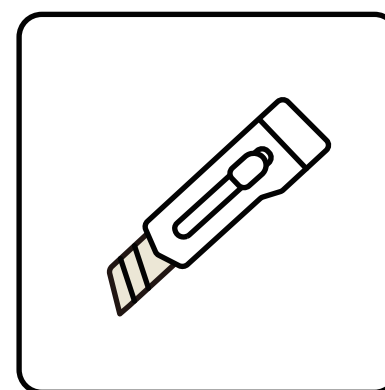

 
3. Keep away from sharp objects.

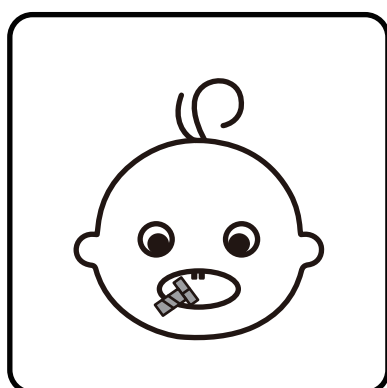


4. Keep infants and children away from assembly parts to avoid choking and suffocation.



 
5. Keep away from corrosive substances.

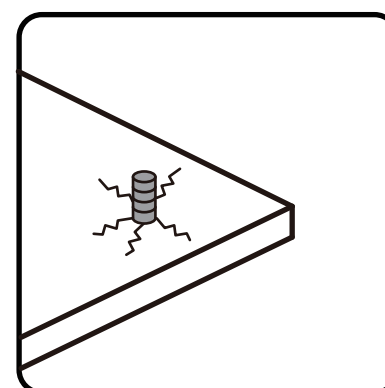

 
6. Pay attention to avoid over-tightening fasteners, as they may cause cracking within the board.

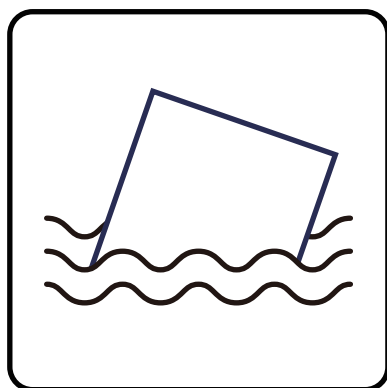

 7. Prevent objects from being damaged by immersion in water.

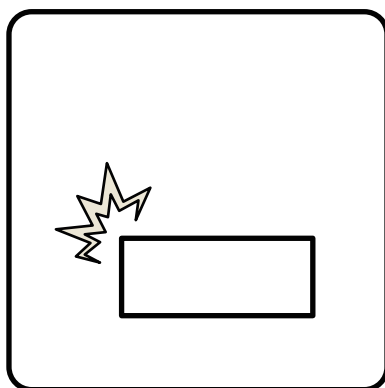


 
8. Prevent object collision and damage.

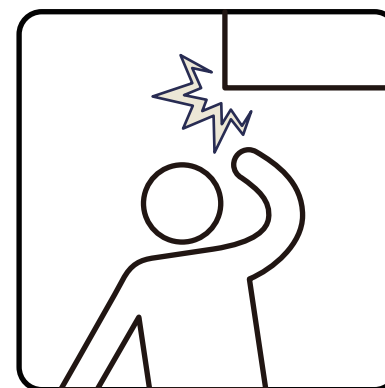


9. Be careful to avoid collisions.

## ⚠ Installation of Cams and Pins

  Be sure to use the proper screws to avoid damaging the parts

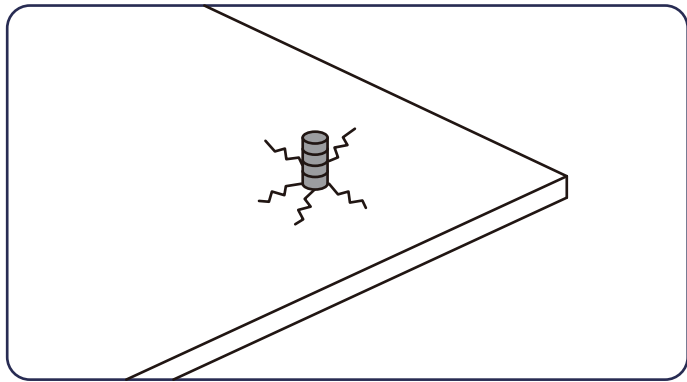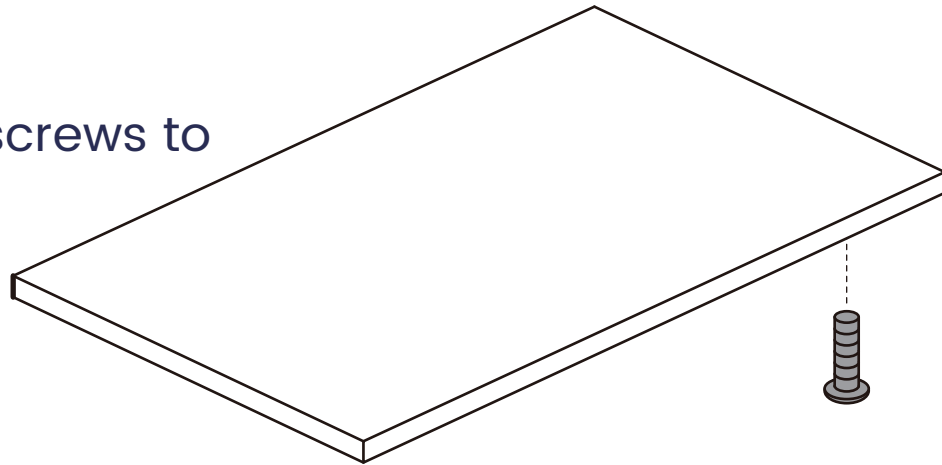

 
Wrong screws can cause the plank to crack

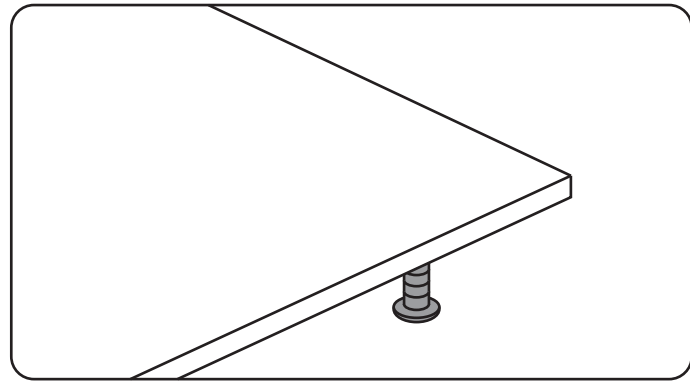


The right screw is the right size

## ⚠ Matters needing attention

 1. When installing the screws in the installation step, the screws do not need to be tightened.

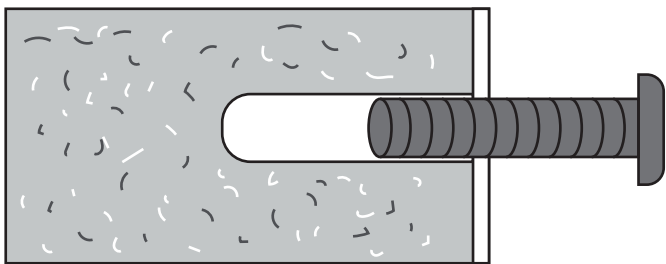


 2. After this installation step is confirmed and the holes are aligned, then tighten all the screws.

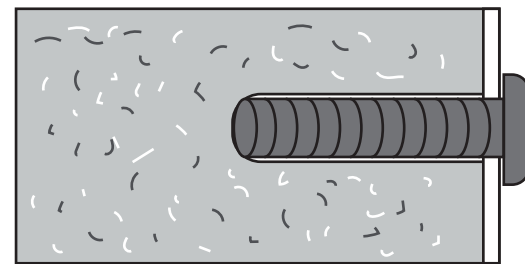


3. If the screws are tightened during the installation process, it will cause problems such as misalignment of the screw holes and misalignment of the board in subsequent installations

# Disassembly Diagram

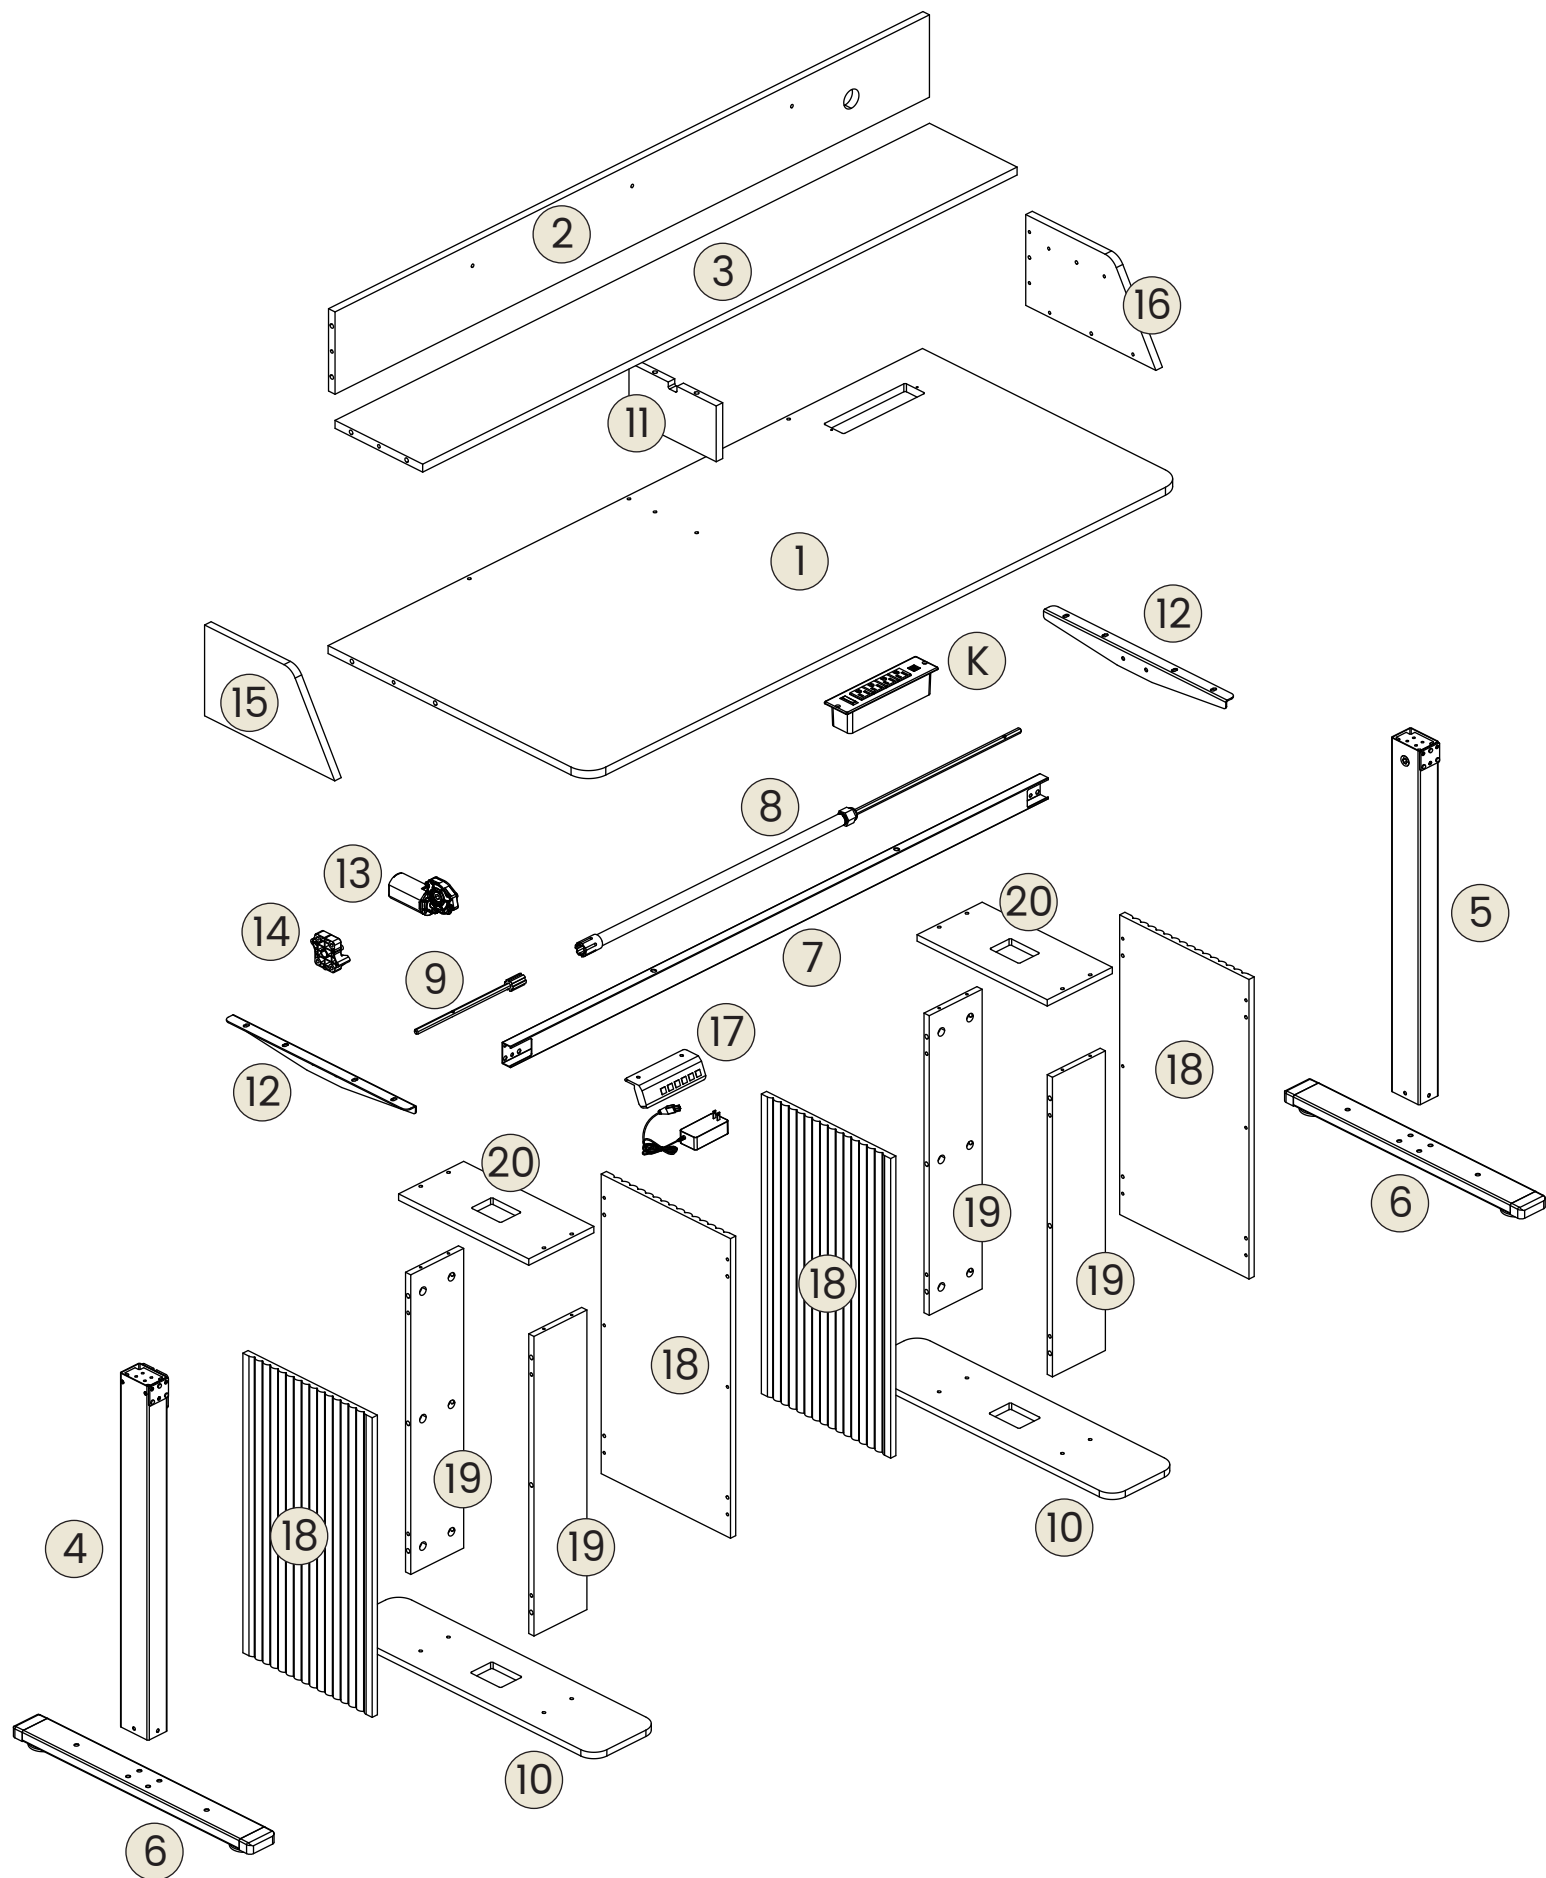 


# Package Contents

 
01

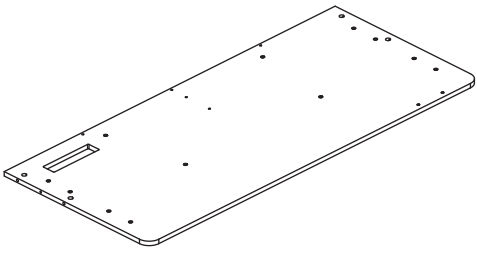


02

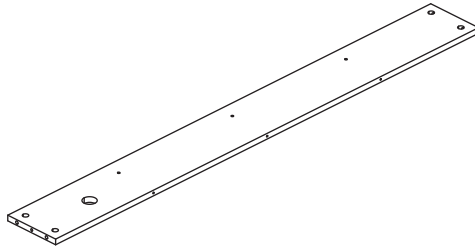 


03

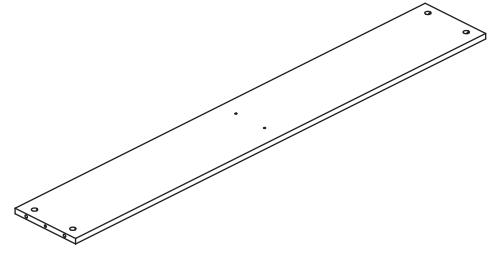 


04

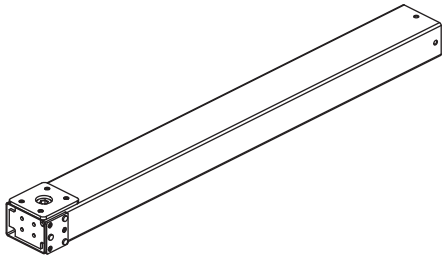 


05

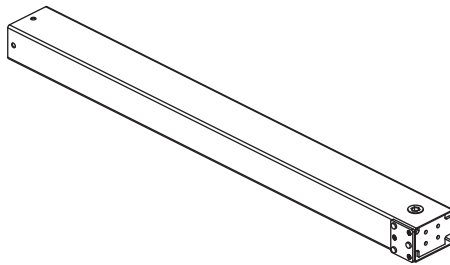 


06 x2

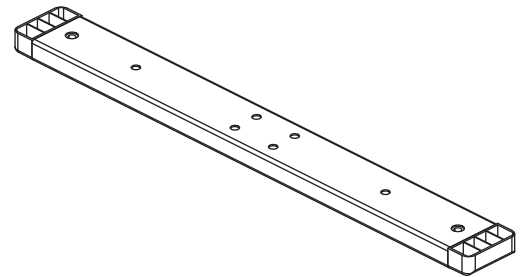 


07

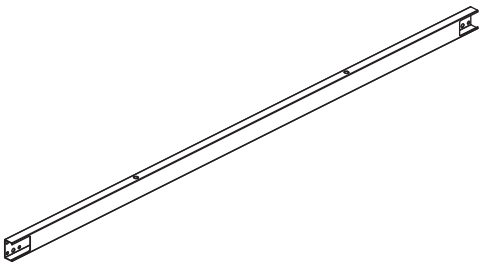 


08

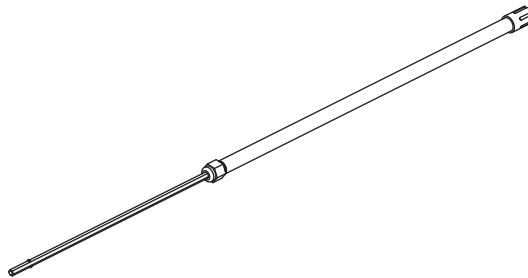 


09

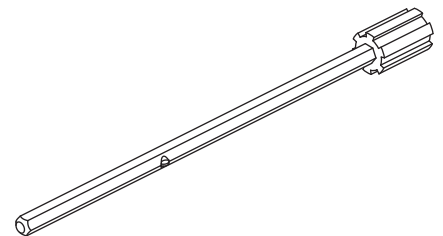 


10 x2

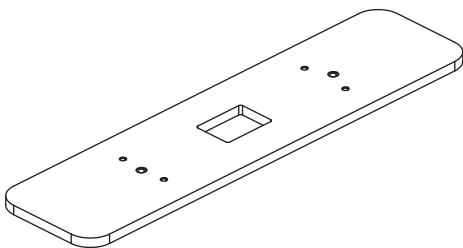 


11

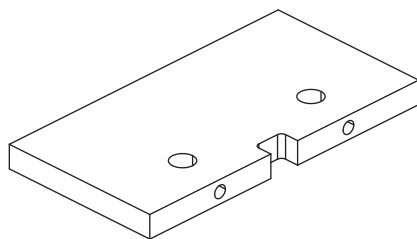 


12 x2

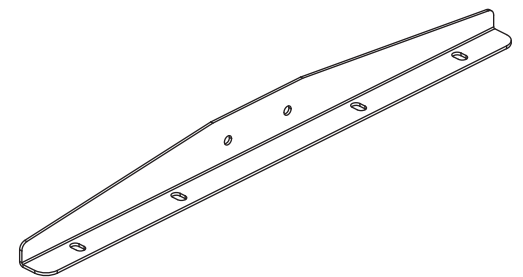 


13

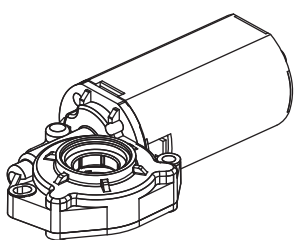 

14

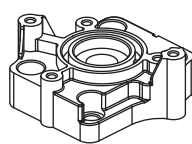 


15

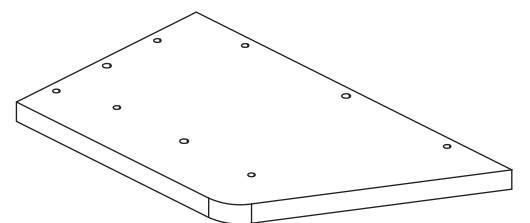 


# Package Contents

 
16

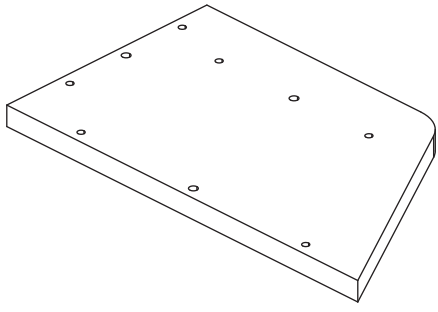


17

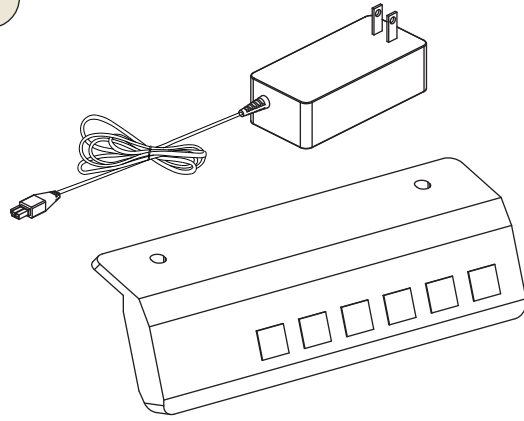 


18 x4

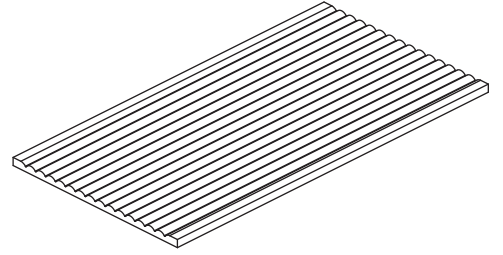 

  








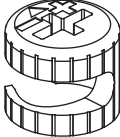
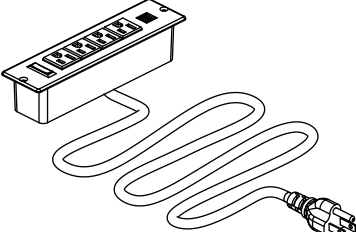
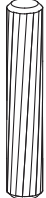
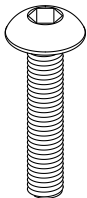
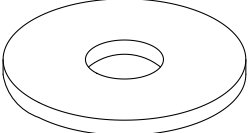
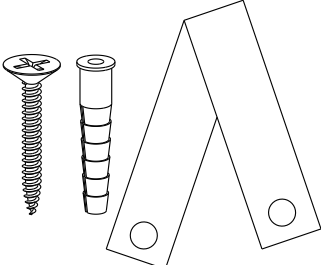

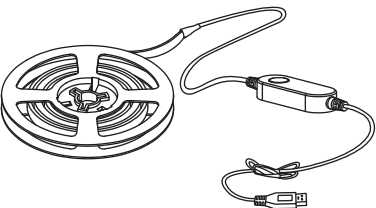
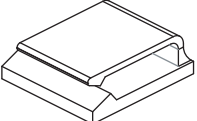
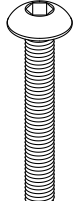
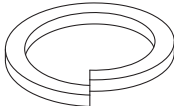
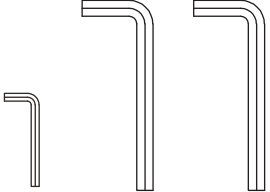
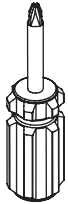
19 x4


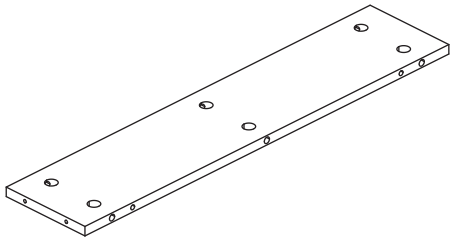


20 x2

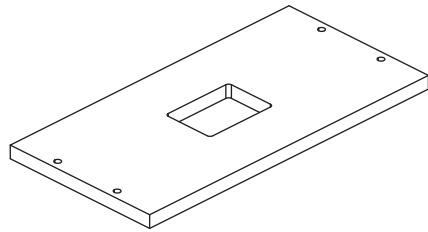

# Tool sheet
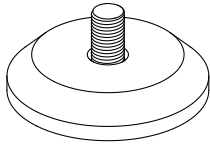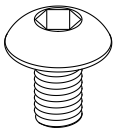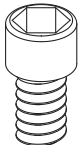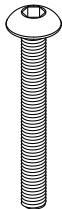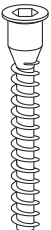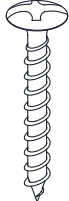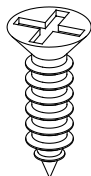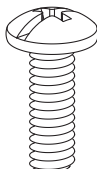  
<p><b>A</b> x4</p> 	<p><b>B</b> x14+2</p>  <p>M6x10MM</p>	<p><b>C</b> x10+2</p>  <p>M6x10MM</p>	<p><b>D</b> x2+1</p>  <p>M6x50MM</p>
<p><b>E</b> x24+3</p>  <p>ST5x40MM</p>	<p><b>F</b> x2+1</p>  <p>ST4x25MM</p>	<p><b>G</b> x2+1</p>  <p>ST4x12MM</p>	<p><b>H</b> x2+1</p>  <p>M4x12MM</p>
<p><b>I</b> x38+4</p> 	<p><b>J</b> x38+4</p> 	<p><b>K</b> x1</p> 	<p><b>L</b> x22+3</p>  <p>Ø6x30MM</p>
<p><b>M</b> x4+1</p>  <p>M6x30MM</p>	<p><b>N</b> x12+2</p>  <p>Ø20MM</p>	<p><b>O</b> x2</p> 	<p><b>P</b> x4</p> 
<p><b>Q</b> x1</p> 	<p><b>R</b> x4</p> 	<p><b>S</b> x8+1</p>  <p>M6x40MM</p>	<p><b>T</b> x8+1</p> 
 <p>3# 5# 5#</p>			

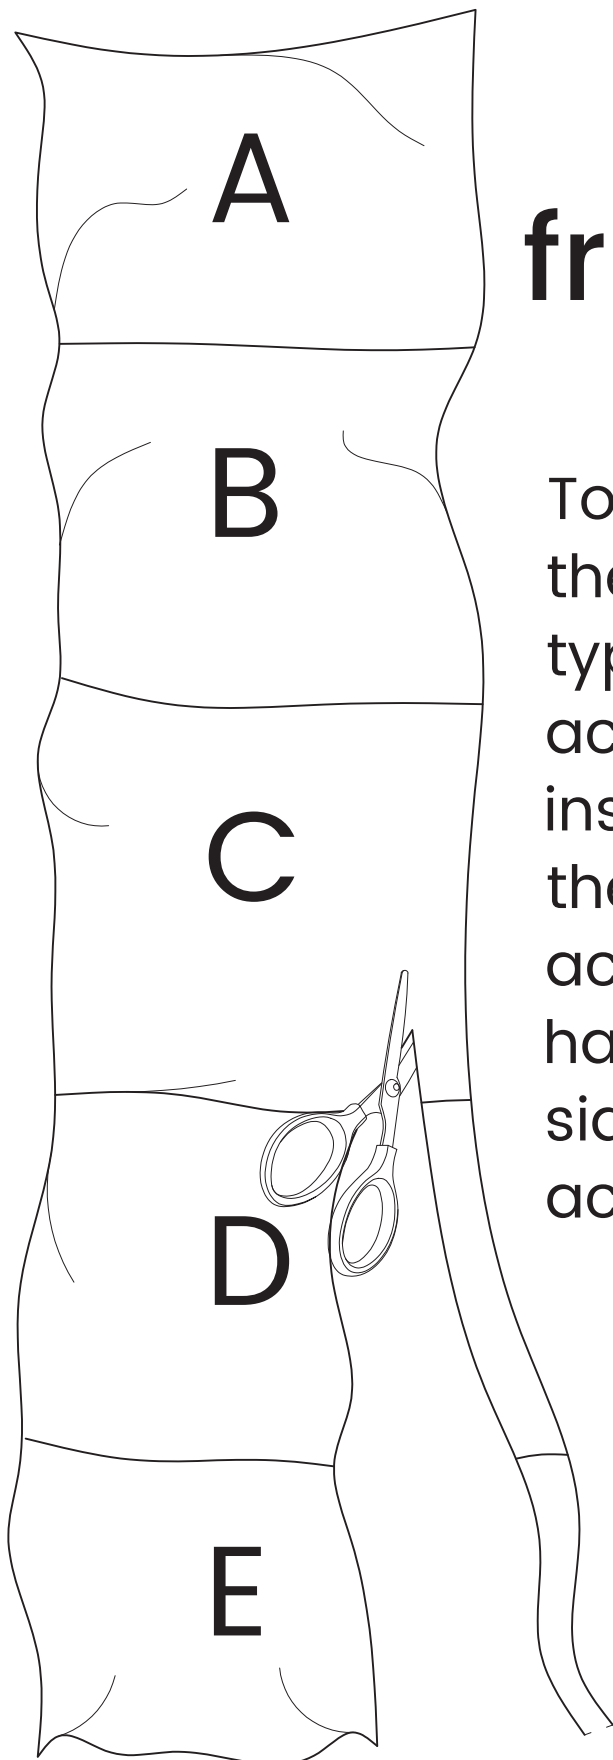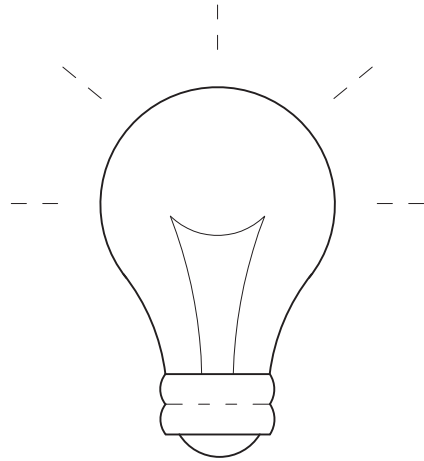


## friendly reminder

To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

# Assembly Instruction


# 1

 I x24

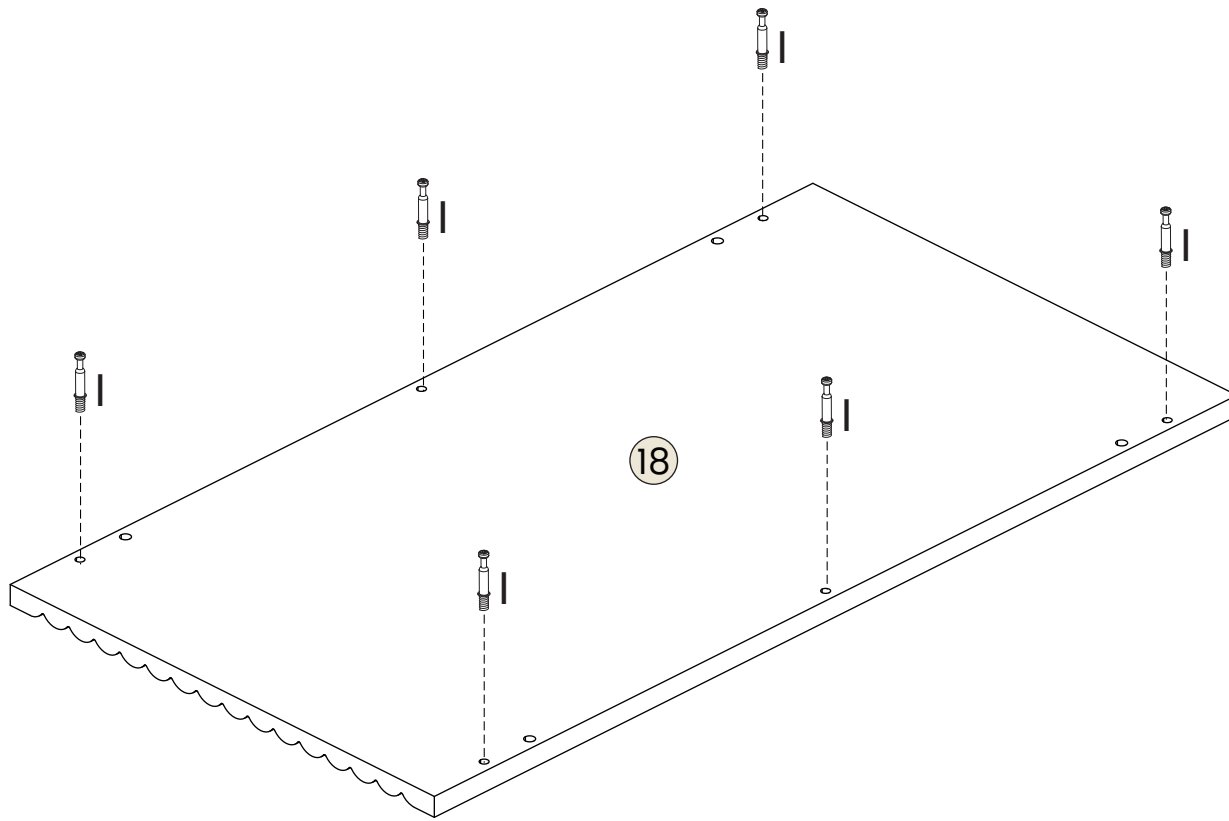


# X4

 
Installation instructions for eccentric rod

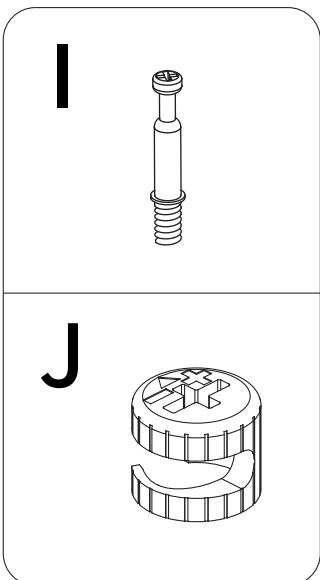


01

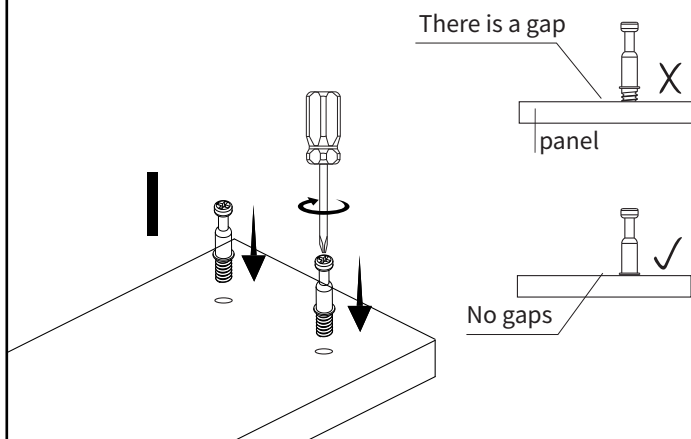 


02

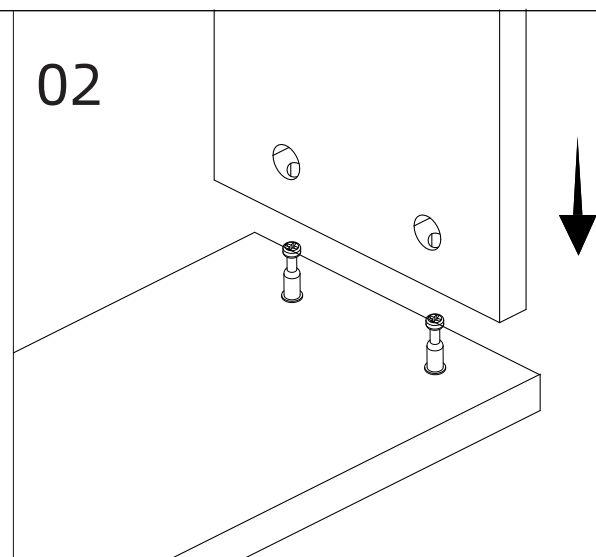 

03

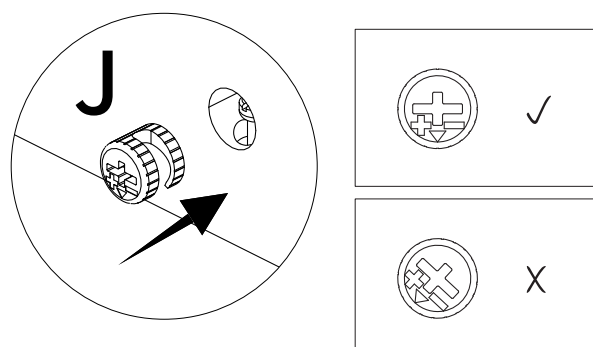 


04

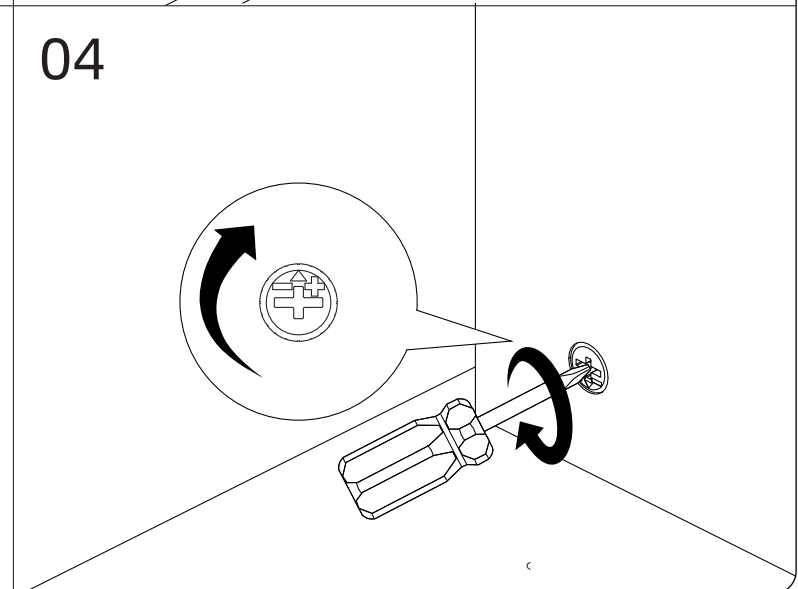 

# Assembly Instruction

 
## 2

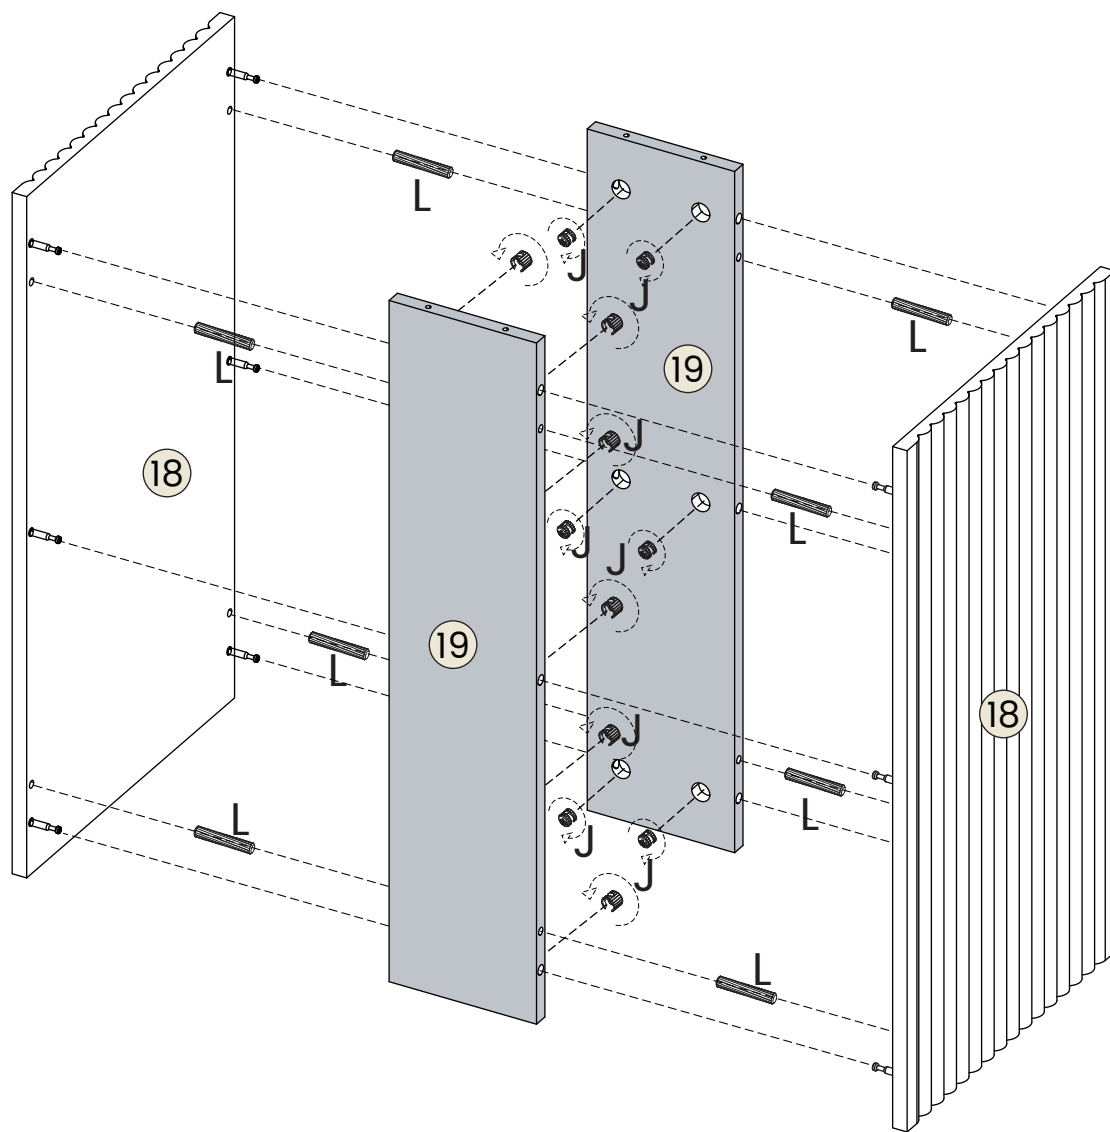

Jx24



 L x16




Φ6X30MM


## X2
 
## 3

Pay attention to the direction of the arrow indicating the hole position

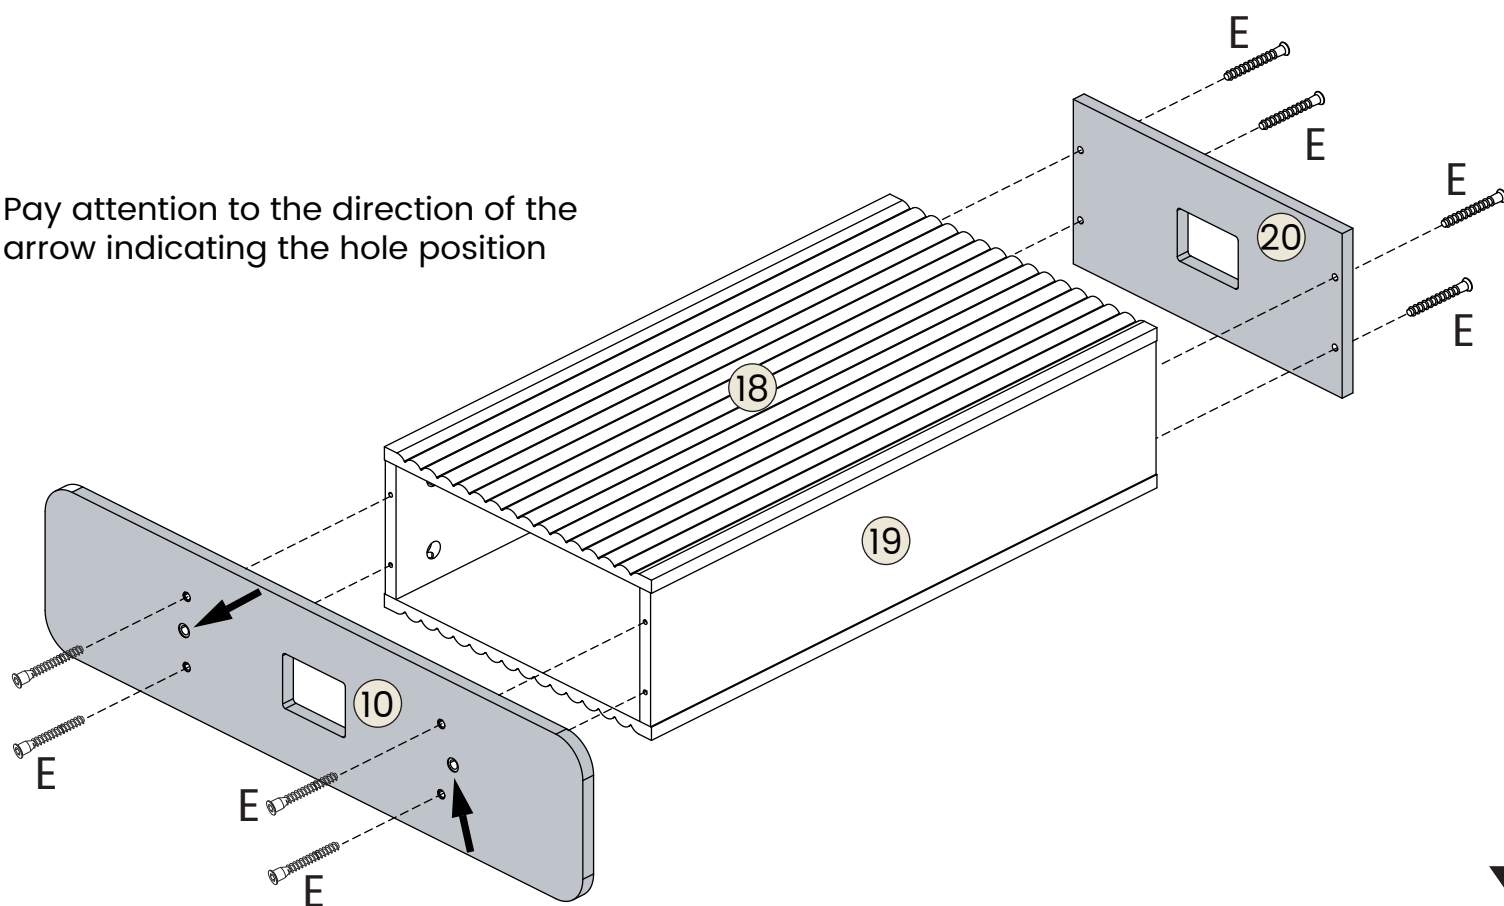

E x16



 


ST5X40MM

## X2

   
# Assembly Instruction

## 4

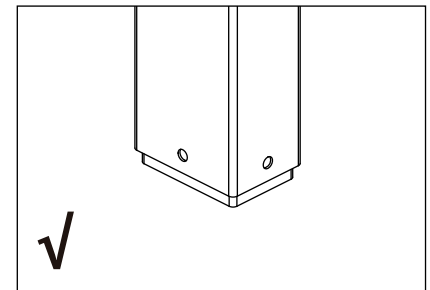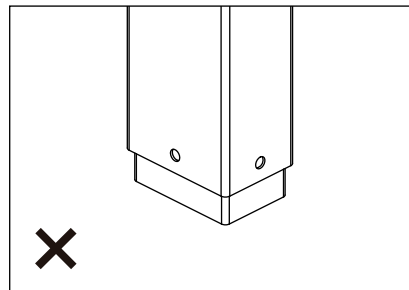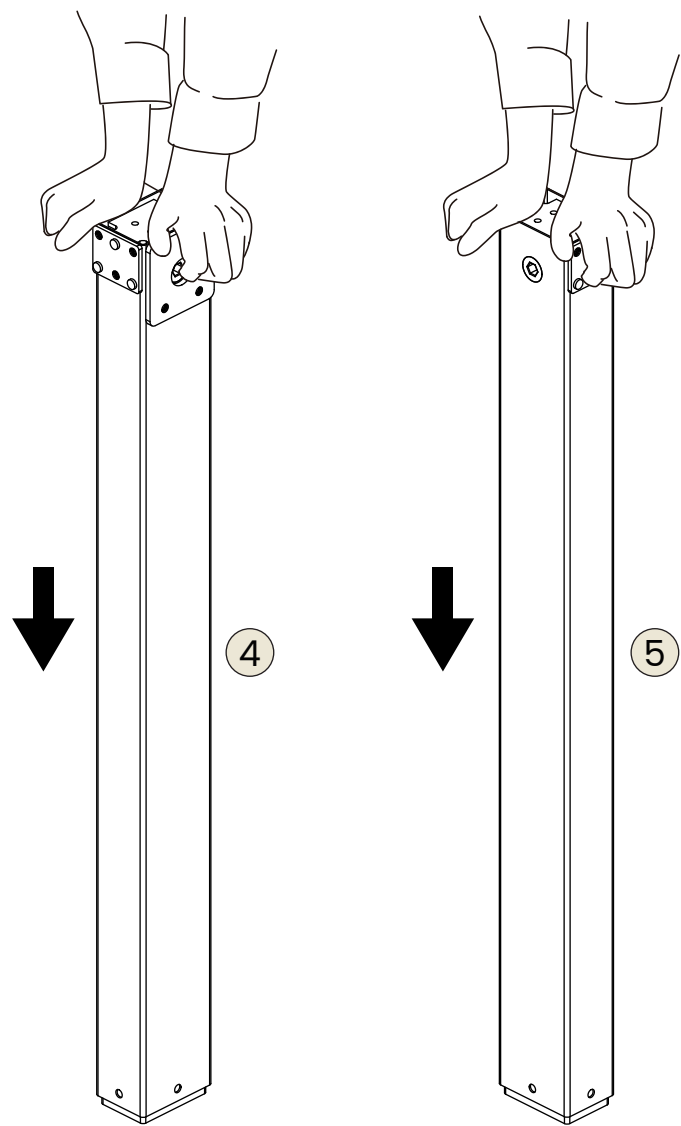


check whether the heights of the two table legs are the same. If there is a significant error, press down on them to ensure that the heights of the two legs are consistent.

## 5

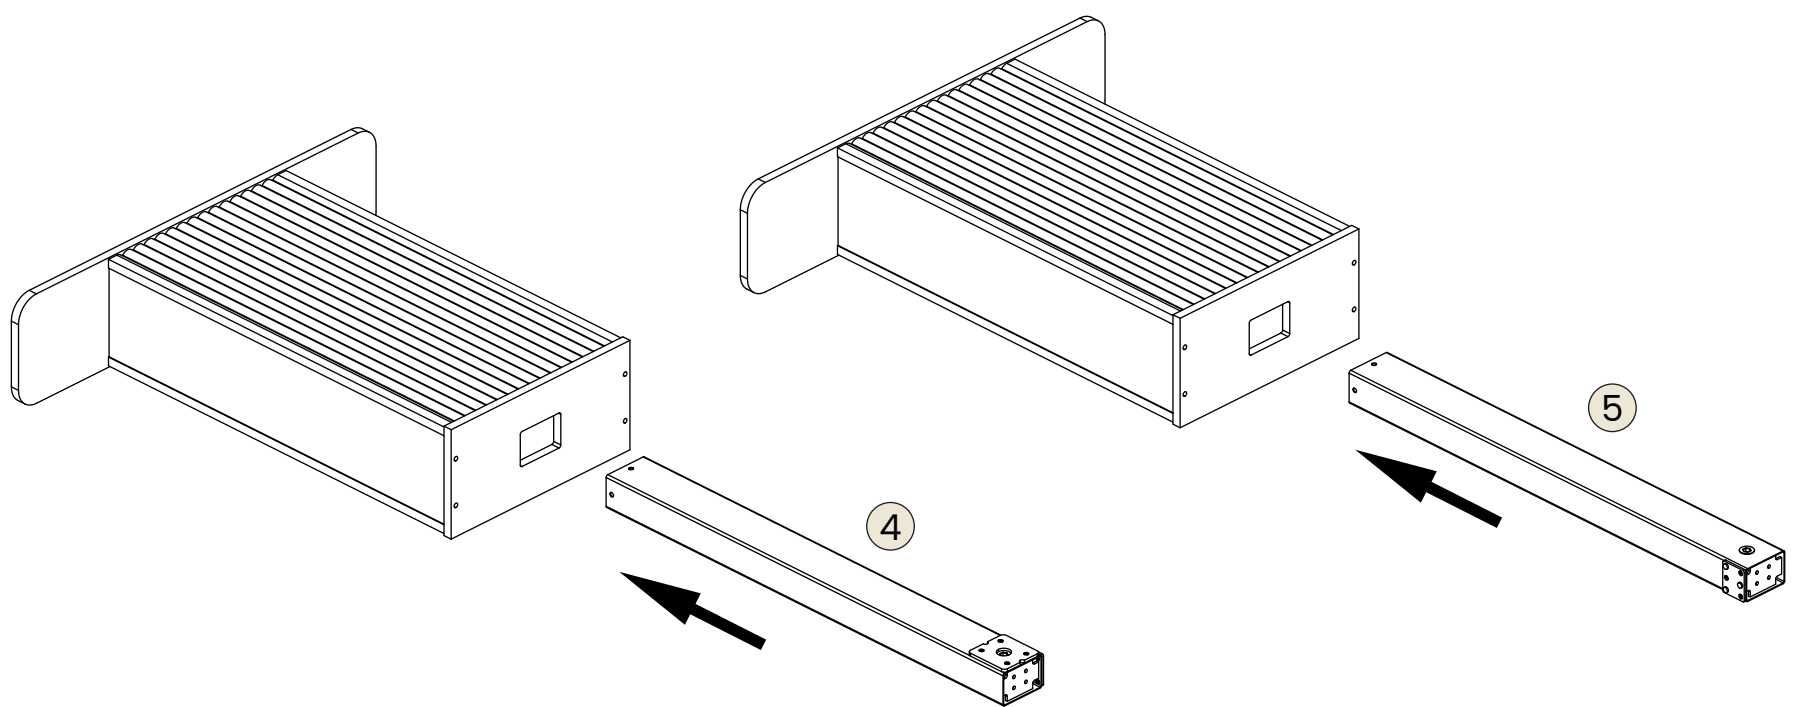 


1

 


Align with the slot and insert

 2




Gently push it to the bottom

 3



Lift it up with your hand and align it with the second slot to push it in

 
4




Installed in place

# Assembly Instruction

 
## 6

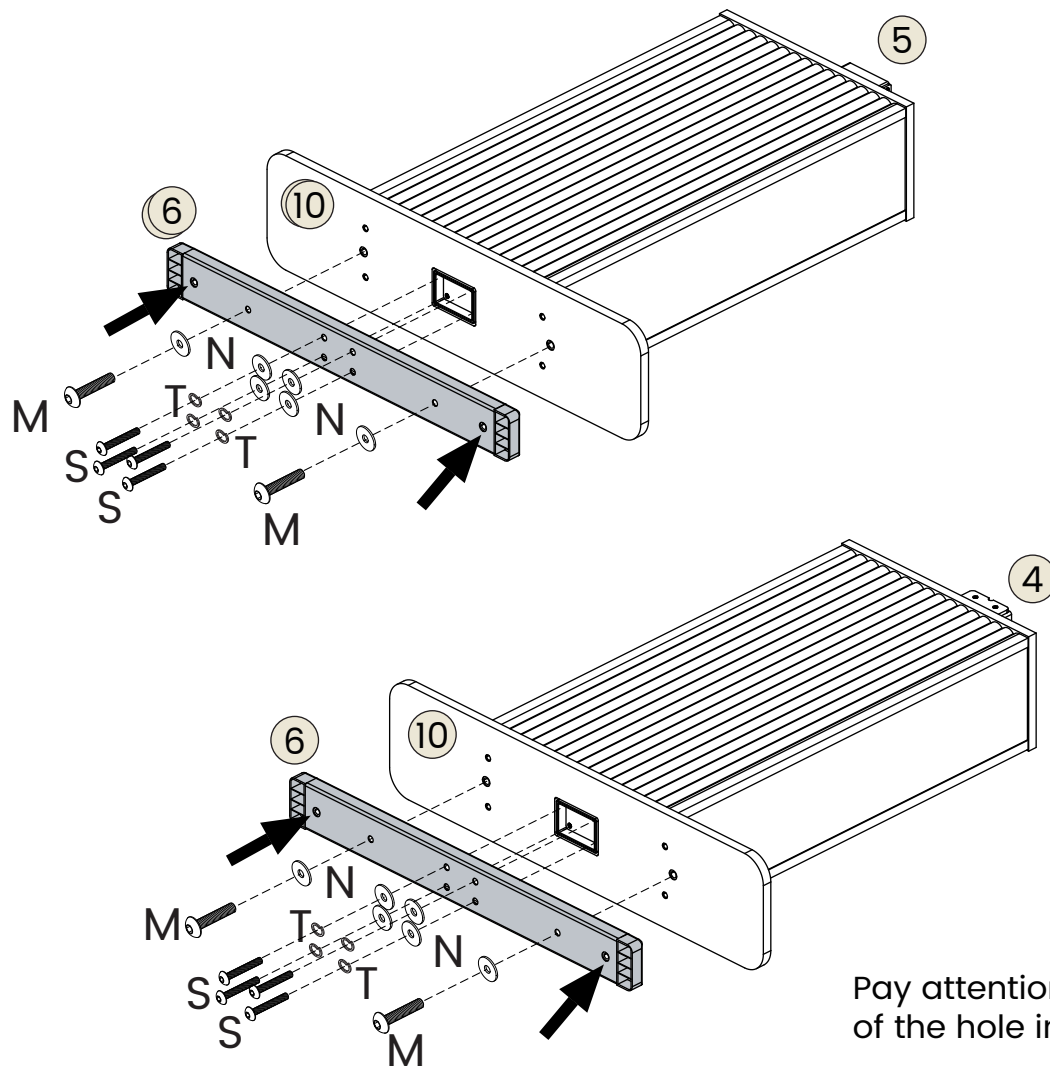

**T x8**

 


**S x8**

 


M6X40MM

**N x12**

 


φ20MM

**M x4**

 


M6X30MM

## 7

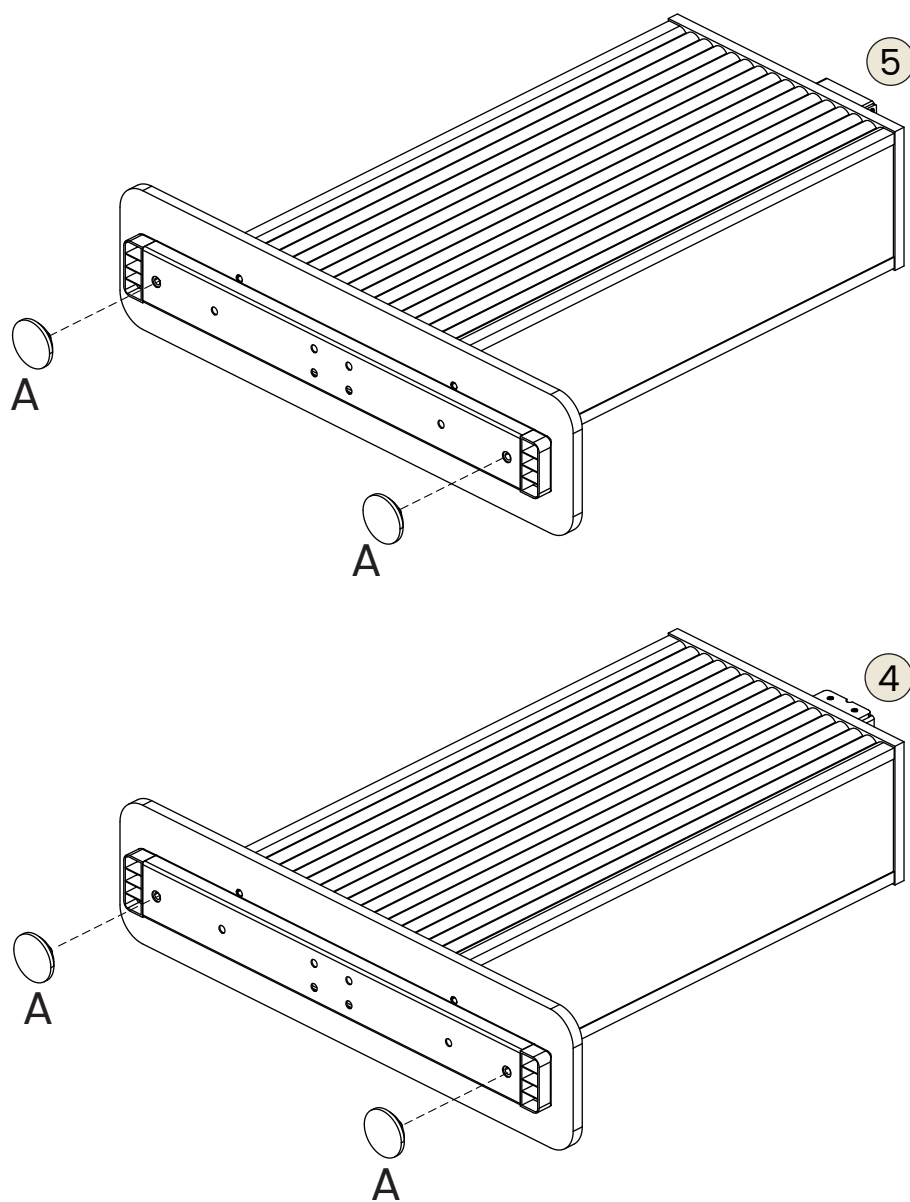 


**A x4**

 


# Assembly Instruction
 
## 8

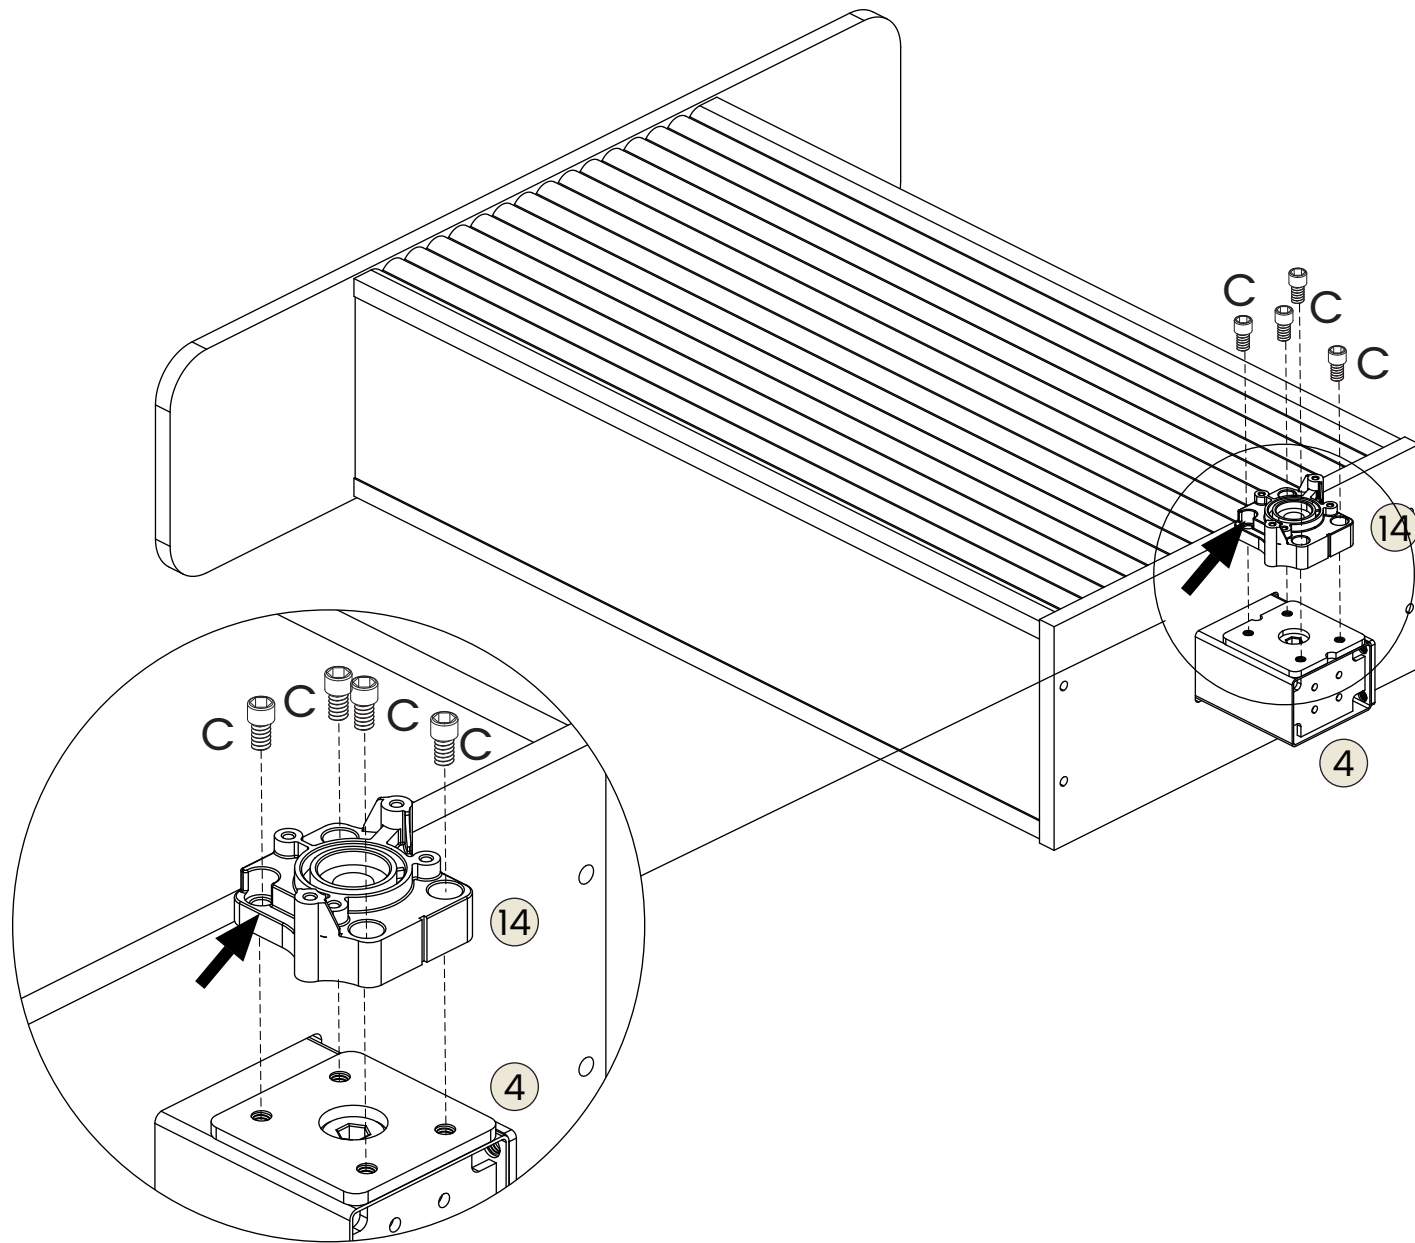


Cx4

 

M6X10MM

## 9

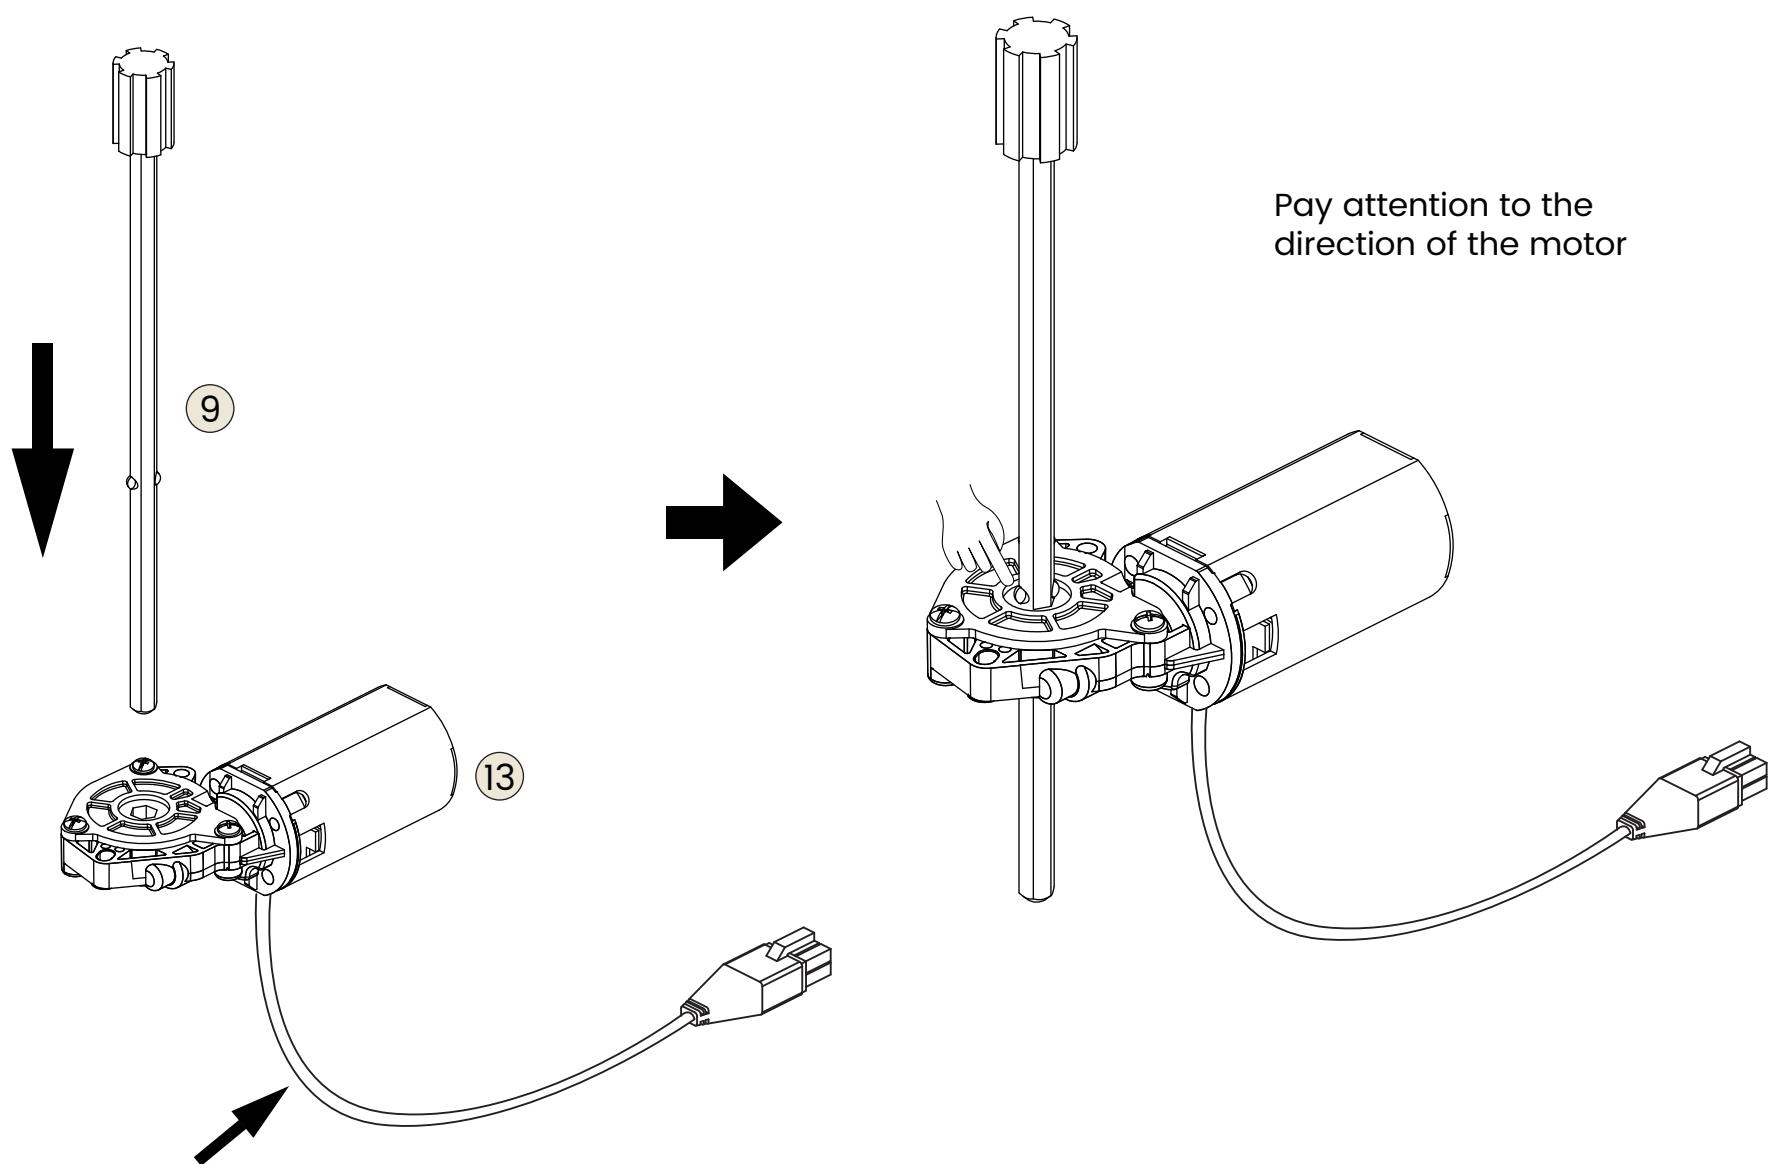 


Pay attention to the direction of the motor

# Assembly Instruction
 
## 10


When holding the No. 9 accessory, ensure it is aligned with the hexagonal hole on the leg to facilitate insertion. If the No. 9 accessory is tilted, it may be difficult to insert

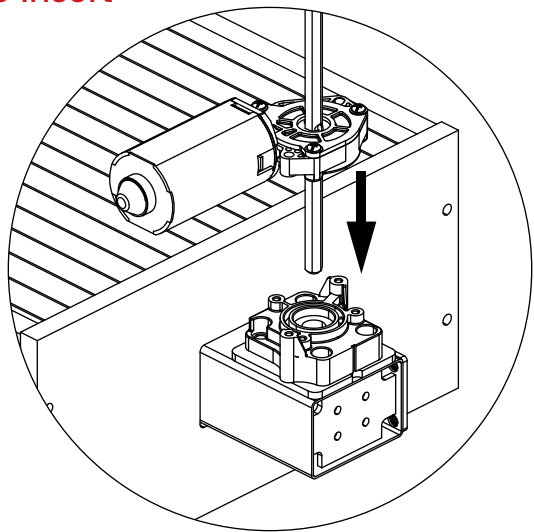


Firstly, determine the direction of the motor

1

 
2

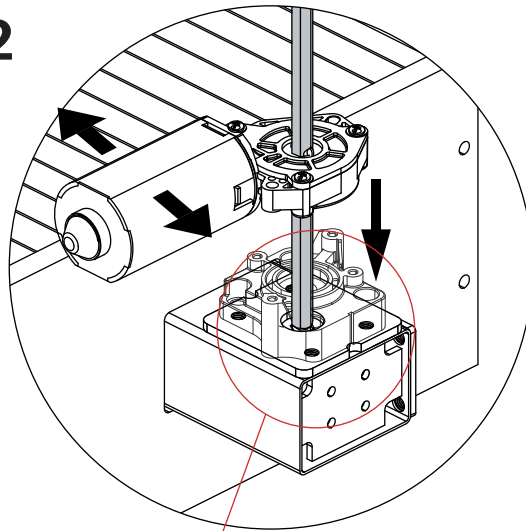

 Secondly, rotate the motor slightly until the hexagonal rod can be inserted

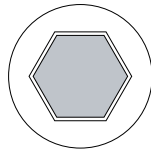

 Hexagonal rod aligns with hexagonal opening

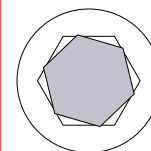


The hexagonal rod is not aligned with the hexagonal opening, resulting in subsequent inability to lift or lower

X


3

 The point indicated by the arrow is aligned with the motor

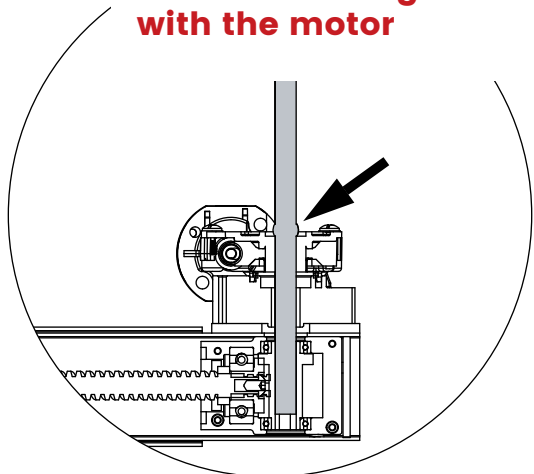


Thirdly, ensure that the hexagonal rod is fully inserted into the lifting device of accessory 4

 4

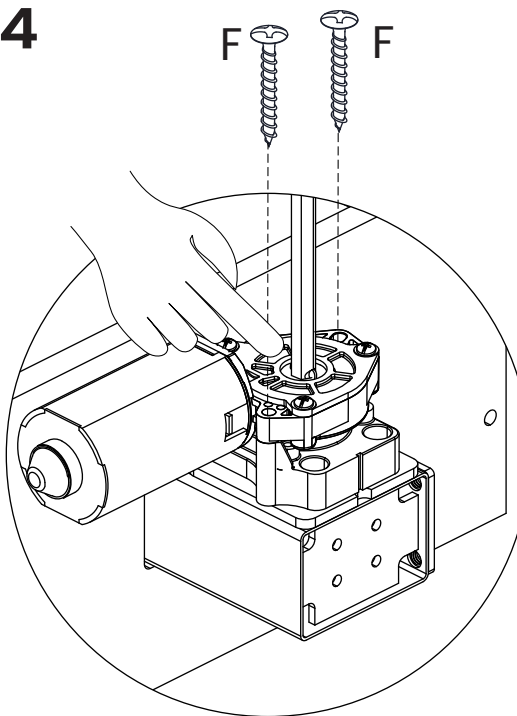


 Fourth, tighten screw F to secure the motor

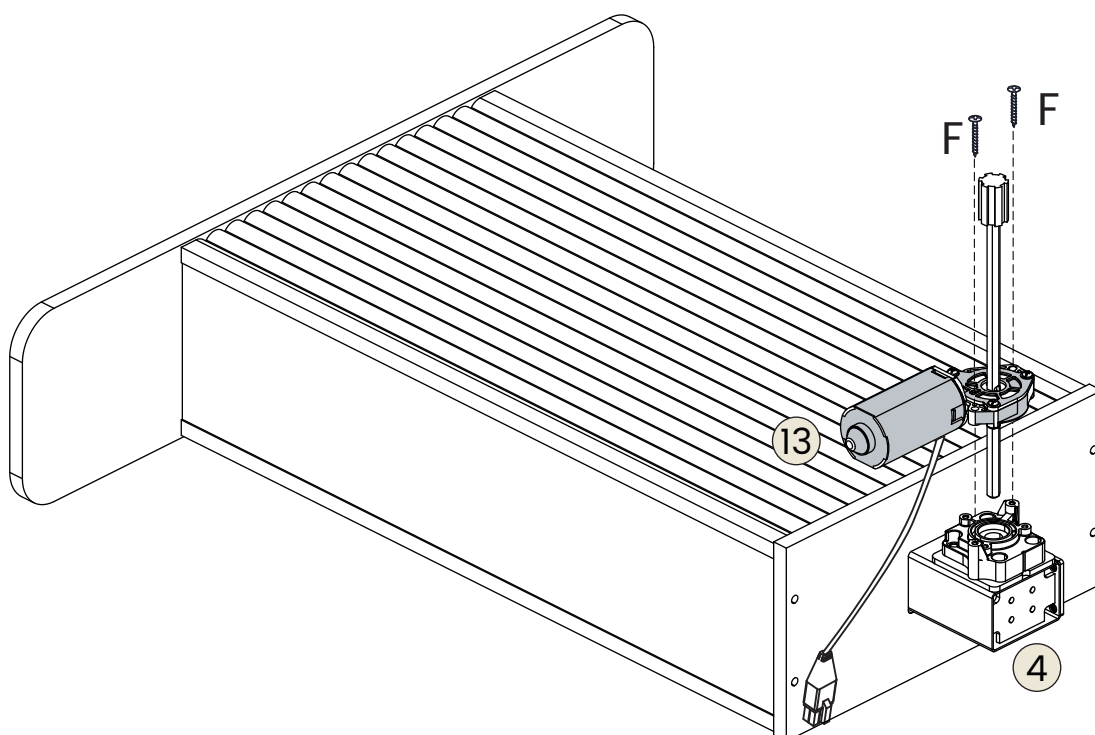

Pay attention to the direction of the motor

 F x2



ST4X25MM


# Assembly Instruction

# 11

Cx6




 M6X10MM

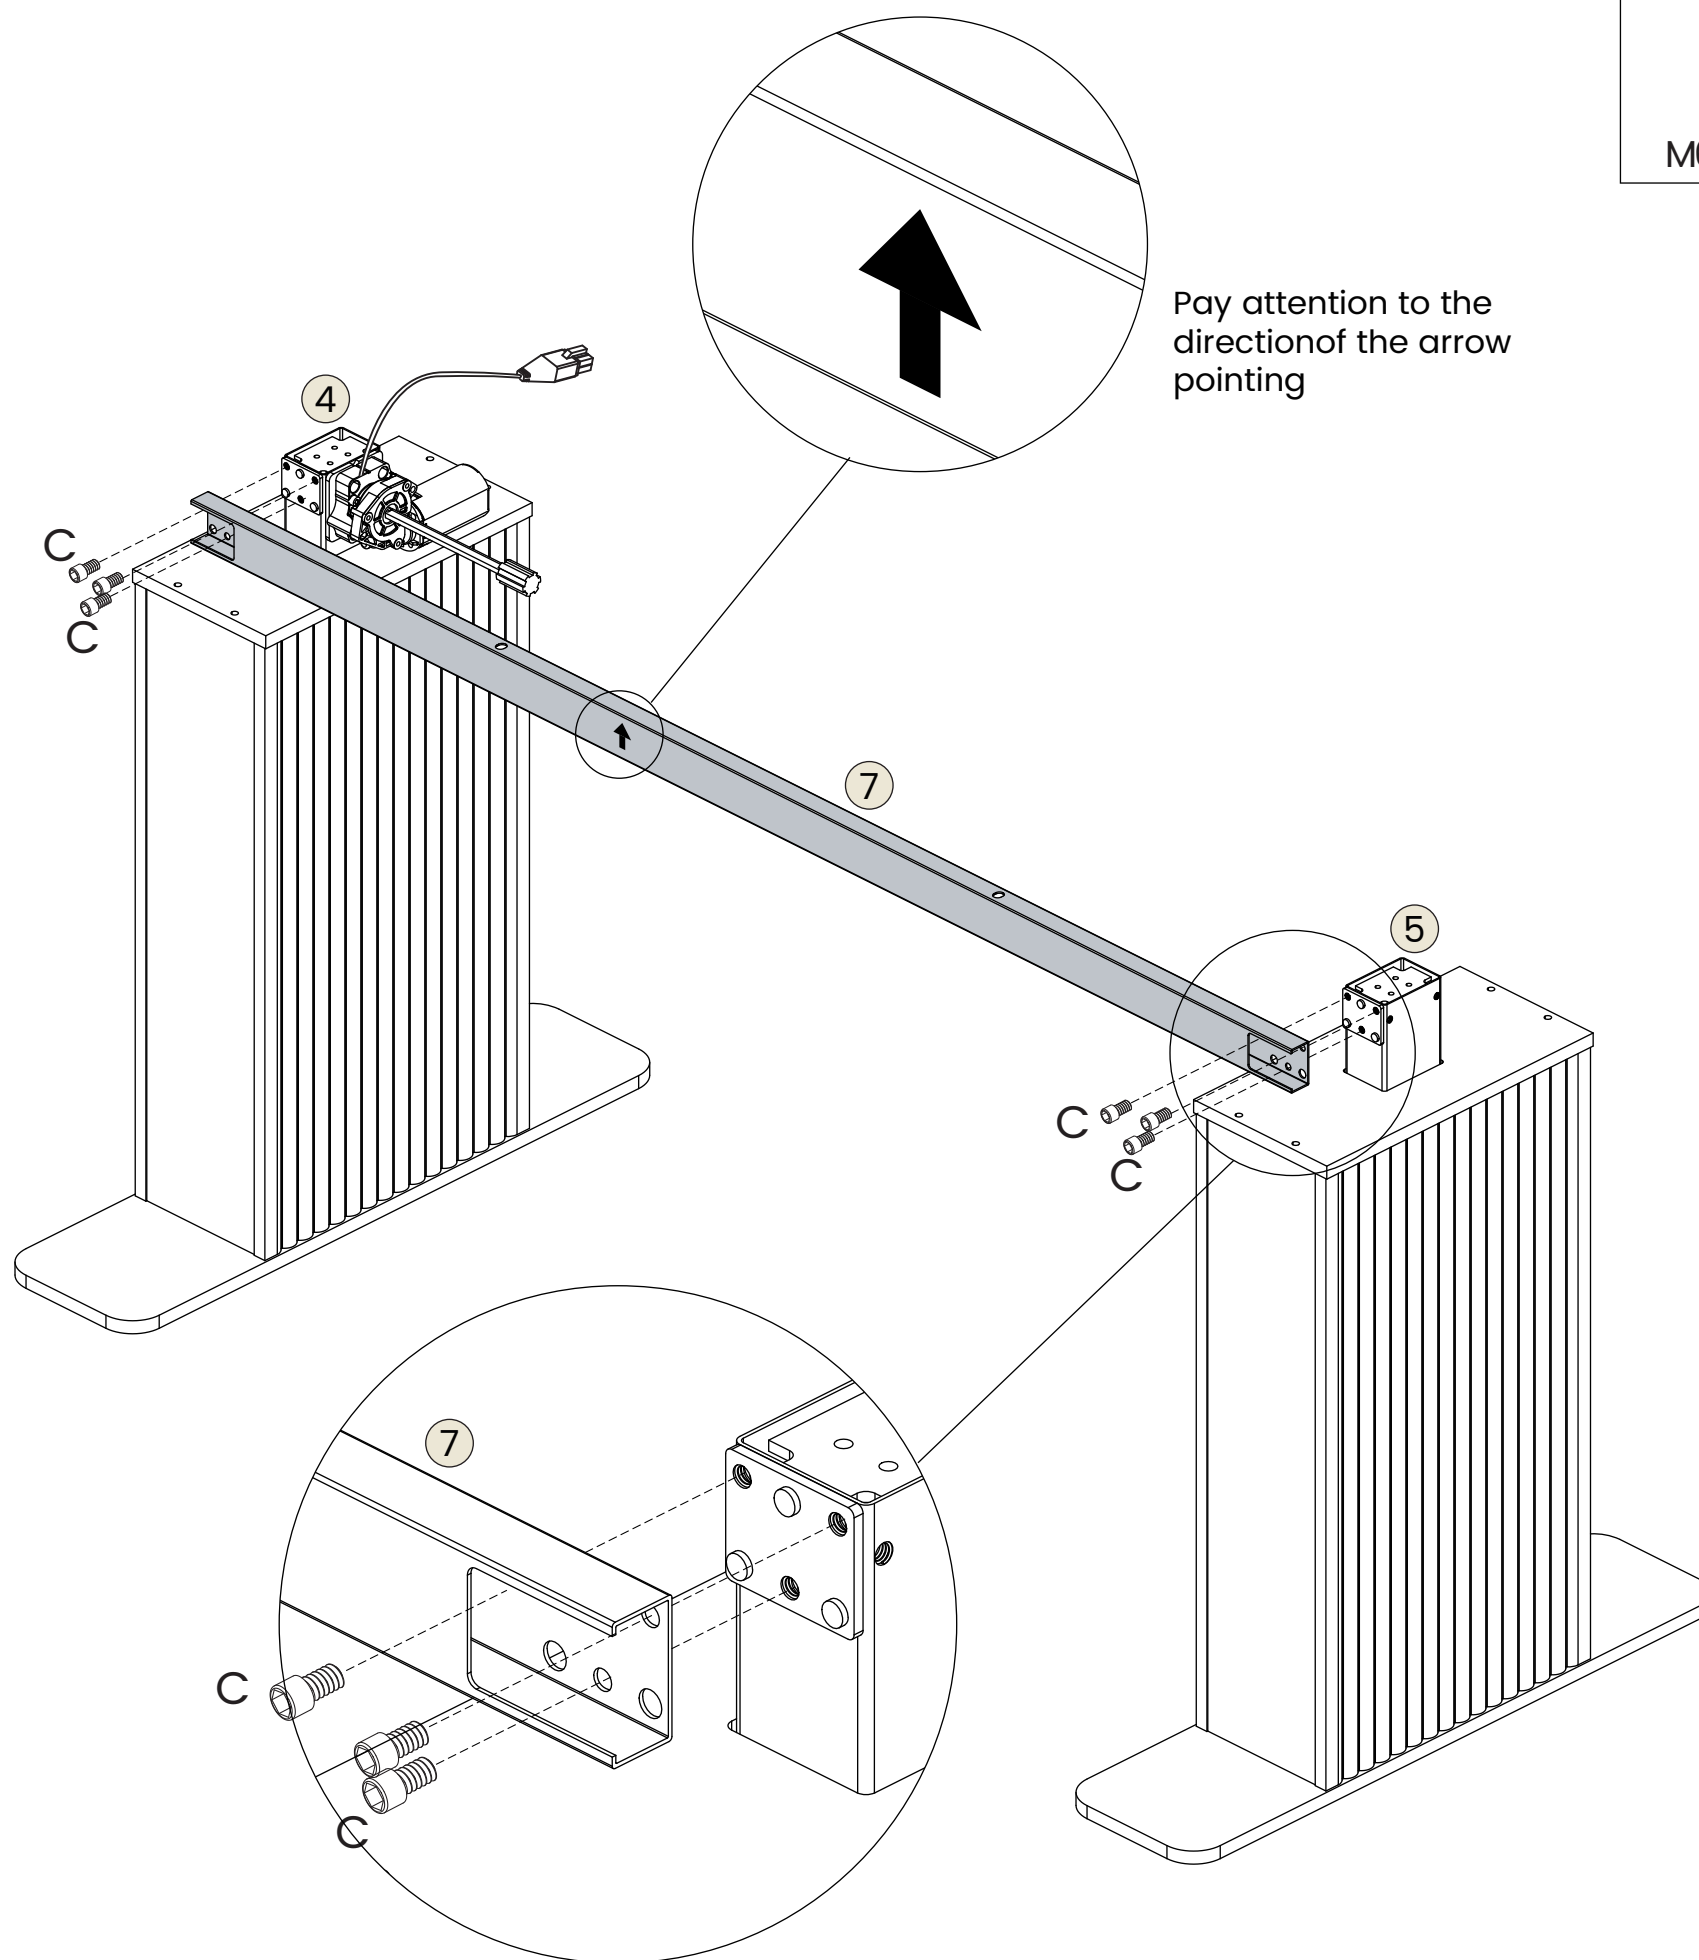

# Assembly Instruction

 
## 12

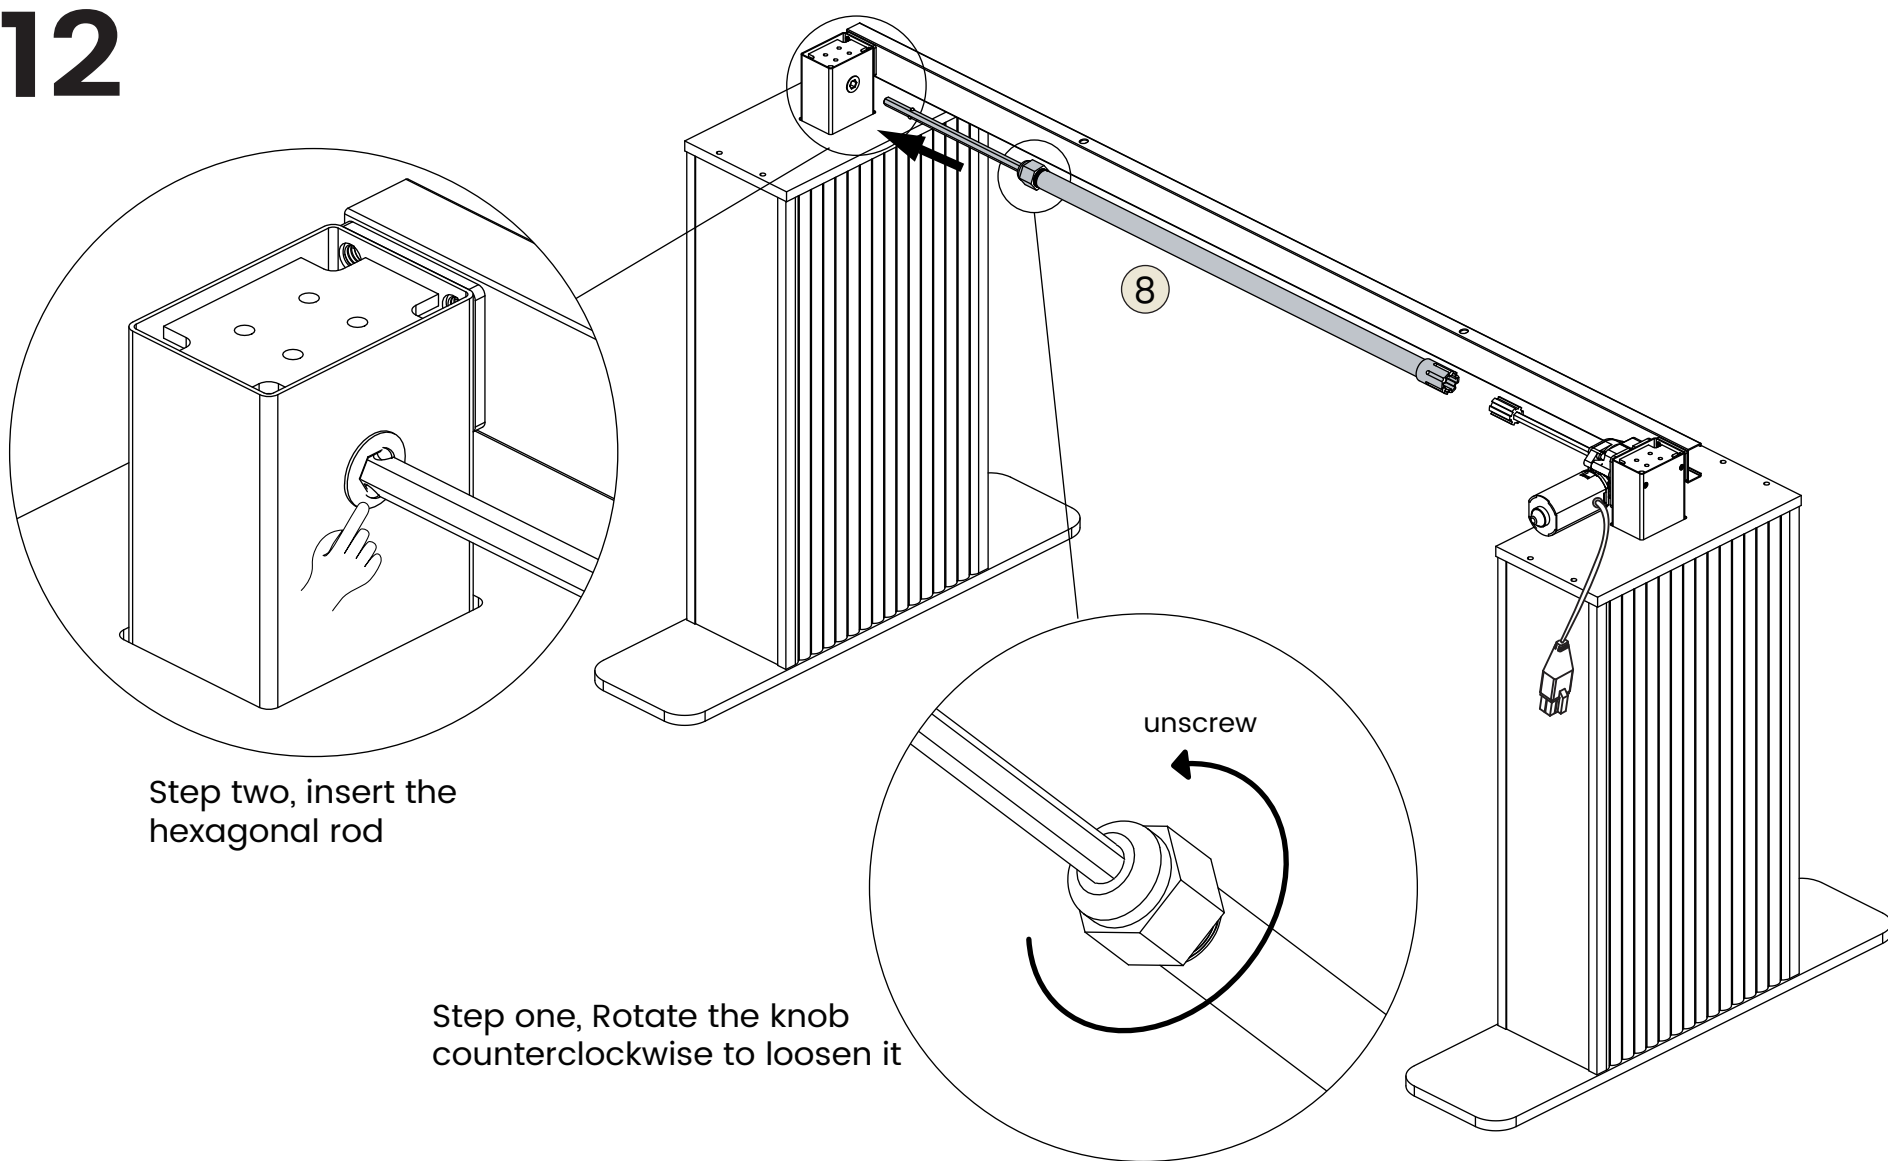

Step two, insert the hexagonal rod

Step one, Rotate the knob counterclockwise to loosen it

## 13

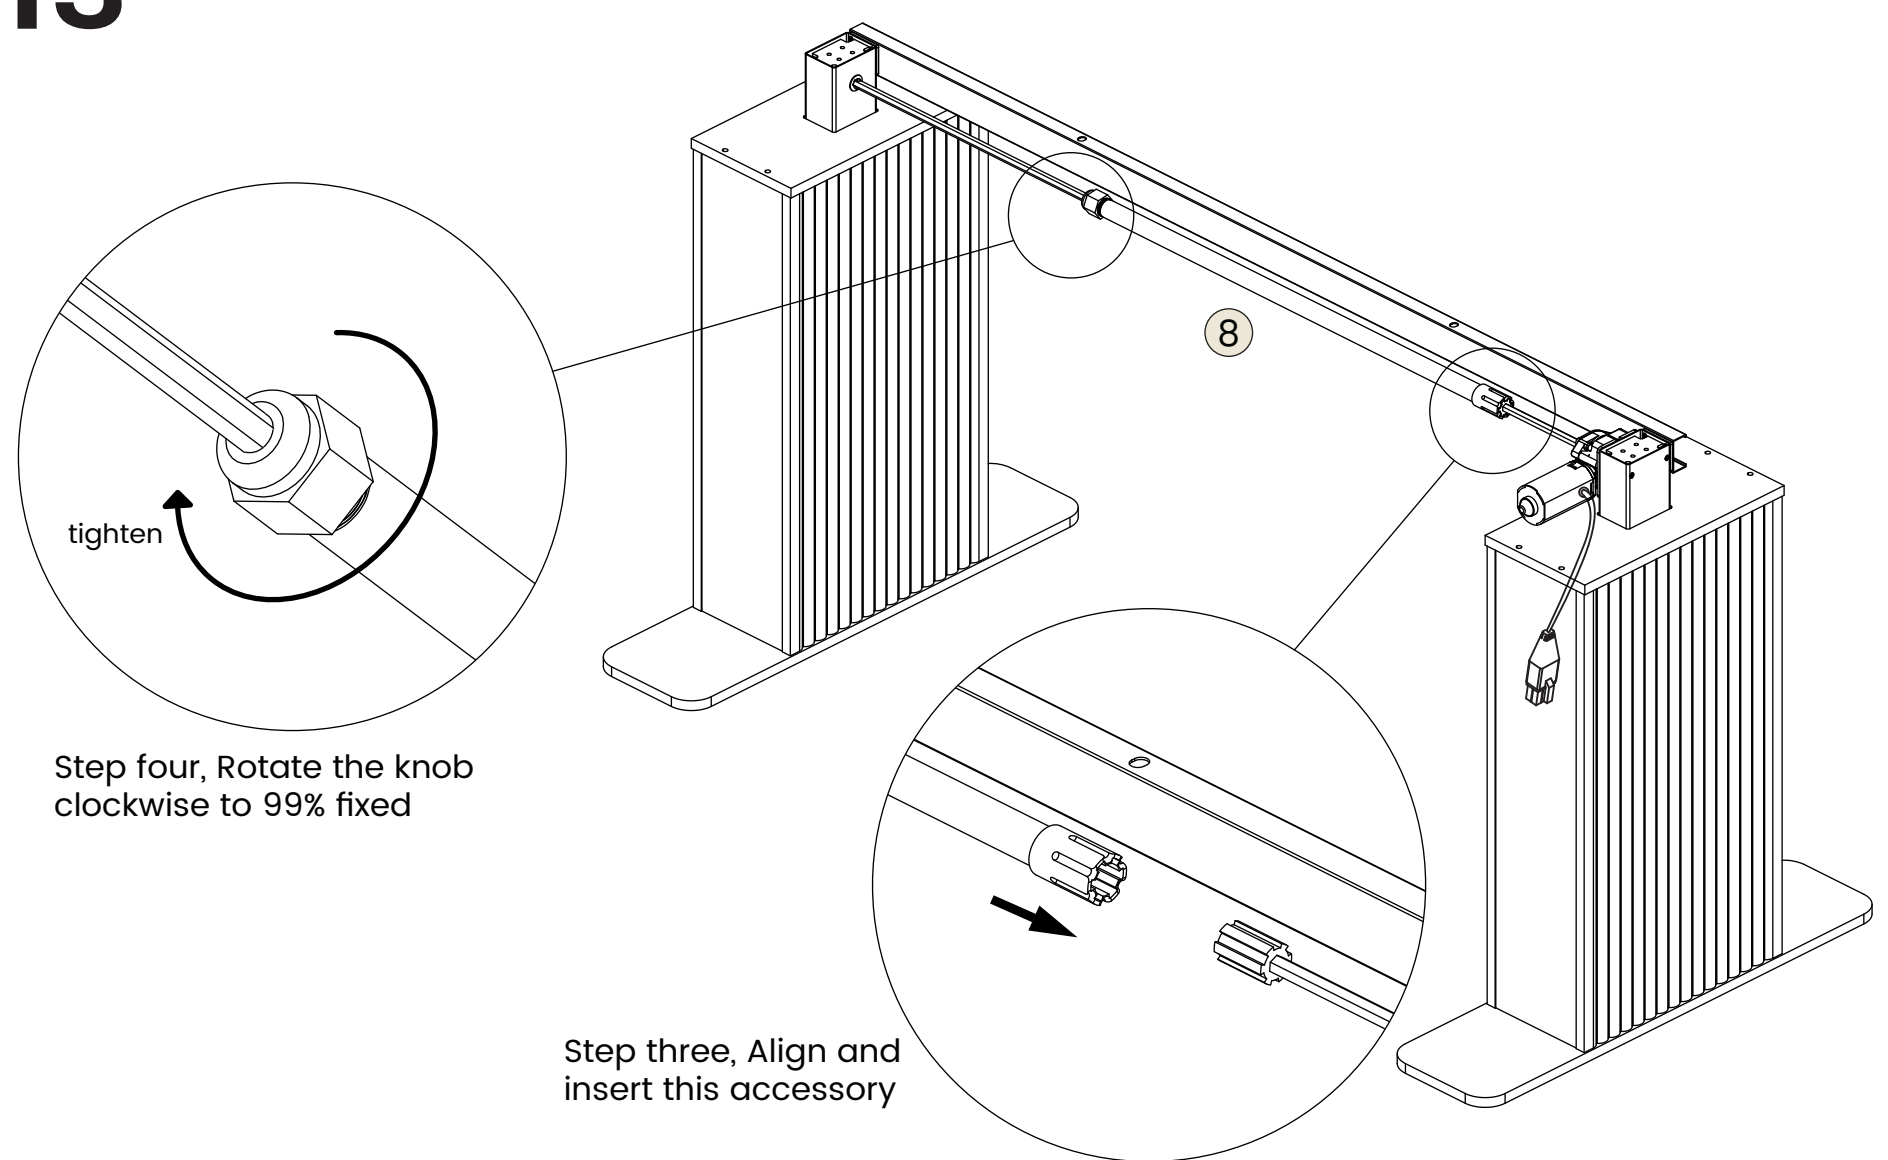 


Step four, Rotate the knob clockwise to 99% fixed

Step three, Align and insert this accessory

# Assembly Instruction
 
## 14

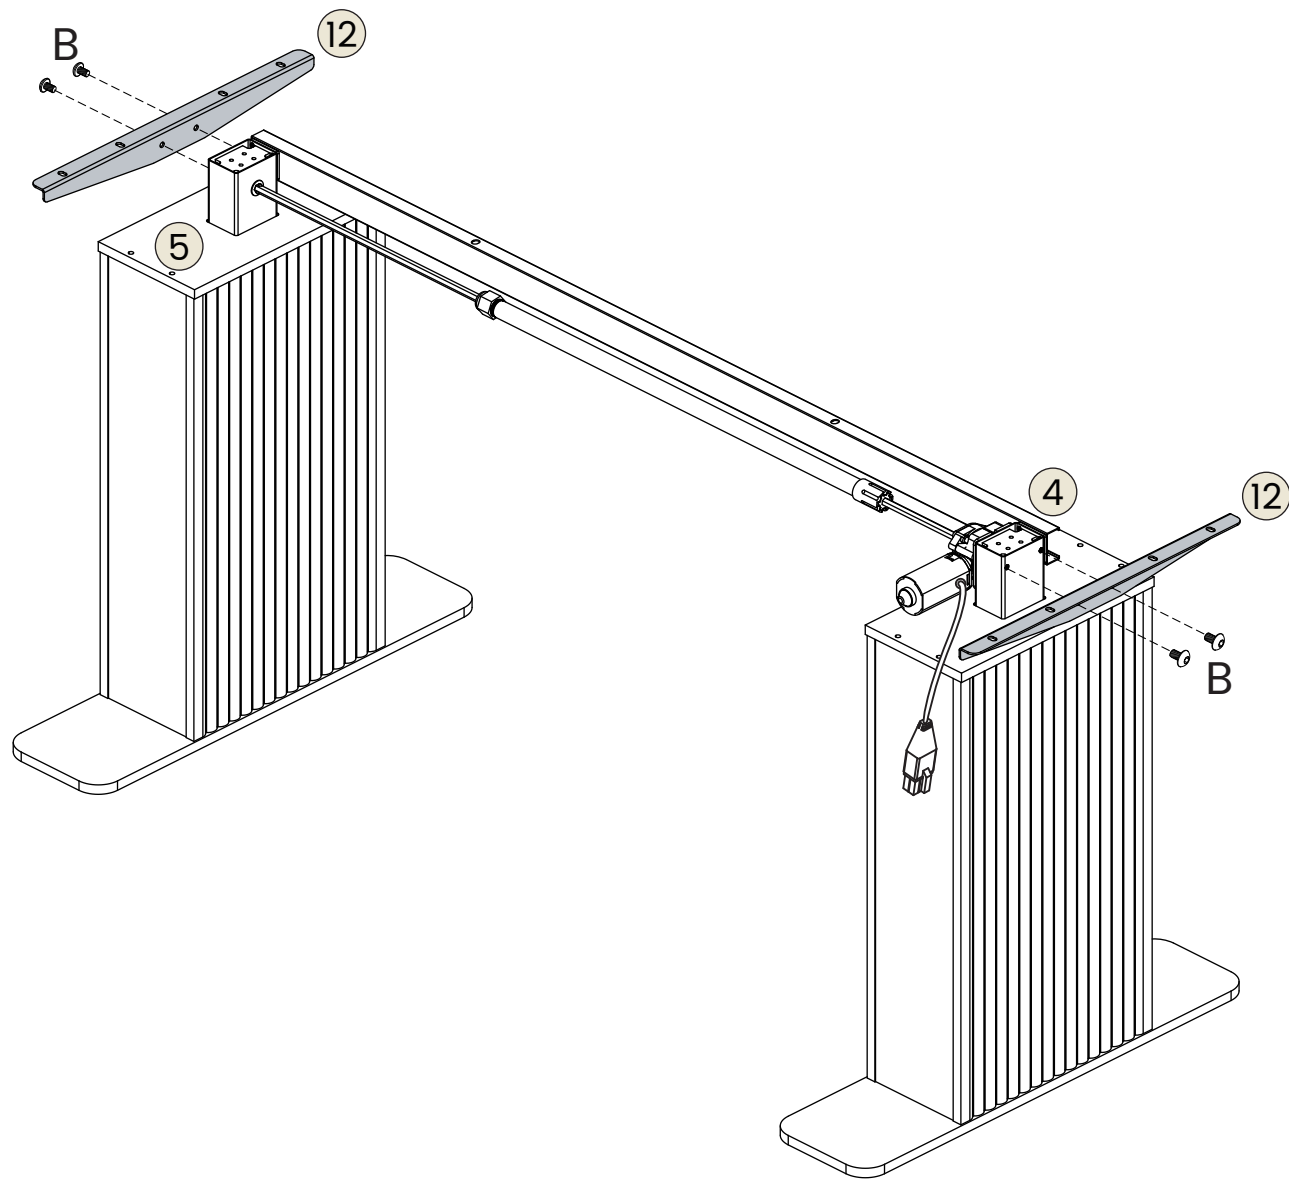


B x 4




M6X10MM

## 15

 Pay attention to the position of the motor and socket

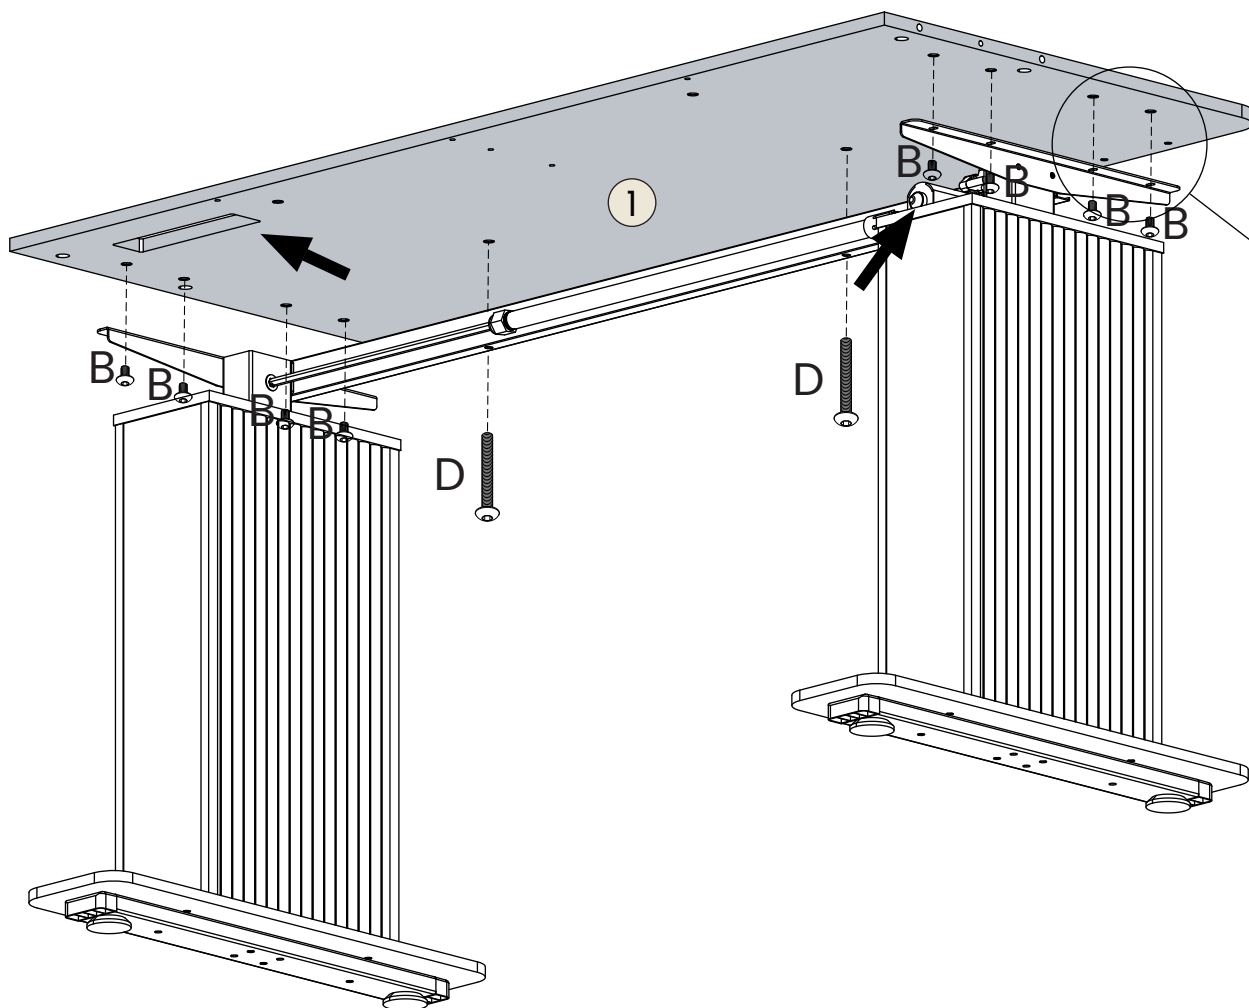


D x 2

 


M6X50MM

 B x 8




M6X10MM

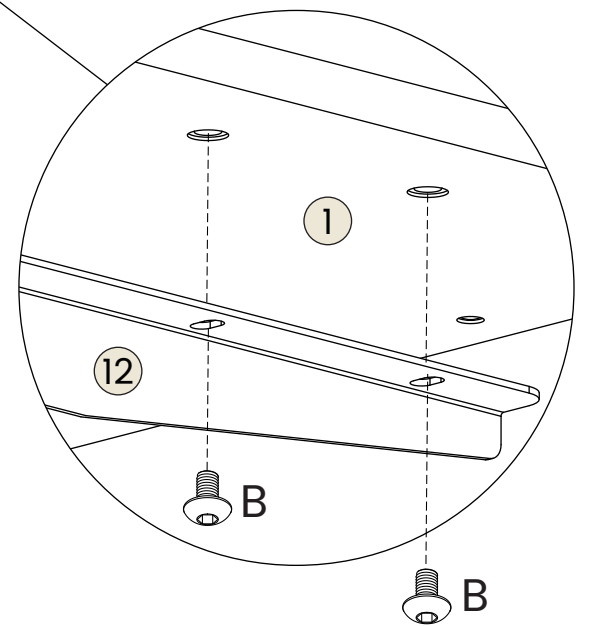 


# Assembly Instruction
 
## 16

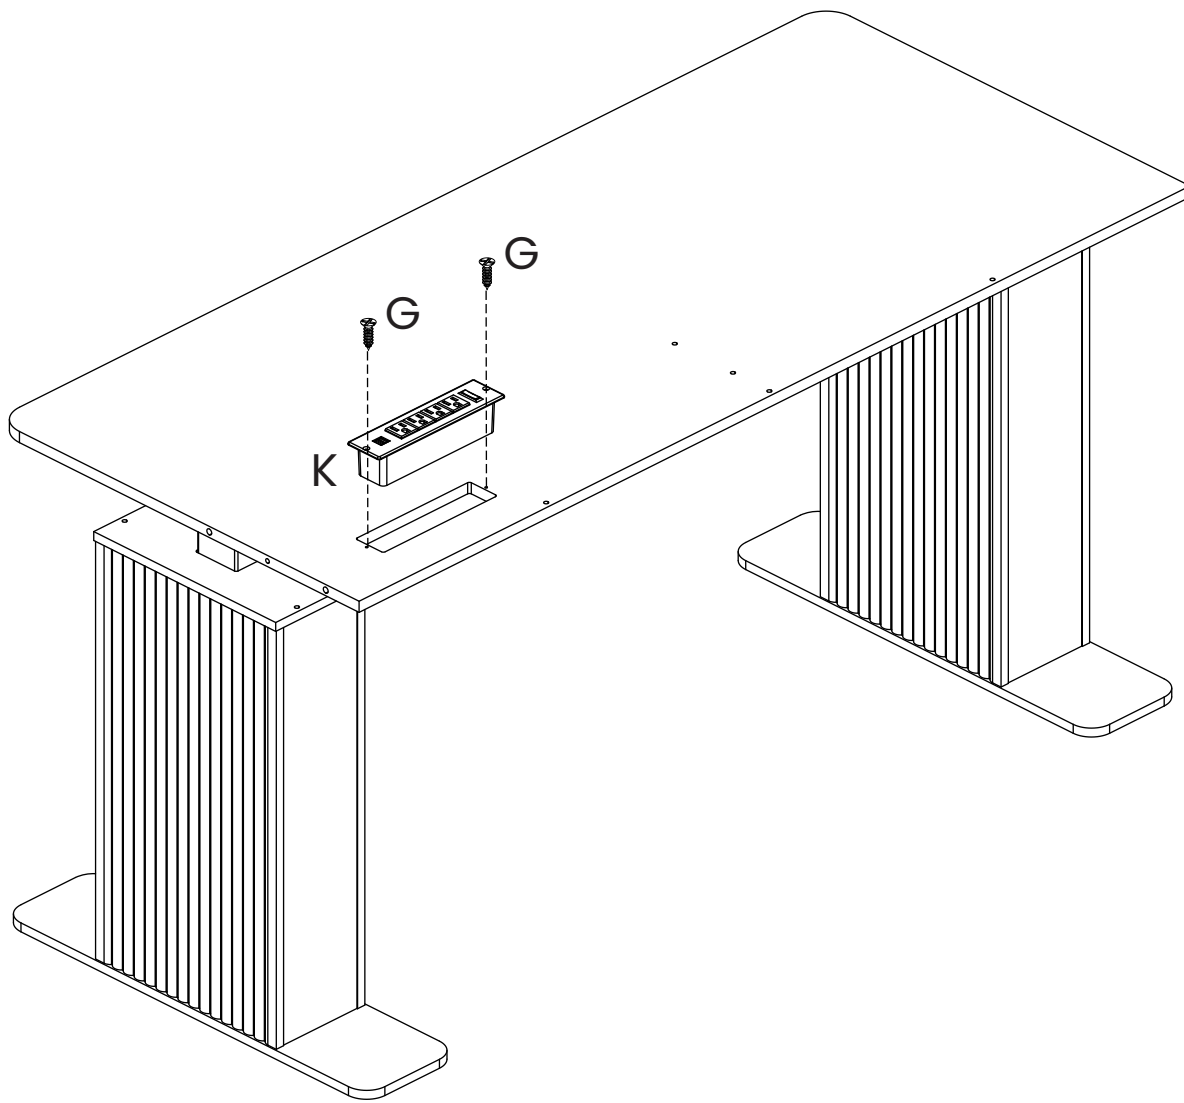


Gx2

 


ST4X12MM

 
Kx1

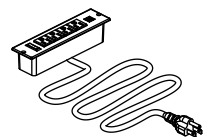

## 17

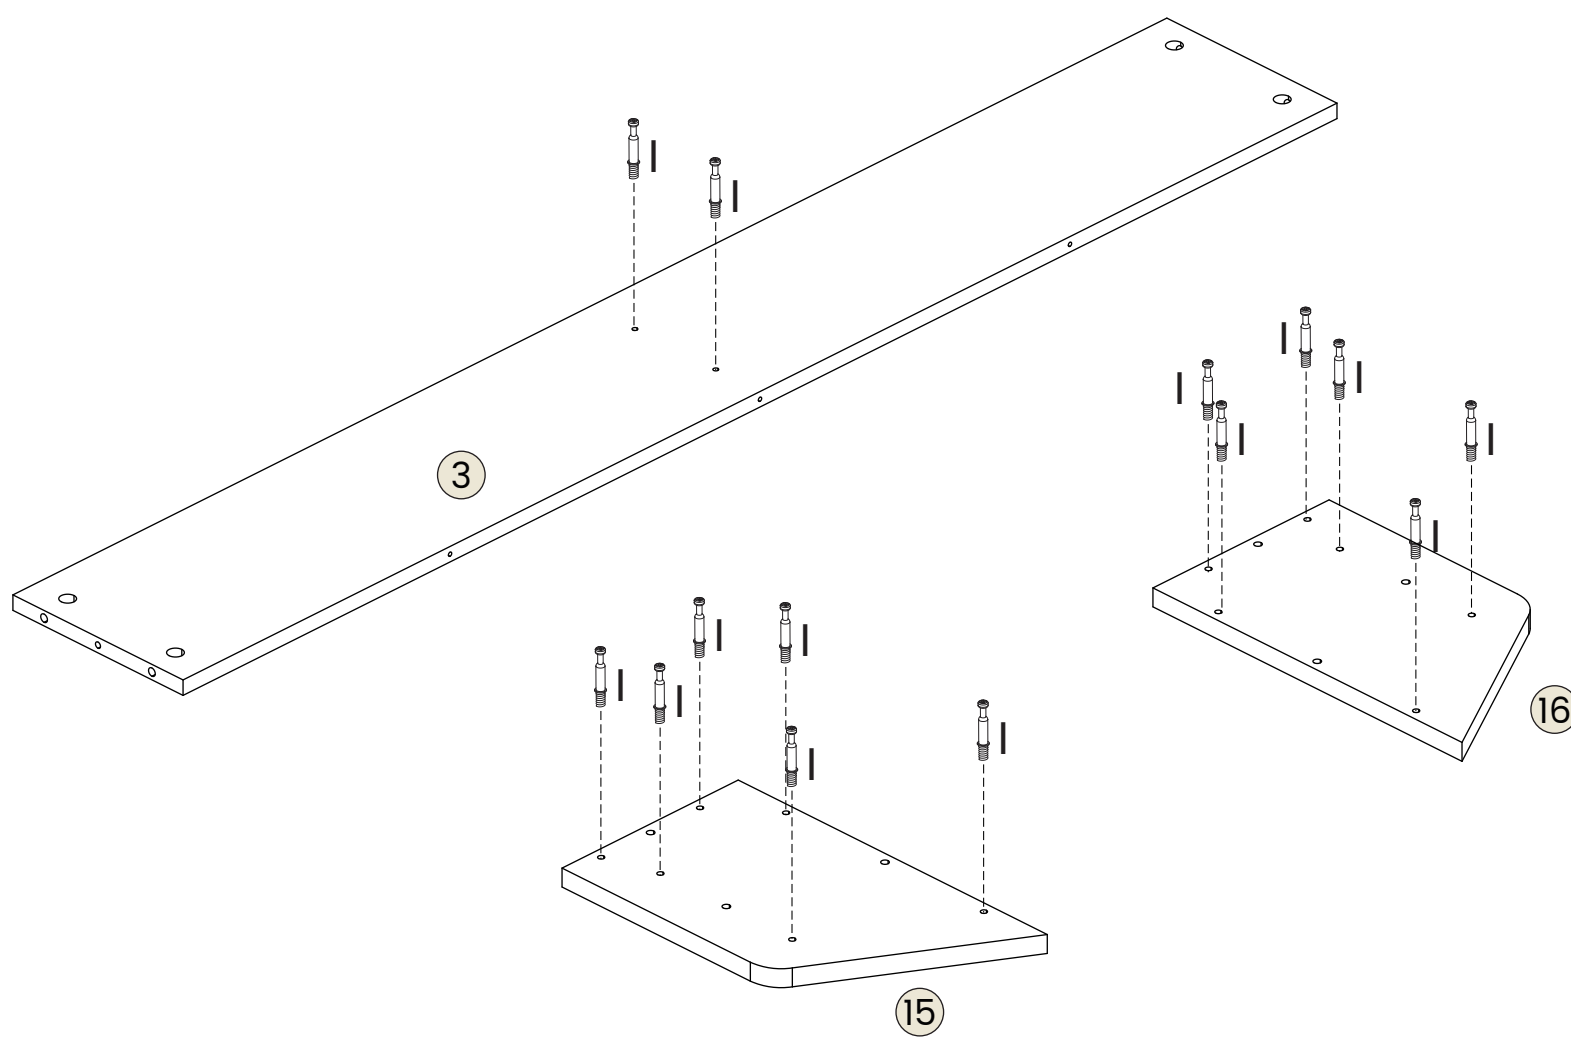 


I x14

 

# Assembly Instruction


## 18

 Jx2

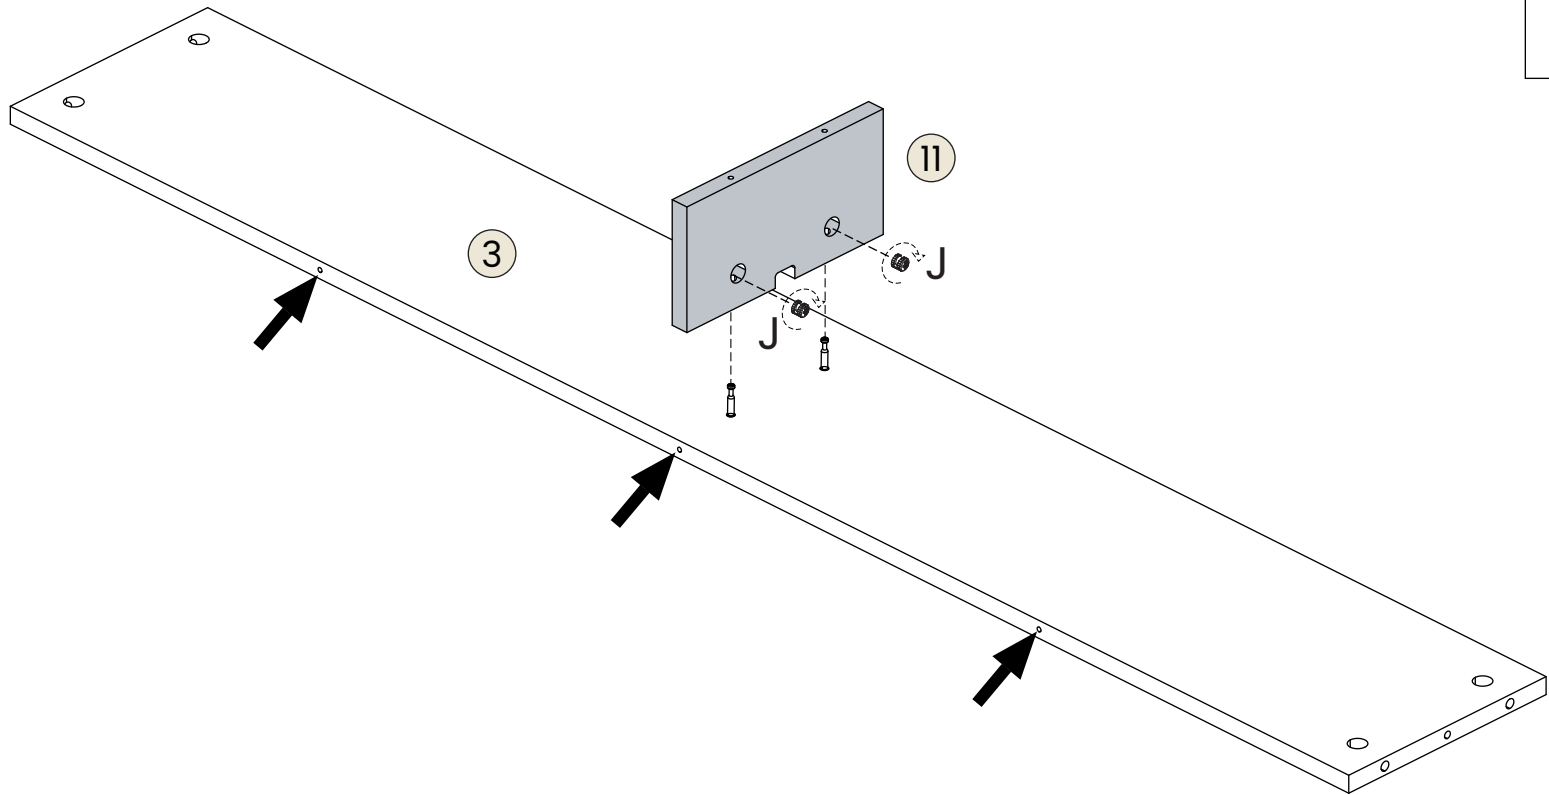


## 19

 E x3




ST5X40MM

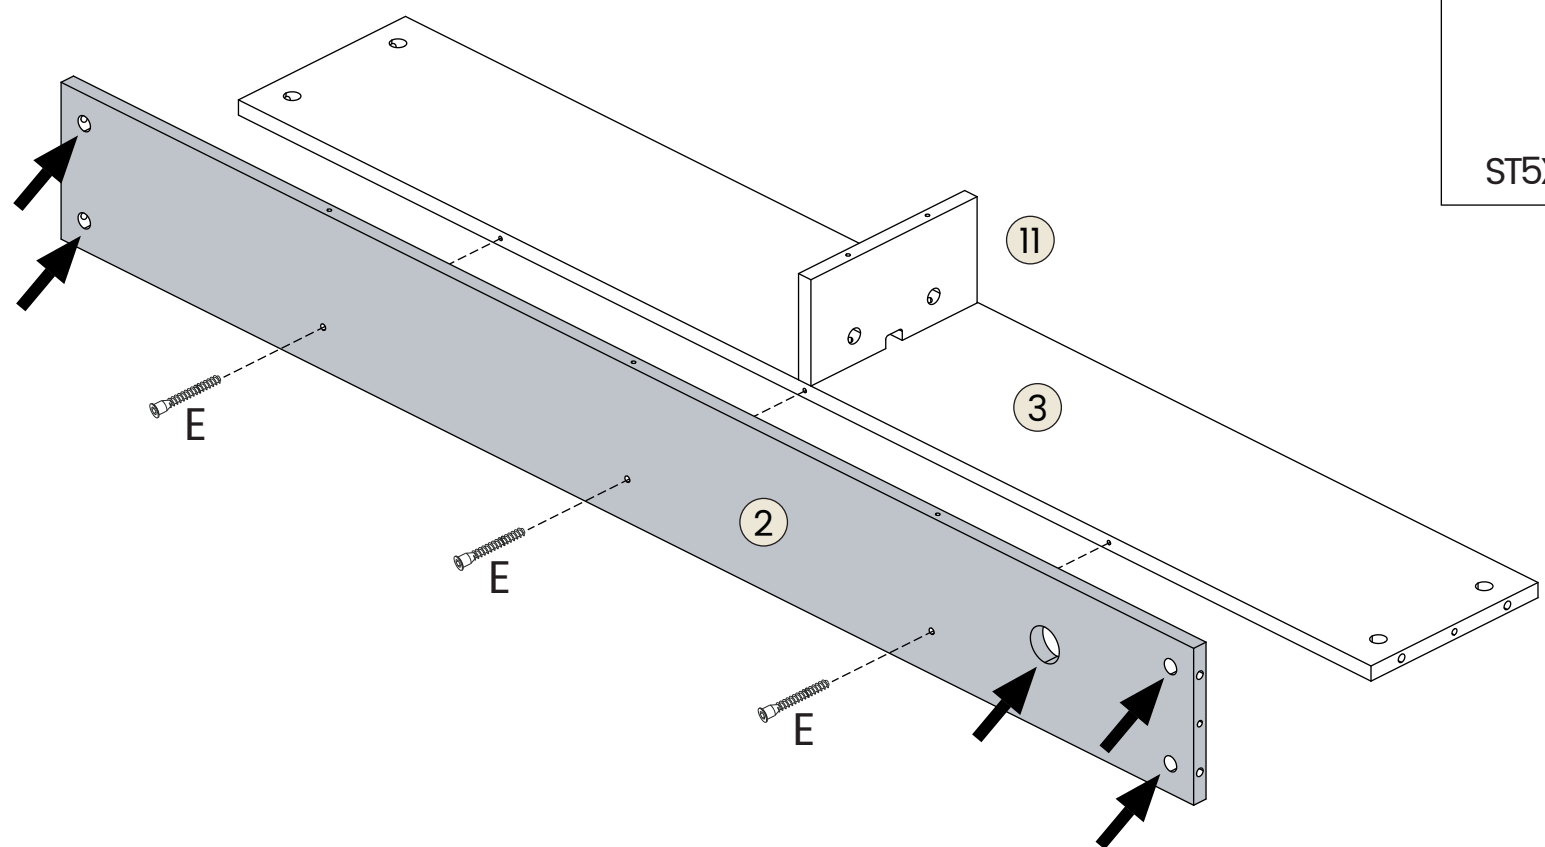 


Pay attention to the direction of the arrow indicating the hole position

# Assembly Instruction
 
## 20

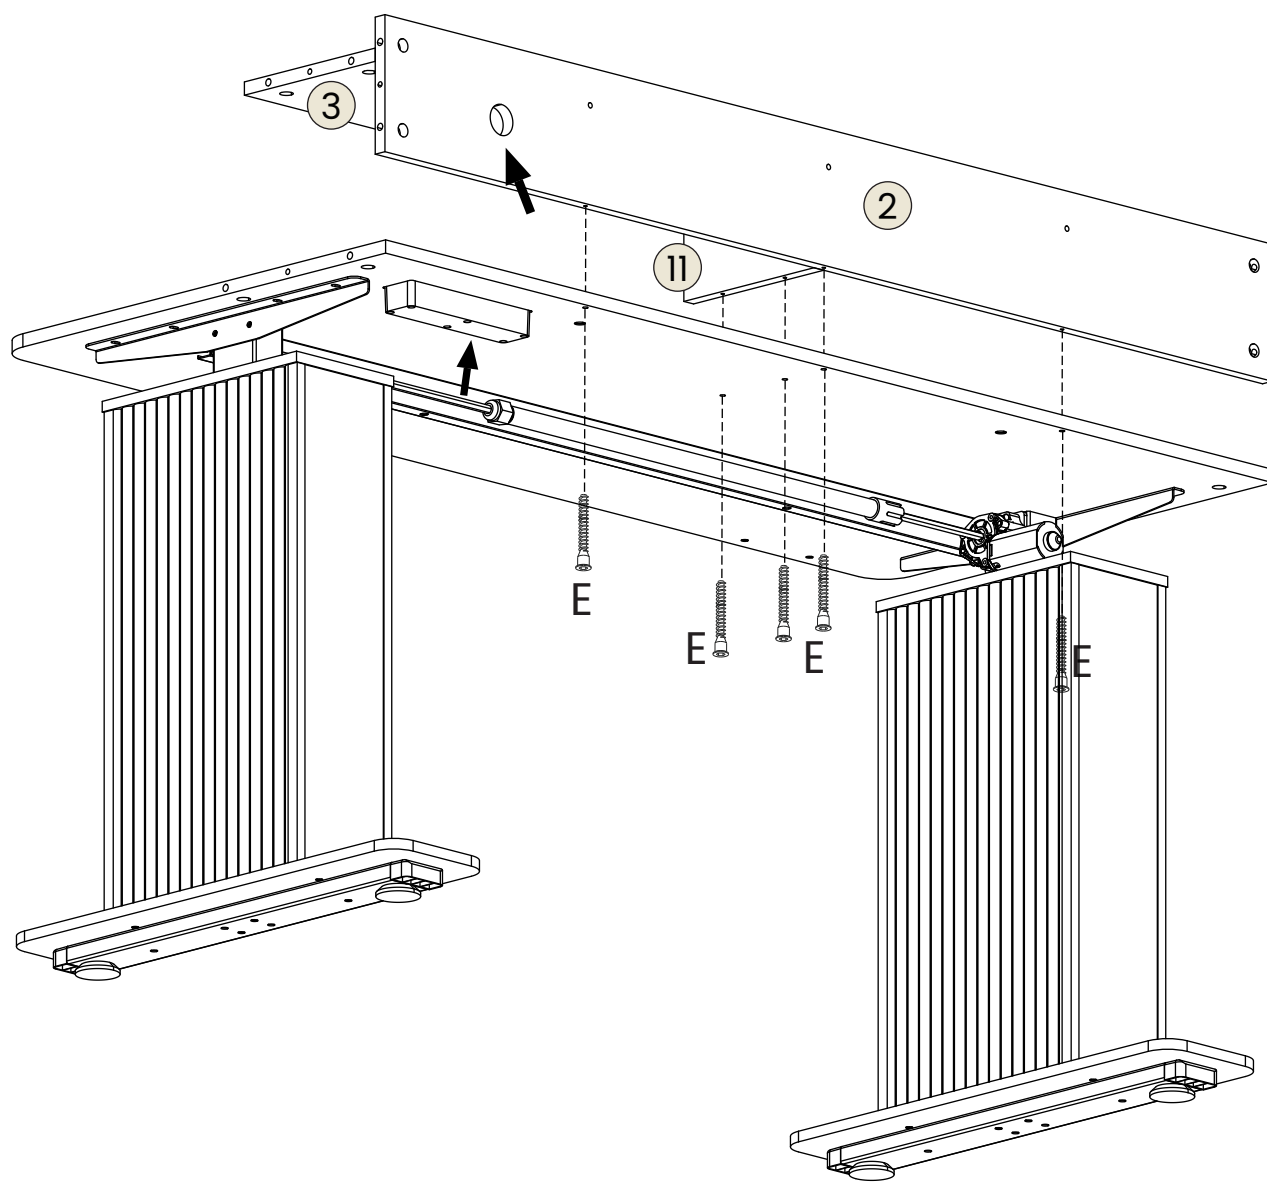


E x5

 

ST5X40MM


## 21

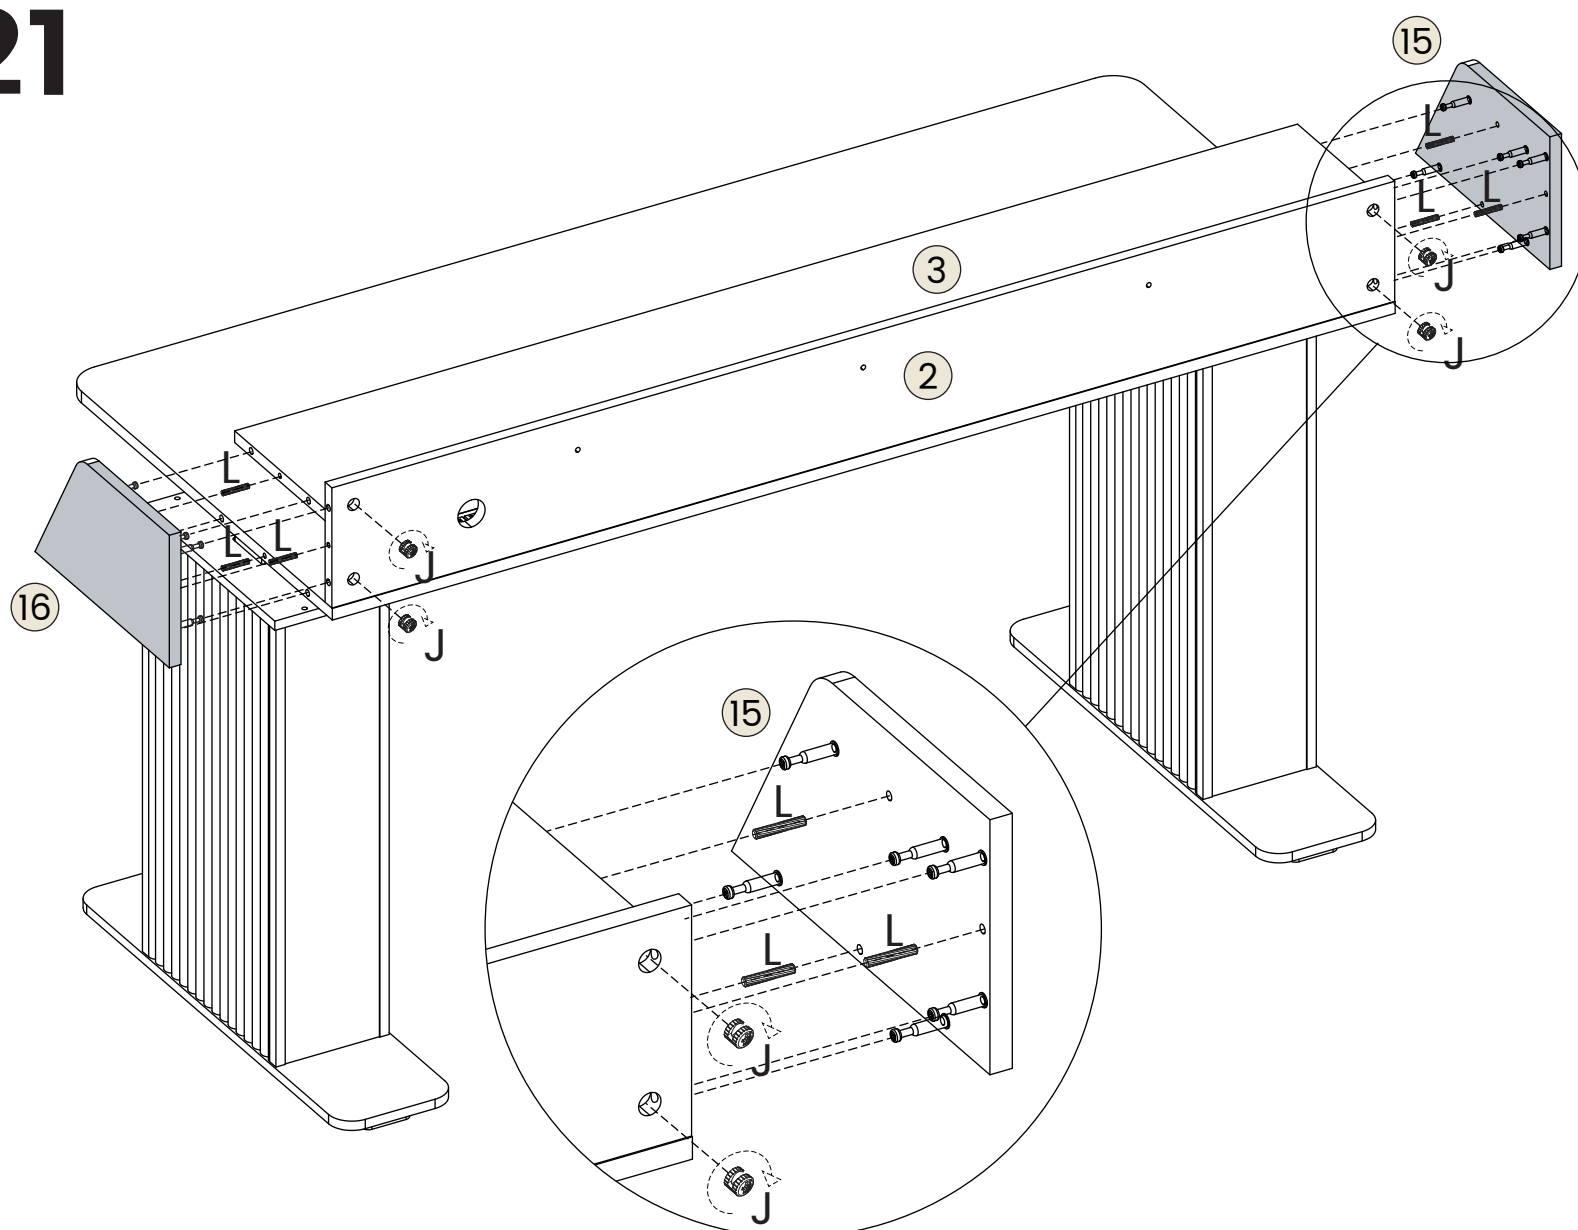 

Jx12



 
L x6




Φ6X30MM

# Assembly Instruction
 
## 22

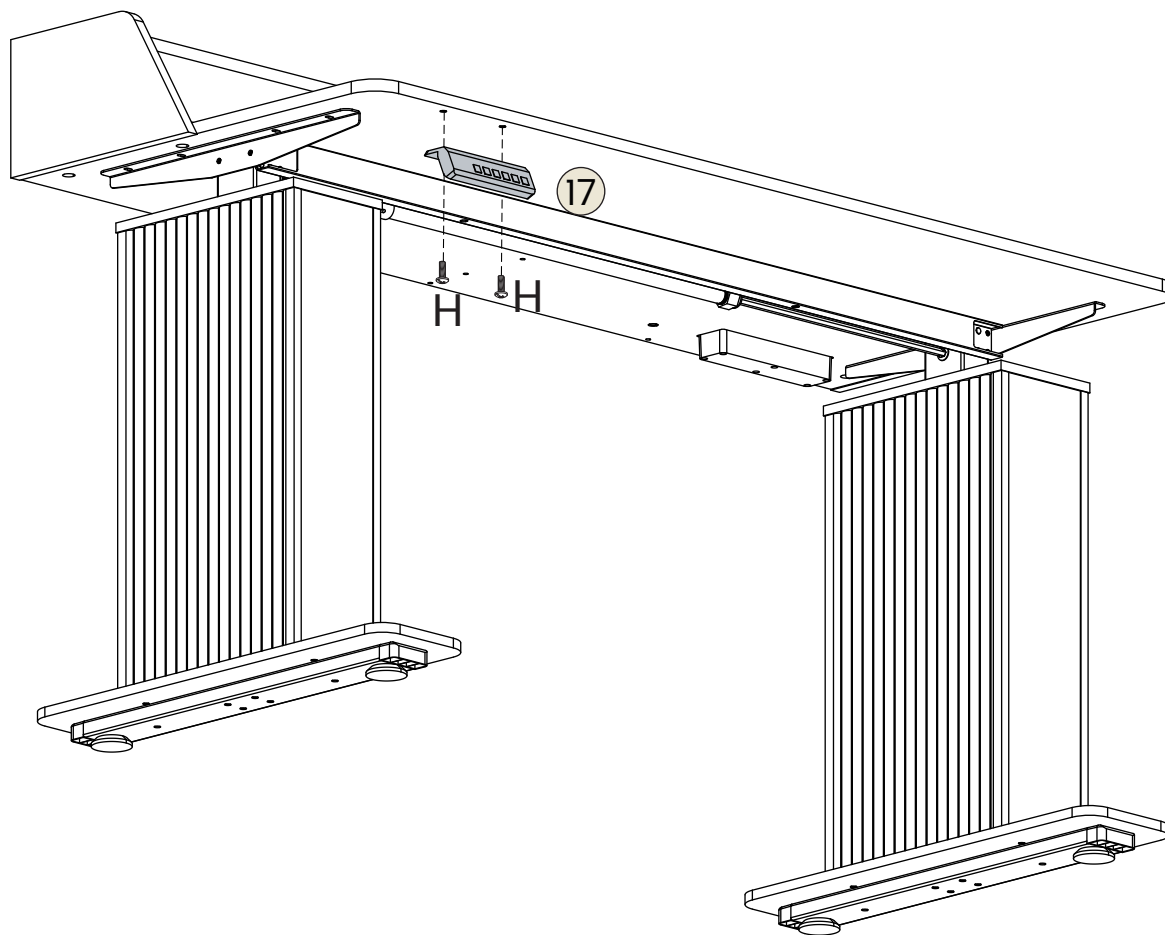


Hx2

 


M4X12MM

## 23

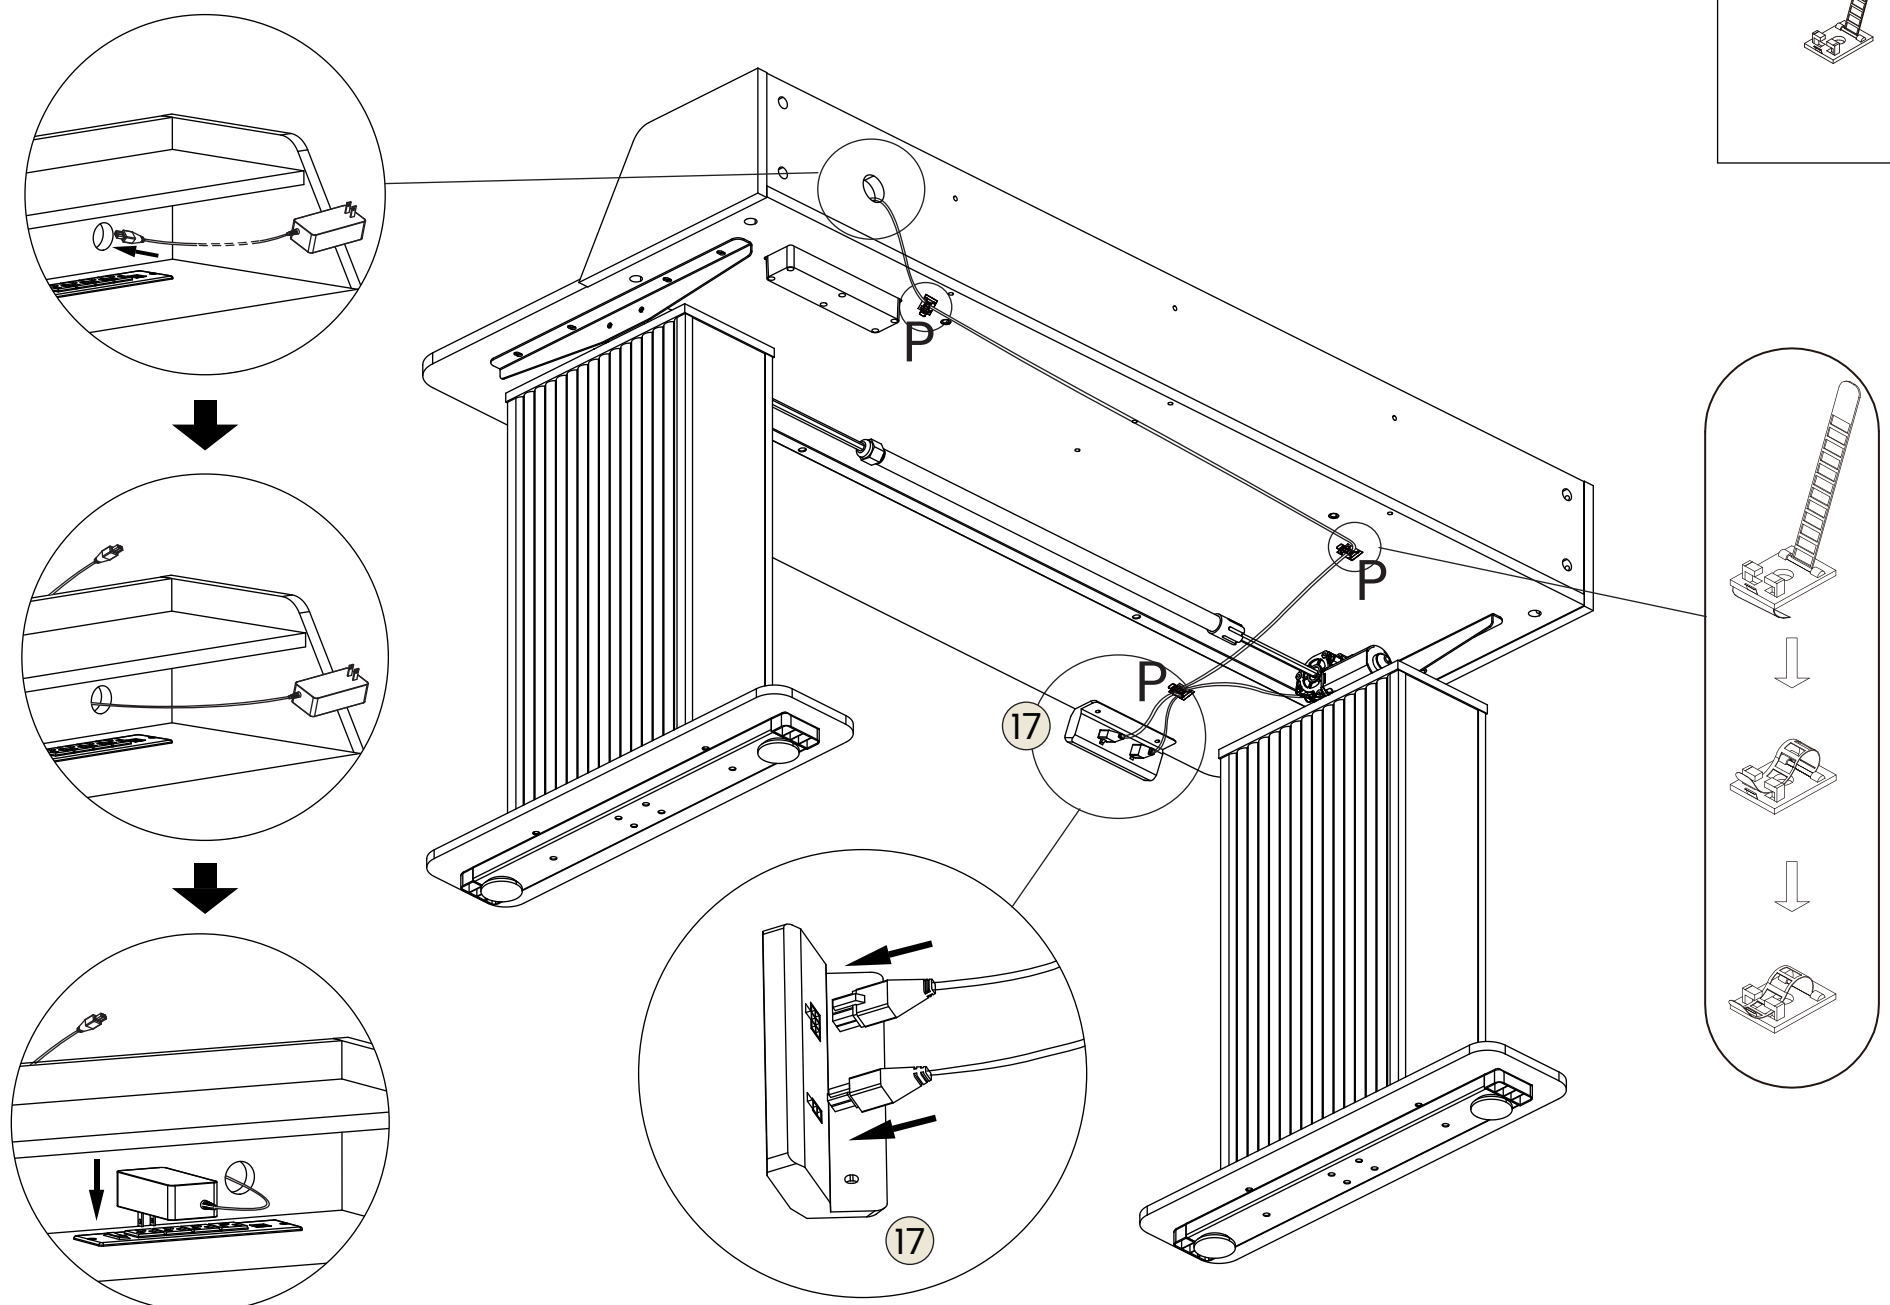 

Px3

 









# Assembly Instruction

## 24

Q x1



      
 
 
R x3

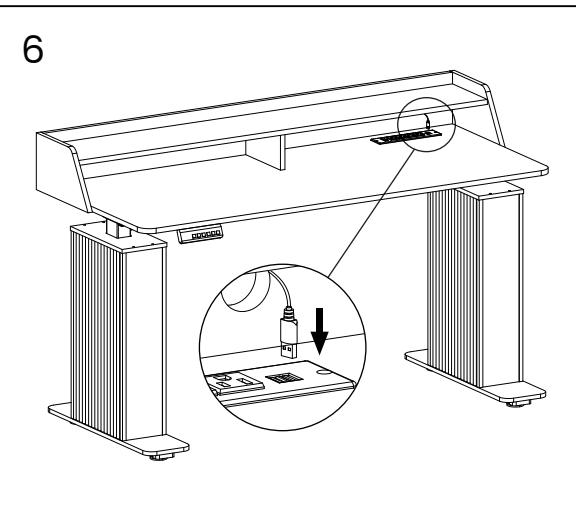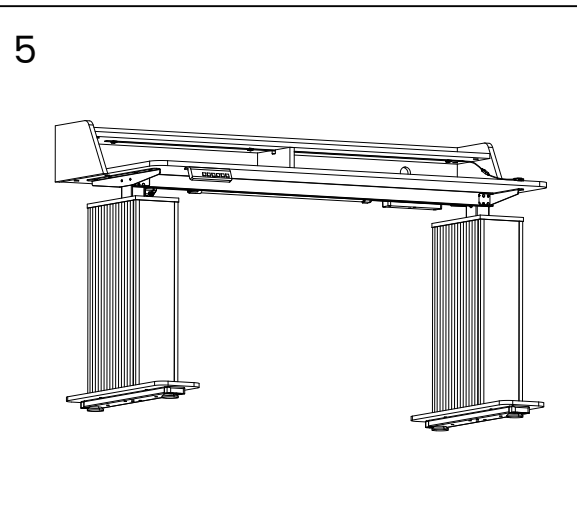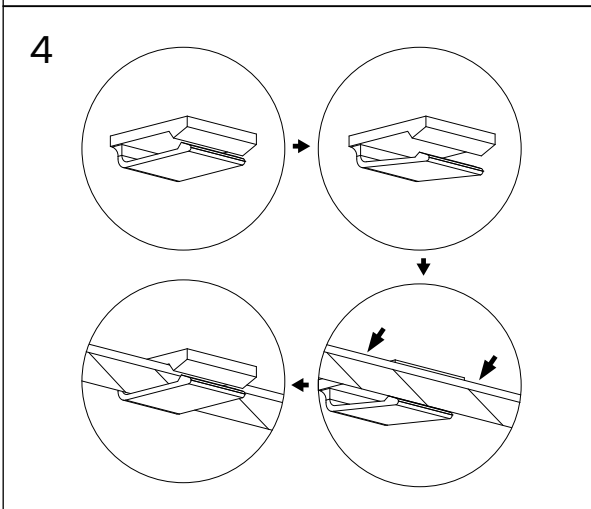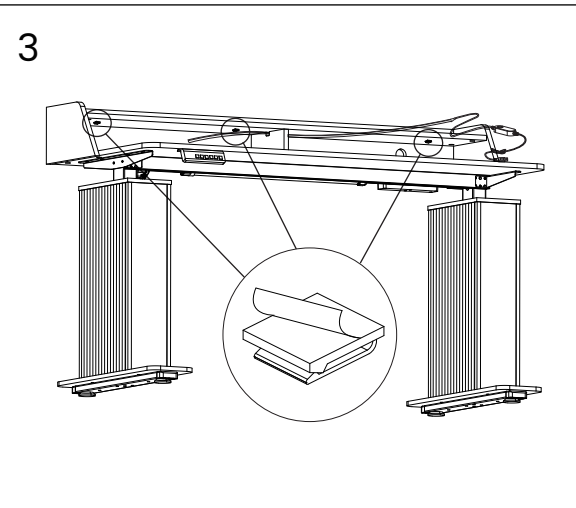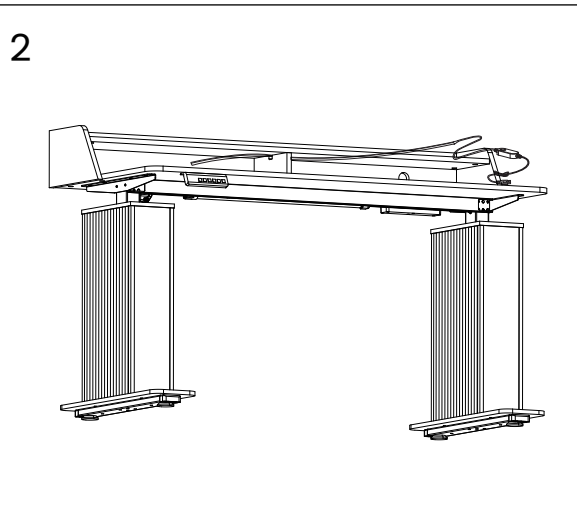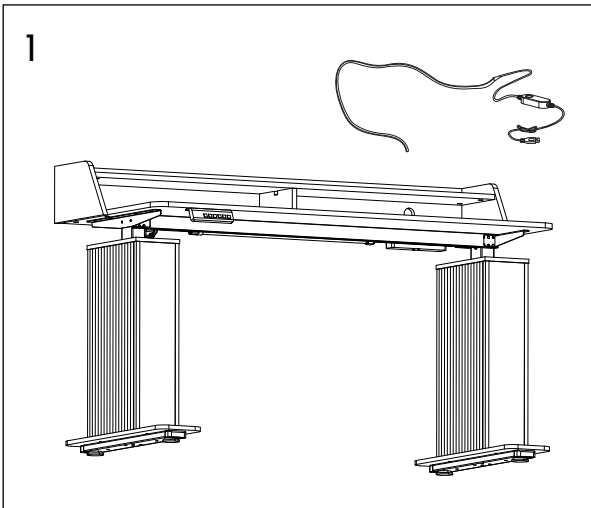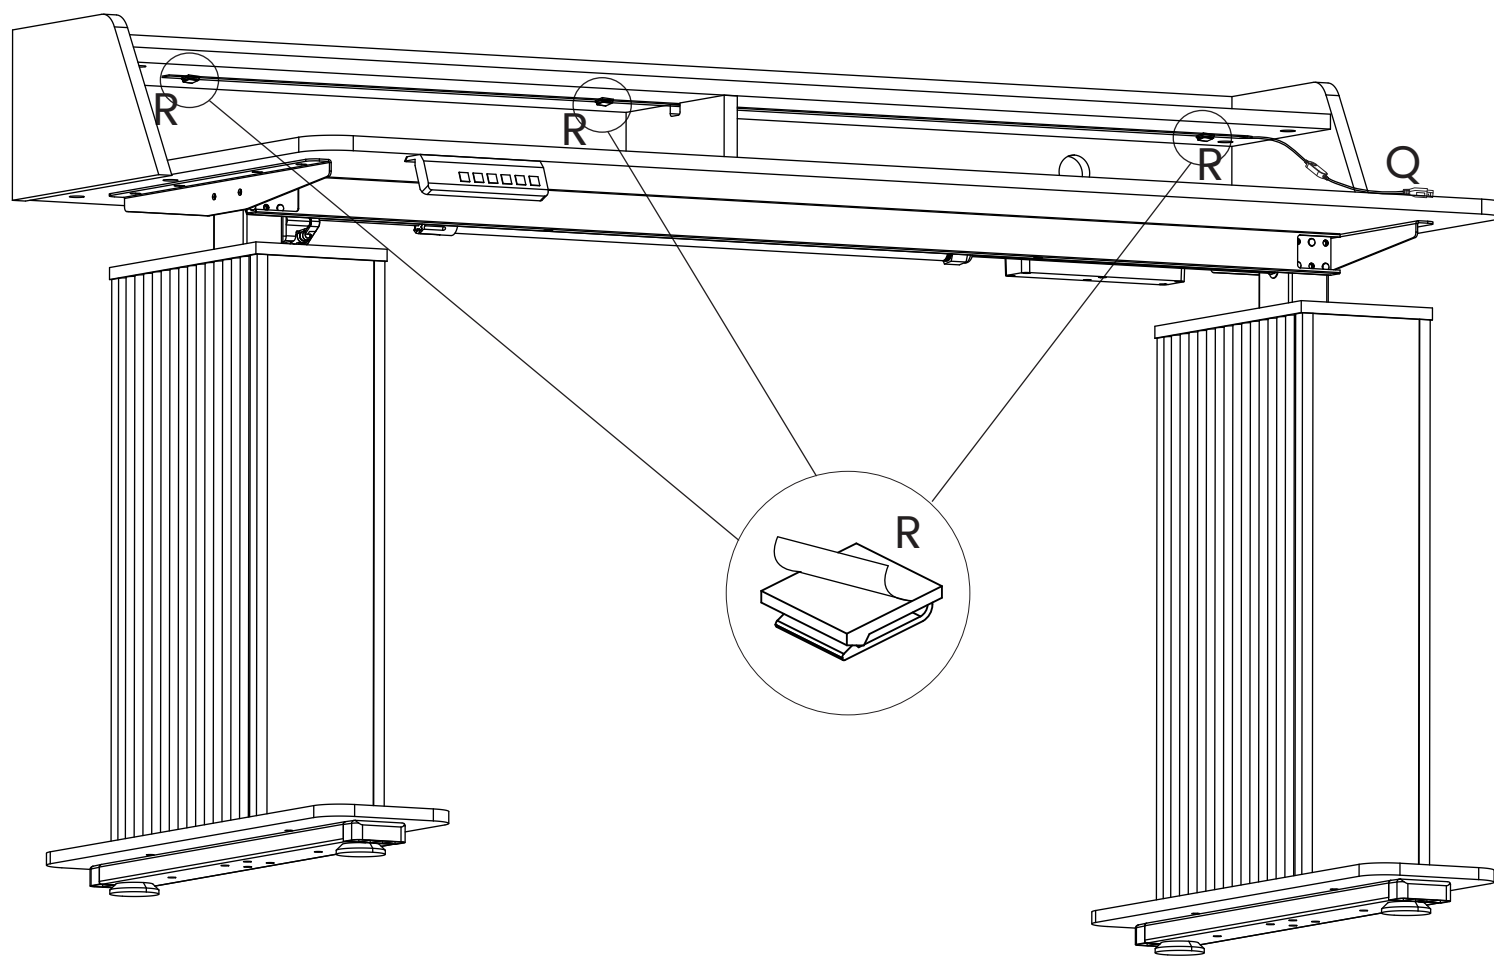

# Assembly Instruction

## 25

   Ox2

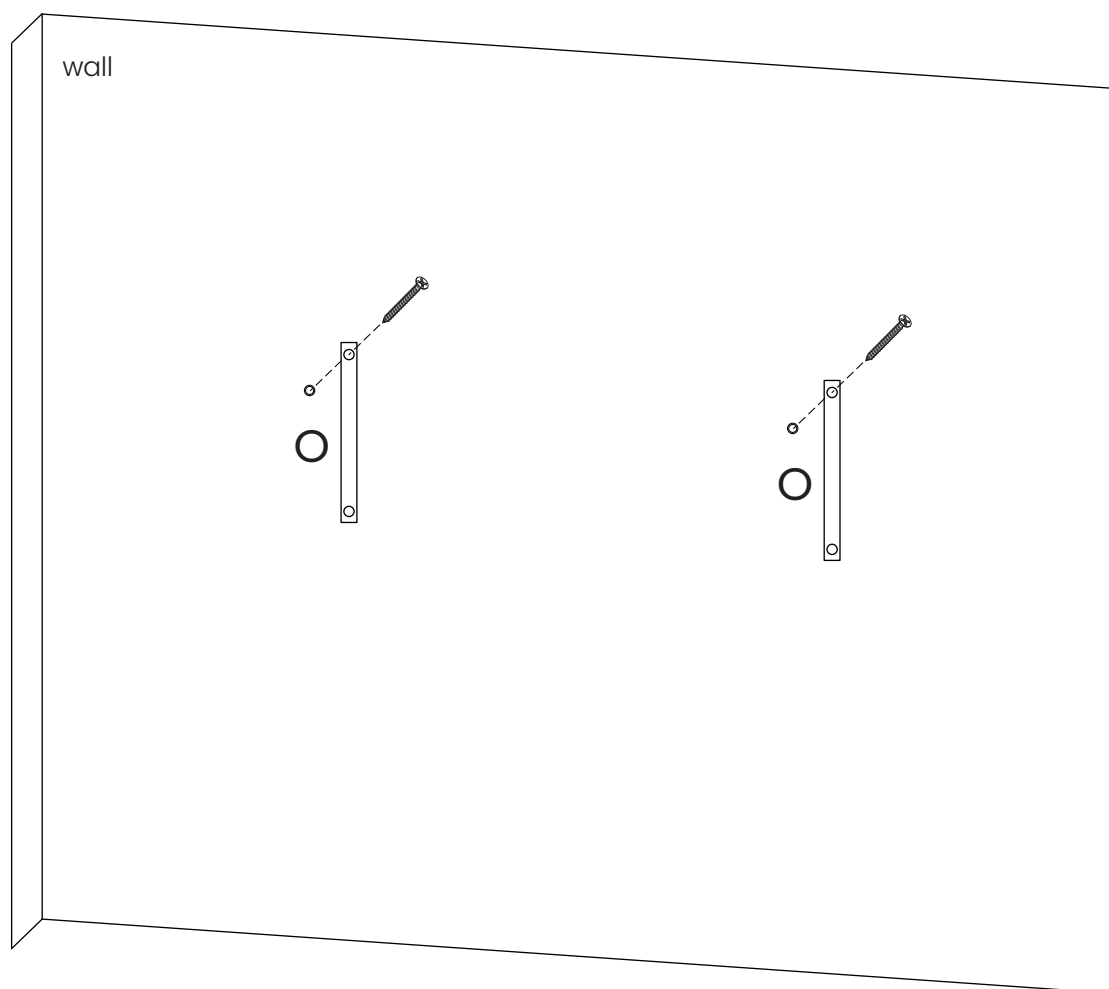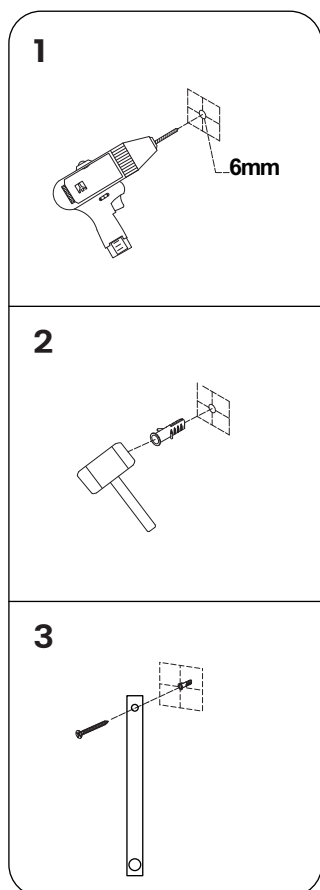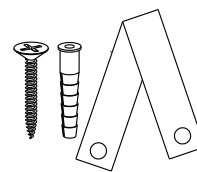


## 26

Bx2




 M6X10MM

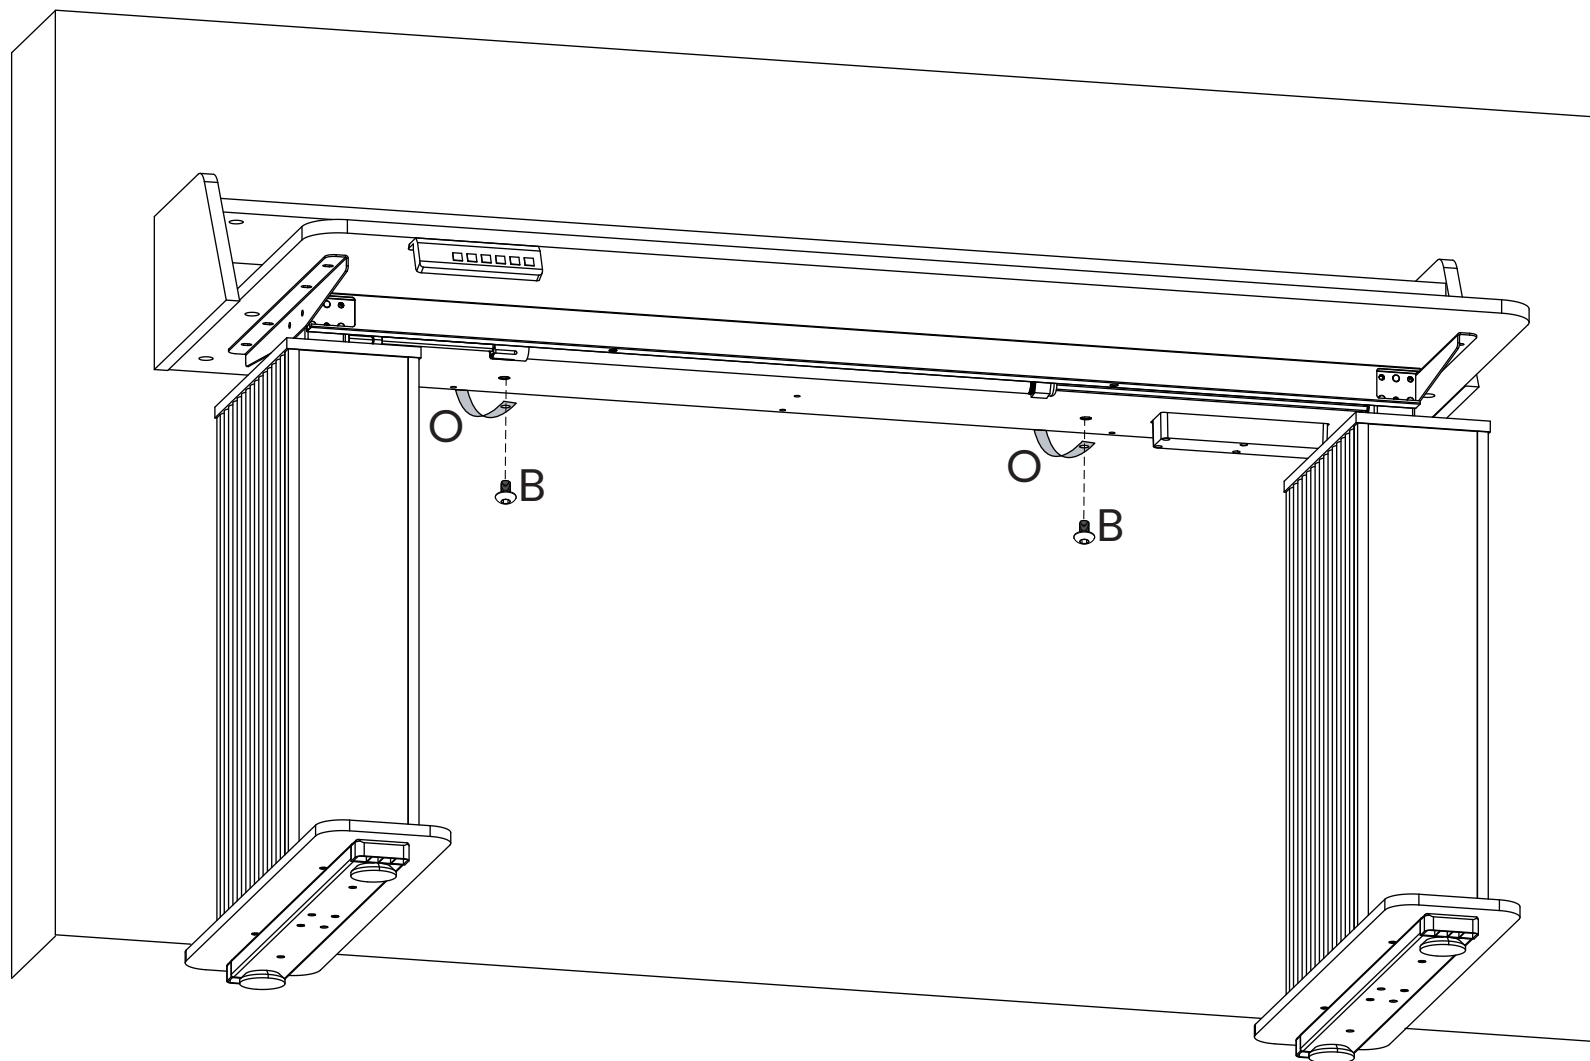

# Assembly Instruction
 
## Instructions for using the hand controller

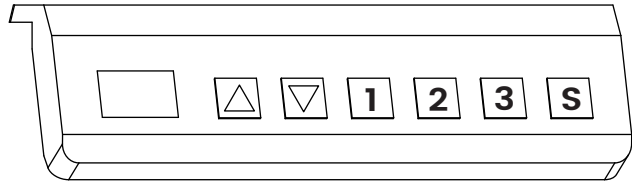

	Up arrow key, adjust the standing desk to move upwards
	Press the down arrow to adjust the height of the standing desk to move upwards
<b>1</b>	Memory key 1, the first height saved by the user
<b>2</b>	Memory key 2, the second height saved by the user
<b>3</b>	Memory key 3, the third height saved by the user
<b>S</b>	Set key, used by users to set parameters

### Table lifting and lowering

- Just hold down the “△” or “▽” key to control the height-adjustable table to rise or fall.
- Press and hold the “△” key to control the height-adjustable table to rise, and you can see the increase in height (the displayed number) on the three-digit digital tube; Press and hold the “▽” key to control the descent of the height-adjustable table. You can see the decrease in height (the displayed number) on the three-digit digital tube.

### The invocation and setting of memory height

On the height display interface, press the number keys to call up the corresponding height, and the height-adjustable table will automatically run to the corresponding position.

On the height display interface, briefly press the S key, and the height value will start to flash. At this point, press the number keys (1, 2, 3) to record the current height to the corresponding position. If the flashing display shows no number keys pressed within 6 seconds, the memory mode will be exited.

### Screen-off wake-up

If there is no key operation for a long time, the digital tube will automatically turn off. At this time, pressing any key will light up the digital tube.

### Parameter setting

- ① After holding down the S key for 3 seconds, the digital tube will display "S--" and start flashing.
- ② Press the S key again to enter the Settings mode, and the function names will be displayed. The functions for which parameters can be set include:
  - The display Unit for table height: Unit (U<sub>n</sub>);
  - The Force of Collision protection: Collision Force (CF);

The functions of each key in the setting mode:

- |          |   |
|----------|---|
| <b>1</b> | The back key can be used to go back to the previous level of the menu   |
|          | Option switching  |
| <b>S</b> | Confirmation key (Confirm entry to the next-level menu of the current interface or confirm selection of the current parameter item) |

If no key is pressed within 20 seconds, exit the Settings mode

# Assembly Instruction

Main menu interface	Submenu interface	Description
<b>CF</b> Collision Force	OFF off	After entering, the last set collision force level will be displayed. The “△” and “▽” keys can be used to flip among the options (Off, L, N, H). After selection, press the S key to save the current option value and keep the current option displayed for 2 seconds before exiting the setting mode.
	L Light	
	n Normal	
	H Heavy	

## Protection and Alarm

Display	Display	Method
<b>E02</b>	Problem	When the desktop vibrates, is hit or tilts during movement, an alarm will sound and the movement will stop immediately. The reverse movement will be automatically released after setting the distance, or any key can be pressed during the reverse operation to stop and release it. It is necessary to check and ensure that the table does not vibrate significantly, hit obstacles or tilt during operation before running.
<b>Hot</b>	Overheat protection	Continuous long-term operation may activate this protection. Power on again or wait for at least 15 minutes before use.
<b>E10</b>	Motor abnormal protection	The power should be cut off. Recheck and ensure that the connection between the motor and the controller is reliable, and then reconnect the power.
<b>E20</b>	Overload protection	If this alarm occurs when running upward, some heavy objects on the table should be removed before running again. If this alarm occurs when running downward, power should be cut off, some heavy objects on the table removed, and then power should be restored.
<b>E31</b>	Under-voltage protection	The power should be cut off. Recheck and ensure that the connection between the power supply and the controller is reliable, and then reconnect the power.
<b>E32</b>	Overvoltage protection	The power should be cut off. Recheck and ensure that the connection between the power supply and the controller is reliable, and then reconnect the power.
<b>Trip reset</b>		When in the "E10, E20" alarm state or after reaching the lowest height position, hold down the key for 3 seconds. After the display (Reset) is shown, release it. The height-adjustable table will start to move downward to the bottom and rebound to a certain height. Once the reset is completed, the lowest height will be displayed.



## 3-years Warranty

We guarantee your product is free from defects in product material and workmanship for three (3) years starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will send the corresponding accessories, replacement is free and all shipping costs are covered.



## Quick Response within 24 Hours

If you are still unable to resolve the issue, please contact us through the Amazon order page for customer support. Whether the product has been installed or not, our customer support team will respond within 24 hours and assist you promptly.

# Problems You May Encounter

Part	Problem	Solution
<b>Cloth drawers</b>	Why use cloth drawers	<ol style="list-style-type: none"> <li>1. Reducing tree extraction is more environmentally friendly</li> <li>2. More convenient to use and assemble</li> <li>3. Reduced the thickness of the side panel, resulting in a larger actual storage space</li> </ol>
<b>Whole Product</b>	Parts are missing, defective or having wrong parts in package	You can contact us and we will get back to you within 24 hours
	Having issue(s) while reading the instruction or completing the assembly	Feel free to contact us and we will get back to you within 24 hours
	Encountering non-human caused damage during usage	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution
<b>Table Surface</b>	Board surface is broken, scratched or lacks some screw holes	Feel free to contact us and we will get back to you within 24 hours
	The screw holes on the board and the steel frame don't line up	<ol style="list-style-type: none"> <li>1. Please tighten the screws on the board by 70%, do not tighten completely</li> <li>2. Adjust board and steel frame until the screw holes are lined up, then tighten all the screws</li> </ol>
	The desk board is uneven or not tight, has gaps after being assembled	<ol style="list-style-type: none"> <li>1. Loosen the screws in the uneven or gap positions; adjust until the desktops are flat and tight, then tighten the screws</li> <li>2. If your problem still can't be solved, please feel free to contact us</li> </ol>
<b>Steel Frame</b>	The steel frame is bent, broken, painted, rusted or damaged	Feel free to contact us and we will get back to you within 24 hours
	The table is unstable after being assembled	<ol style="list-style-type: none"> <li>1. Check if the screws are tightened</li> <li>2. Read through the manual, check if there are any parts installed incorrectly or missing assembly</li> <li>3. If your problem still can't be solved, please feel free to contact us</li> </ol>
	Encountering non-human caused damage during usage	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution

Thank you  
for choosing our product

