


Ceiling Fan Light

Modern concise design of ceiling fan with lights brings a wonderful using experience for you.

Email: uroadmin@urogoo.com

Phone: (657) 384-1547

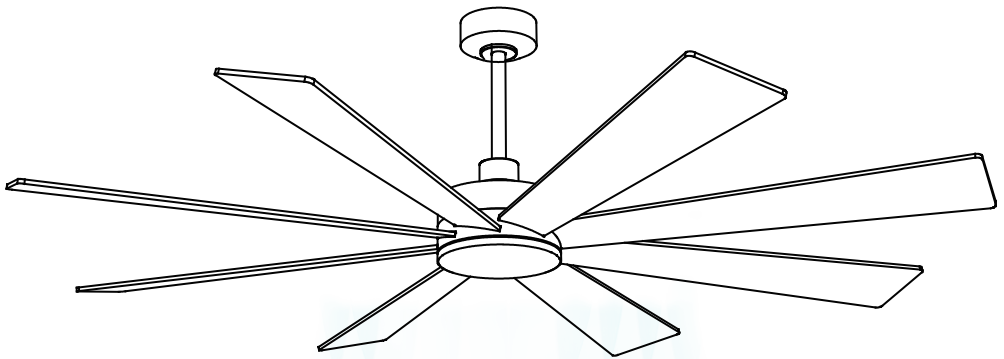

MODEL NO : 6668-72

OWNER' S MANUAL

READ AND SAVE THESE INSTRUCTIONS



WARNING

WARNING:To avoid fire, shock and serious personal injury, please read the following instructions carefully.

Important Safety Instructions

- 1.Read all instructions and safety information before installing your new fan. Review the accompanying assembly diagrams.
- 2.Before installing the fan, disconnect the power by removing fuses or turning off circuit breakers.
- 3.Make sure all electrical connections comply with local codes, ordinances, or National Electrical Codes. Hire a qualified electrician or consult a do-it -yourself wiring handbook if you are unfamiliar with installing electrical wiring.
- 4.Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 7 feet from the floor to the trailing edge of the blades.
- 5.If you are mounting the fan on a ceiling outlet box, use a metal outlet box. Secure the box directly to the building structure. The outlet box and its support must be able to support the moving weight of the fan (at least 50 lbs.). Do not use a plastic outlet box. Attach the mounting bracket by using the hardware supplied with the ceiling outlet box.
- 6.If you are mounting the fan to a joist, make sure it is strong enough to support the moving weight of the fan (at least 50 lbs.)
- 7.After installing the fan, make sure all the connections are secured. This will prevent the fan from falling.
- 8.Do not insert anything into the fan blades while the fan is operating.
- 9.Turn the fan off and wait for it to stop before reversing fan direction.
- 10.To reduce risk of electrical shock and personal injury, do not install the fan on a sloped ceiling>15°.
- 11.To reduce the risk of electrical shock and personal injury, do not use this fan with any solid-state.
- 12.To reduce risk of personal injury, use only the two steel screws and lock washers provided with the fan for mounting the outlet box.

Table of Contents

SAFETY PRECAUTIONS 1

ASSEMBLY DRAWING & PARTS LIST-WITH LIGHT 2-3

INSTALLING THE FAN 4-10

Before You Start 4

Installing the Mounting Bracket 4

Installing the Fan Detailed Steps 5-9

Remote Control Setting and Operation.....10

IMPORTANT: PAIRING BETWEEN REMOTE AND RECEIVER 11

APP INSTRUCTIONS 12


PROTECTIVE FUNCTIONS OF THE RECEIVER 13

MAINTENANCE 13




BALANCING FAN/WOBBLING/TROUBLE SHOOTING 14

ASSEMBLY DRAWING & PARTS LIST-WITH LIGHT

Product Components

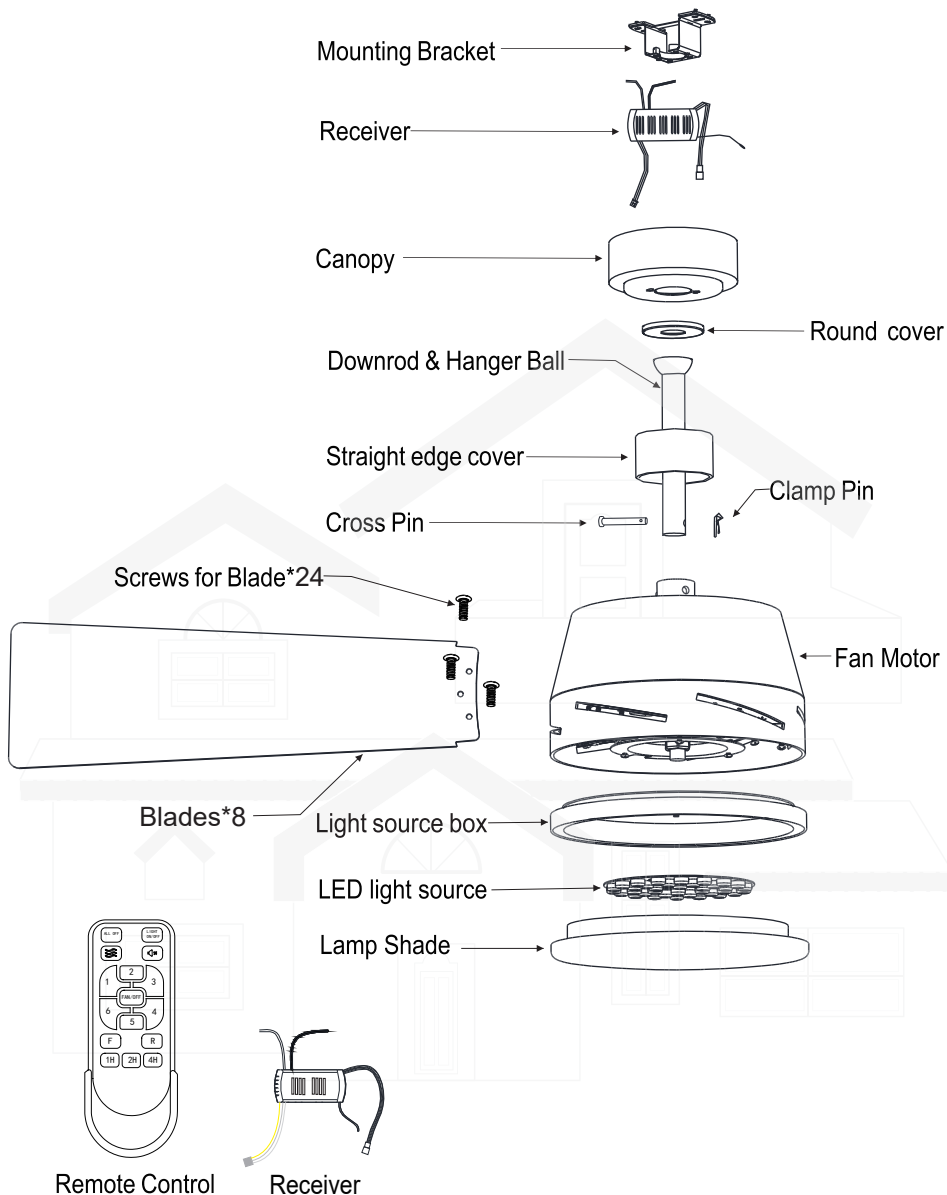


SCREWS KIT

   Item no.	Reference Image	Qty.
1	 ST5x35 Setscrew	x4
2	 Expansion Screw	x2
3	 Screws for Blades	x24
4	 Fabric Washer	x24

INSTALLING THE FAN LIGHT

BEFORE YOU START

Contact a licensed electrician if you are not good at performing electrical work . It's the licensed electrician who installs the fan . if required by the local code . Do not use the fan with a dimmer switch . Turn off power at breaker

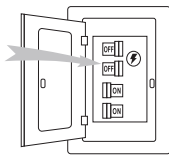

Tools and Materials Required



External Hexagonal Wrench



Wire Stripper



Phillips Screwdriver




Step Ladder


INSTALLING THE MOUNTING BRACKET

The ceiling fan must be installed in the location where there is 12"(300mm) spacing from the tips of all blades to the nearest objects or walls. **REMEMBER** to turn off the power before hanging the fan. Follow the instruction below to hang your fan properly:

1. For concrete ceiling, drill two holes in the ceiling and secure the mounting bracket to the ceiling with two $\Phi 0.32"$ (8mm) (distance between the two holes should be appropriate) expansion screws, flat washers nuts provided and tighten with a spanner.

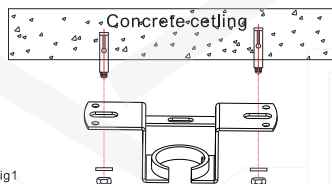


2. For wood ceiling, secure the mounting bracket to the ceiling that is capable of carrying a load of at least 100lbs (45kgs) with two long mounting screws and washers provided. Be sure at least 0.12"(30mm) of the screw is threaded into the support.

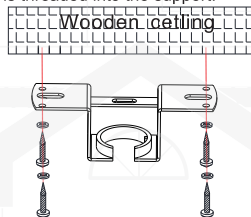

3. Refer to the Fig. on the right to mount when the ceiling is angled (Max. 15°).

NOTE: The hanger must be able to withstand 100lbs (45kg) or more after the installation.

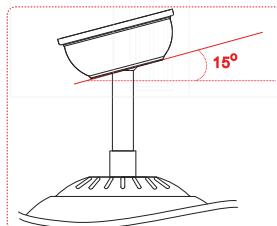

INSTALLING THE FAN LIGHT

- 1 : Thread the fan blade through the slot next to the motor and secure it firmly to the motor with screws

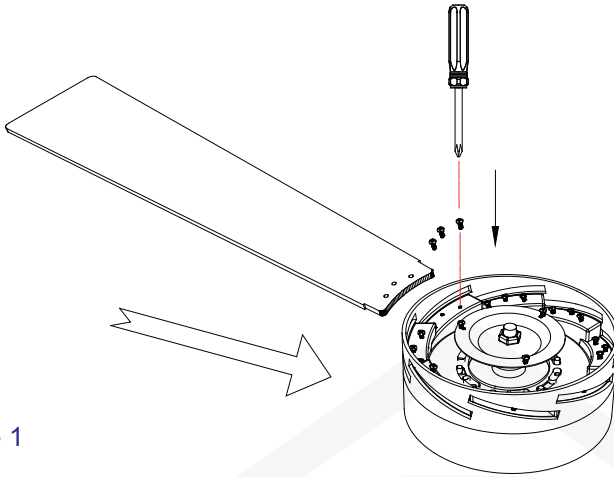


Figure 1

- 2 : Fix the light source box onto the bottom base of the motor with screws, and then install the light source

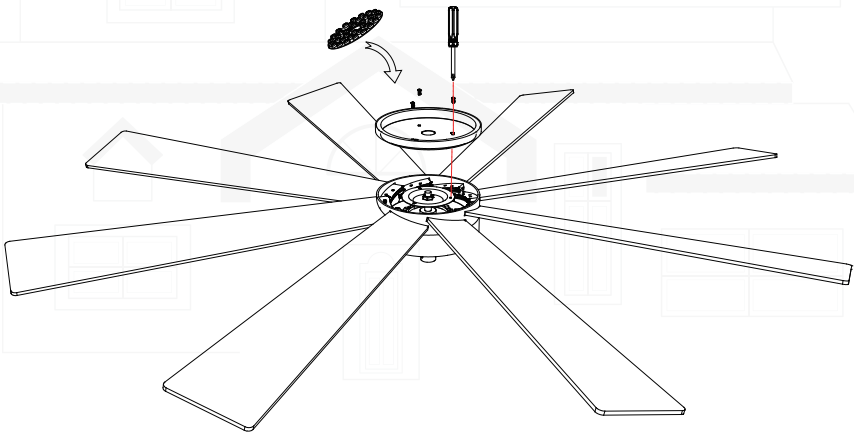


Figure 2

INSTALLING THE FAN LIGHT

3 : Connect the light source terminal connector
(Blue White light wires connector) properly

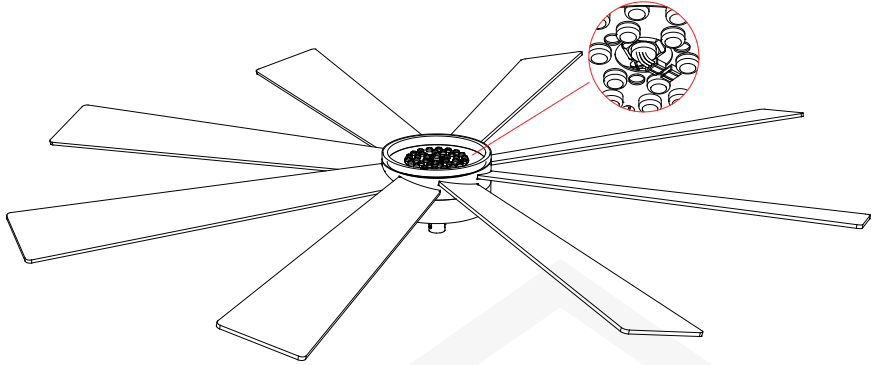


Figure 3

4: Loosen the set screws in the Hanger Ball assembly until the ball assembly until the ball slides carefully down the downrod. Remove the Pin from the downrod.

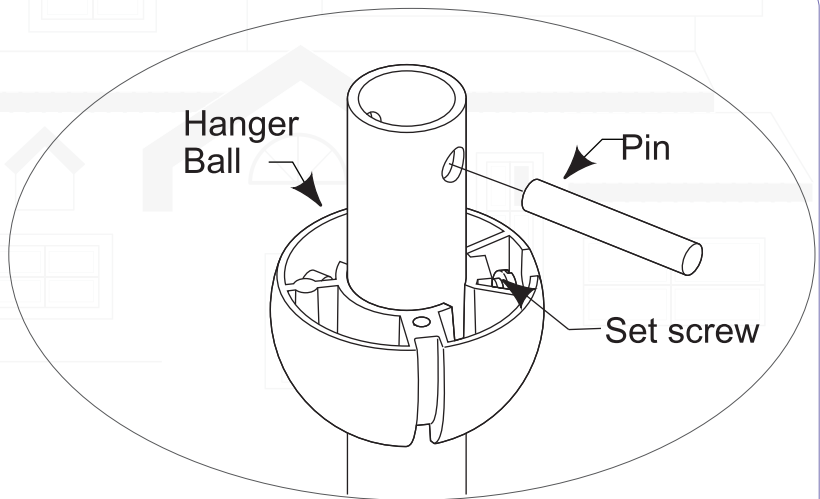


Figure 4

INSTALLING THE FAN LIGHT

5: Remove and save the clevis pin and hairpin of the downrod. Put the downrod through the canopy and coupling cover. Put the all wires from fan motor through the downrod.


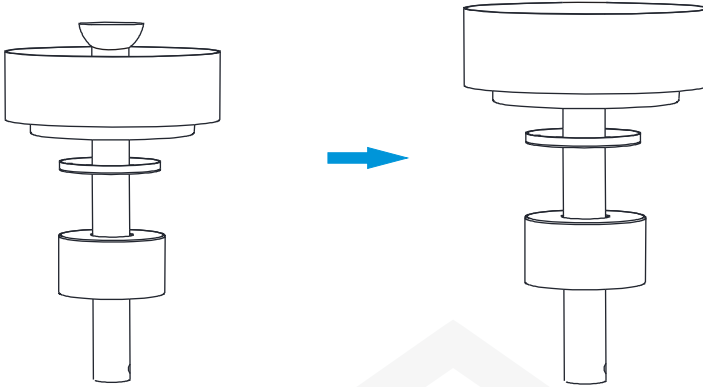


Figure 5

6: Loosen two set screws on the downrod support and then place the downrod into the downrod support. (Figure 6)

-There are the electrical wires and the ground wire through the downrod. Align the Cross Pin holes in the Downrod with the holes in the Downrod Support. Be sure to push the straight leg of the Clamp Pin Clip through the hole near the end of the Cross Pin until the curved portion of the Clamp Pin snaps around the Cross Pin. Finally, re-tighten the two set screws.

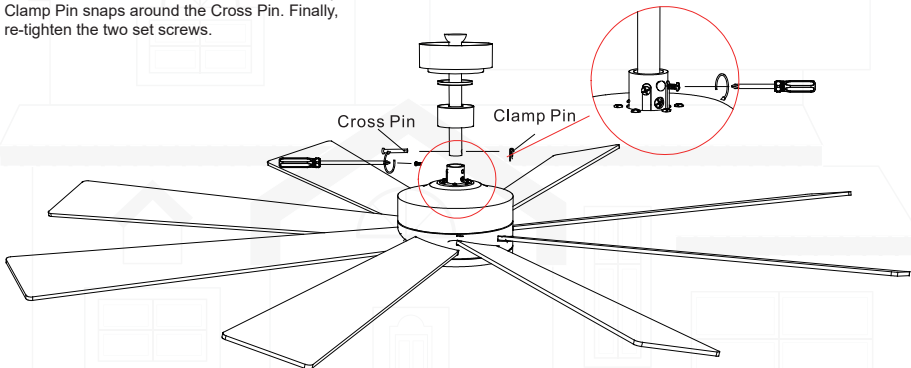

WARNING

It is critical that the cross screw in the downrod support is properly installed and the set screws are securely tightened. Failure to verify the cross screw, Clamp Pin clip and set screws are properly installed could result in the fan falling.

Figure 6

INSTALLING THE FAN LIGHT

7. Carefully lift the fan, and set the downrod / hanger ball assembly on the hanger bracket attached to the ceiling joist. Be sure the groove in the ball is properly aligned with the tab on the hanger bracket.

(Figure 7)

WARNING

The fan must be hung with at least 230cm of clearance from floor to blades.

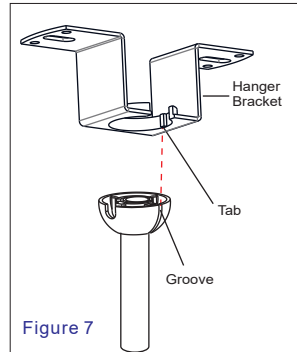



Figure 7

Precautions for connecting the power cord :

WARNING

To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring

Connect 110V main power (dwelling) to the Terminal Block located on the hanger

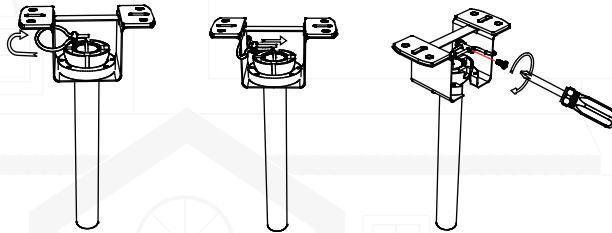

8.1: Locking Hanging Wire

Step 1. Wrap the Hanging Wire around the side of the mounting bracket and thread it through the lock to secure it.

Step 2. Pull on the hanging wire strands to tighten them in place.


Step 3. Secure it with screws.

Note: Be sure to straighten the wire when locking the hanging wire.


8.2; Correctly link the light wire, motor wire, and neutral wire and live wire according to the guidelines on the right

INSTALLING THE FAN LIGHT


- 1 Connect wires according to polarity (the color of the house power cord maybe different or the same)

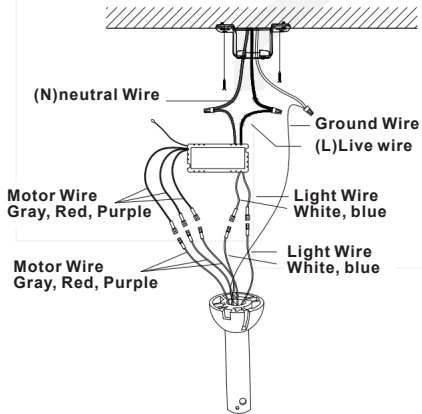

- 2 Put the receiver into the Bracket and arrange the wires

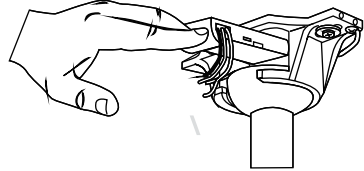

- 3 Adjust the position of Canopy, then lock it

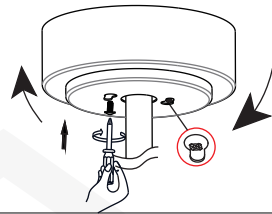

9. Installing Lamp shade

⚠ WARNING Take care not to over tighten when installing the glass shade


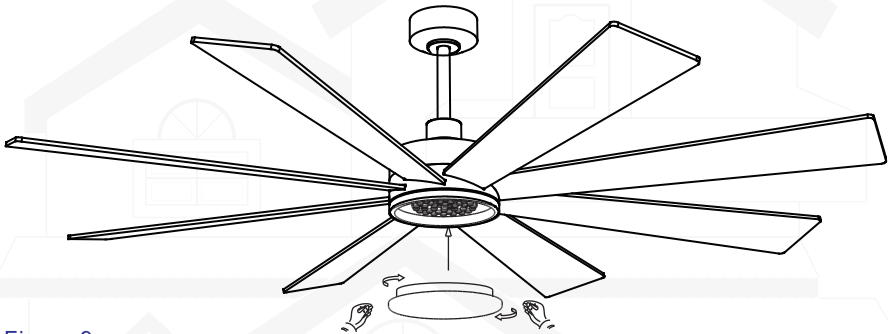


Figure 9


Installation is now finished . Turn on the power switch. Then the fan lights are on Test and pair your fan immediately using the remote control

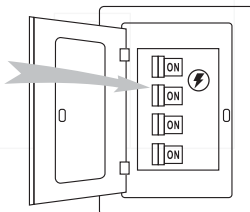

REMOTE CONTROL SETTING AND OPERATION


1. Restore electrical to the outlet box by turning the electricity on at the main fuse box.
2. Remove the battery cover from the remote control transmitter, install the battery, and replace the cover.
 Note:
 - 1). Use AAA 2 1.5V battery to replace battery.
 - 2). If not using for long periods of time, remove the battery to prevent damage to the remote transmitter, and store the remote transmitter away from excess heat or humidity.
3. The buttons on the remote control transmitter control the fan speed and light as follows.

Remote Control (Esmmitter) Operation

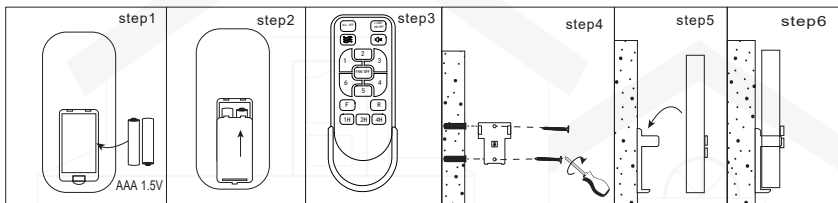

4. Remote functions:

Light On/Off	Light On/Off
ALL OFF	Turn off lights and fans
	Natural wind
R/F	Fan rotates forward/reverse
1,2,3,4,5,6	Fan speeds
1H	Fan Stops After 1 Hour
2H	Fan Stops After 2 Hour
4H	Fan Stops After 4 Hour
	Beep/Mute (Thisfunction can only be achieved by the remote)
FAN/OFF	FAN/OFF or Setup Pairing key. (The remote control need to be paired successfully before use. Please refer to the pairing process on the next page.)

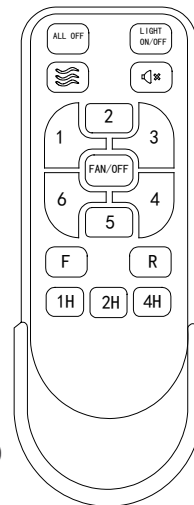

IMPORTANCE: PAIRING BETWEEN REMOTE AND RECEIVER

Within the 3s after turning "ON" the power supply, long press the Remote Control "FAN OFF" button for 3-5 seconds. If the fan light beeps, then the pairing is successfully done and all functions will work normally.

IMPORTANT NOTES

The first step of pairing must be performed within 3s after turning on the power supply.

1.(a)When pairing multiple fans, please ensure the isolation switch or the power supply to the first installed fan is turned off prior to pairing further fans. Please pair one fan at a time.

(b)Please ensure the isolation switch is kept "ON". The isolation switch can not act as a light switch as this will impair the remote receiver.

2.When the transmitter's functions are disabled, please check the battery orientation and power level. Low battery voltage will affect your transmitter's functions and your fan's operation. Other remote controls nearby using the same frequency may interfere with your fan's receiver.

3.Please remove the batteries from the transmitter if not used for a long period of time.

4.Remote control supports 200w maximum lighting.

IMPORTANCE REMINDERS

1.Note: Receiver must be correctly installed on the fan's mounting bracket.

2.When the transmitter cannot control the receiver, please check the battery level.

3.When the transmitter cannot control the receiver, please check if similar remote controls your fan nearby and interferes with each other.

4.Battery's low power will affect the transmitter's sensitivity and the signal reception accordingly.You must replace the battery if its power is low.

5.Please take the battery out of the transmitter to avoid battery leaks when not used for along time.


6.Isolation switch must be connected in the line.

7.When a blackout or otherwise circumstances happen, the light will work normally after the power restores.


APP Instructions




Scan QR code and download APP
Support IOS and Android

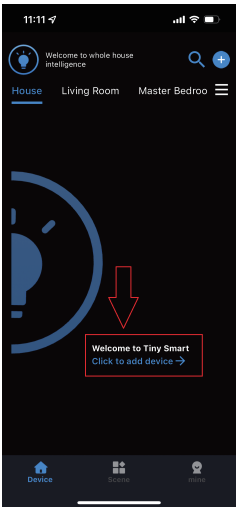


Instruction 01

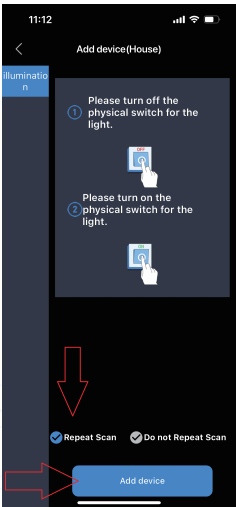


Instruction 02

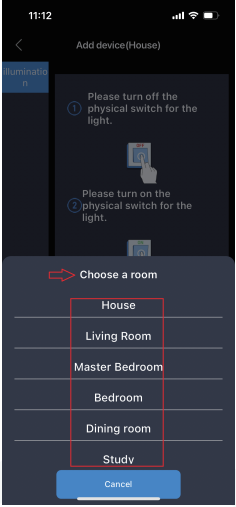


Instruction 03

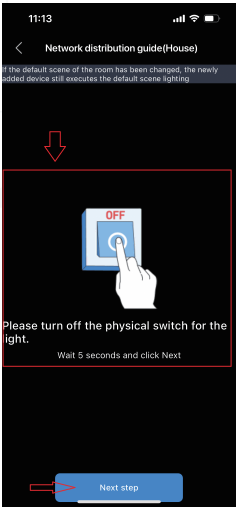

Instruction 01

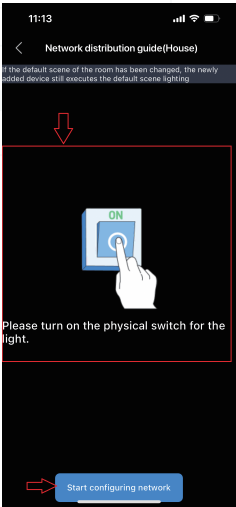

Instruction 02

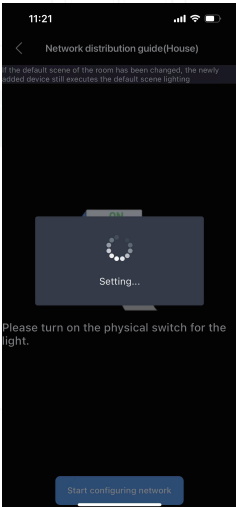

Instruction 03



Lock protection- The motor has a built-in safety feature against blade or motor obstruction during operation. If something obstructs the fan blades or motor, the motor will keep trying to run and then stop operation after about 30 seconds of interruption. Please remove obstacles and reset. To reset: Turn the fan off by remote transmitter and then turn the fan on.

Over load protection (current limit)- The device will limit the maximum current output from the receiver/drive if the fan load has increased abnormally.

Tips

1. If your fan is operates automatically after installation and power on, it is because your fan has memorized the previous factory setting. Use the Universal Mode or the learning function and your fan will be ready for use.
2. If the fan or light isn't working, reset power (turn the power off for at least 5 seconds and then turn the power back on) and redo the learn function setting.
3. It is not possible to remotely operate more than one fan in the same room (in the area where the remote signal can reach to) if they share the same power supply. Separate power supplies (such as using individual wall switches for each fan) is required if you want to separately control more than one fan in same room.
4. When the fan is turned on or operated using forward/reverse function, it shutters & goes back & forth until it turns.
This is a normal and it will take a few seconds to run this operation.

MAINTENANCE



WARNING

Do not use solvents when cleaning your ceiling fan. It could damage the motor and create the possibility of electrical shock.

1. Periodic cleaning of your new ceiling fan is the only maintenance that is needed.
2. When cleaning, use only a soft brush or lint free cloth to avoid scratching the finish.
3. Abrasive cleaning agents are not required and should be avoided to prevent damage to finish.

RECOMMENDED:

Periodically check that the blade sets to the fan motor setscrews are secure and tight.



Please note that all ceiling fans are not the same, even in the same model—some may move more or less than others.

Movement of a couple of centimeters is quite acceptable and does not suggest the fan will fall down.

Even though all blades are weighted and grouped by weight, it is impossible to eliminate wobble altogether. This should not be considered a fault. Ceiling fans tend to move during operation due to the fact that they are not generally rigidly mounted.

TRY THE FOLLOWING TO REDUCE A WOBBLING FAN;

1. Check that all of the blade mounting screws are tightened and secure.
2. Wobbling problems may result from inconsistent blade level. To check the blade level, measure the distance from each blade tip to the ceiling. Note: If measurements are inconsistent:
 - Be sure the blade mount screws are not too tight or too loose, which may cause wobbling due to an unlevel blade tip
 - An out of shape blade can cause wobbling. Check by removing the blade and placing on a flat surface.
3. Blade tracking may be checked simply by use of a household ruler. Place the ruler vertically against the ceiling and even with the outside leading edge of a blade. Note the distance of the edge of a blade compared to the others. Turn the blade slowly by hand to check the remaining blades.
If a blade is not in alignment, the blade is either out of shape, warped or the blade screws are not evenly tighten or either loose.

BALANCING KIT

A Balancing Kit has been provided to assist with reducing a wobble. Please retain the kit as it may become useful should the fan develop a wobble in the future.

Step 1. Clamp the balance clip to the middle position marked A of any fan blade.

Turn on the fan and check if the vibration of the fan blades is reduced. Proceed to step 3 if the shaking is reduced. If shaking increases go to step 2.

Step 2. Take out the balance clip, clip it to the middle mark B of the clockwise adjacent blades, and so on until you find the fan blade that can reduce the shaking.

Step 3. When we found the fan blade that can reduce the shaking. Move the balance clip on the fan blade towards the center or edge and turn on the fan to see if the wobble is reduced. If the balance clip cannot fully counteract the shaking of the fan blade at the center or edge position, you can add an additional balance clip near the center or edge position for adjustment.

Step 4. When the fan blade no longer shakes, use a balance patch to stick to the position where the clip on the back of the fan blade is clamped to replace the balance clip. (1 balance patch instead of 1 balance clip)

Step 5. The adjustment is complete.

CEILING FAN

MADE IN CHINA

Email: uroadmin@urogoo.com Phone: (657) 384-1547

Any question please feel free to contact us, we will get you back in 24 hours.