



ASSEMBLY INSTRUCTIONS

1. FASTEN SOCKET ASSEMBLY (B) SECURELY ONTO BASE (A). BE CAREFUL NOT TO TWIST THE POWER CORD. TIGHTEN SECURELY.
2. PLACE HARP (C) ONTO SADDLE. PLACE SHADE (D) ONTO THE HARP (C).
3. TIGHTEN FINIAL (E).

CLEANING

DO NOT USE POLISH OR CLEANERS ON YOUR LAMP, JUST WIPE CLEAN WITH SOFT CLOTH.

WARNING

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER). AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS PLUG WILL FIT IN A POLARIZED OUTLET ONE WAY ONLY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED.

DIRECTIVES D'ASSEMBLAGE

1. BIEN FIXER LA DOUILLE (B) SUR LE BASE DE LAMPE AVEC USB (A). FAIRE ATTENTION DE NE PAS TORSIONNER LE CORDON D'ALIMENTATION. SERRER SÛREMENT.

NETTOYAGE

NE PAS UTILISER DE POLISH NI DE PRODUITS DE NETTOYAGE SUR LA LAMPES, SEULEMENT AVEC UN CHIFFON DOUX ET PROPRE.

AVERTISSEMENT

CE PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER). AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS PLUG WILL FIT IN A POLARIZED OUTLET ONE WAY ONLY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED.