

尺寸: 145*210mm 型号721R 780pcs



Air cooler
User manual



Made in china

INTRODUCTION

- Thank you for purchasing our air cooler.
- Each unit has been manufactured to ensure safety and reliability.
- Before first use, read the instructions carefully and keep it for further reference.

PERFORMANCE PARAMETERS

Model	Rating Power	Power	Specification
721R	110V~40Hz	80W	Cooling only

KNOW YOUR AIR COOLER



- Place your air cooler at least 10cm away from wall or any other obstruction. The cooler should be placed near a window where it allows fresh air.
- Always ensure that there is another open window/door through which warm air can exhaust from the room. Constant air change is very essential for fresh air cooling by your air cooler.
- Plug in the main cord of your air cooler to a wall socket. Ensure this plug is properly earthed and is in off position while plugging.

FUNCTIONS

- Principle of Cooling:** Water is taken from the water tank by pump in the top, then the water drops into paper evaporator. When the water in paper evaporator evaporates to water vapor, the air is cooled. People will feel cool wind when the cool air is delivered by fan.
- Remotely control:** with an infrared, remote appearance.
- Adjustable speed and fan type:** have three speeds and fan types, blow at a wide angle.
- Cooling:** Through air evaporating, can drop the air temperature and raise relative humidity.
- Deliver wind at a wide angle:** using the blades automatically, deliver wind at horizontal wide angle. Using the blades transversely manually, adjust the direction discontinuously.

ASSEMBLING AND WATERING

- Assembling unit: put the appliance on a flat surface, take out the screws from foam box, then assemble the cabinet.
- Warning: pull 13 water tank, then add clean water.
Attention:
 - Pay attention to the level of water tank when add water.
 - The level of water tank should not over "MAX" scale at any time, when humidifying, the total level of water tank should not below "MIN" scale.
 - Put in or finish too low in the water tank, if you want to strengthen the efficiency of cooling, that the total level of water tank should not over "MAX" scale.

OPERATION

ON/OFF key: after it is connected to the power supply, the cooling fan will start steadily now. knob "1,2,3" the machine will start to work, knob "off" to turn off the fan.

Wind speed key: Low speed (1) · Mid speed (2) · High speed (3)

OSC key: press swing key, the wind can automatically swing left and right

Cold air key: turn on this switch to start cool air function.

IMPORTANT: Please be sure there is enough water in the water tank before press this key.

Time/Timer knob: from 1 hour to 12 hours

Thermos wind

THE USE OF ICE BOX

The ice box has a particular feature of keeping cool, it can always heat and let the water temperature below the environmental temperature.

Using methods:

- add water to the ice box (not over max level) and put it into the refrigerator to make sure that it is cold absolutely.
- Open the door, put the frozen ice box into the water tank.
- Then here have no harm, can be used continually.

CAUTION

- Use as per the rating voltage.
- Do not repair or remake the appliance by yourself. It should be repaired by the engineers.
- Do not expose the appliance with wet hands, in order to avoid damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- When the appliance is not in use, we switch off and unplug it.
- Do not insert foreign things in air outlets and holes, in order to avoid damage.
- Do not use the appliance near explosive and combustible gas. Avoid long-term direct solar radiation.
- Use the appliance only on a flat surface.
- Please avoid exposing to direct sunlight or rain when using outdoors.
- The level of water tank should not over "MAX" scale at any time, when humidifying, the total level of water tank should not below "MIN" scale.
- After adding water to the water tank, do not tilt or knock over it when you put or move. If you want to move, please push slowly from the side, in order to avoid spilling.
- Do not turn over the appliance. If it is tipped over and there are some water in the body, should empty the power supply first. Then wash it in the repair department or after-sales service and overhaul the appliance.
- Do not cover blower vent.
- Check the temperature with a thermometer clock. Do not use any type of detergents or solutions.
- Do not use any sharp object to clean the body.
- Do not use any corrosive and strong liquid on the wall or curtain.
- Do not touch the appliance with wet hands, otherwise it may cause slip automatically.
- Do not touch the water tank with hot water, otherwise it may cause burn. Please remove the water tank when it is hot.

CLEANING AND MAINTENANCE

WARNING: Ensure that the fan is switched off from the supply mains before removing the air filter work.

- Clean the air filter screen
Cut off the power supply, pull the handle of air filter screen, remove it from appliance. Clean the air filter screen with neutral detergent and hot water brush, then clean it with clear water. Finally, re-install to the appliance.
- Clean the wet pad
Cut off the power supply, take down the air filter screen, then draw the wet pad from support. Clean the wet pad with neutral detergent and hot water brush, then clean it with clear water. Finally, re-install to the appliance.
- Clean the water tank
Cut off the power supply, open the door, take out the water tank, clean it with neutral detergent and wash it with clear water, then re-install to the appliance.
- Clean the shell
Clean with neutral detergent and soft cloth.
Attention: cut off the power supply when clean the appliance as there have a high pressure in the body. Do not have any water on the surface of control panel.


Malfunction and Maintenance

Malfunction	Causes	Solution
No action	1. Power off or poor connection. 2. Not press the "ON" key on the control panel.	1. Plug the power cord and make sure it connects well. 2. Press the "ON" key on the control panel.
Poor effect of dehumidifying	1. Block the air filter screen with dust. 2. Block the air inlet with foreign things.	1. Purify the air filter screen. 2. Remove foreign things from the air inlet.

Repair the appliance under the situation as follows:

- Abnormal action or no action. It is resolved by the above approach.
- Abnormal action caused by ingress of water or foreign things.

Wiring Diagram of Air Cooler

 

110V~40Hz (For reference only)

1

2

3

4