 
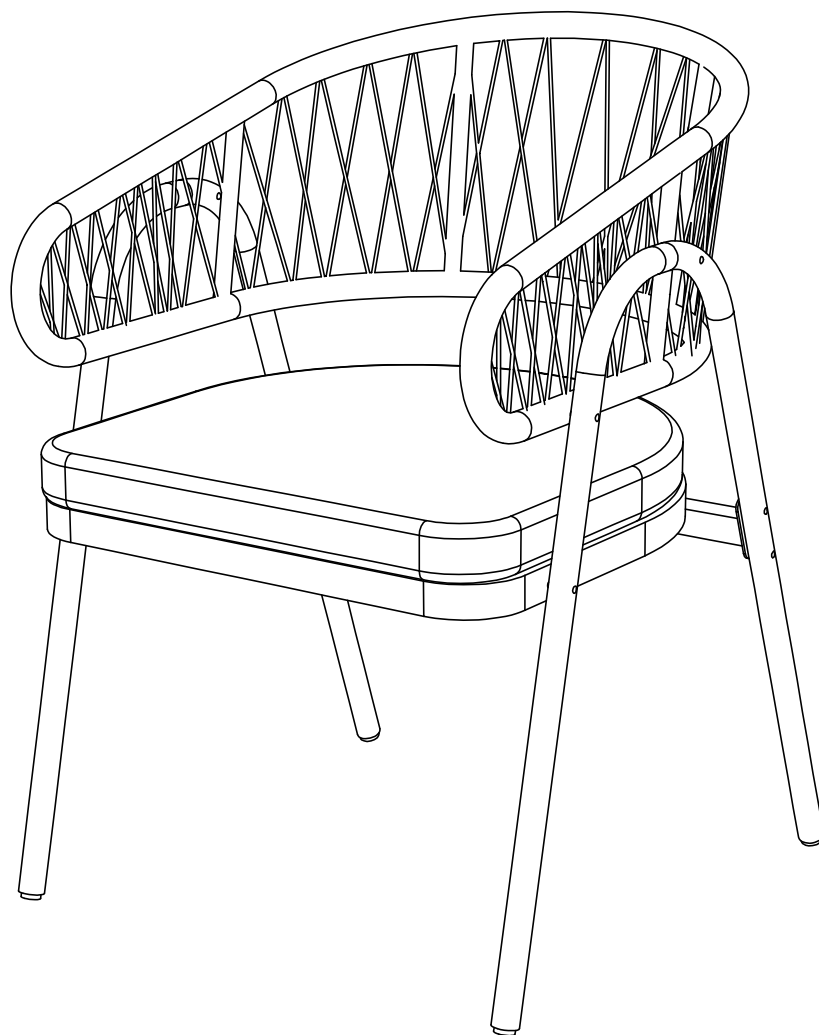 
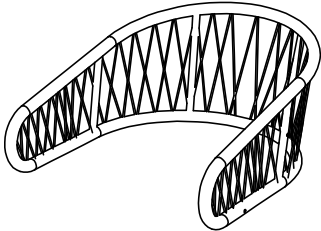 
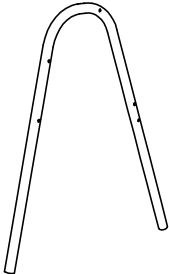 
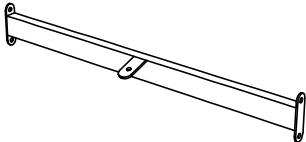 
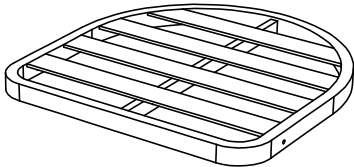 


ASSEMBLY INSTRUCTION





Patio Dining Chair 25030DC






RARTS LIST

LABEL		DESCRIPTION	QTY
A		Backrest	2
B		Armrest	4
C		Rear Bumper	2
D		Seat Frame	2
E		Seat Cushion	2

 
 
 
 
HARDWARE LIST

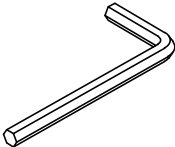LABEL		DESCRIPTION	QTY
1	 M6x15	Bolts & Washers	2
2	 M6x35	Bolts & Washers	16
3	 M6x50	Bolts & Washers	4
4		Nut	12
5		Wrench	1
6	 M6	Allen Wrench	1

   1

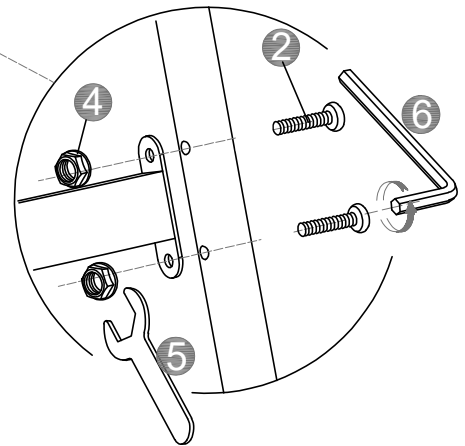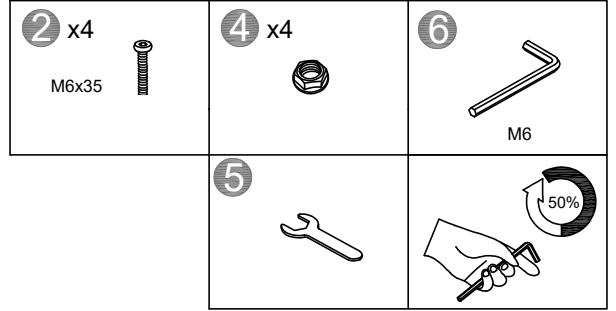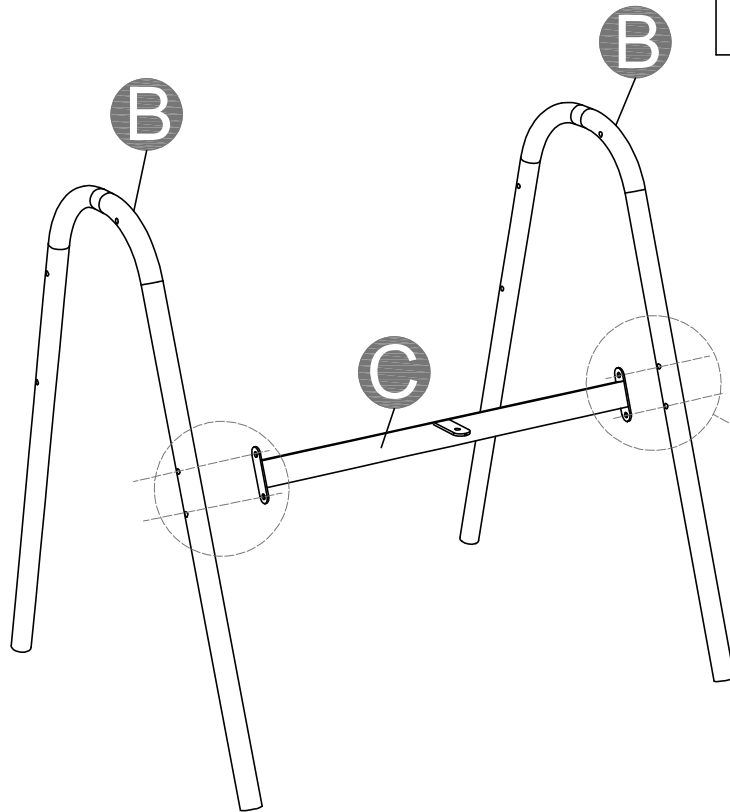

2

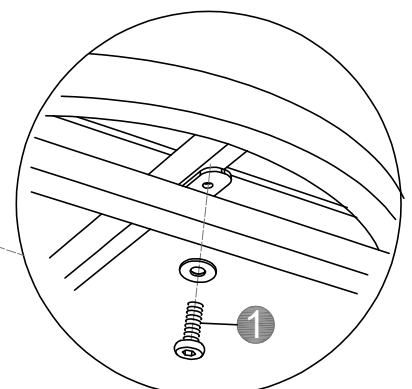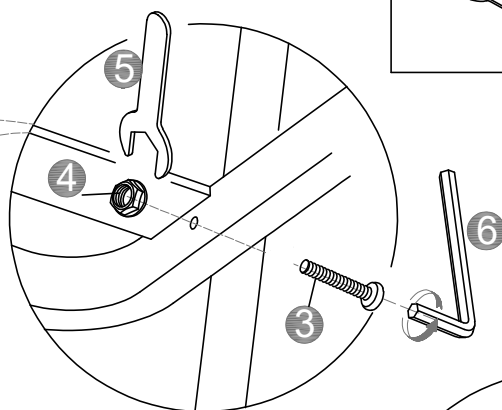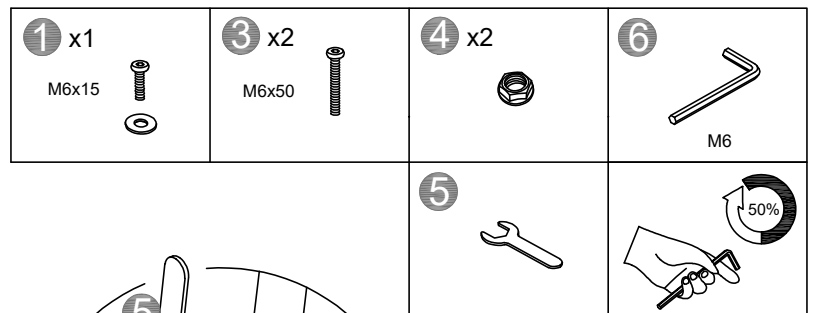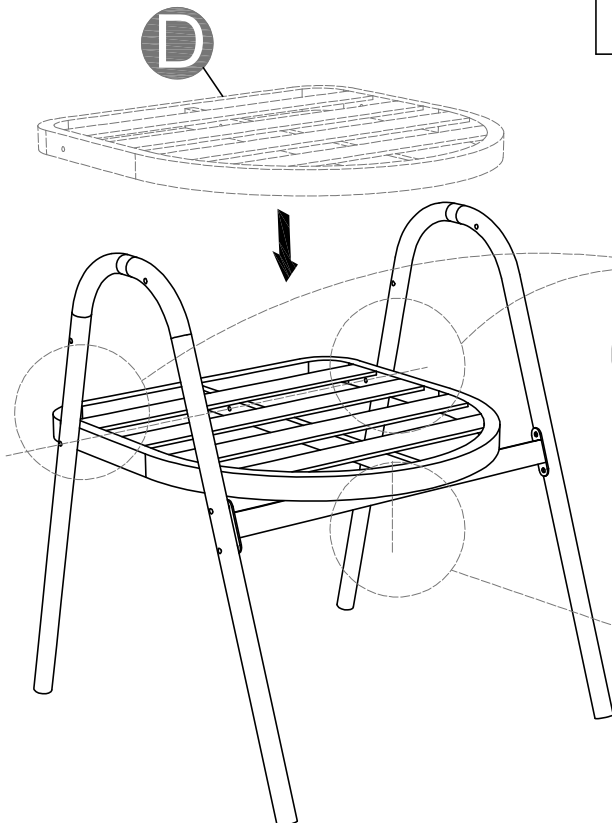    

3

2 x4

 
 
M6x35



6 x1





M6

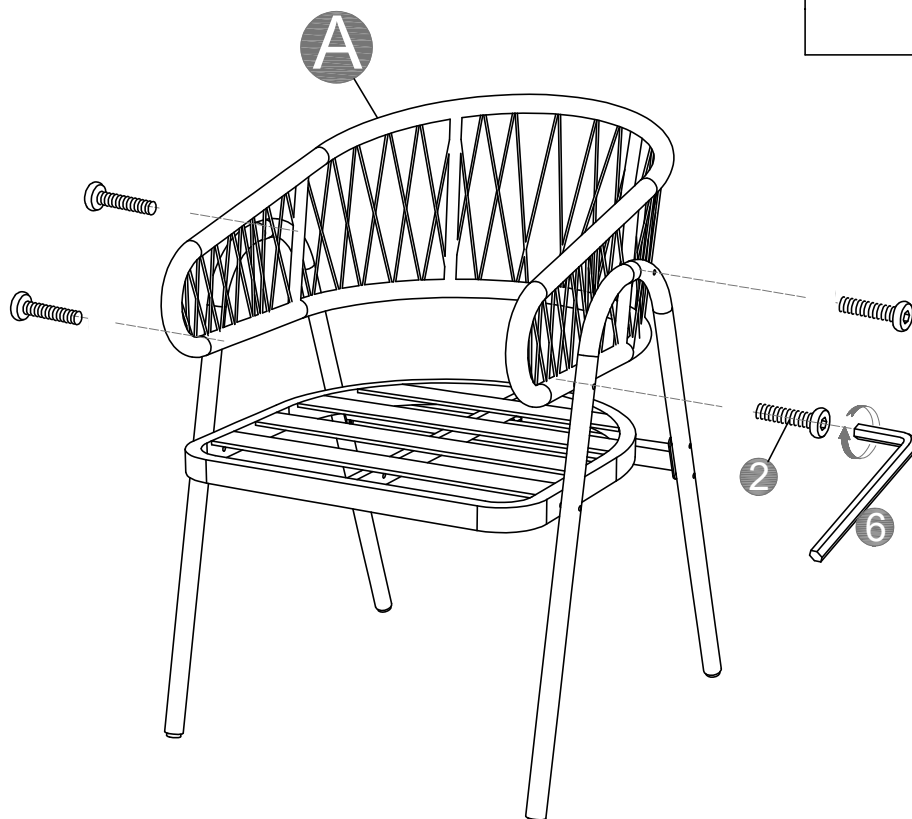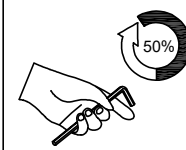


4

  
Tighten the screws to 100% tightness

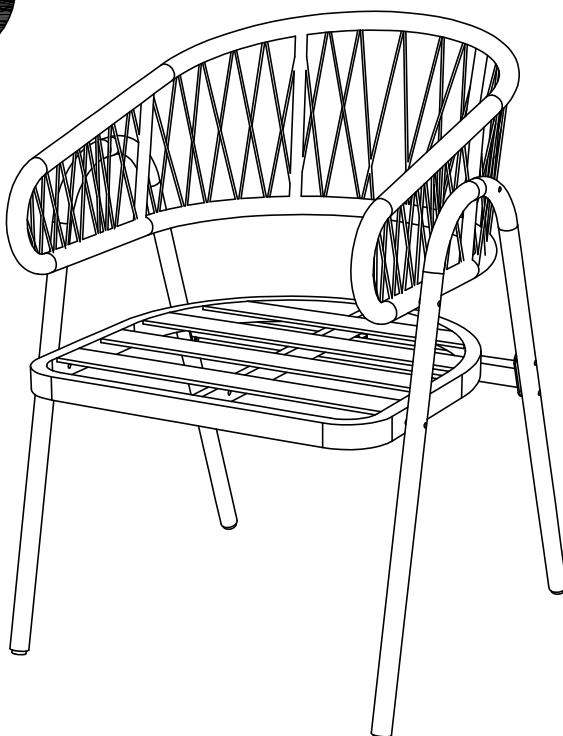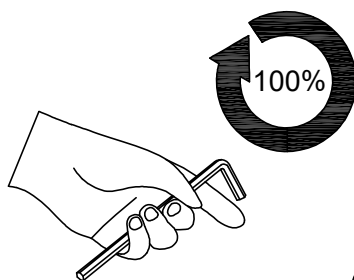

5

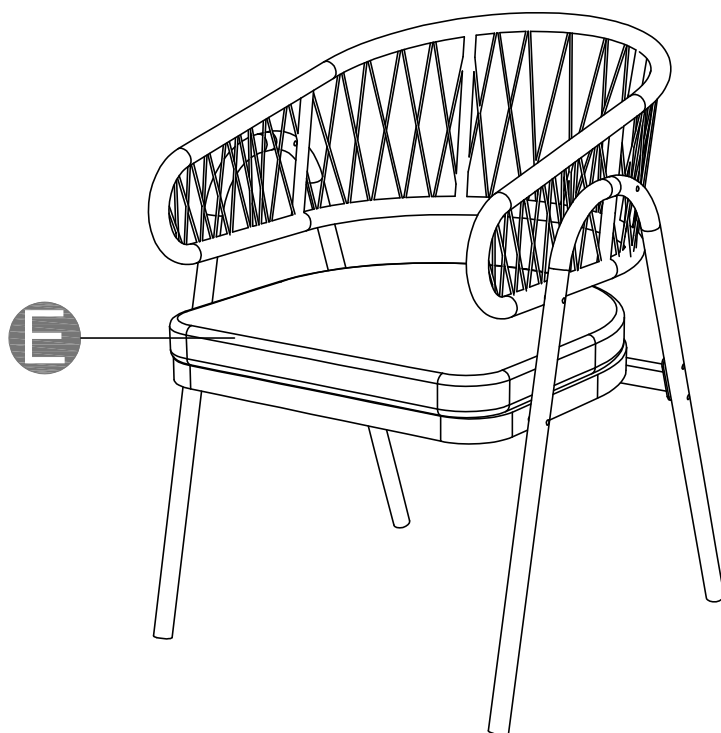 

6

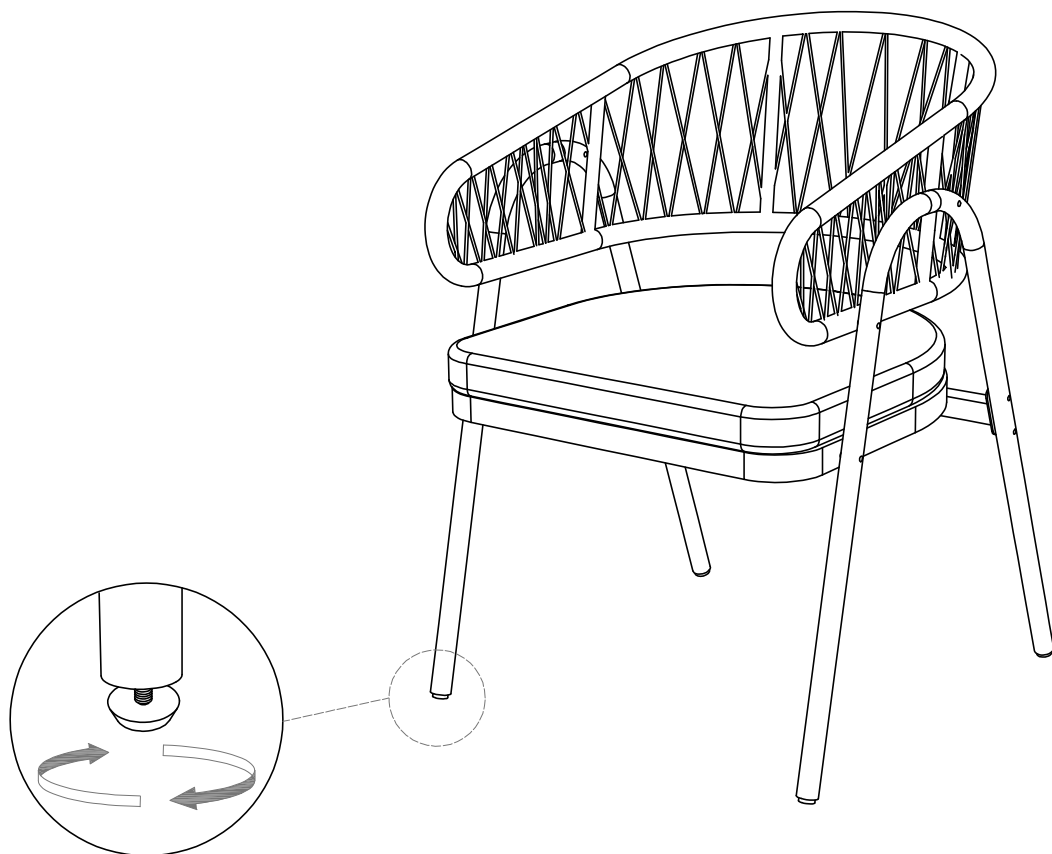 

Note: Each leg has an adjustable footleveler to help level your chair.