

ASSEMBLY INSTRUCTIONS

MODEL # 30022 / 30024 JASPER 48R DINING TABLE

Please read instructions carefully

Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.

CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.


3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

PARTS LIST (FOR 1 NOS. OF TABLE)


NO.	COMPONENT	QTY.
P1	TABLE TOP	1
P2	PEDESTAL LEG	1
P3	MOUNTING PANEL	1

HARDWARE LIST (FOR 1 NOS. OF TABLE)

NO.	DESCRIPTION	QTY.
H1	M6 x 35 JCBC SCREW 	8
H2	SPRING WASHER 	8
H3	FLAT WASHER 	4
H4	LEG ADJUSTABLE GLIDE 	8
H5	WOODDOWEL M8X30MM 	4
H6	ALLEN KEY 	1

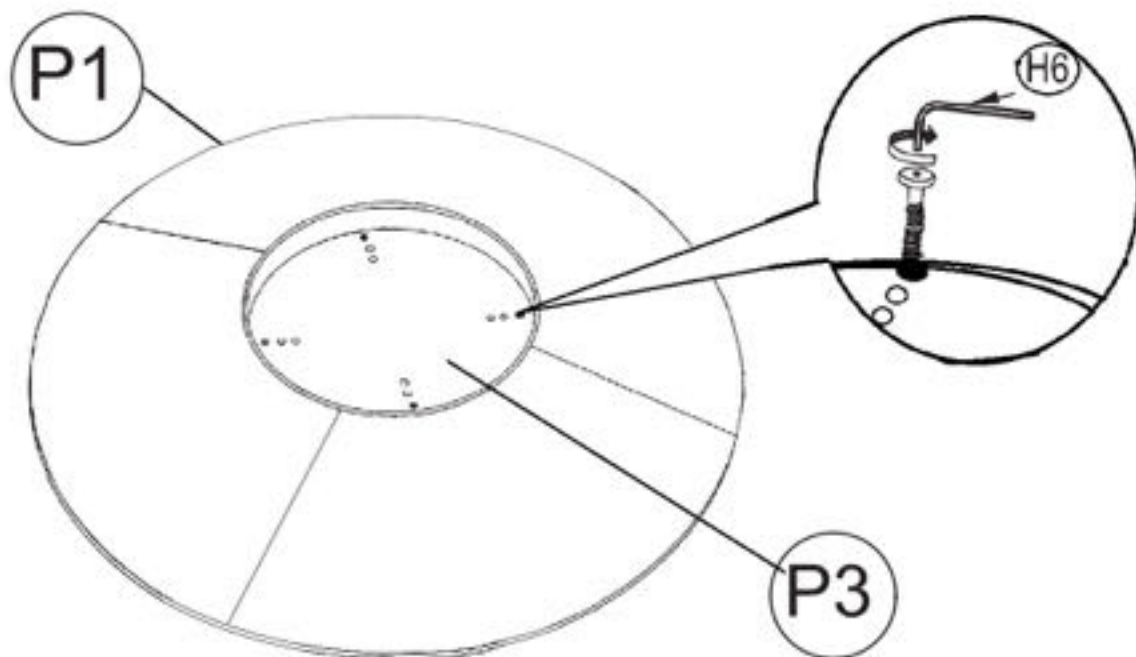


IMPORTANT : Detach Mounting Panel (P3) from table top (P1) before assembling the table

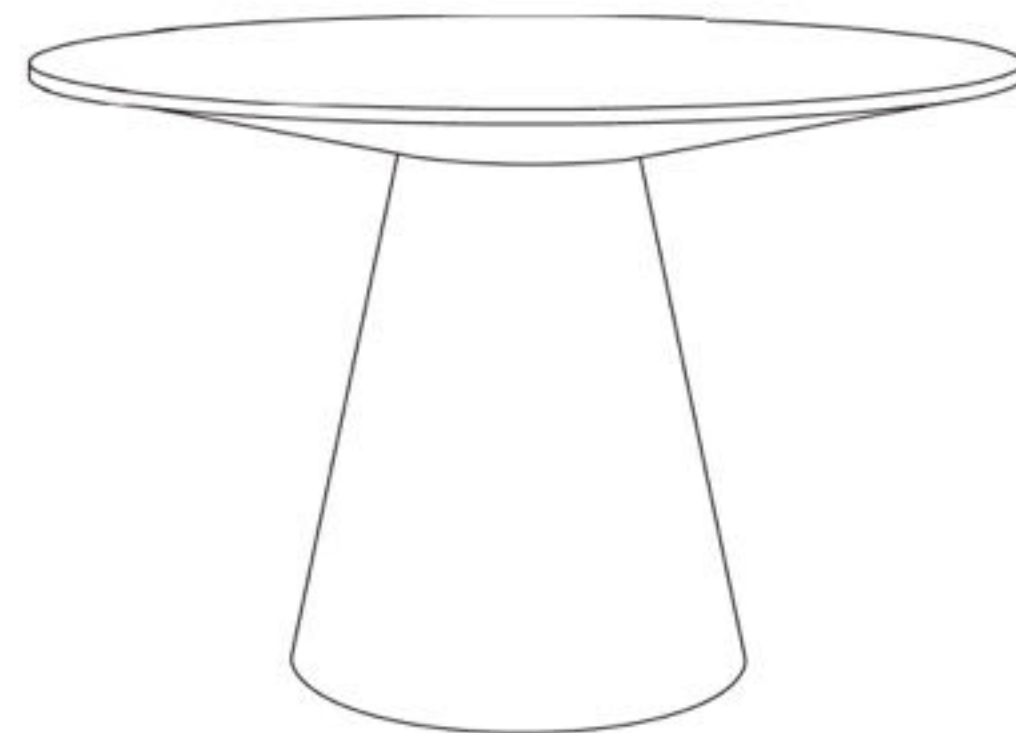


COMPLETE ASSEMBLY

STEP 2

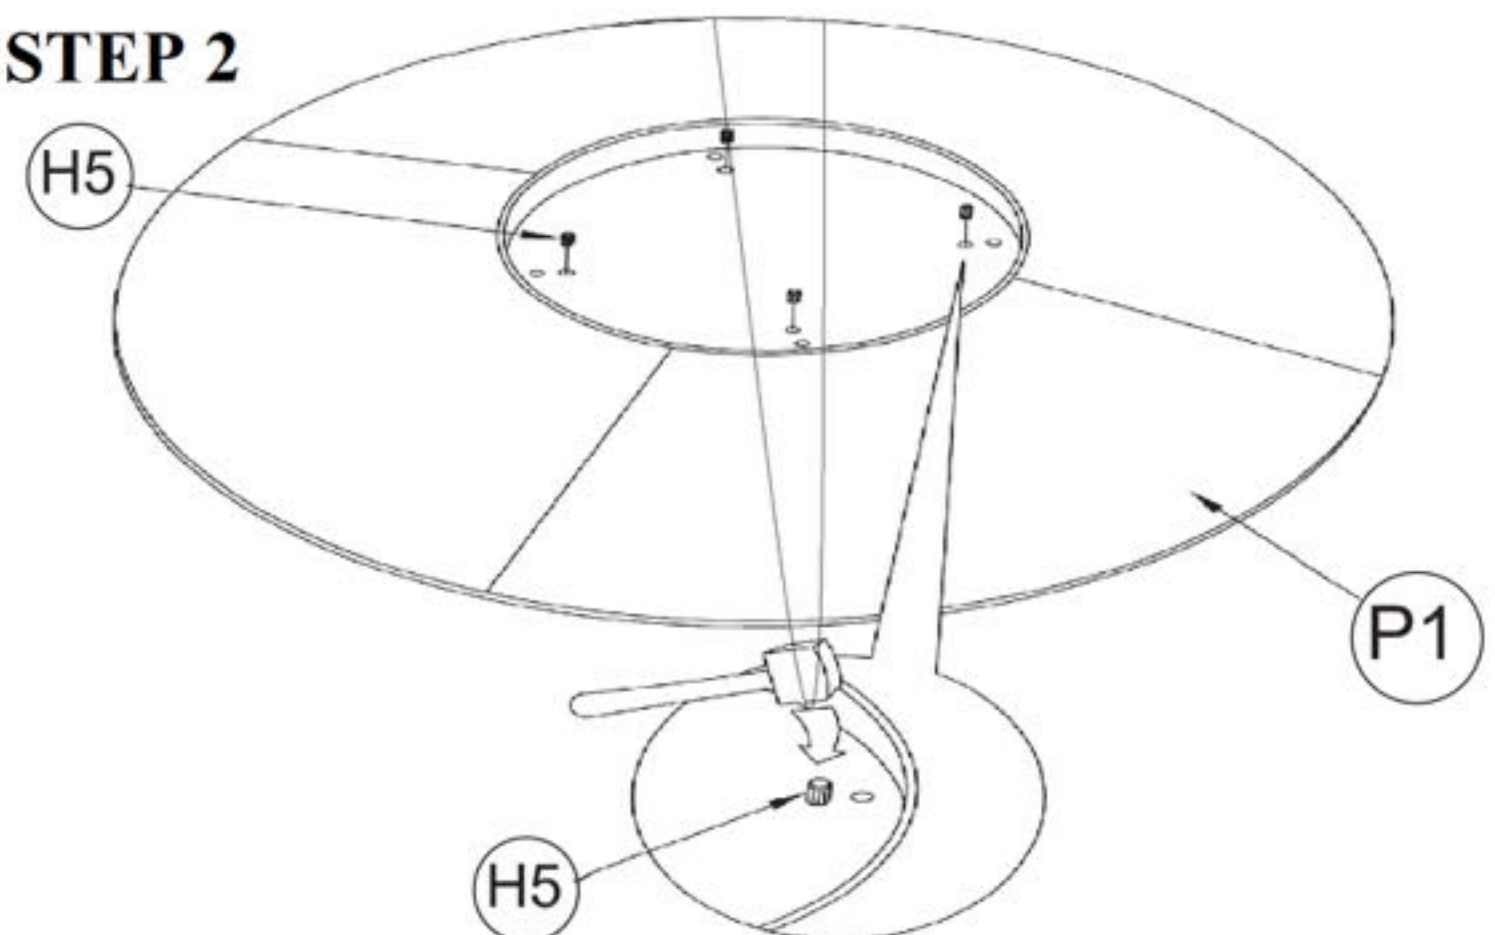


Install the wooden dowels H5 , the dowels are for the table leg assembly aligning guide . (MALLET NOT PROVIDED)

STEP 1

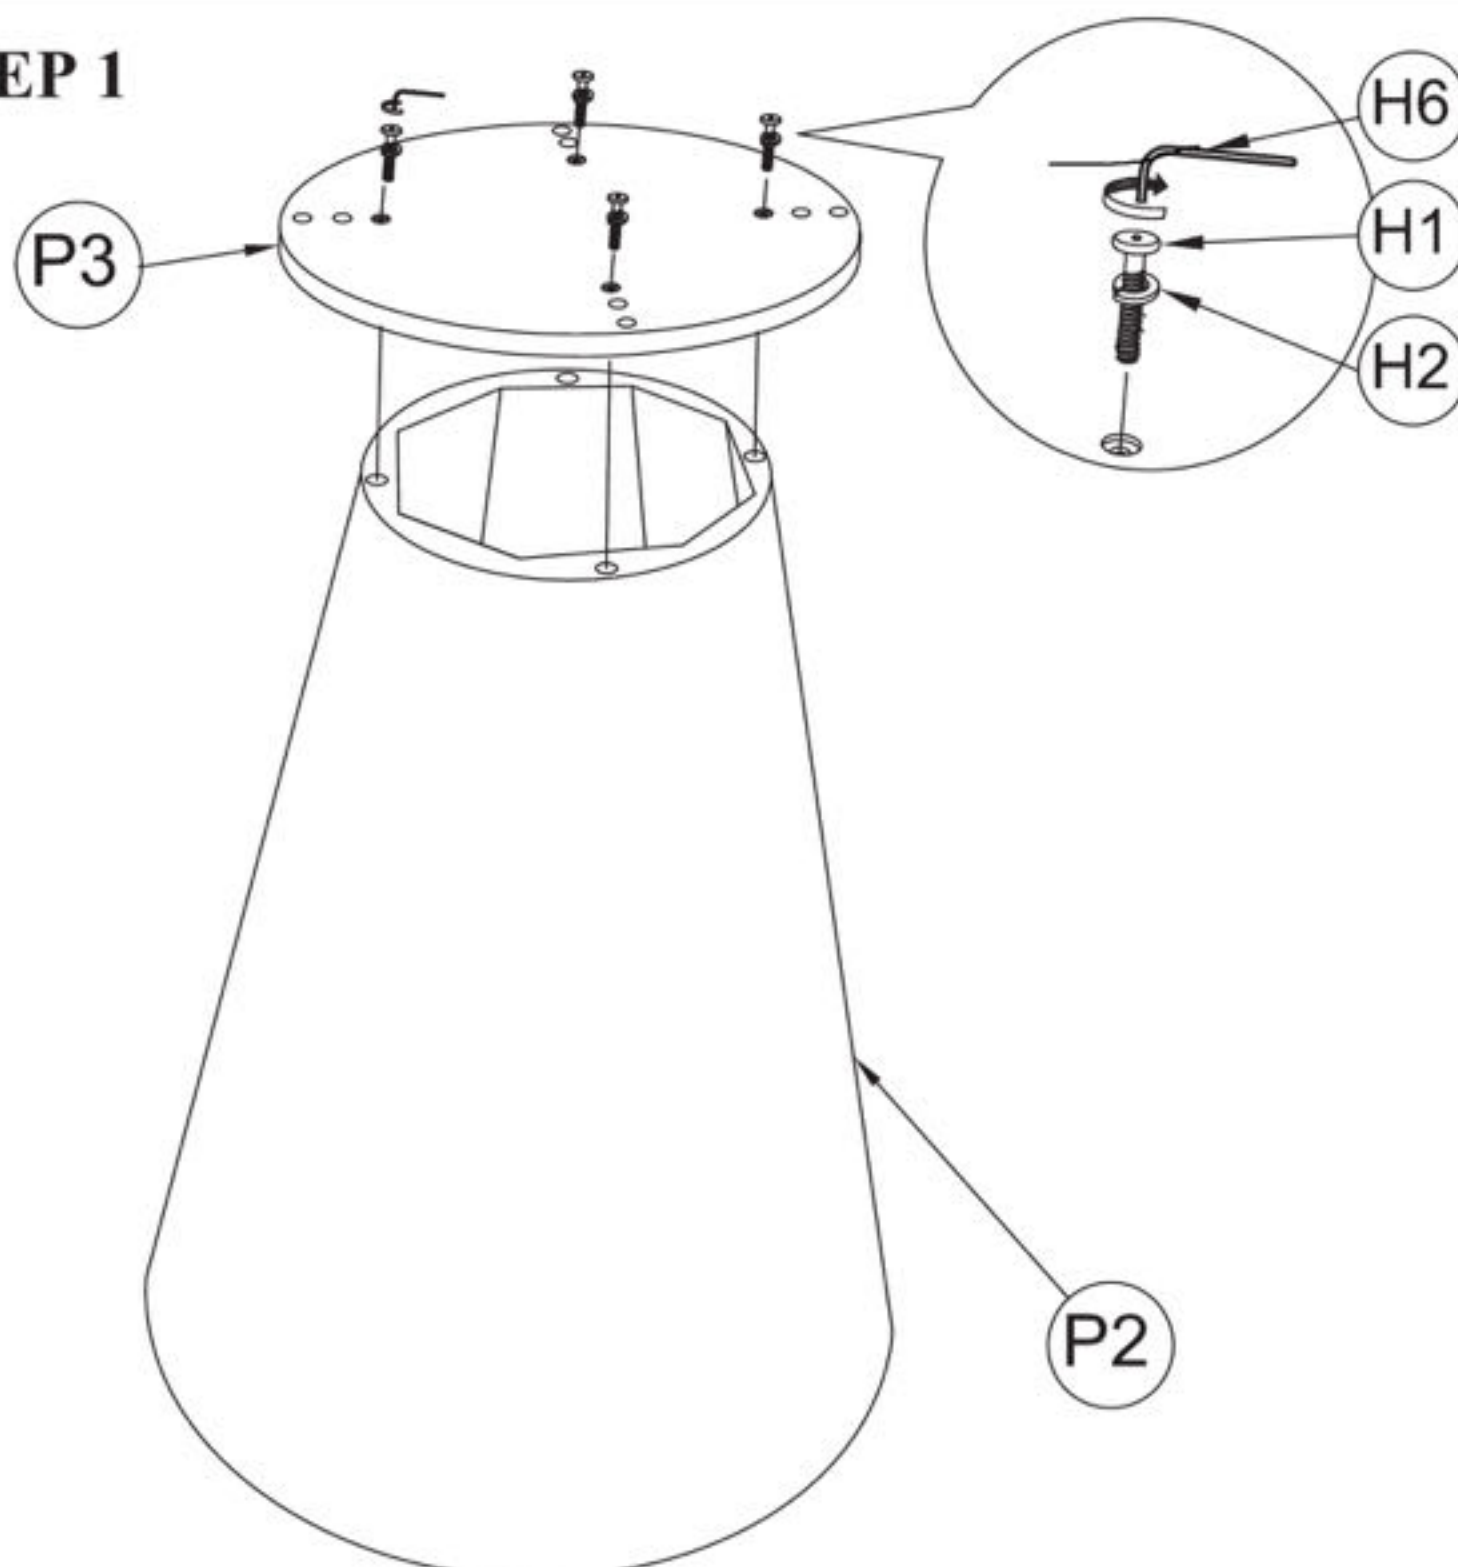

STEP 3

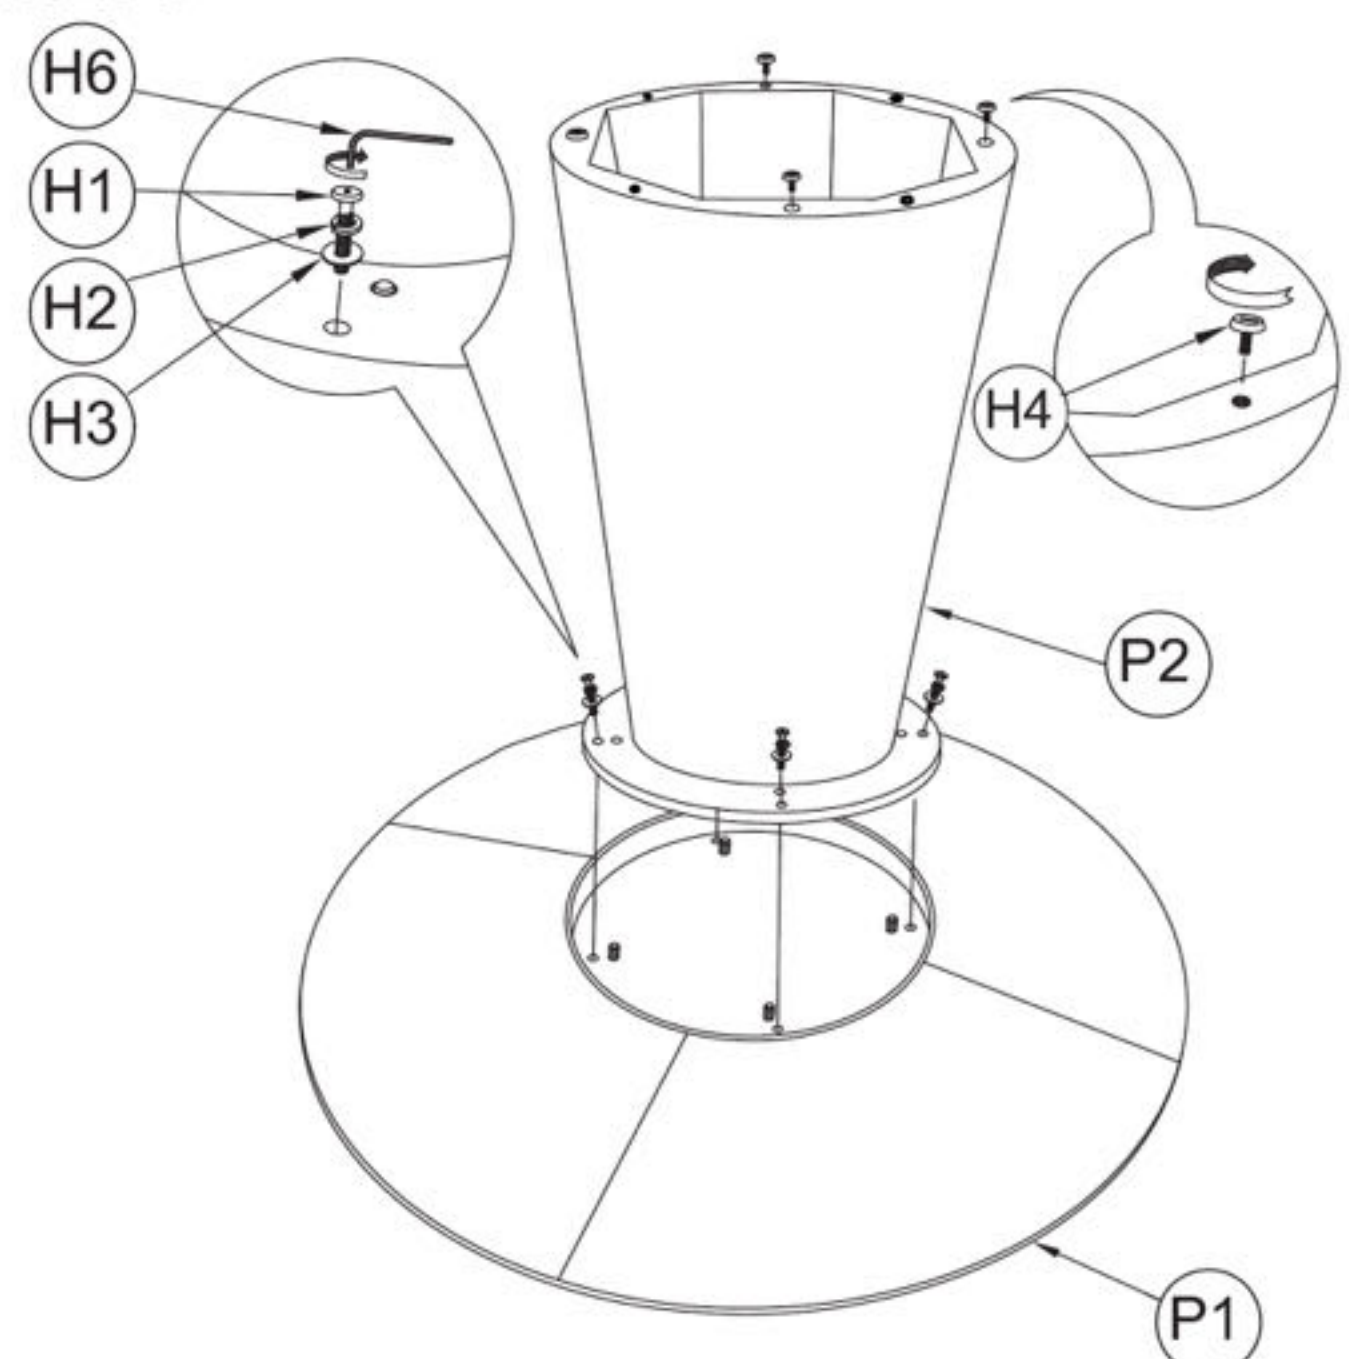

CAUTION ! : REQUIRES TWO ADULTS TO TURN THE TABLE UPRIGHT AFTER FINISHED ASSEMBLY .

CARE AND MAINTENANCE

- SAFETY** - To avoid any risk of suffocation to children and animals, dispose off plastic bags immediately.
- CLEANING** - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.
- FITTINGS** - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.