

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

707787
END TABLE

ITEM : 707787



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store
- 2.This product is for home use only and not intended for commercial establishment.

ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

HARDWARE

A

TOP

1PC

B

BASE


1PC

1


SILICONE GASKET


4PCS

ITEM : 707787
ASSEMBLY INSTRUCTIONS
STEP 1

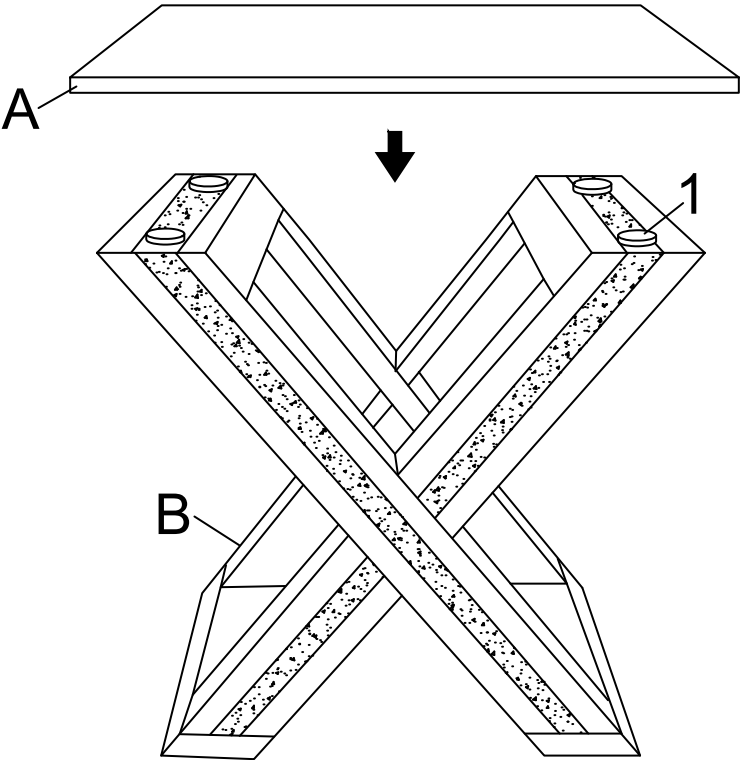

STEP 2

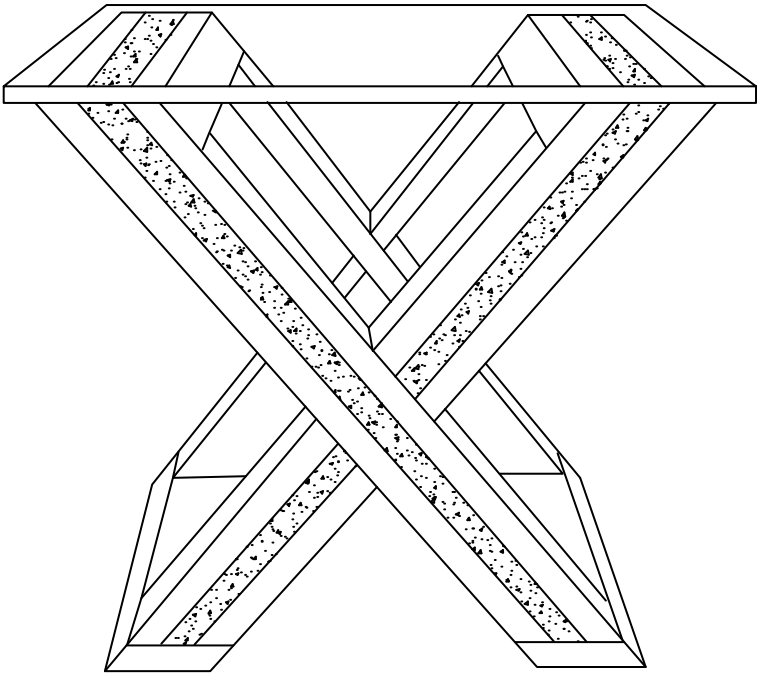

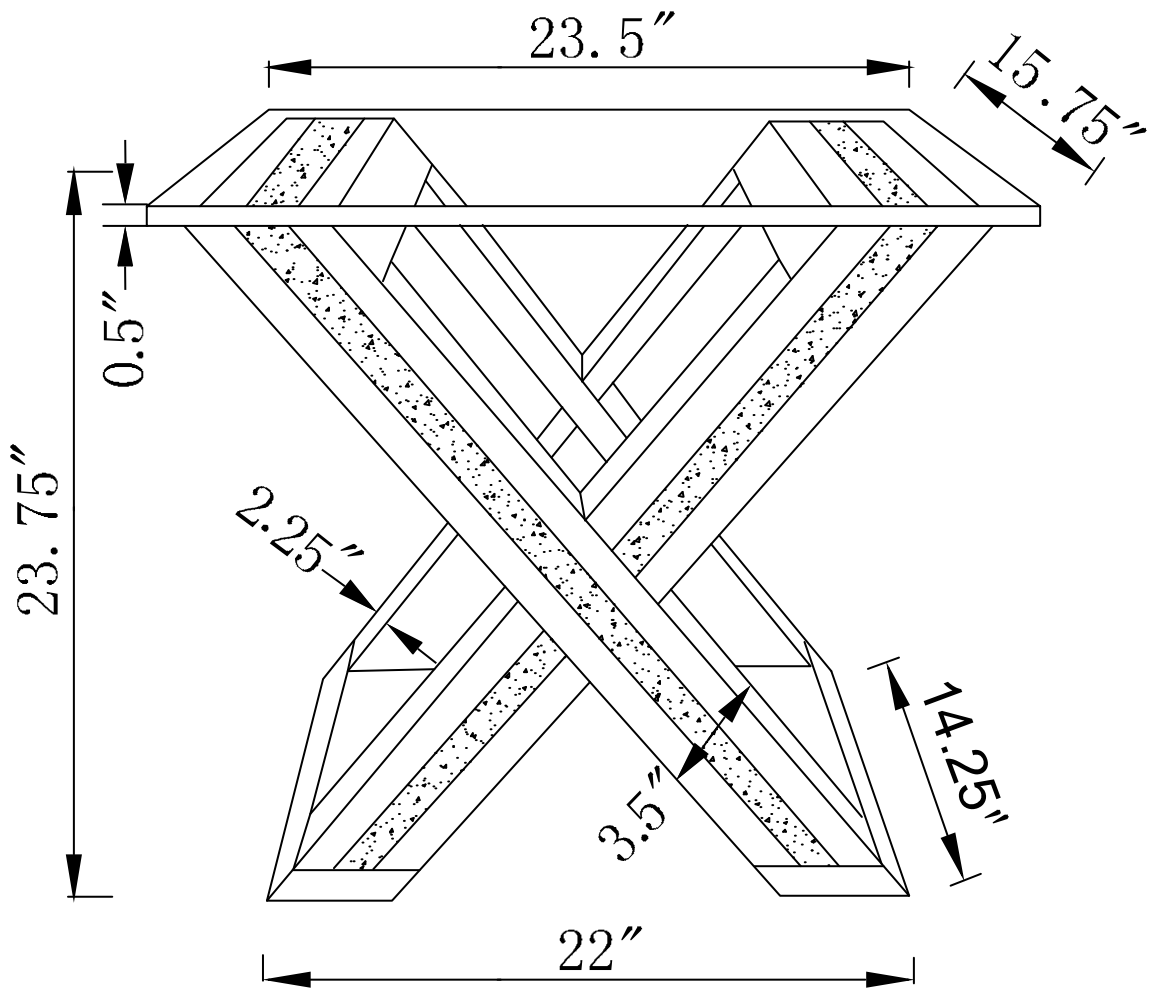

Note:Dimension tolerance $\pm 5\%$