





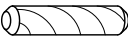
 

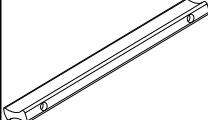
 
 


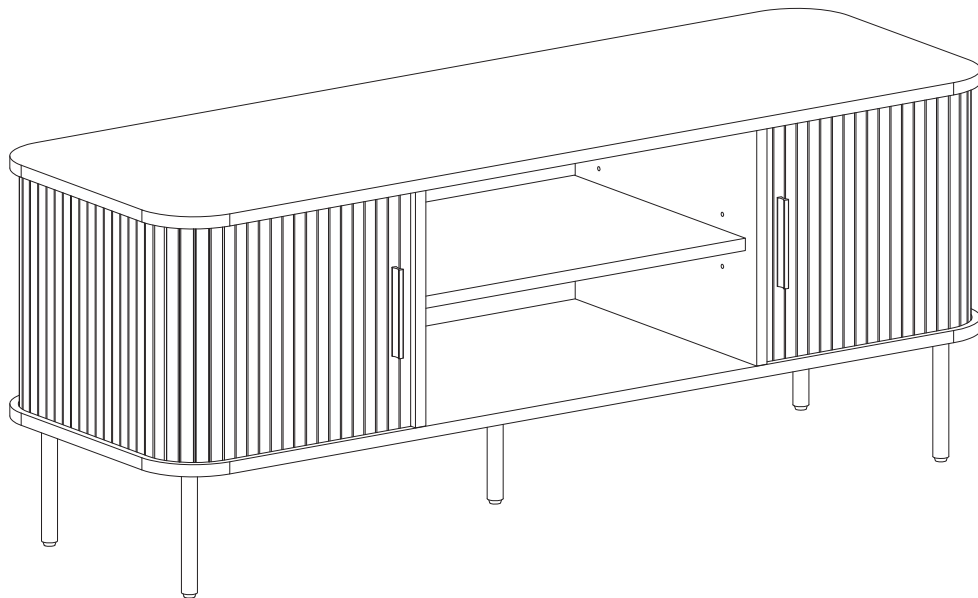



TV Stand

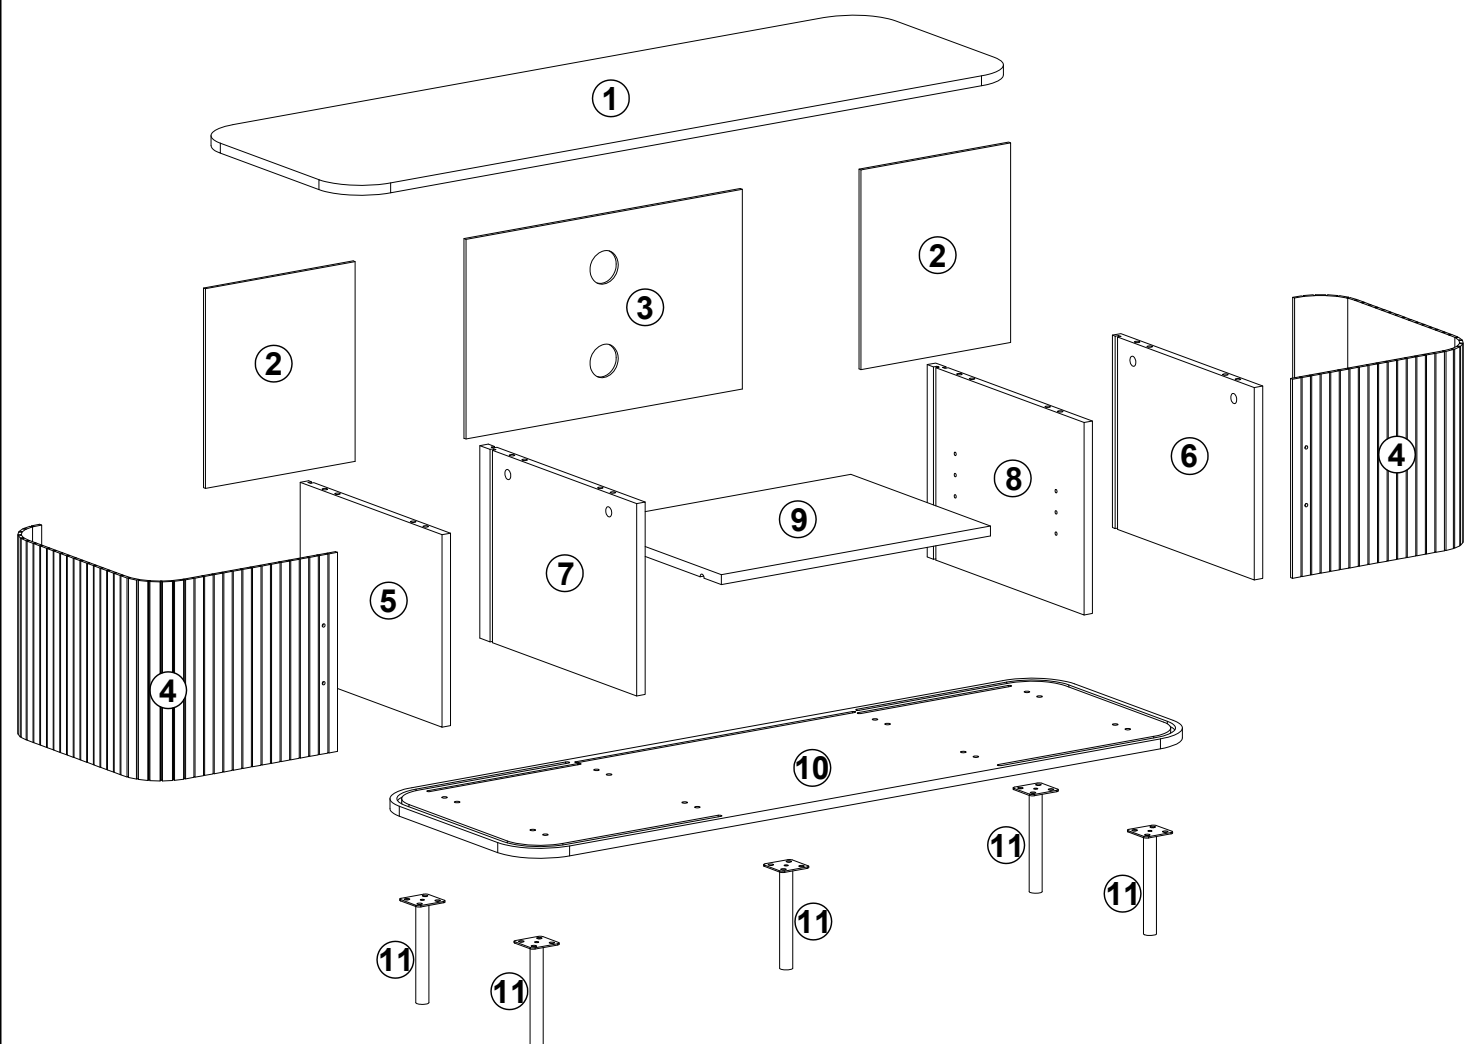



Package Contents:Parts

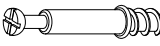

 
Package Contents:Hardware
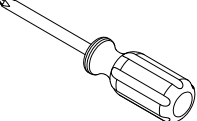
| A x 8 | B x 8 | C x 16 | D x 20 | E x 8 | F x 2 | G x 4 |
|---|---|---|---|--|---|---|
|  |  |  |  |  |  |  |
| 6 x 35mm | 15 x 12mm | 6 x 30mm | 6 x 12mm | 7 x 48mm | 110 x 96mm | 4 x 8mm |
| H x 12 | J x 12 | K x 8 | L x 4 | M x 1 | N x 1 | P x 5 |
|  |  |  |  |  |  |  |
| 3.5 x 14mm | | | | 4mm | | 19mm |

1

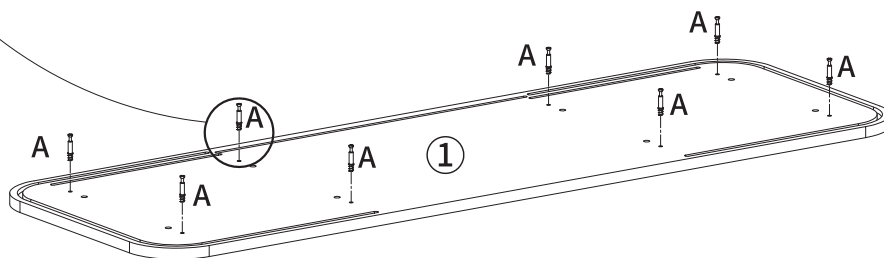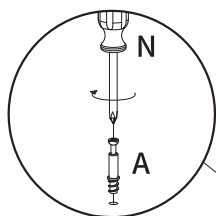


A x 8

 

6 x 35mm

Twist Screws (A) into Board (1).

2

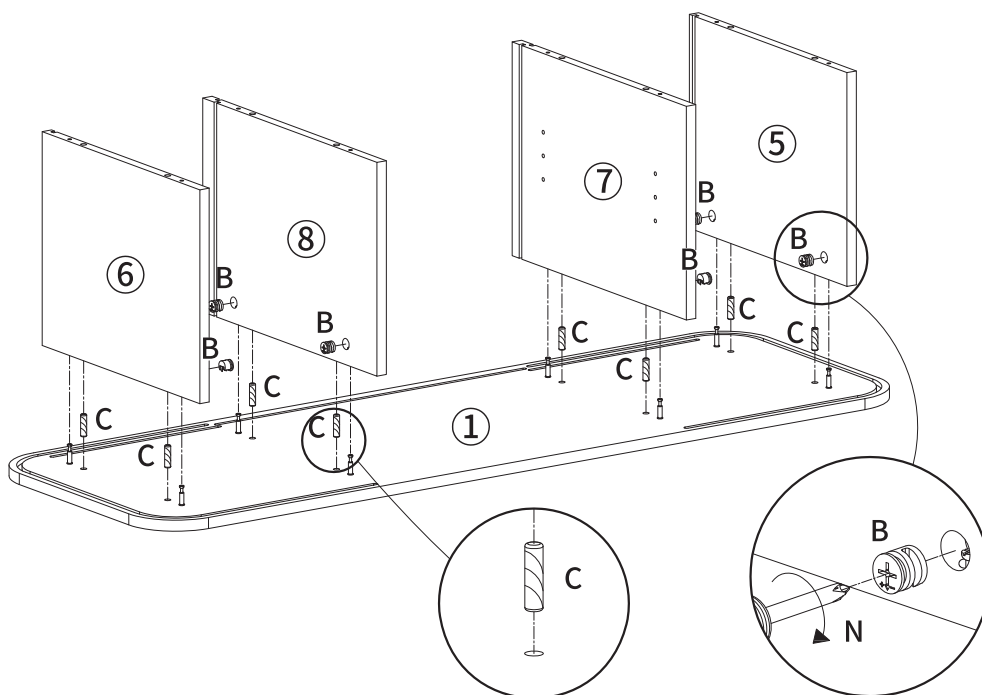

B x 8

C x 8




15 x 12mm



6 x 30mm


Insert (C) into the hole on Board (1), then connect Board (5)(6)(7)(8) with (1). Twist Screw (B) into the boards as displayed.

3

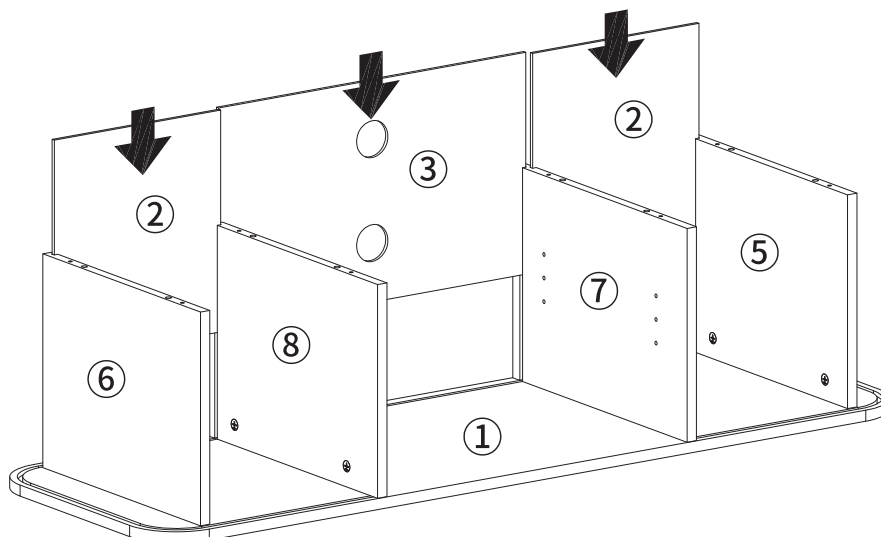


Insert Board (2)(3) into the grooves on Board (1).

4

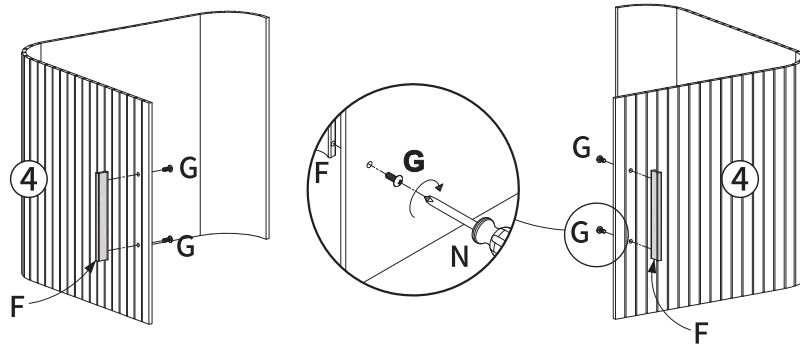

F x 2

G x 4

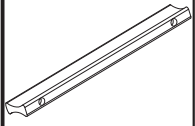


110 x 96mm



4 x 8mm


Twist Screw (G) to connect the Handle (F) with (4).

5

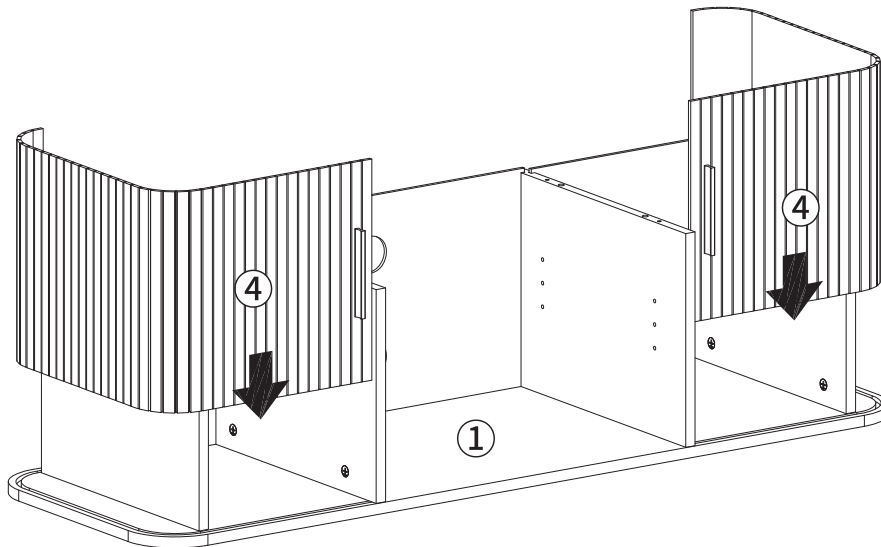

Place (4) on the grooves on Board (1) as displayed.

6

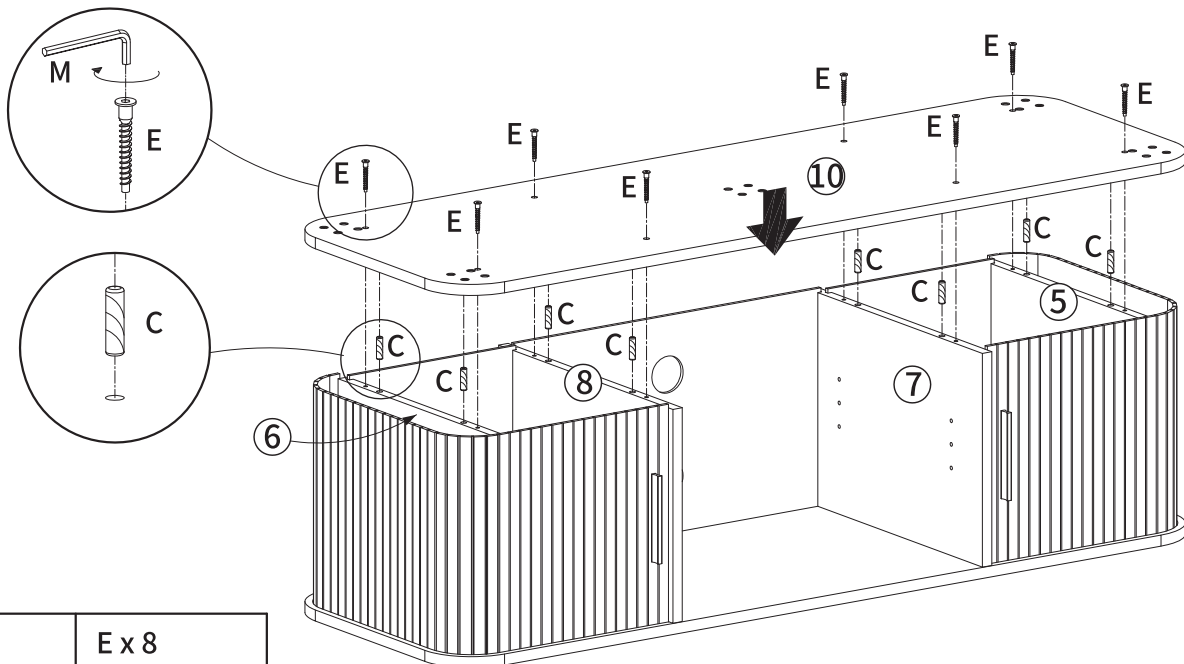

C x 8

E x 8




6 x 30mm



7 x 48mm

Insert (C) into the holes on Board(5)(6)(7)(8), then connect Board(10) with (5)(6)(7)(8). Twist Screw (E) to secure it.

7

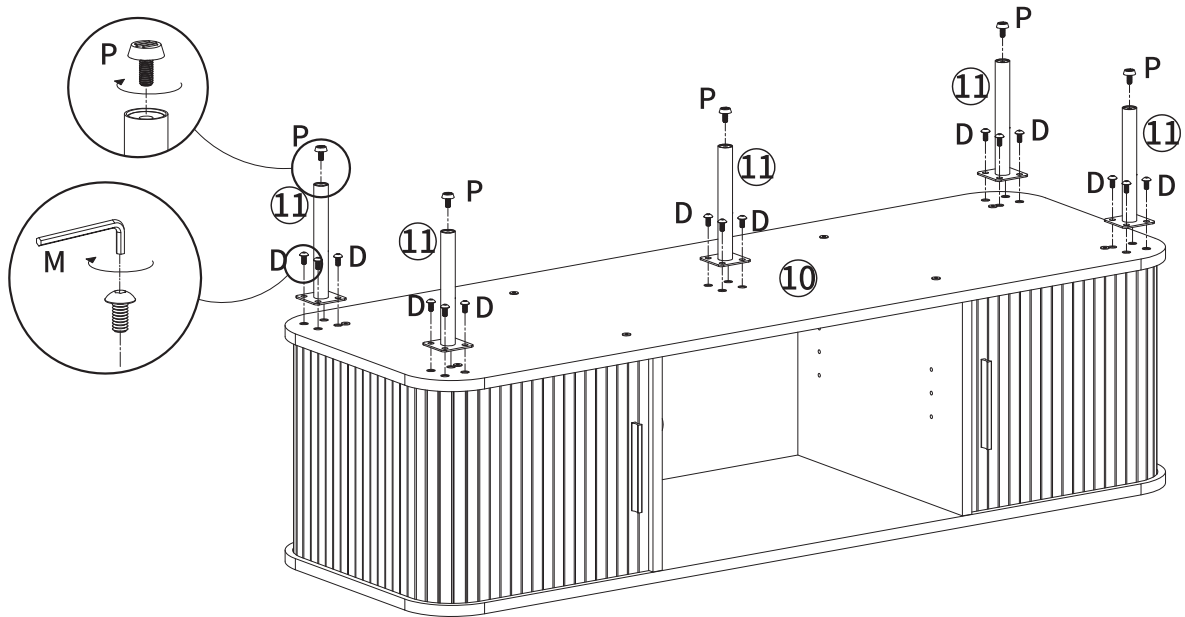

D x 20

P x 5




6 x 12mm



19mm

Twist Screw (D) to connect Leg (11) with Board (10), then twist (P) into Leg (11).
(The adjustable foot P is designed to regulate the cabinet's height, ensuring stability on uneven surfaces.)

8

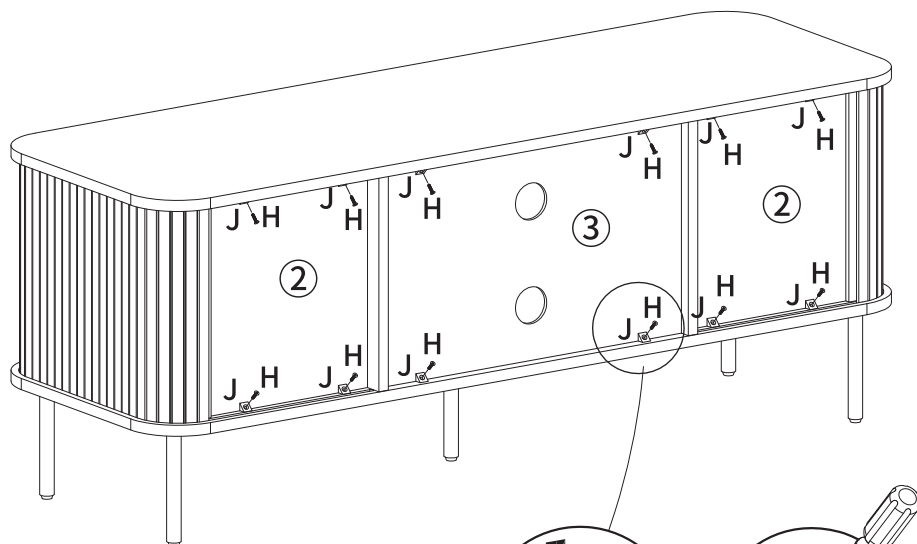

H x 12


J x 12



3.5 x 14mm



Insert (J) into the back of the cabinet, then twist Screw (H) to secure it.

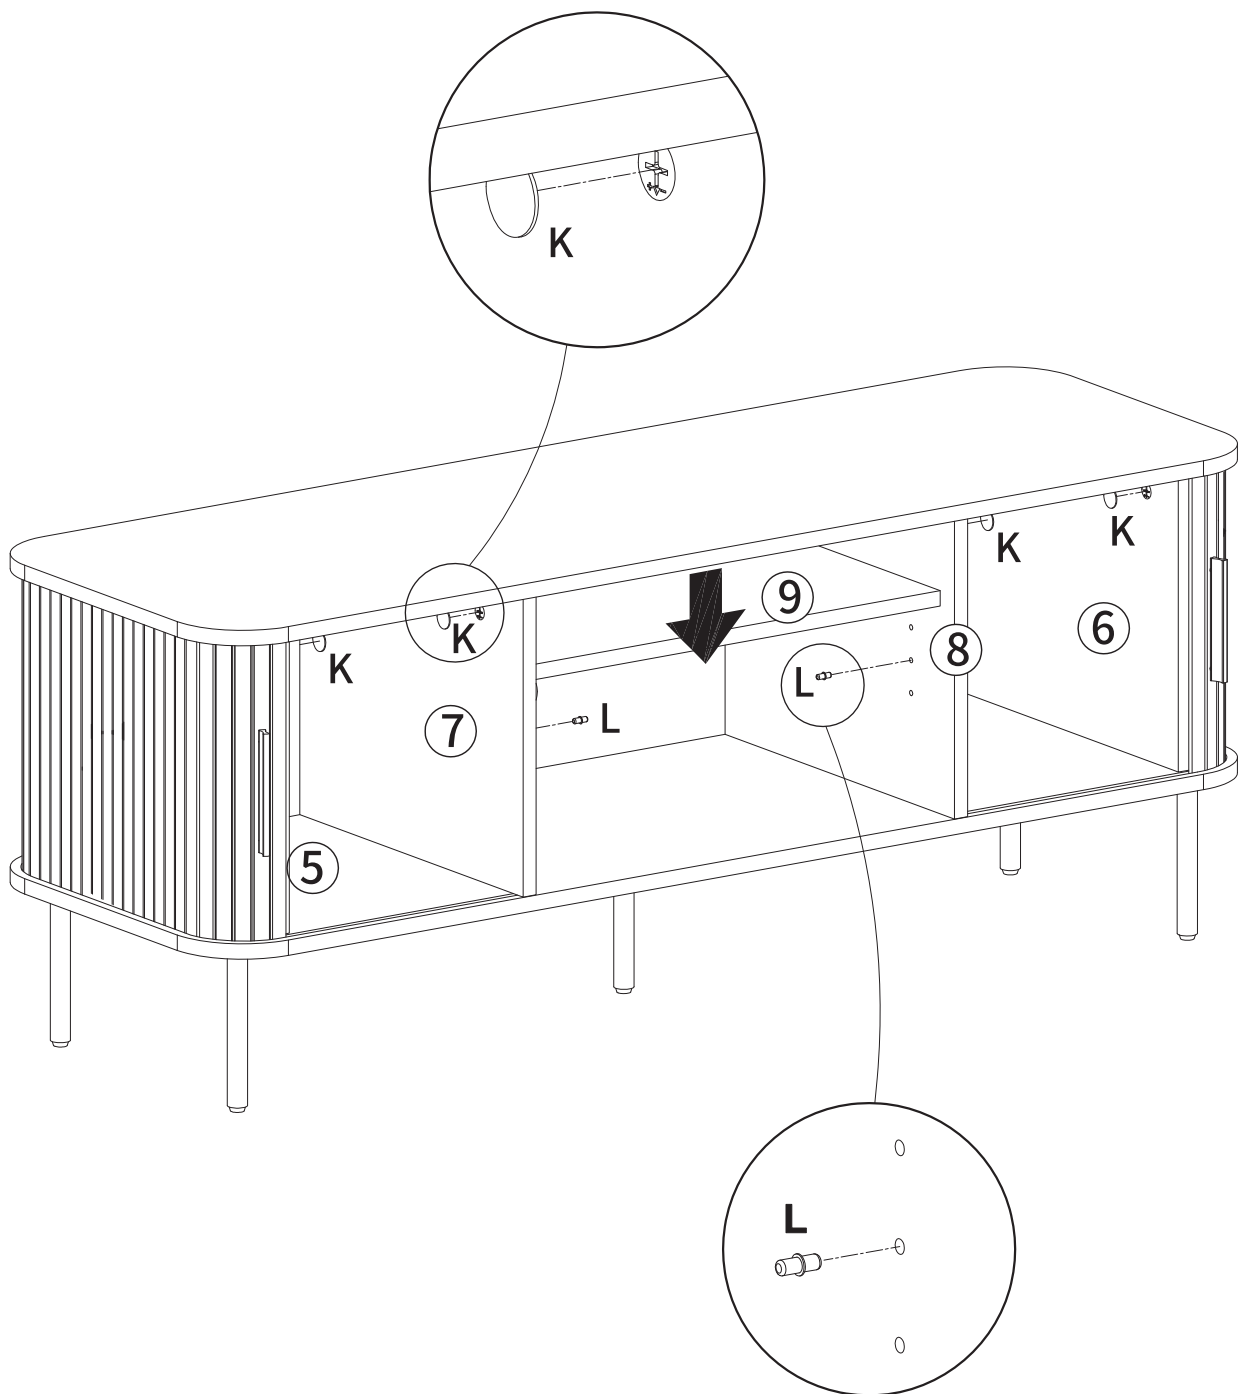

K x 8

L x 4



Insert (L) into the holes on Board (7)(8), then place Board (9) on it.
Stick (K) onto the screws at (5)(6)(7)(8) as shown.