

SET UP A TENT



Two adults stand in opposite sides, open the tent frame slowly until it is 50% open.



Two adults hold up two corners of the canopy



Two adults throw the canopy over the frame.



Attach the female Velcro of 4 corners of the canopy on to the male Velcro of the frame.



Two adults hold up the "V" cross bars , move backwards and throw into the air until the tent is 95% open.



Push slider up, until it is locked.



Pull out the down leg pole by your foot until it is locked



Set up finished.