 
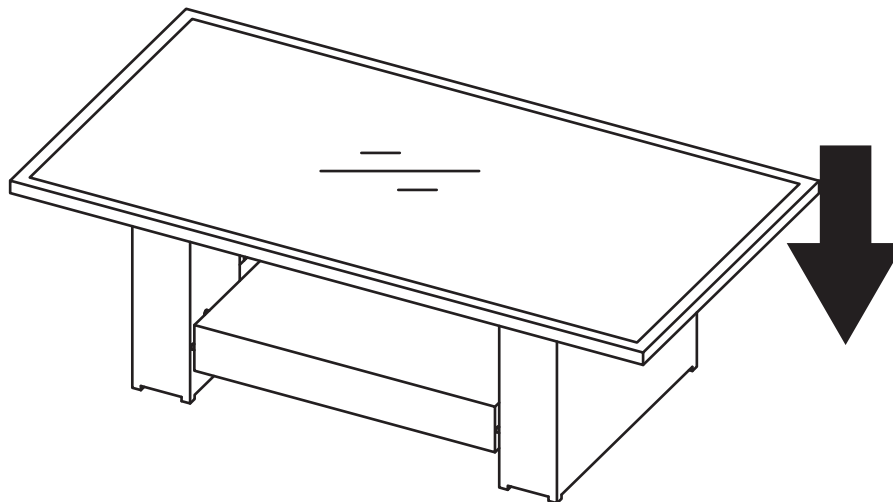 


150 x 80cm Rectangular Height-Adjustable Table with Glass Top

Assembly Instructions

Product size:
L150*W80*H49/67.5 cm

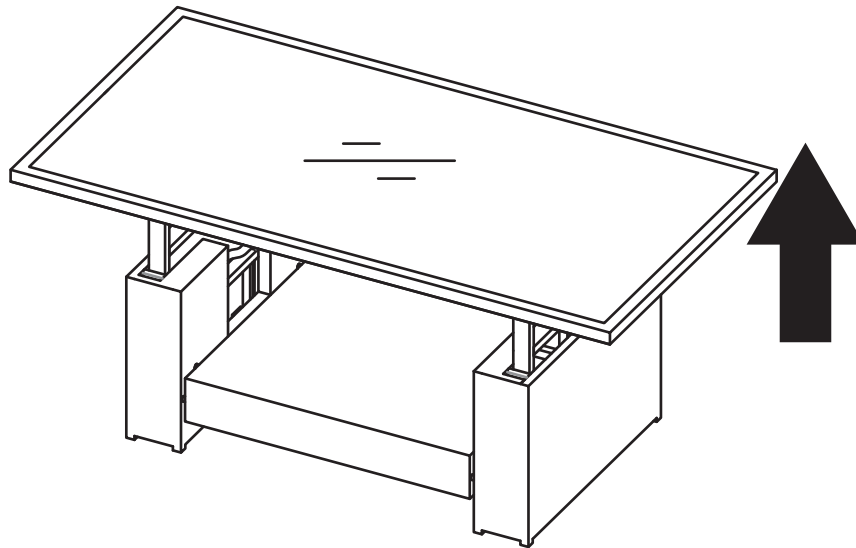

This product is for Domestic use only!

IMPORTANT, RETAIN FOR FUTURE REFERENCE
READ CAREFULLY

150 x 80cm Rectangular Height-Adjustable Table with Glass Top

Before you start



Warnings

IMPORTANT, RETAIN FOR FUTURE REFERENCE READ CAREFULLY

See enclosed instructions for assembly, safety and care information.

Failure to follow the warnings could result in serious injury.

Handle heavy parts with care.

Ensure that this product is fully assembled as illustrated before use.

This product should only be used on firm, level ground.

Keep small parts out of reach of children.

Do not stand or climb onto this product.

This product is intended for **domestic use** only.

Ensure the table is always placed on level ground.

Furniture can be dangerous if incorrectly used. No liability will be accepted for damage or injury caused by incorrect use of this product.



Dos

When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.

Unwrap all packaging materials and place the components on suitable surface to prevent scratching your product.

Check the pack and make sure you have all of the parts listed. Check all screws and bolts and tightened and inspect regularly. In the event of problems or missing parts, please contact the seller.

We recommend the use of furniture covers to protect your product when not in use.

During bad weather or in winter months, the product should be stored in a cool, dry place. Before storage, ensure that the product is clean and dry.

To clean, wipe down with a sponge and warm soapy water and wipe with a clean, dry cloth.

When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary; do not use washing powders or any other substances containing abrasives since these substances scratch glass.



Don'ts

Do not stand or climb onto the product.

Do not use power tools to construct this product.

Do not sit or lean onto the rims of this product.

Do not use this product if parts are missing, damaged or worn.

Never use scourers, abrasives or chemical cleaner.

Do not use this table as a ladder as this could lead to the table becoming unbalanced and overturning.


Do not place very hot or very cold items on the glass surface unless adequately thick table-mats are used to prevent such items from coming into contact with the glass.

Do not use the glass as a chopping surface. Do not strike glass with hard or pointed items.

Never drag furniture when moving it, always lift it.

Number of people required for assembly

Two people

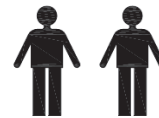


Time to assemble



50 Minutes

Tools required






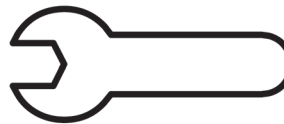


Tips:

It is best not to fully tighten the nuts and bolts until they are all correctly located. Only carefully tighten them when you are satisfied with the alignment of all components. Be careful not to overtighten.

150 x 80cm Rectangular Height-Adjustable Table with Glass Top

Components, fixtures & fittings (not actual size)

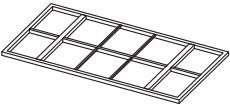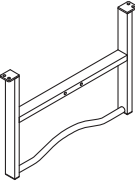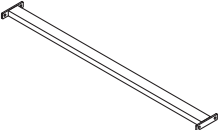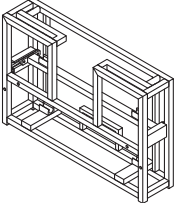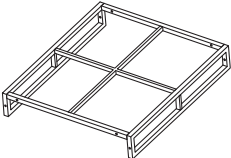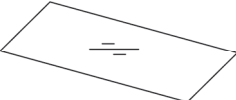Parts List					
Part No.	Diagram	Qty.	Part No.	Diagram	Qty.
A	 Table Top Frame	1 PC	B	 Leg	2 PCS
C	 Connecting Bar	1 PC	D	 Bottom Base	2 PCS
E	 Connecting Shelf	2 PCS	F	 Glass Top	1 PC
W20	 M6*20mm Bolt	12 PCS	W40	 M6*40mm Bolt	8 PCS
F2	 Bolt Head Cap	20 PCS	F3	 Washer	20 PCS
S1	 Spanner	1 PC			

150 x 80cm Rectangular Height-Adjustable Table with Glass Top

Step by step assembly instructions

All Bolt Head Caps should not be attached before finally tightening all Bolts with Spanner.


Step One

Open the packaging carefully. Leave the glass on the carton until the rest of the table is fully assembled.

With the help of another person, place the Table Top Frame (A) upside down on a soft, level surface.

Attach the Legs (B) to the Table Top Frame (A) using Washers (F3), Bolts (W20) and Bolt Head Caps (F2).


Attach the Connecting Bar (C) between the Legs (B) using Washers (F3), Bolts (W20) and Bolt Head Caps (F2).

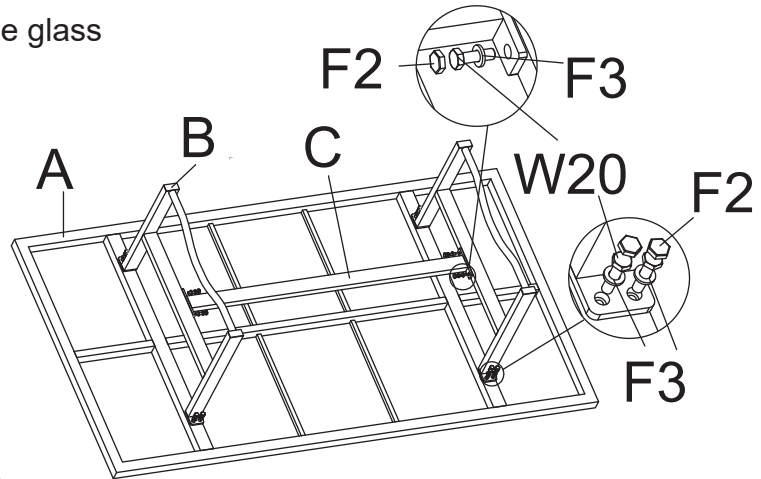

Step Two

Attach the Connecting Shelf (E) Between the Bottom Bases (D) using Washers (F3), Bolts (W40) and Bolt Head Caps (F2).

Before attaching the Bolt Head Covers, tighten all bolts with Spanner (S1).

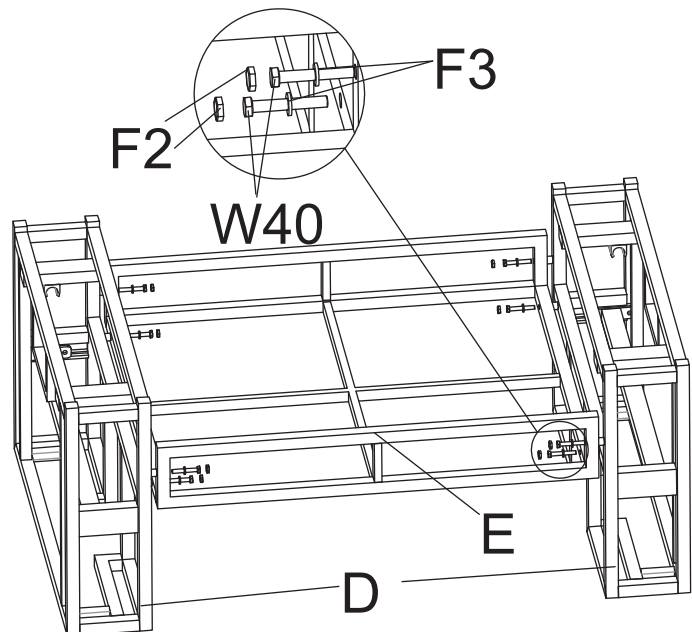

150 x 80cm Rectangular Height-Adjustable Table with Glass Top


Step Three

There is a movable bar in the bottom base (D) that acts as a support bar when rising from a Coffee to Dining Table height. To use in the raised dining table function, let the movable supports at both ends be in the outer position.

Insert the Table Legs into the slots so they are supported by the bars.

Place the Glass Top (F) on the Table Top Frame (A).

Your Dining Table is now ready for use.

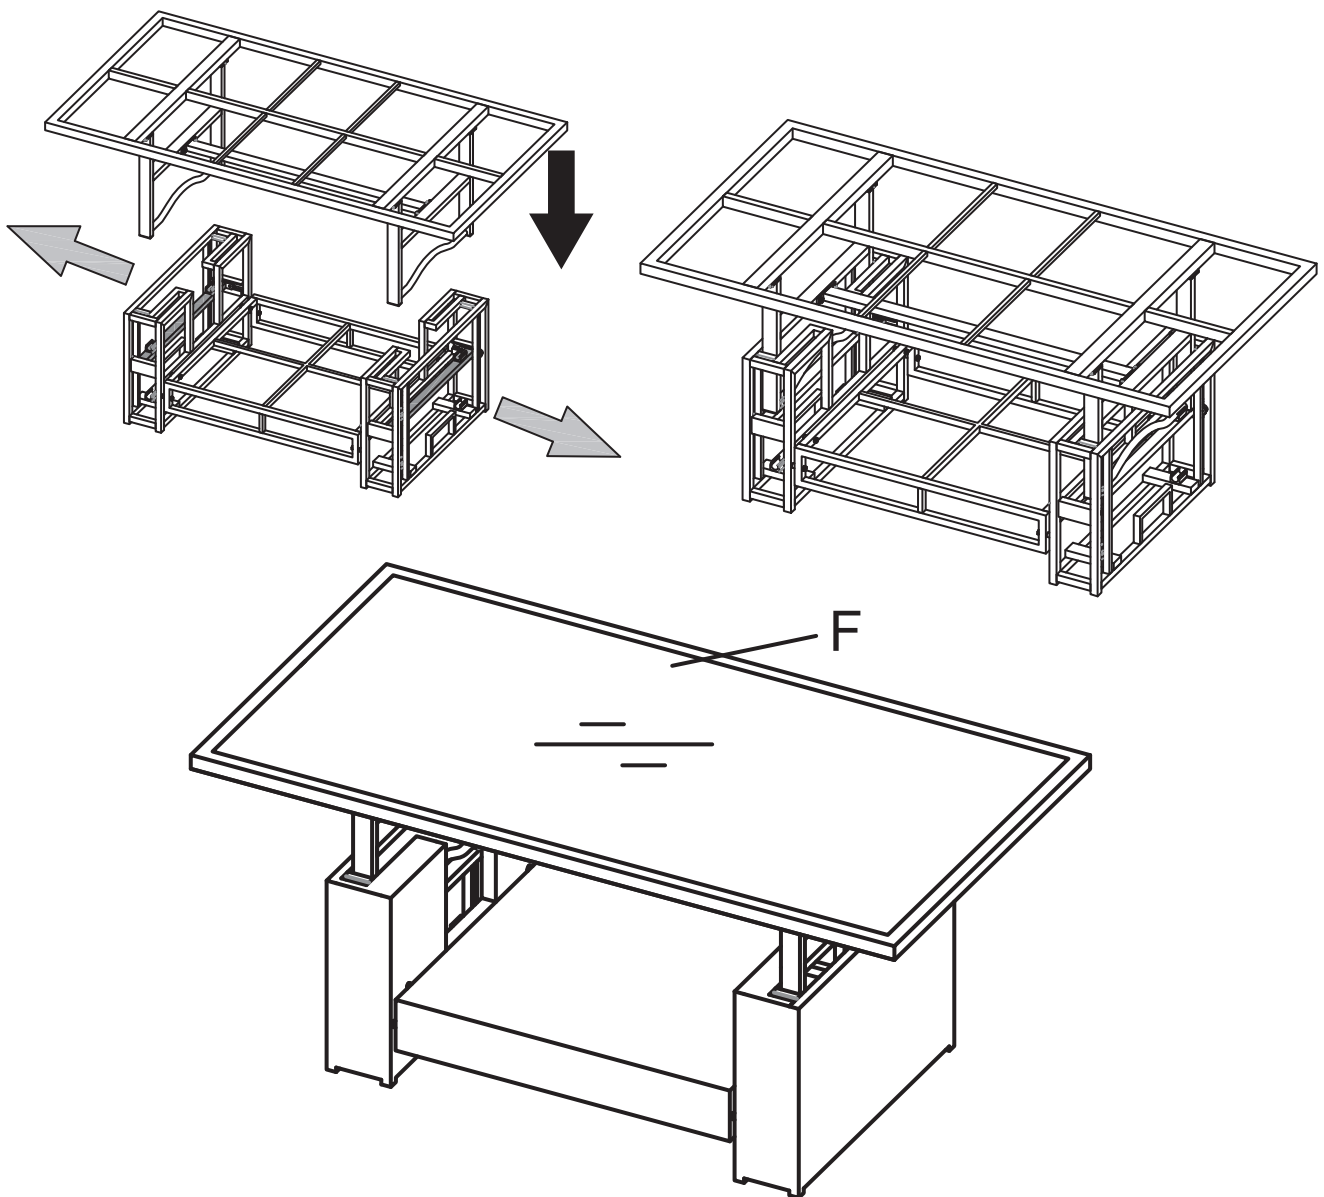


150 x 80cm Rectangular Height-Adjustable Table with Glass Top

Step Four

To use its Coffee Table Function, take out the Table Top, let the movable supports be in its central position, insert the Table Legs into the slots of the movable supports.

Your Coffee Table is now ready for use.

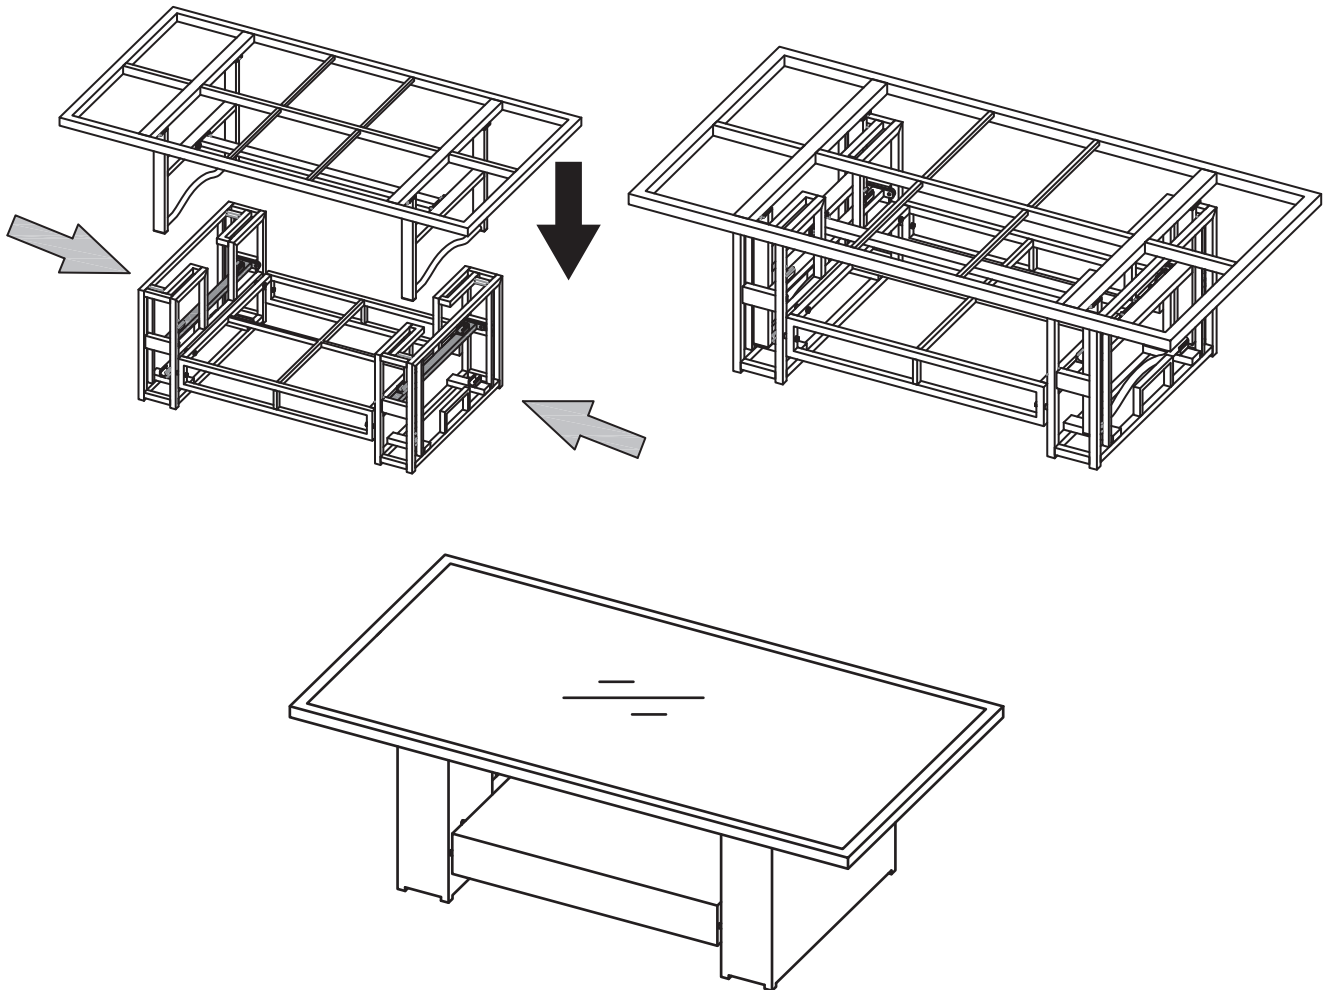

This table should be operated by adults.

Children should be kept away during the table function change process between Dining Table and Coffee Table function.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE