 










 


 



 
 



ASSEMBLY INSTRUCTION Tear Drop

PARTS LIST:

NO	PARTS	QTY	PIC
A1	Tear seat	1	
A2	Tear seat	1	
A3	Tear seat	1	
B1	Support pole	1	
B2	Support pole	1	
C	Bolt	1	
D	Spring	1	
E	Chain	1	
F	Hook	1	
K	Plastic Washer	1	
G	Base	1	

NO	PARTS	QTY	PIC
H	Bolt M10*65	1	
I	Washer M10	2	
J	Nut M10	1	
L	Bolt M6*35	12	
M	Washer M6	12	
N	Nut M6	12	
O	Wrench	1	
P	Wrench	1	
R	Bolt M8*20	1	
S	Cable	1	
T	Plastic Cap	12	