












 
 


 










# IMPORTANT!! PLEASE READ ENTIRE INSTRUCTION SHEET BEFORE ASSEMBLY!!

## 4pcs Deep Seating Folding Set

Identify all parts packed in the carton against the parts list. Remove all protective materials. Place parts on a non-abrasive surface. If you are missing any parts or are unsure how to proceed with assembly, please call customer service center immediately

Do not attempt to assemble the product if any parts are missing or damaged.

| PARTS LIST |                               |   |   |   |                     |   |    |
|------------|-------------------------------|---|---|---|---------------------|---|----|
| A          | Left Arm                      |    | 3 | N | Bolt 1/4" x 38mm    |    | 8  |
| B          | Right Arm                     |    | 3 | O | Bolt 1/4" x 50mm    |    | 2  |
| C          | Lounge Chair Back             |    | 2 | P | Bolt 1/4" x 70mm    |    | 6  |
| D          | Lounge Chair Seat w/ Rear Leg |    | 2 | Q | Bolt 5/16" x 70mm   |    | 6  |
| E          | Lounge Chair Front Leg        |    | 2 | R | 9MM Plastic Washer  |    | 8  |
| F          | Loveseat Back                 |    | 1 | S | 6MM Plastic Washer  |    | 12 |
| G          | Loveseat Seat w/ Rear Leg     |  | 1 | T | 2MM Plastic Washer  |  | 8  |
| H          | Loveseat Front Leg            |  | 1 | U | Metal Washer Ø1/4"  |  | 38 |
| I          | Table Top                     |  | 1 | V | Metal Washer Ø5/16" |  | 12 |
| J          | Table Inner Leg               |  | 1 | W | Nut 1/4"            |  | 16 |
| K          | Table Outer Leg               |  | 1 | X | Nut 5/16"           |  | 6  |
| L          | Hex Wrench                    |  | 1 | Y | Allen Wrench 5MM    |  | 1  |
| M          | Bolt 1/4" x 30mm              |  | 6 | Z | Allen Wrench 4MM    |  | 1  |

 
## LOUNGE CHAIR

### Step 1

Place all the parts on a flat, soft surface.

Attach lounge chair seat w/ rear leg (D) to lounge chair back(C) by using the bolt (M) with metal washer Ø1/4"(U), 9MM plastic washer(R) and nut 1/4"(W).


**Note: Do not fully tighten the bolts.**

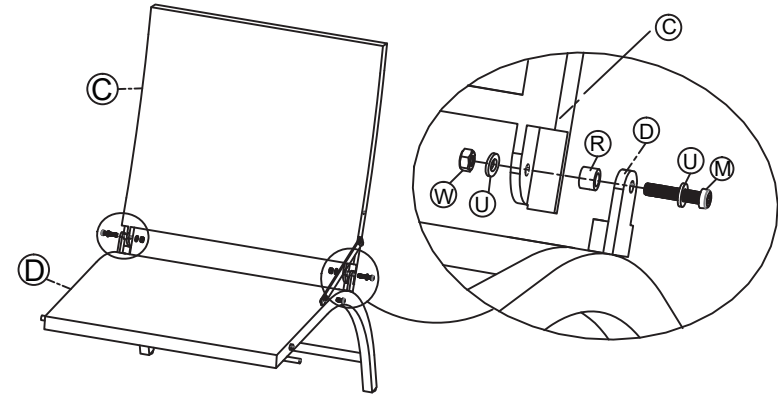

### Step 2

Attach lounge chair front leg (E) to lounge chair seat w/ rear leg(D) by using the bolt (Q) with metal washer Ø5/16"(V), 6MM plastic washer(S) and nut 5/16"(X).

 
**Note: Do not fully tighten the bolts.**

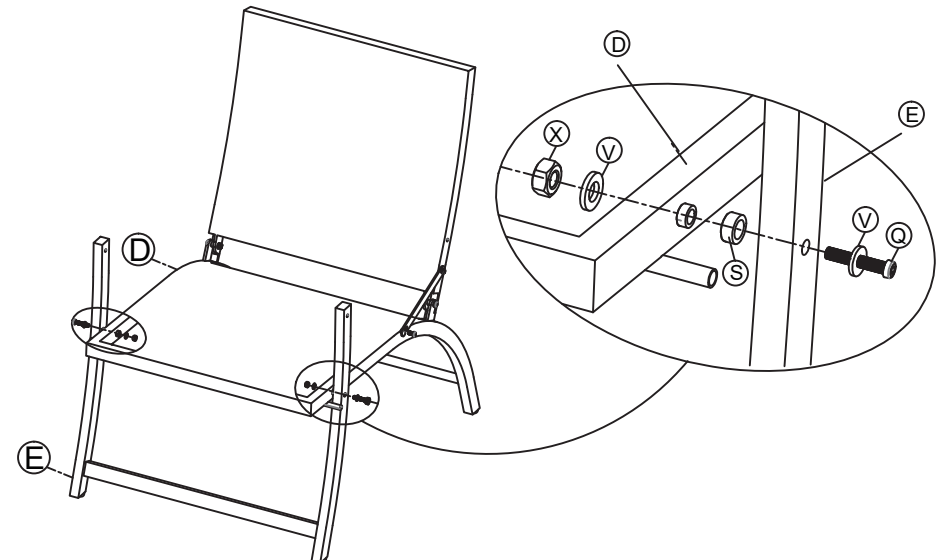

### Step 3


1. Attach the left arm(A) to lounge chair front leg(E) by using bolt(N) with metal washer(U), 2MM plastic washer(T) and nut 1/4"(W).
2. Attach the left arm(A) to lounge chair back(C) by using bolt(P) with metal washer(U) and 6MM plastic washer(S) through the hole of left arm into lounge chair back.
3. Repeat for the right arm(B).

 **Note: Do not fully tighten the bolts.**

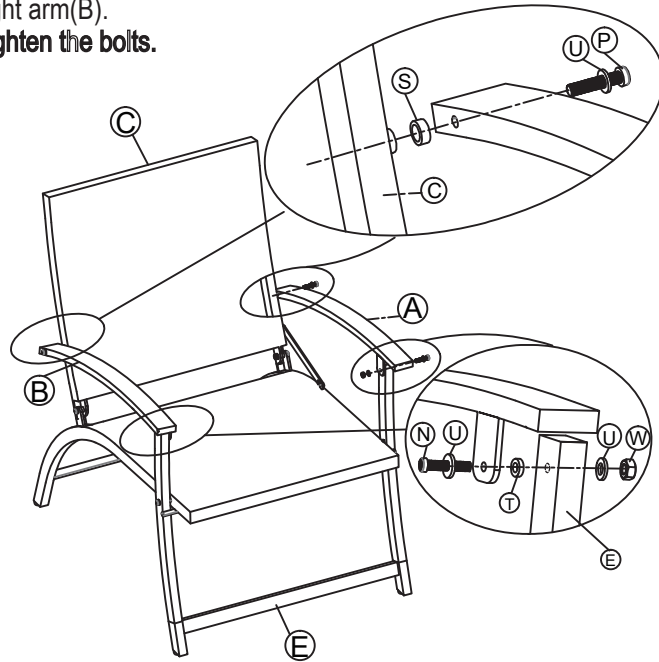

### Step 4

 Tighten all bolts suitably with the wrenches(L/Y/Z). Open the chair and lock the safety plate on the chair back to the bolt on the chair seat w/ rear leg when sitting. Now is ready for your enjoyment.

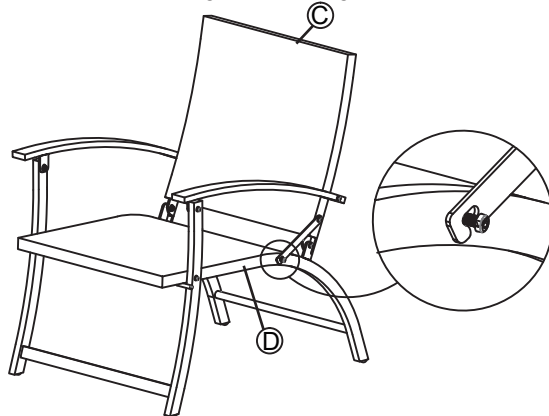


## LOVESEAT

### Step 1

Place all the parts on a flat, soft surface.

Attach loveseat seat w/ rear leg (G) to loveseat back(F) by using the bolt (M) with metal washer Ø1/4"(U), 9MM plastic washer(R) and nut 1/4"(W).

 
**Note: Do not fully tighten the bolts.**

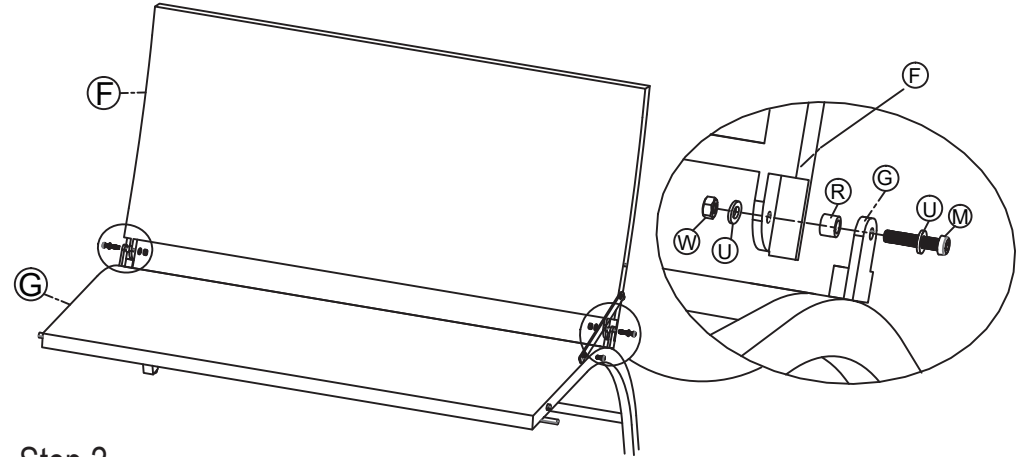

### Step 2

Attach loveseat front leg (H) to loveseat seat w/ rear leg(G) by using the bolt (Q) with metal washer Ø5/16"(V), 6MM plastic washer(S) and nut 5/16"(X).

 
**Note: Do not fully tighten the bolts.**

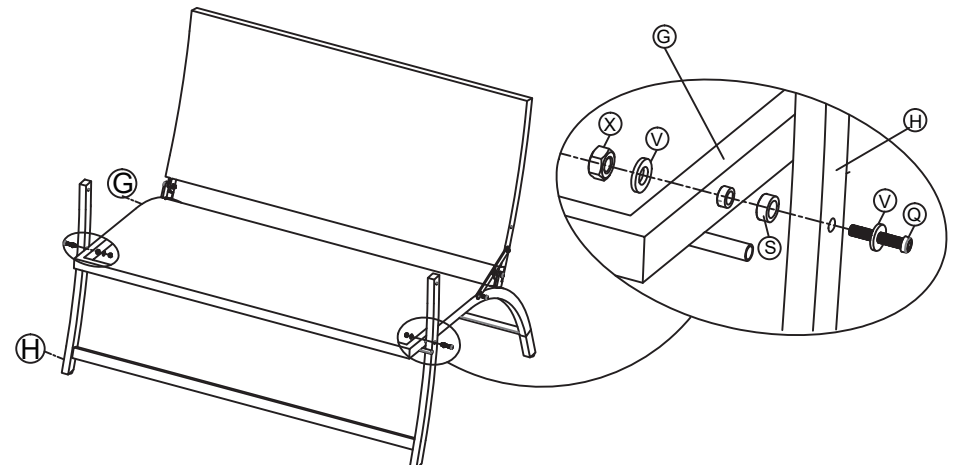

### Step 3


1. Attach the left arm(A) to loveseat front leg(H) by using bolt(N) with metal washer(U), 2MM plastic washer(T) and nut 1/4"(W).
2. Attach the left arm(A) to loveseat back(F) by using bolt(P) with metal washer(U) and 6MM plastic washer(S) through the hole of left arm into loveseat back.
3. Repeat for the right arm(B).

 **Note: Do not fully tighten the bolts.**

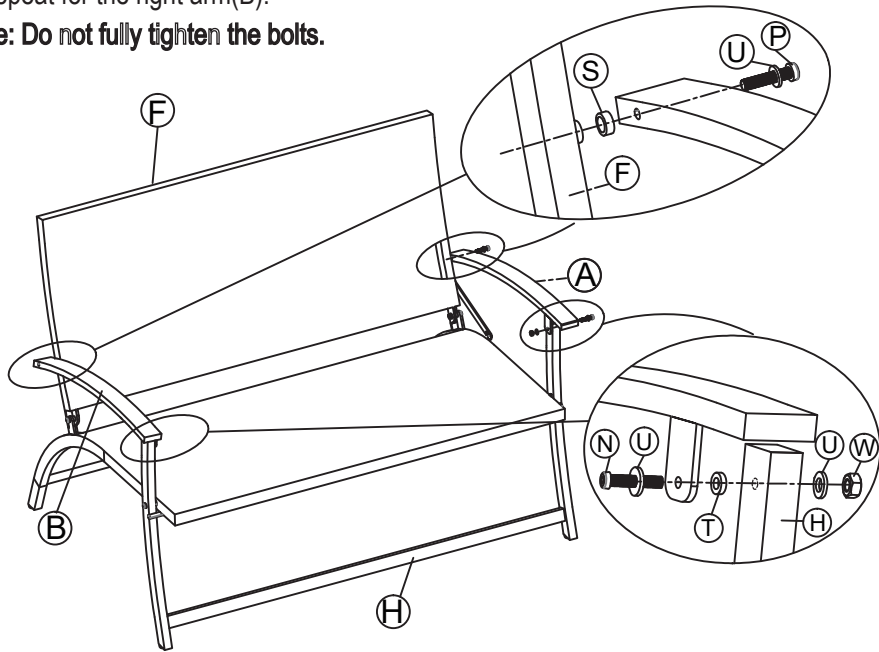

### Step 4

 Tighten all bolts suitably with the wrenches(L/Y/Z). Open the chair and lock the safety plate on loveseat back to the bolt on loveseat seat w/ rear leg when sitting. Now is ready for your enjoyment.

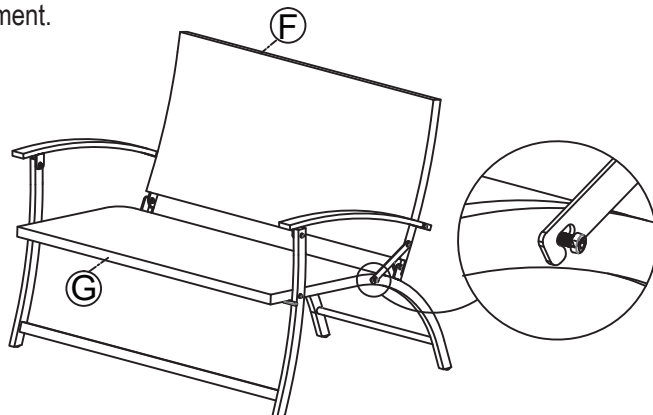


## COFFEE TABLE

### Step 1

Place all the parts on a flat, soft surface.

Attach table outer leg (K) to table top (I) by using the bolt (N) with metal washer (U), 2MM plastic washer (T) and nut 1/4"(W).

 
**Note: Do not fully tighten the bolts.**

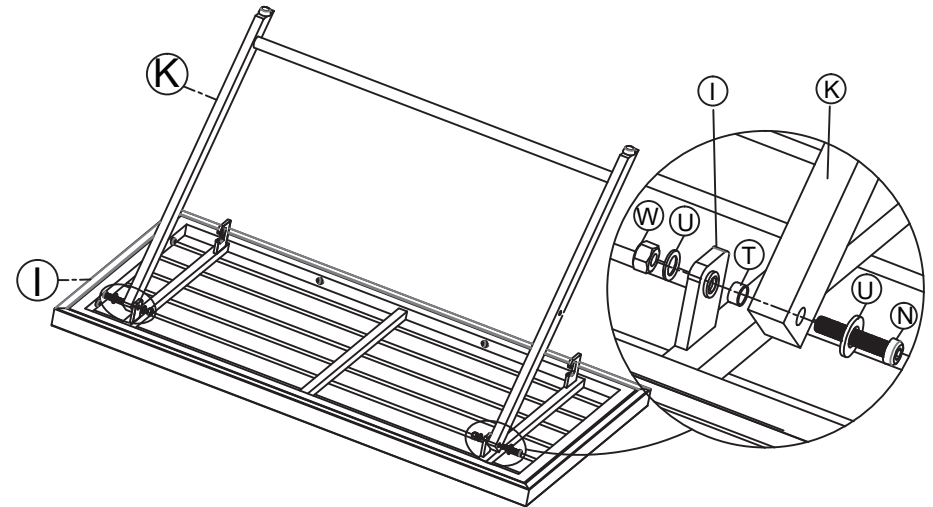

### Step 2


Attach table inner leg (J) to table outer leg (K) by using the bolt (O) with metal washer (U), 9MM plastic washer (R) and nut 1/4"(W).

 Tighten all bolts suitably with the wrenches(L/Z).

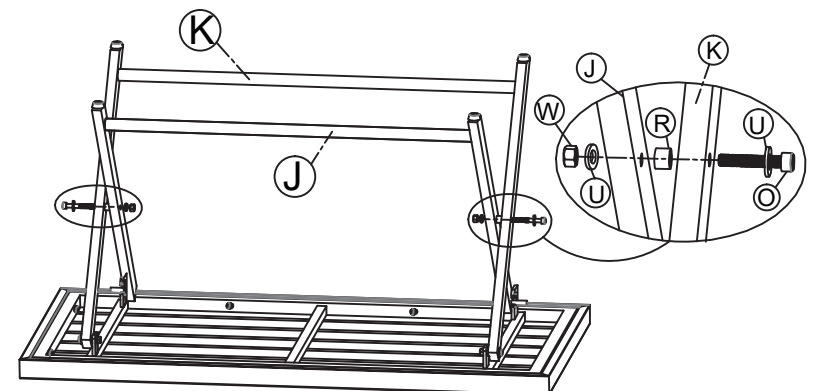


### Step 3

 Clip the iron core on the table inner leg(J) into the C type plate under the table top(I) as shown in picture.

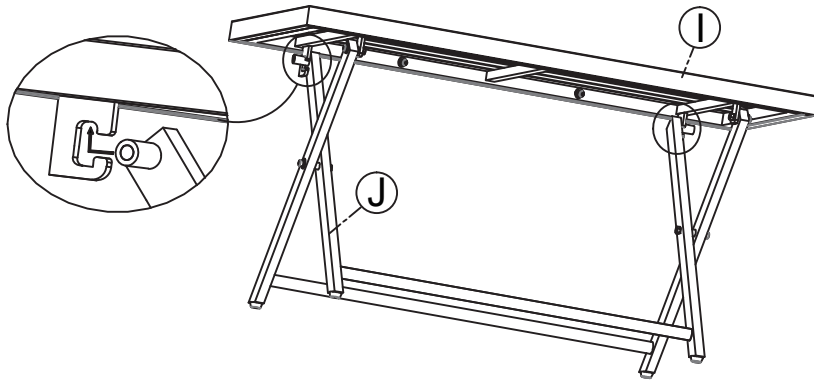

Now is ready for your enjoyment.

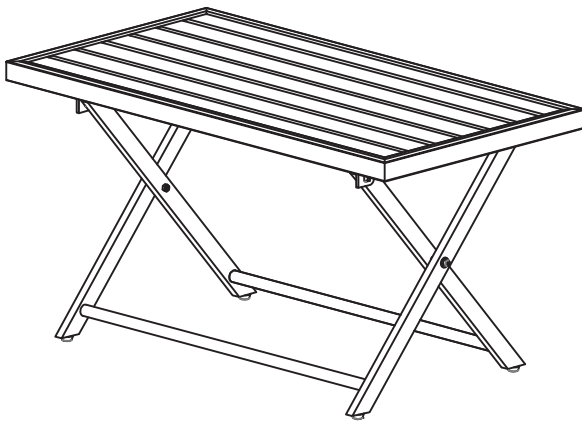 

### Note:

Foldable for the chairs & table for convenient storage and transport.