 


REFRIGERATOR WITH WATER DISPENSER

User Manual

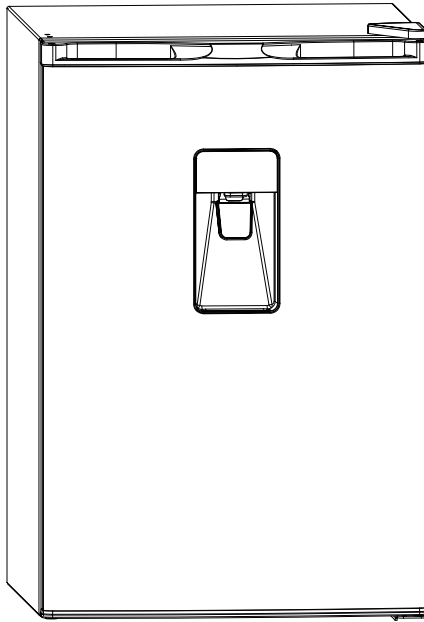

Model No.: BC-128-E

Read this booklet thoroughly before using and save it for future reference



Scan the QR code to watch the product videos.



Web: www.electacticshop.com



Email: service@electacticshop.com

CONTENTS

Important Safety Information.....	1
Knowing Your Refrigerator.....	3
Operating Your Refrigerator.....	4
Clean and Maintenance.....	5
Troubleshooting.....	6


IMPORTANT SAFETY INFORMATION



WARNING

Please read all instructions before using this appliance.

Safety Definitions

 This is the safety alert symbol. It is used to alert of potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.




IMPORTANT

IMPORTANT indicates installation, operation or maintenance information which is important but not hazard-related.

Child Safety

Destroy or recycle the carton, plastic bags, and any exterior wrapping material immediately after the freezer is unpacked. Children should **NEVER** use these items to play. Cartons covered with rugs, bedspreads, plastic sheets or stretch wrap may become airtight chambers, and can quickly cause suffocation.

 **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- *Take off the doors
- *Leave the shelves in place so that children may not easily climb inside.

Safety Instructions

- DO NOT store or use gasoline, or other flammable liquids in the vicinity of this or any other appliance. Read product labels for warnings regarding flammability and other hazards.
- DO NOT operate the refrigerator in the presence of explosive fumes.
- Remove all staples from the carton. Staples can cause severe cuts, and also destroy finishes if they come in contact with other appliances or furniture.

Tips: For the first time use, you should power on this unit and allow it to run for 4 hours to cool down the chamber temperature, and then put the food into this chamber.

SAFETY PRECAUTIONS

This appliance must be plugged into at least a 15 AMP 110-115 VOLT 60 Hz GROUNDED OUTLET. This appliance must be grounded. It is equipped with a 3-wire cord having a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. It is strongly recommended that the unit not be used with a power outlet that is equipped with GFCI protection.

WARNING!

Improper use of grounded wire can result in the risk of electric shock. Consult a physician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

 
Avoid the use of an extension cord because it may overheat and cause a risk of fire. However, if it is necessary to use an extension cord:

- A. Use only 3-wire extension cords with 3-blade grounding plug.
- B. The marked rating of an extension cord must be equal to or greater than the rating of this appliance.
- C. It should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children intentionally.

Attempting any maintenance or cleaning:

To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.

KNOWING YOUR REFRIGERATOR

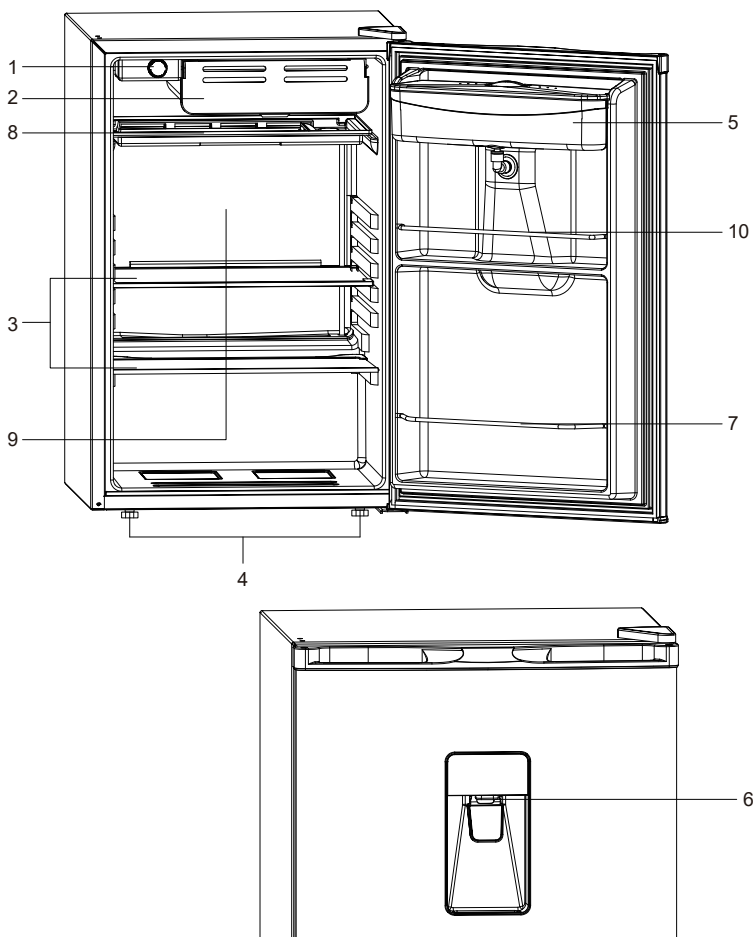

- 1. Temperature Control
- 2. Chiller Compartment
- 3. Glass Shelf
- 4. Leveling Feet
- 5. Water Tank

 
- 6. Exterior Water Dispenser
- 7. Bottle Storage
- 8. Drip Tray
- 9. Cooler Compartment
- 10. Canned Drinks Storage

Note: Exterior water dispenser can fill a 10.14 fl oz cup within 12-14 seconds with water without opening the refrigerator door.
Capacity for the water tank is 111.59 fl oz and the water temperature is 42.8-46.4°F.

OPERATING YOUR REFRIGERATOR

Temperature Control

- Your refrigerator has one control for regulating the temperature. The temperature control is located on the top left corner of the refrigerator compartment.
- The first time you turn the unit on, adjust the temperature control knob to “7” and run for at least 2 hours before putting foods inside. This will ensure the cabinet is thoroughly chilled before food is put in. After 2 hours, change the dial setting to 4, which is the normal position to keep food cold.
- The range of the refrigerator temperature control is from position “1” the warmest to “7” the coldest. Adjust the temperature control to the setting that best suits your needs.
- To turn off the refrigerator, please turn the temperature control knob to “0”. Please note that turning the temperature control knob to “0” position stops the cooling cycle, but does not disconnect the power supply to the refrigerator.

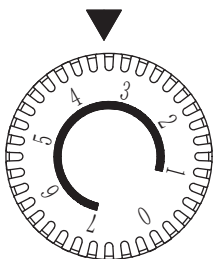

NOTE

- If the unit is unplugged, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the refrigerator will not start.
- Large amounts of food will lower the cooling efficiency of the appliance.
- Do not place the foods on the air outlet, and leave spaces for airflow.
- If you choose to change the thermostat setting, adjust thermostat control by one increment at a time. Allow several hours for temperature to stabilize between adjustments.

Water Tank and Exterior Water Dispenser

- Open the lid and fill the water tank with water.
- Press a cup against the dispenser lever to release water.

Bottle and Canned Drinks Storage

- The lower compartment can hold medium-to-large bottled items up to 42.27 fl oz, and the upper compartment can hold canned drinks.

CLEAN AND MAINTENANCE

Make sure the power cord is unplugged before moving or cleaning the back of the appliance.

Clean the outside and inside of the appliance regularly, using water and mild detergent.

Do not touch cold surfaces with wet hands, because the skin may stick to the surface.

When the Refrigerator is not going to be used for an extended period of time:

- Remove the power cord plug from the outlet.
- Remove all contents.
- Dry the interior and leave the door open.

THE FOLLOWING PHENOMENA ARE NORMAL

- Moisture on the door - wipe with dry cloth
- Condensation forming inside the cabinet - wipe with dry cloth

TROUBLESHOOTING

The refrigerator will not operate:

- The power supply cord is unplugged.
- The thermostat knob is set to the “O” position.
- A household fuse or circuit breaker has tripped.

Food in the refrigerator compartment is freezing:

- The thermostat knob is set too cold.

Food in the refrigerator compartment is not cold:

- The air vents on the drip tray are blocked in the compartment; this prevents the movement of cold air.
- The door is opened too often or not closed properly.
- A large amount of food has just been added to the refrigerator or chiller compartment.
- The thermostat knob is set too low. Turn to higher settings, and 7 is the coldest.

The refrigerator seems to make unusual noise:

- The refrigerator is not leveled on the floor.
- The body of the refrigerator touches a wall.
- The drip tray is not placed properly.

There is interior moisture build-up:

- The door is opened too often or not closed properly.
- The room is humid.
- The food is not packaged correctly.

The door will not close completely:

- Food packages are keeping the door from closing properly.
- The shelves are out of position
- The gaskets are dirty.
- The refrigerator is not level.

ROWAN ELECTRIC APPLIANCE LLC

**8:30am–5:30pm P.S.T.
Monday to Friday**



Web: www.electacticshop.com



Email: service@electacticshop.com