


Flameless LED Set with Remote & Timer

INSTRUCTIONS

1. Remove and discard plastic tab from Remote Control battery compartment.
2. Install 3 "AAA" batteries (not included) into the bottom battery compartment of each candle. Make sure that the battery polarity (+/-) is as indicated. (see A)
3. Use the On-Off switch on the bottom of each candle to turn LED to the ON position. (see B)
4. Instructions on remote control:

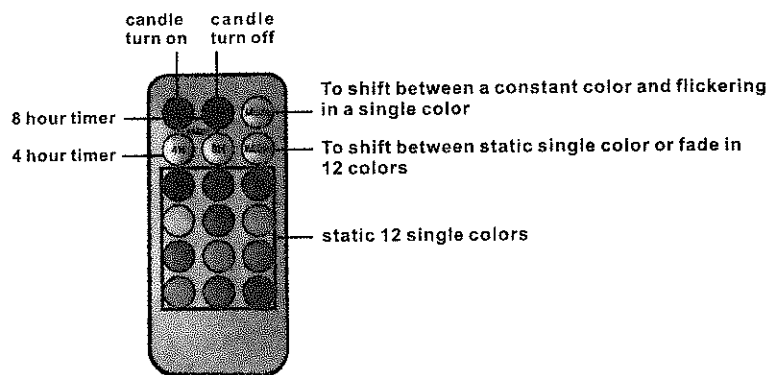


5. Remote Control Battery Replacement: see Diagram on back of Remote control
6. Timer instructions: when remote control 4H button is pressed, the candles will turn on for 4 hours and automatically turn off for a period of 20 hours. Candles will turn on and off at the same each day. Same principle of operation as 8H timer.

BATTERY NOTICE

Do Not Mix Old and New Batteries. Do Not Mix Alkaline, Standard (Carbon-Zinc), or Rechargeable (Nickel Cadmium) Batteries. Replace all batteries at one time. To avoid leakage or explosion, do not put batteries in fire. Remove batteries if consumed or if product is to be left unused for a long period of time. Clean the battery contacts and also those of the devices prior to battery installation.

This Product Is Not A Toy. For Adult Use Only.

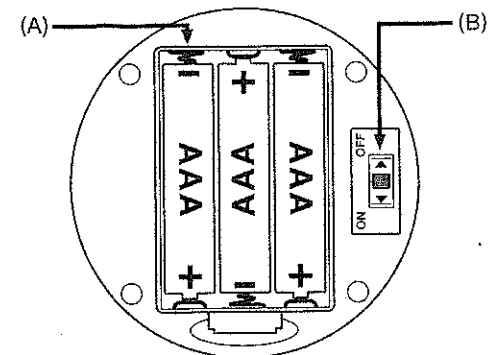

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not approved by the party responsible for compliance could void user's authority to operate this unit.