 


INSTALLATION

 
 
Product Manual

Version: 200286US-01-25A-AA

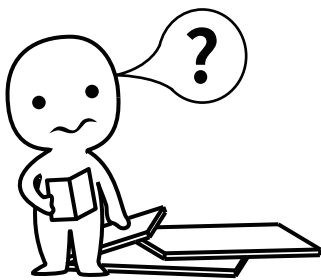


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

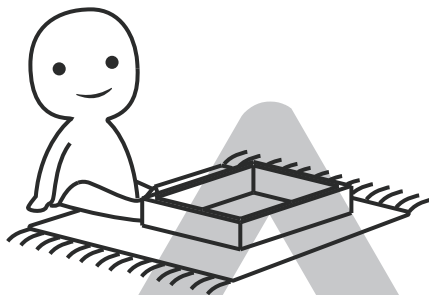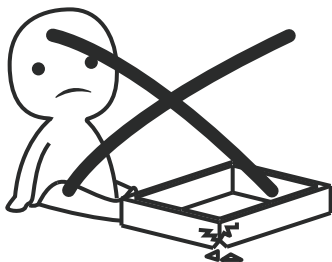



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

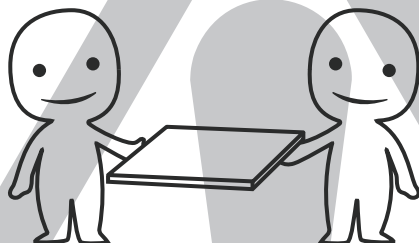

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

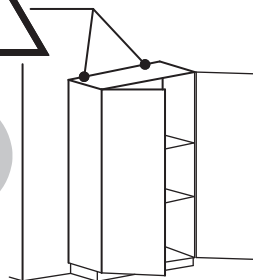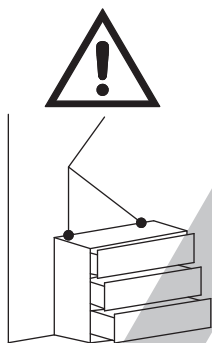

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

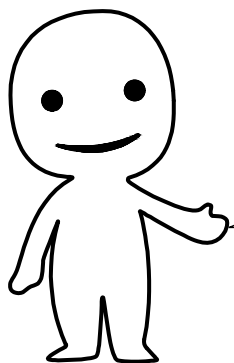


Please prepare the following tools

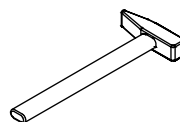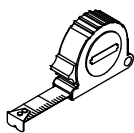    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 40



Ø 6 x 35mm

B x 40



 
Ø 15 x 10mm

C x 19



Ø 6 x 30mm

D x 16




Ø 5 x 40mm

E x 3



 F x 3



G x 9



Ø 4 x 18mm

 
H x 8




J x 4



K x 2



L x 3

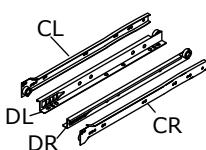 

M x 62



Ø 3.5 x 12mm

 
N x 2



P x 2



Q x 2



Ø 3.5 x 35mm

R x 4



Ø 3 x 14mm

 
S x 8



T x 8



Ø 3 x 14mm

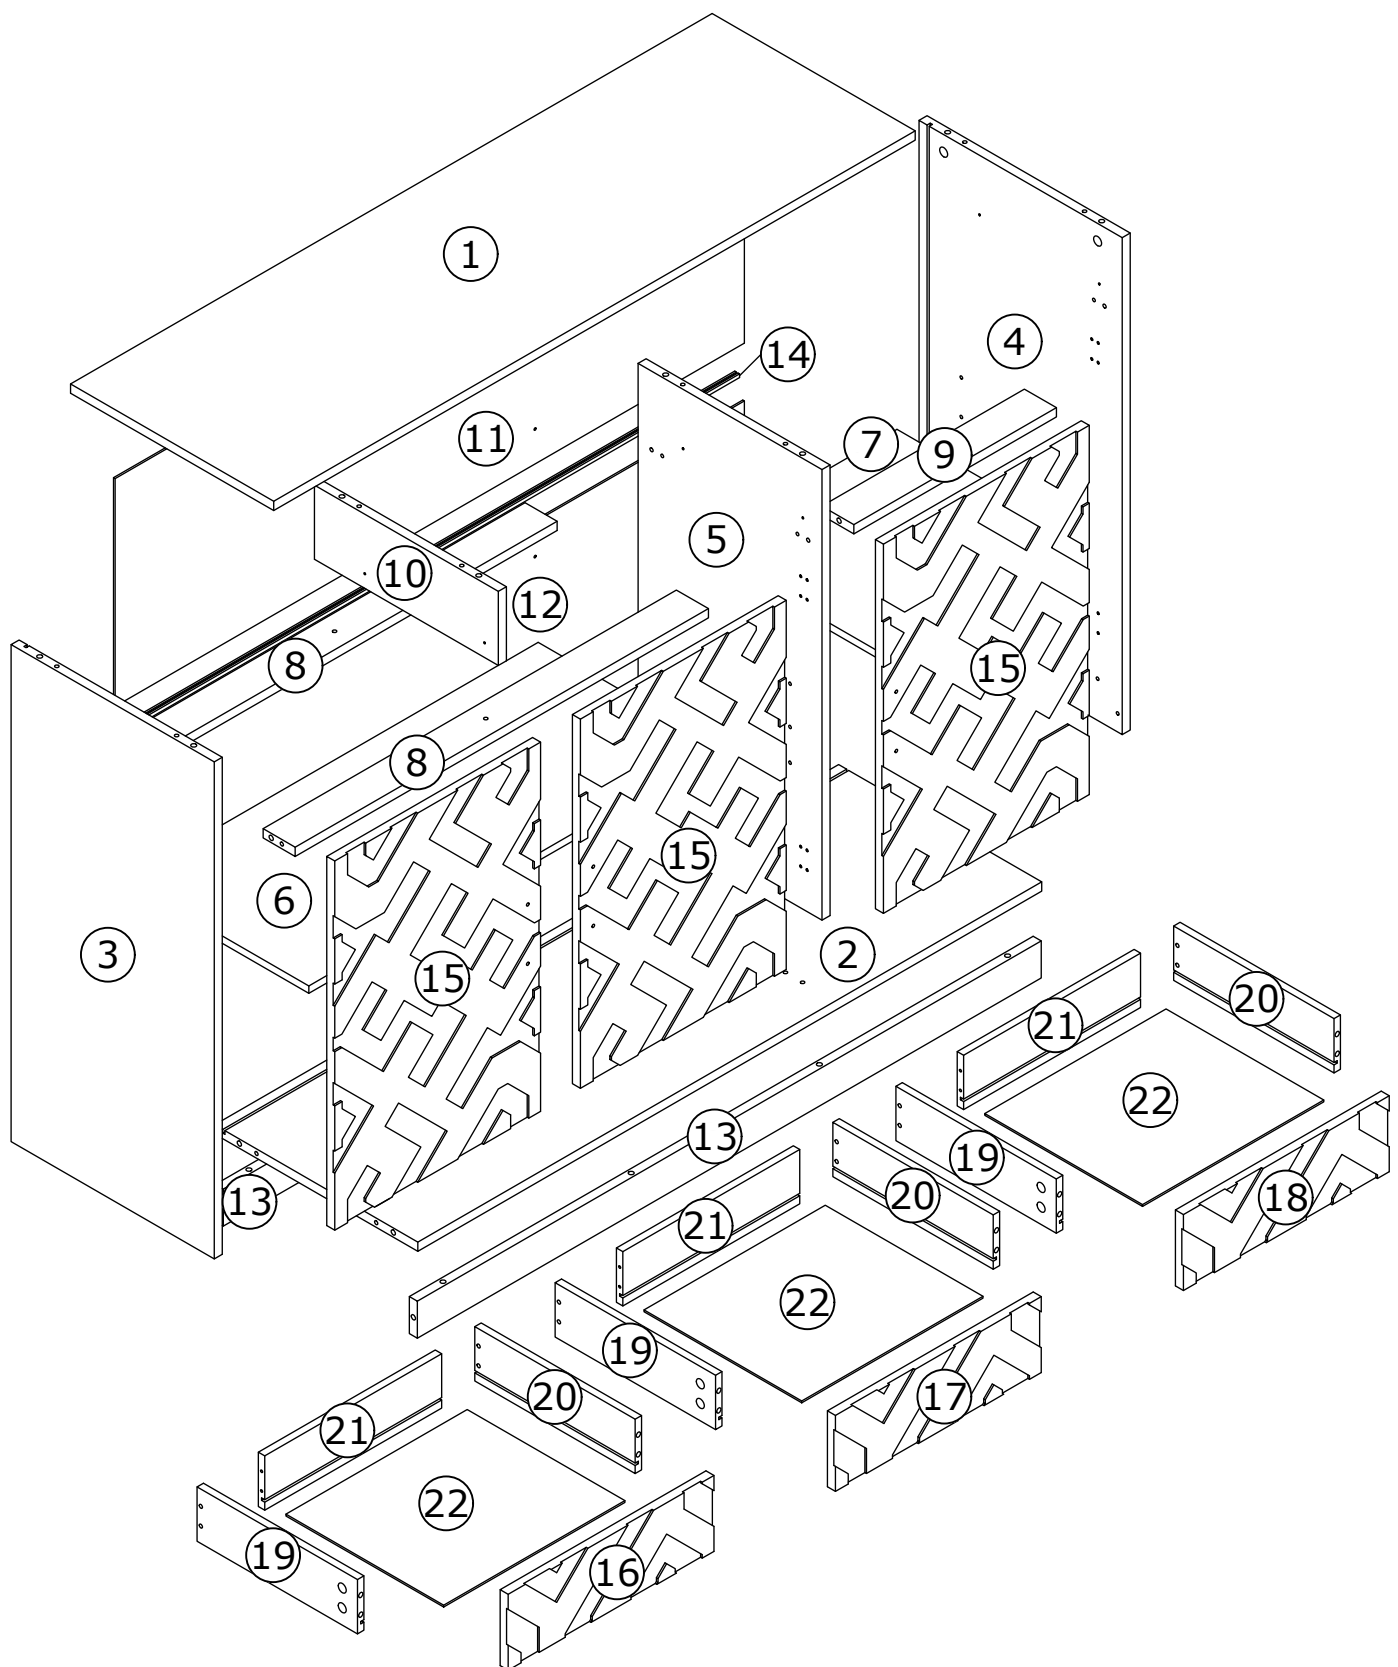


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

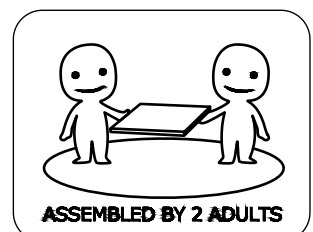



1

A x 6



 
 Ø 6 x 35mm



  
Screw the eccentric rod (A) into panel 2 as shown.

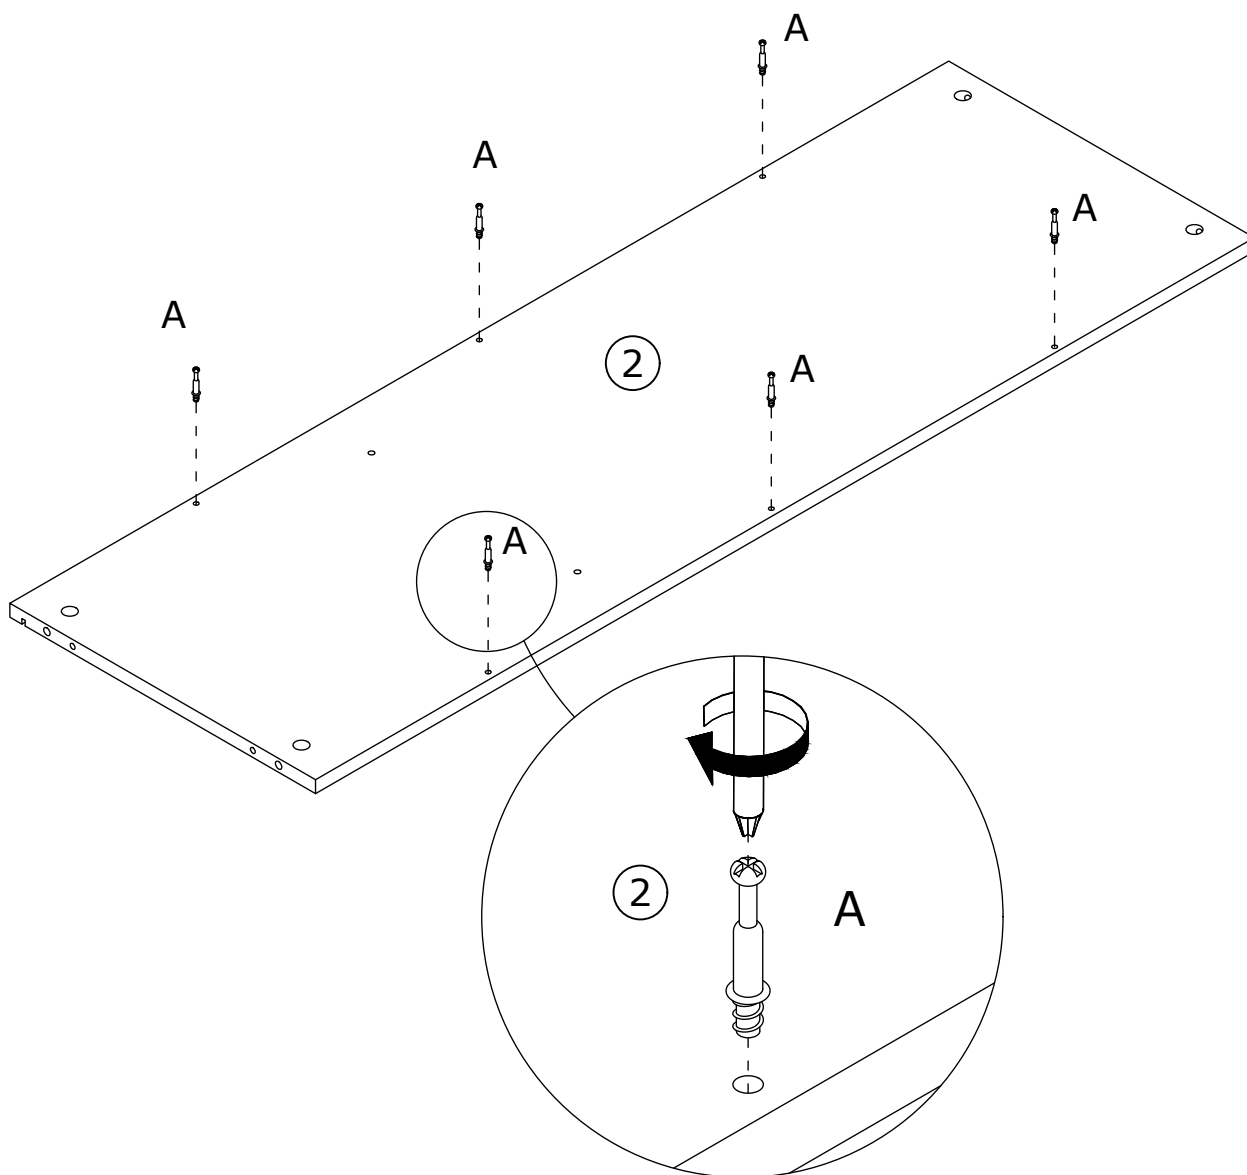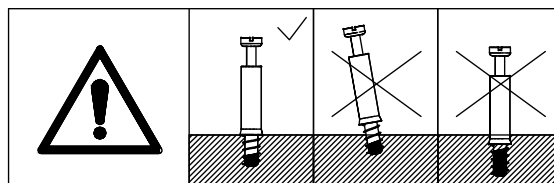


2

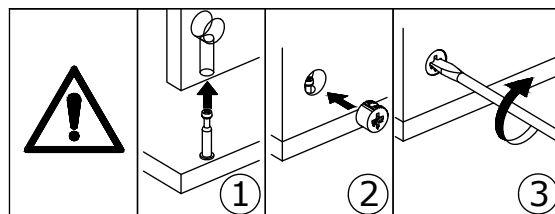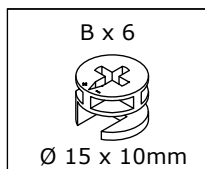   


 
Attach panel 13 to panel 2, and add cam lock (B) to tighten in clockwise rotation.

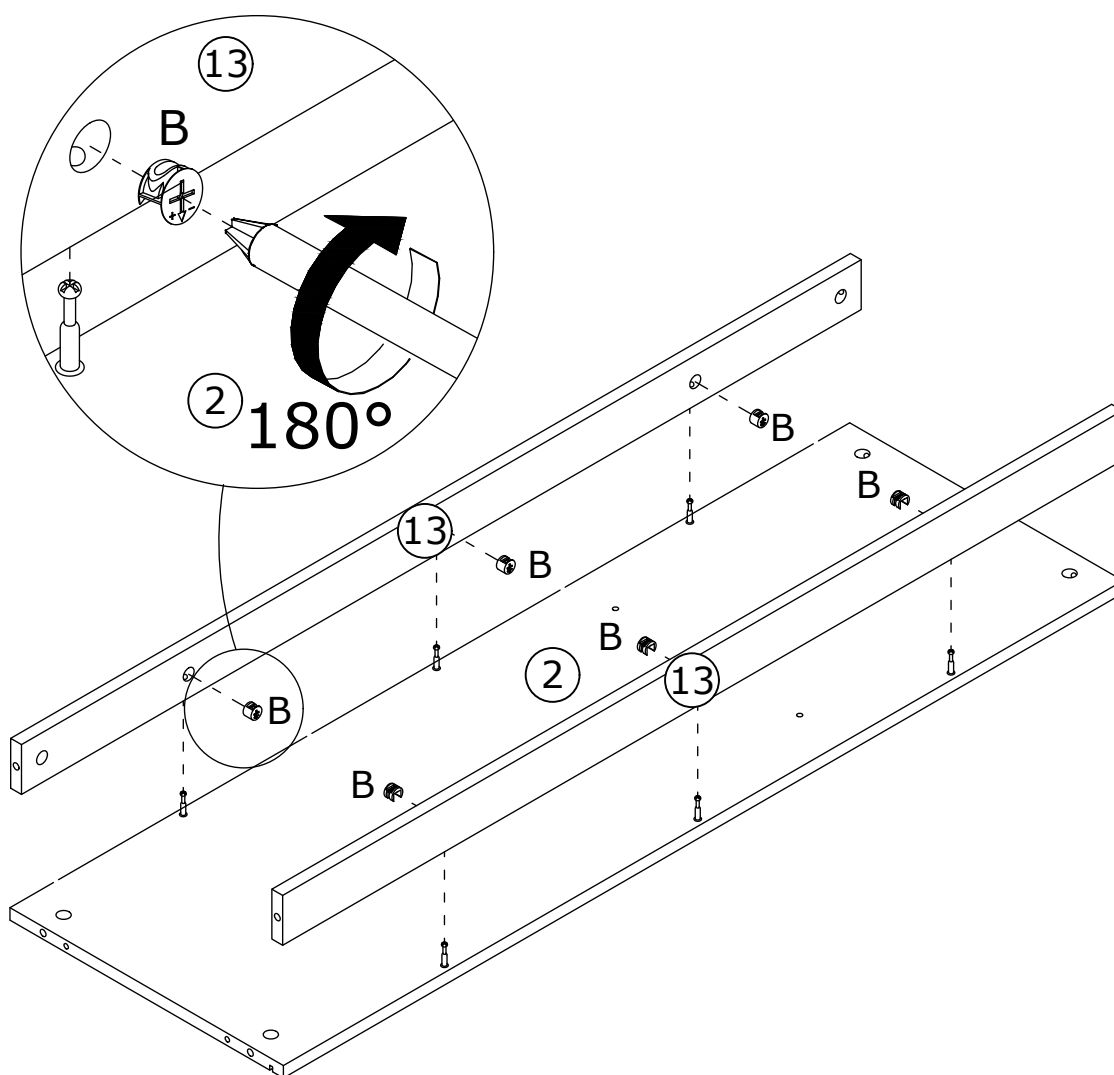


3

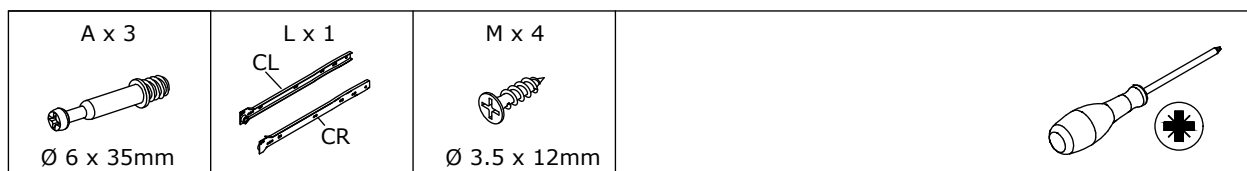 

  
Attach slide rail (L-CL), (L-CR) to panel 5 using screws (M) as shown.

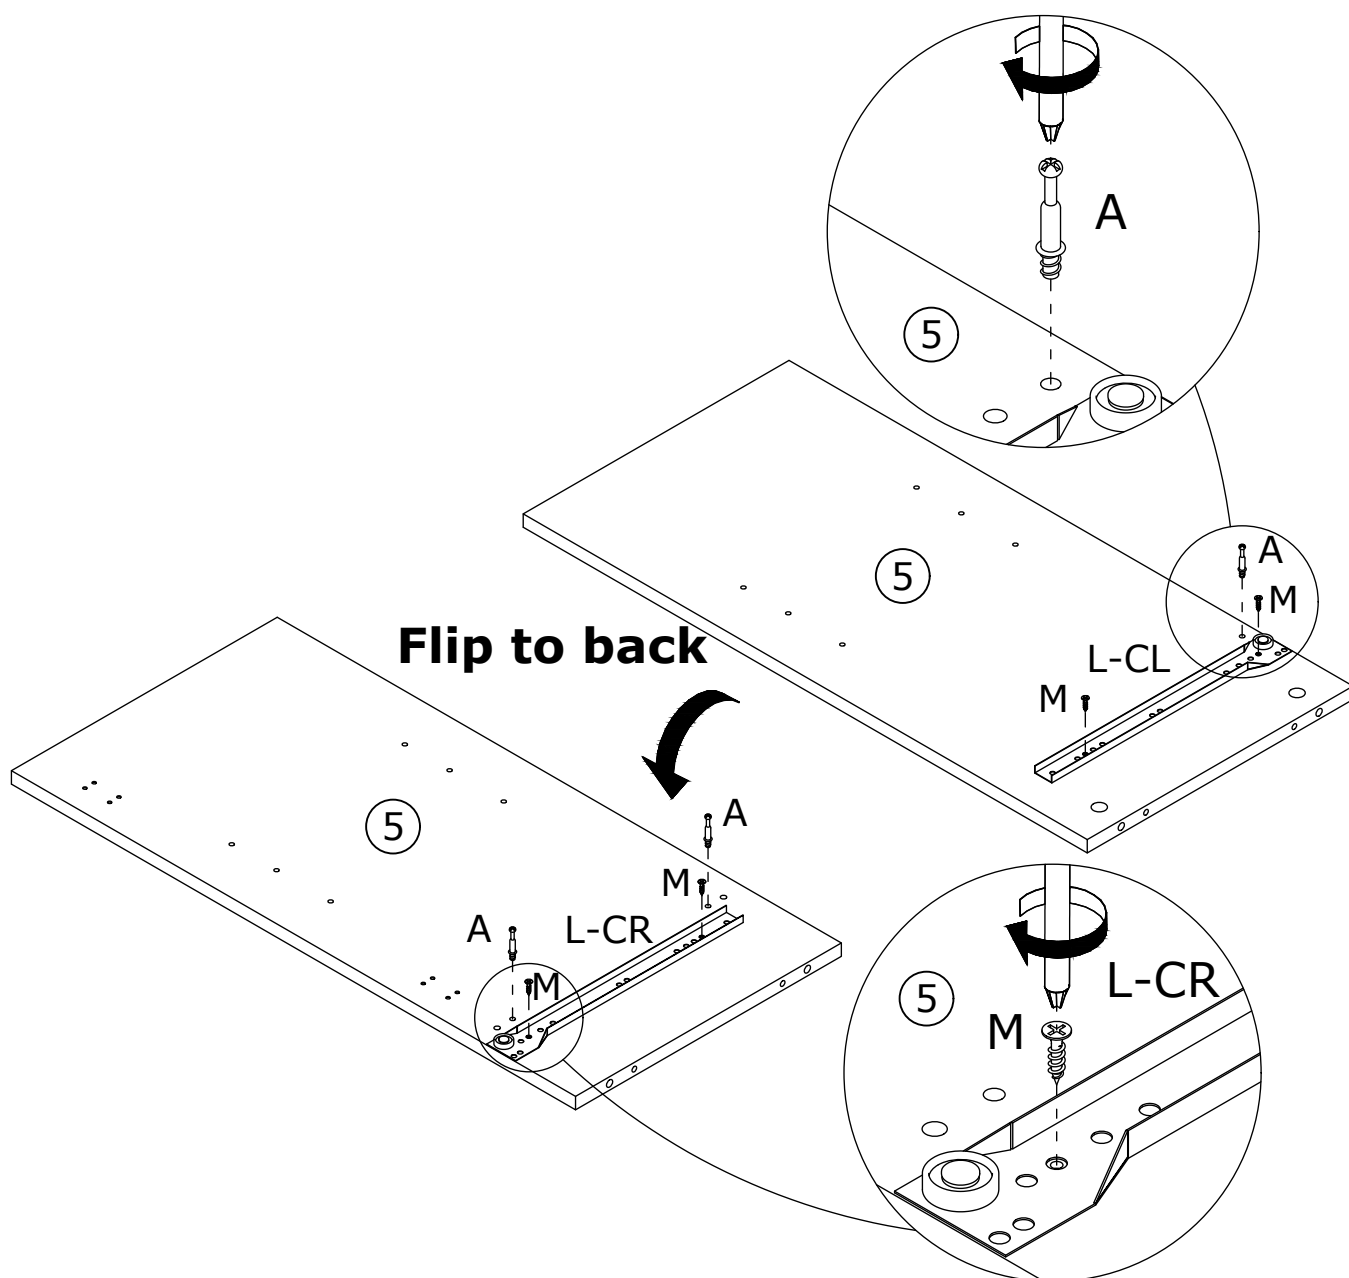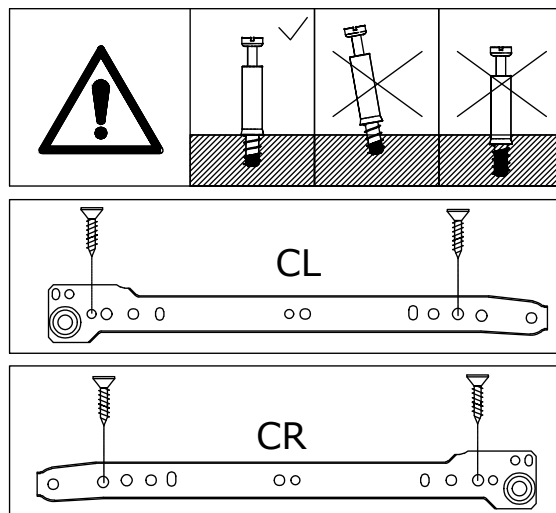





4

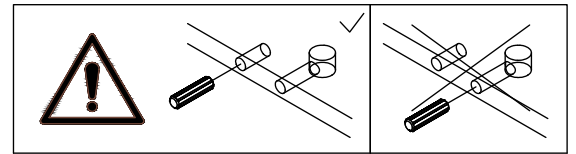 

 
Attach panel 5 to panel 2 using wooden dowel(C) and fix with screws (D) as shown.

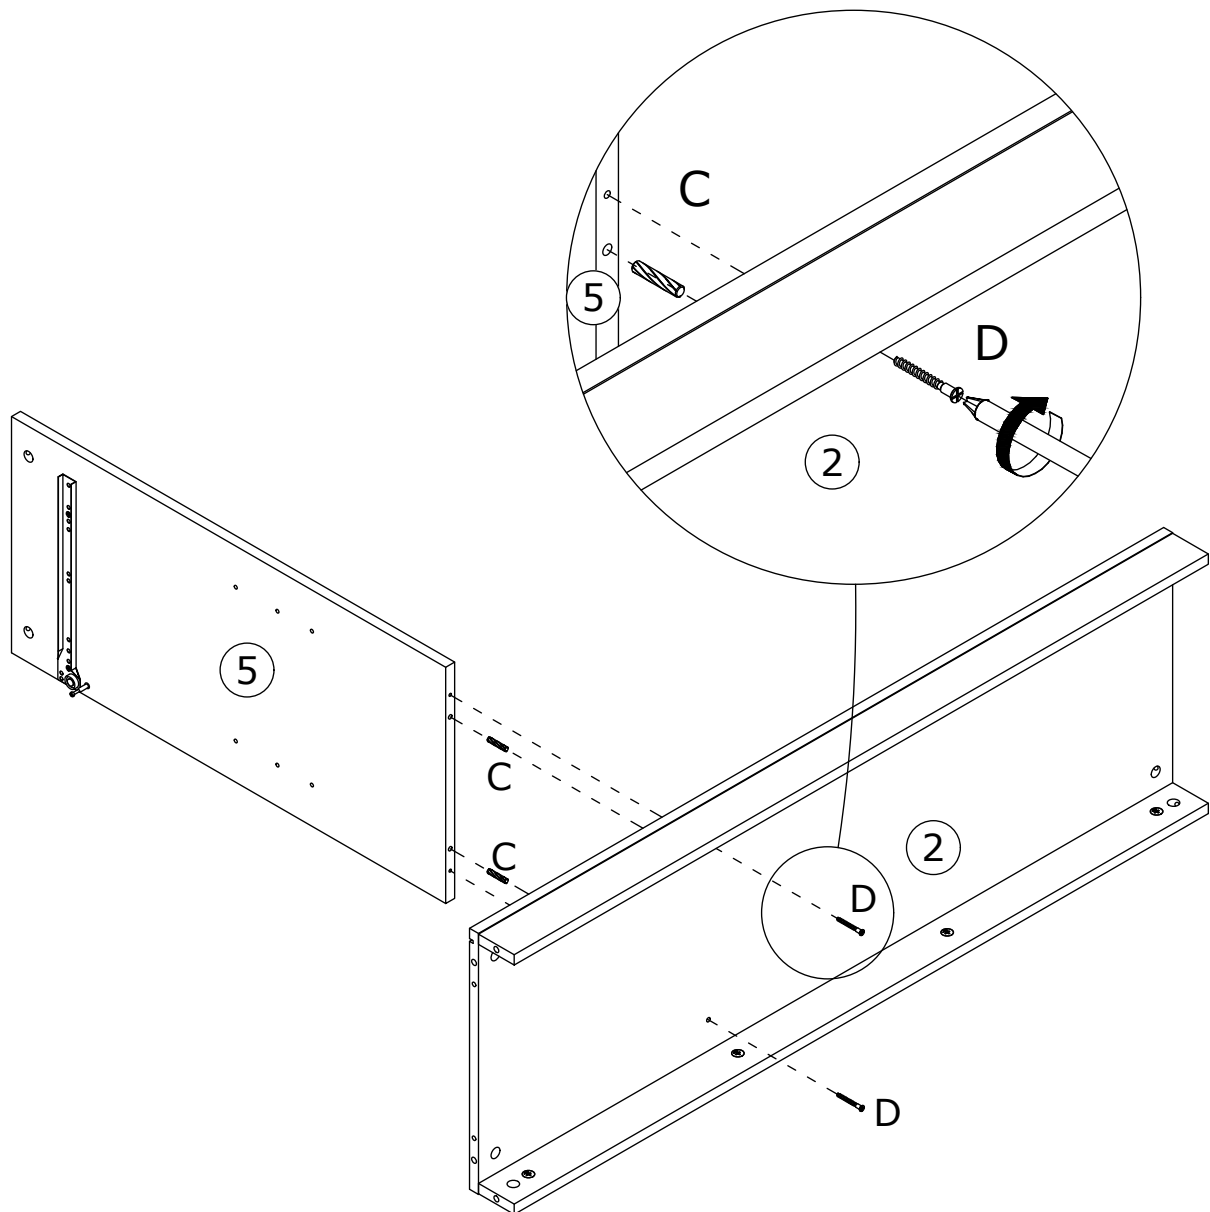




5

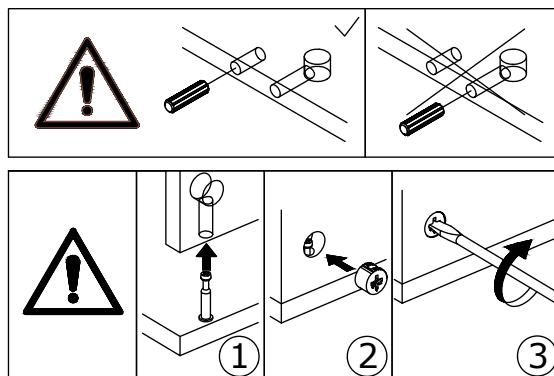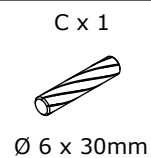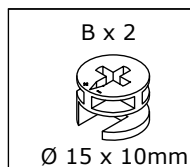    


 
Attach panel 9 to panel 5 using wooden dowels (C), then attach panel 8 to panel 5, and add cam locks (B) to tighten in a clockwise rotation.

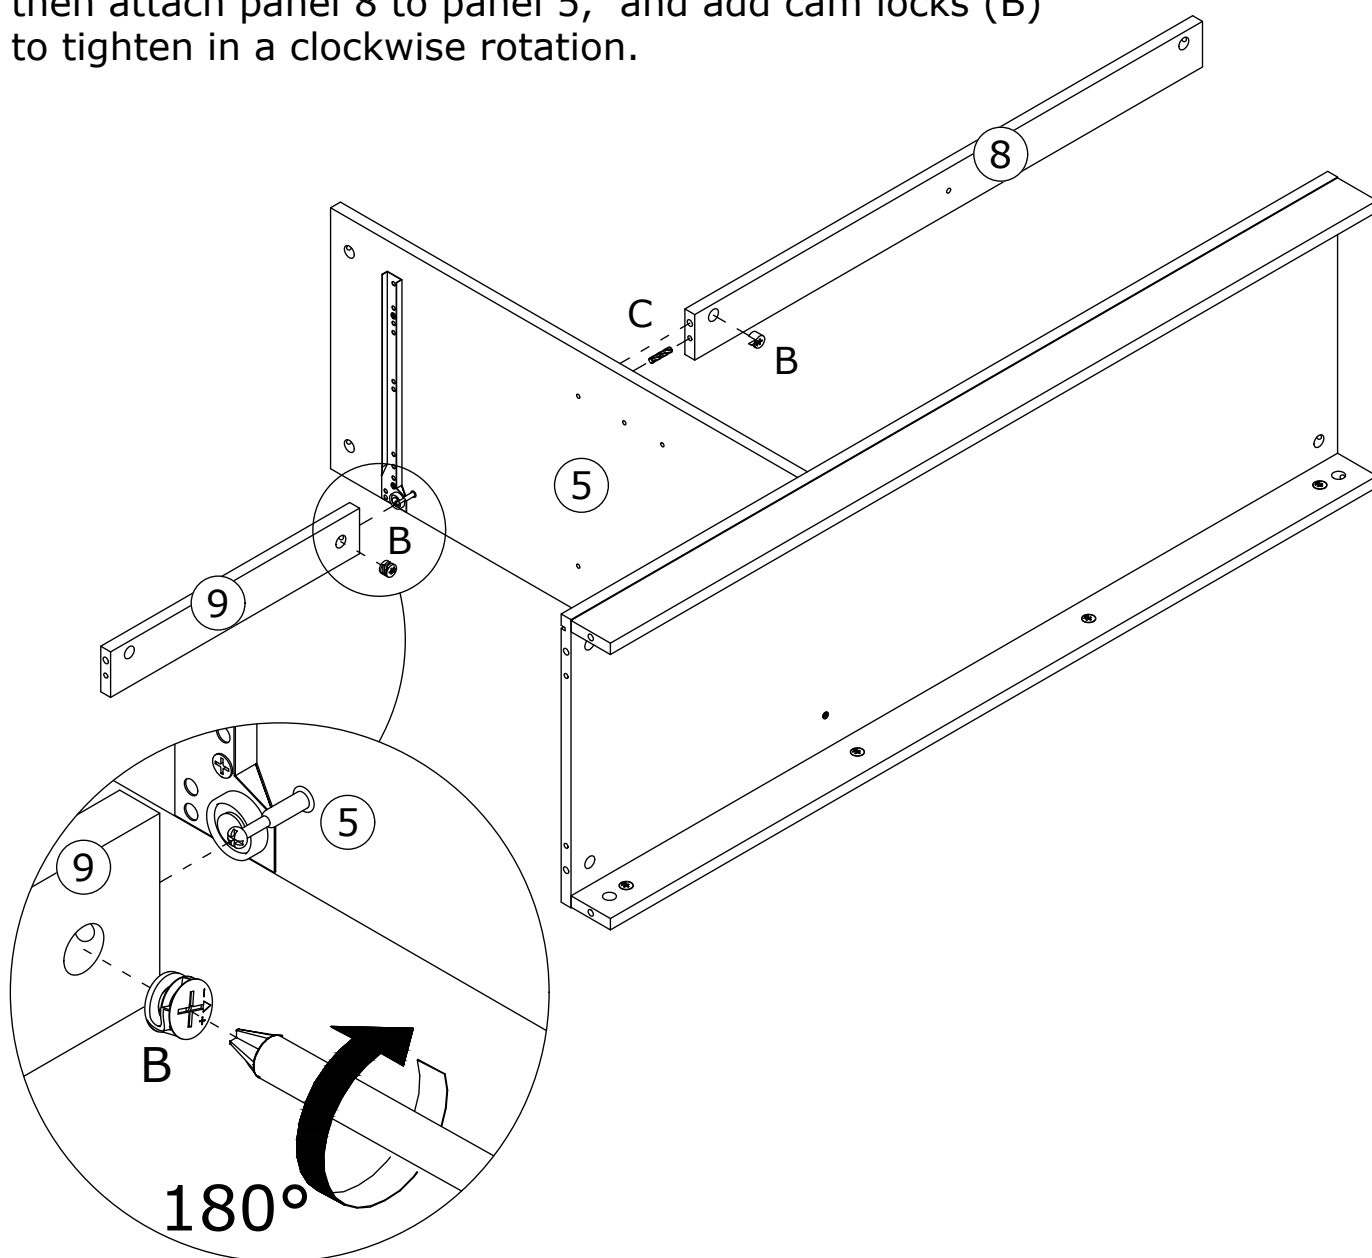









6

   A x 6  Ø 6 x 35mm	L x 1  CL	M x 2  Ø 3.5 x 12mm	
--	--	--	---

  Attach the slide rail (L-CL) to panel 3 using screws (M) as shown and screw the eccentric rod (A) into panel 3.

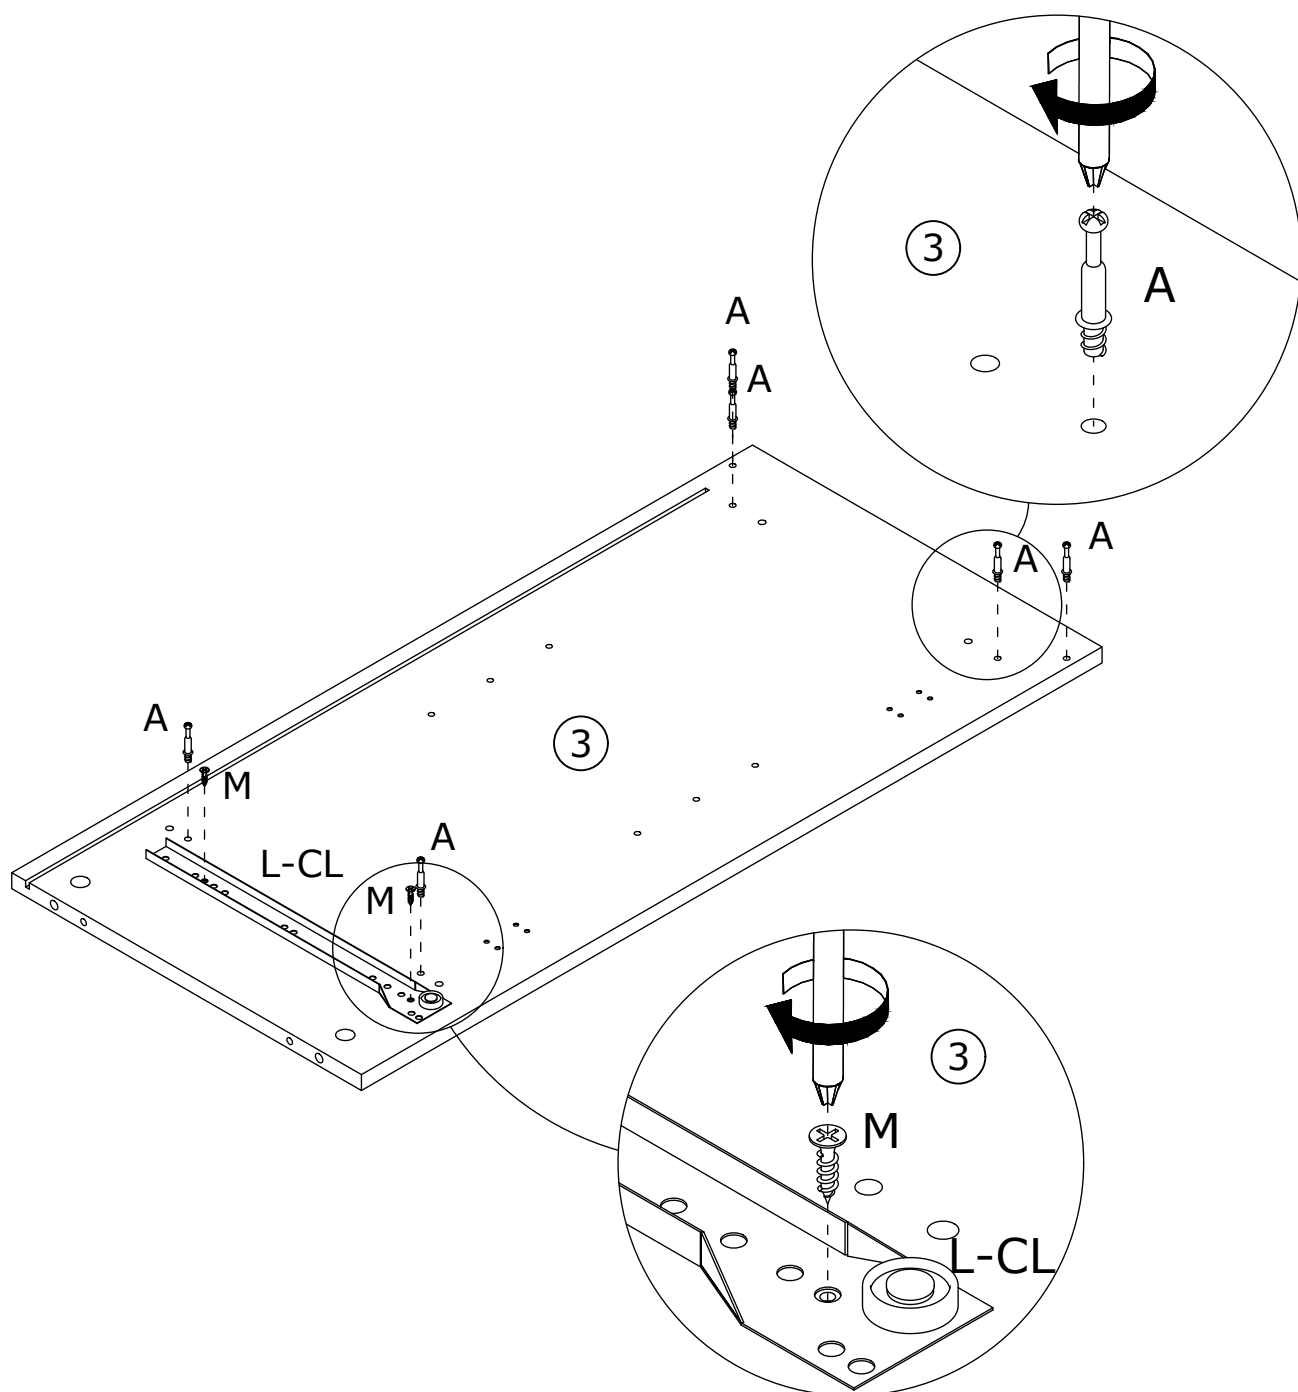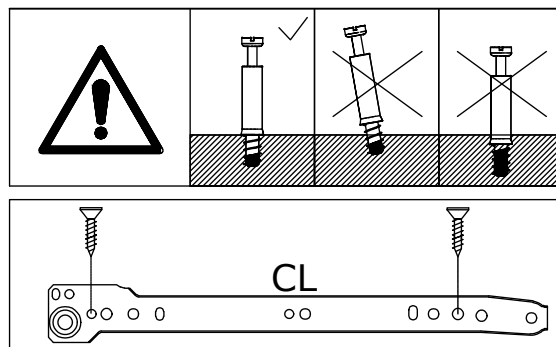


7

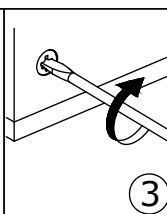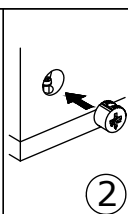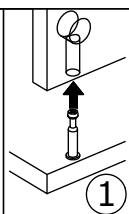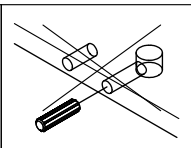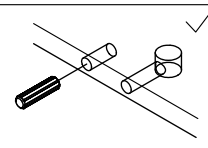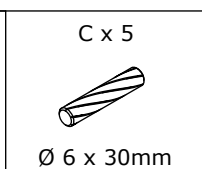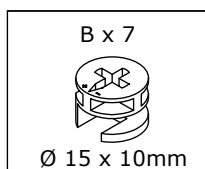        


Attach panel 3 to panel 8, 5, 13 and 2 using wooden dowels (C) as shown, add cam locks (B) to tighten in a clockwise rotation.


 
Taking care to prevent falling.

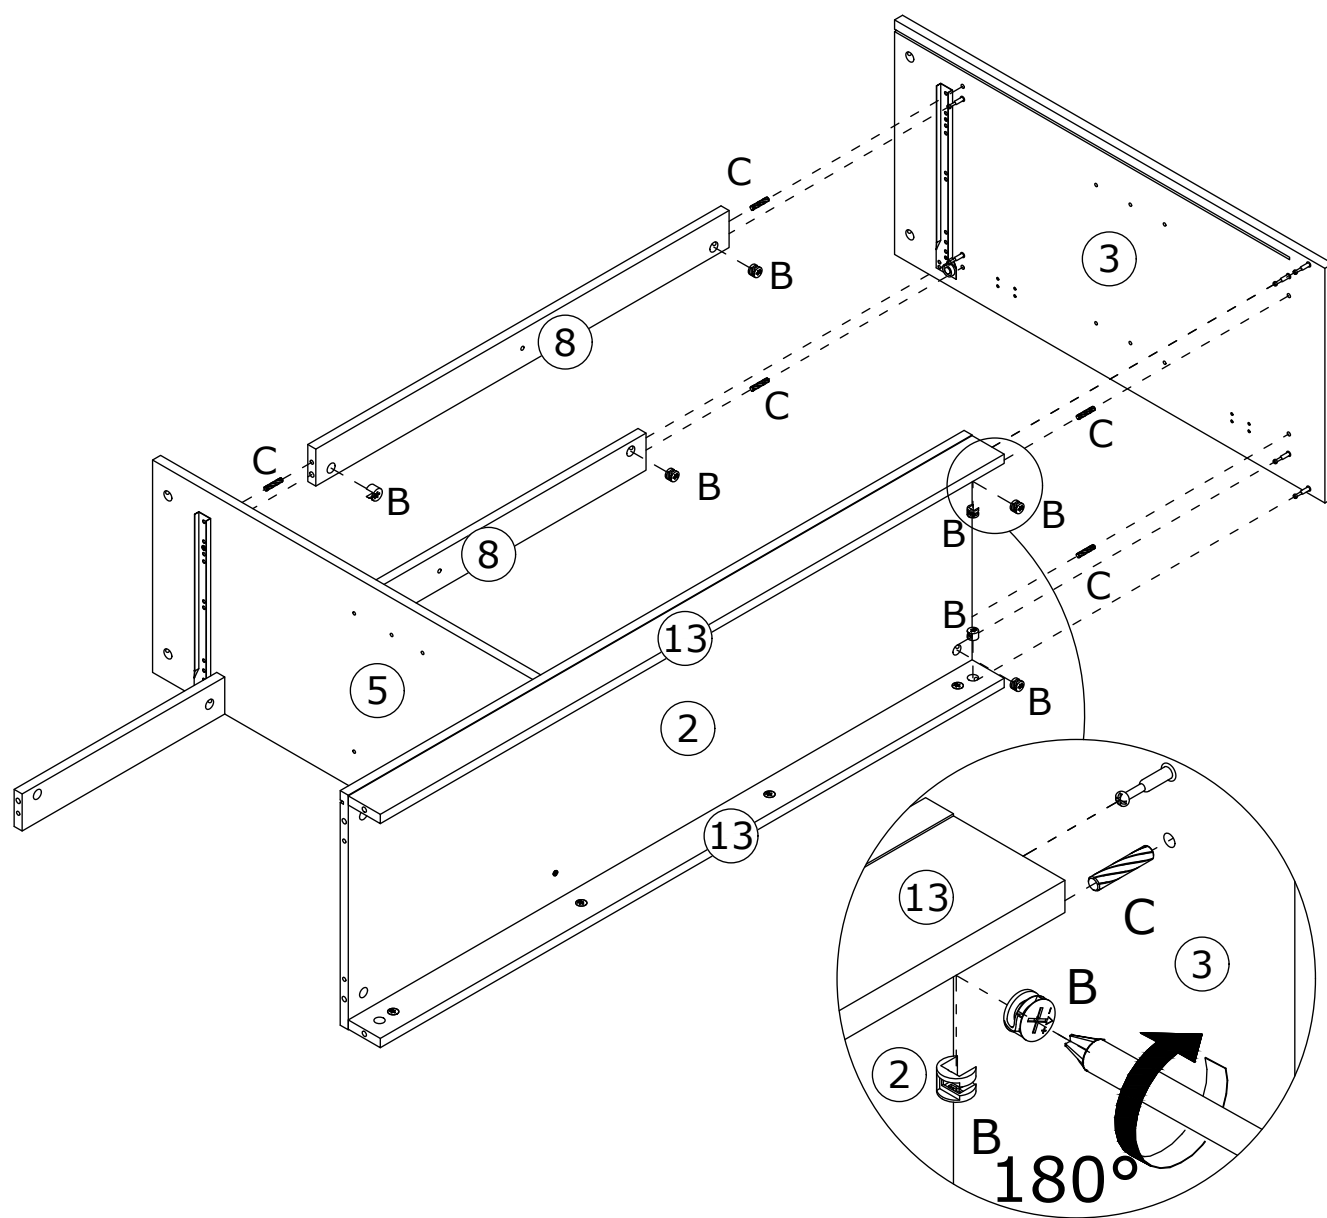




8

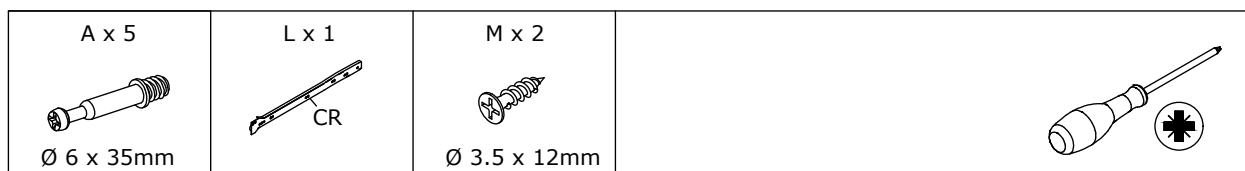 

 
 
Attach the slide rail (L-CR) to panel 4 with the screws (M), then screw eccentric rod (A) into panel 4 as shown in the figure.

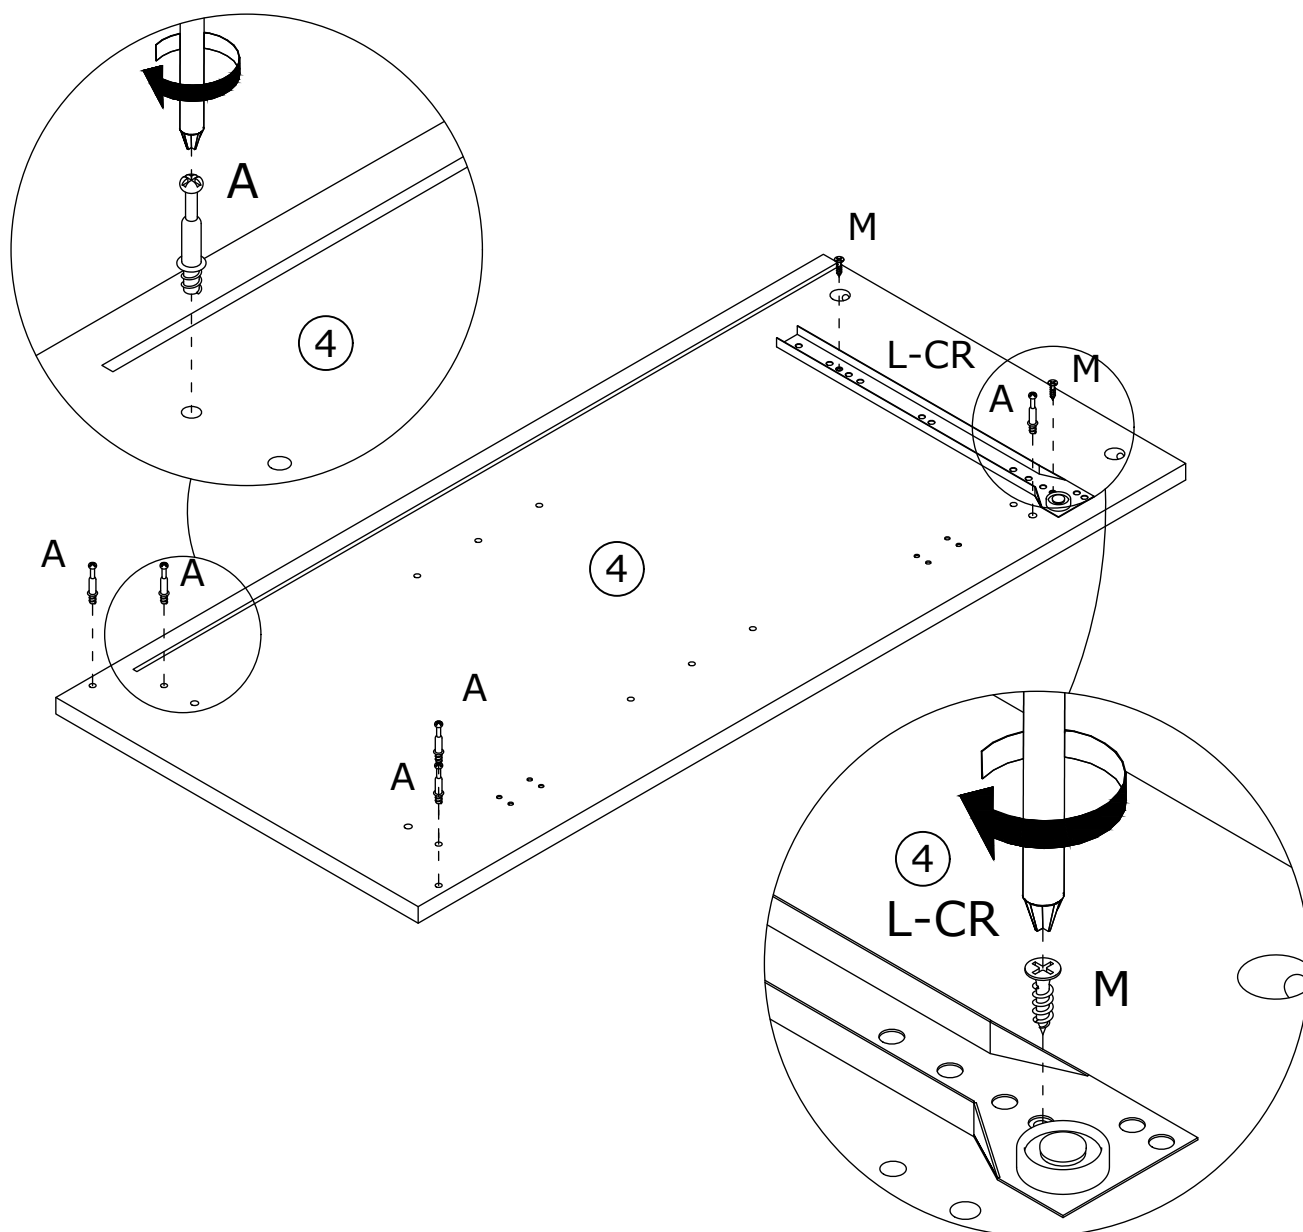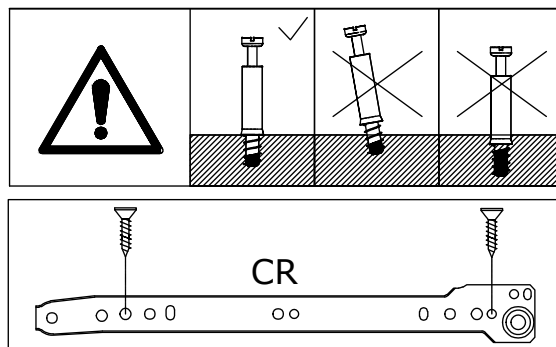




9

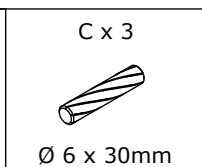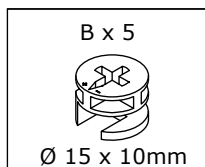   

 
 
Attach panel 4 to the mounting unit using wooden dowels (C) and add cam locks (B) to tighten in a clockwise rotation.

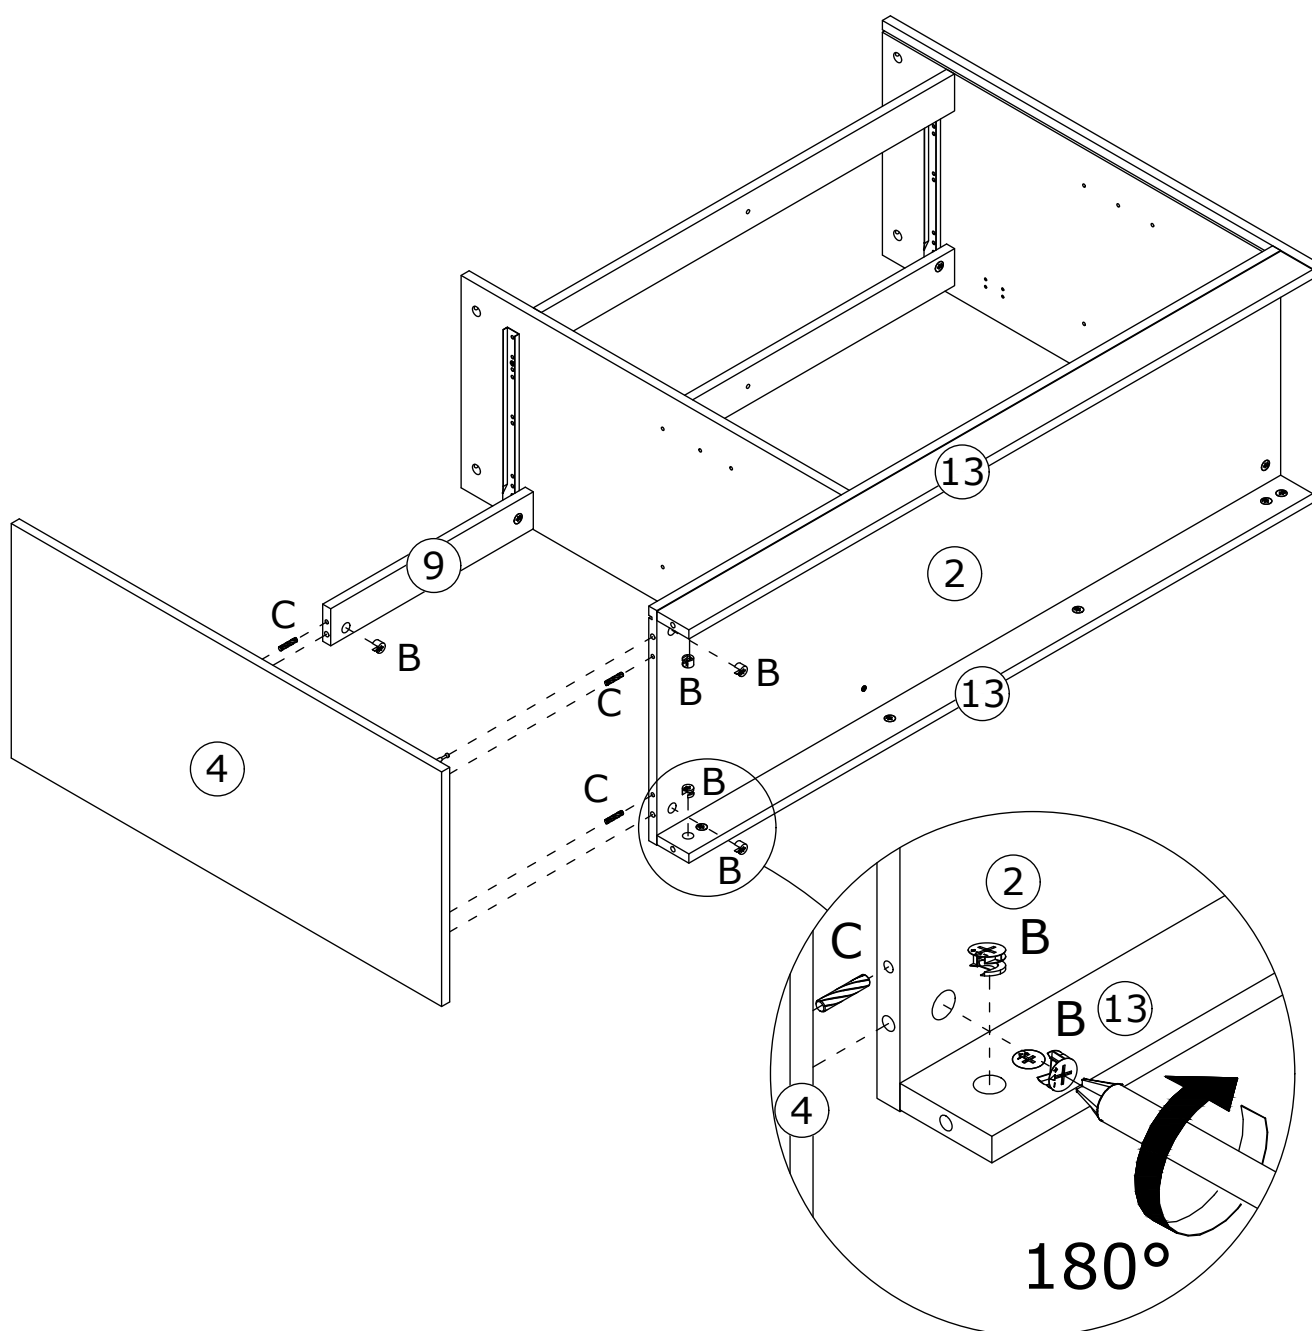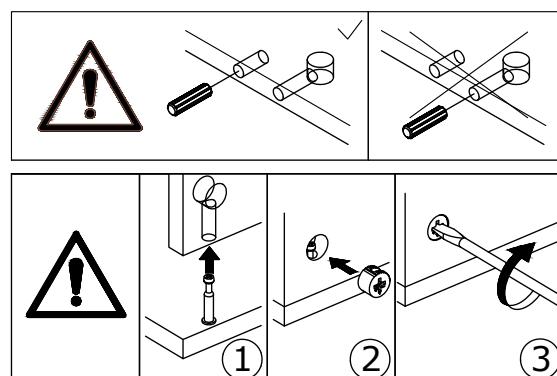



10

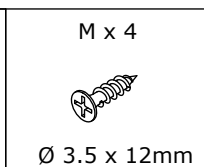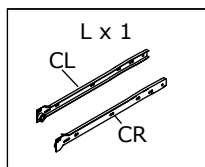   

  
Attach the slide rail (L-CL), (L-CR) to panel 10 using screws (M) as shown.

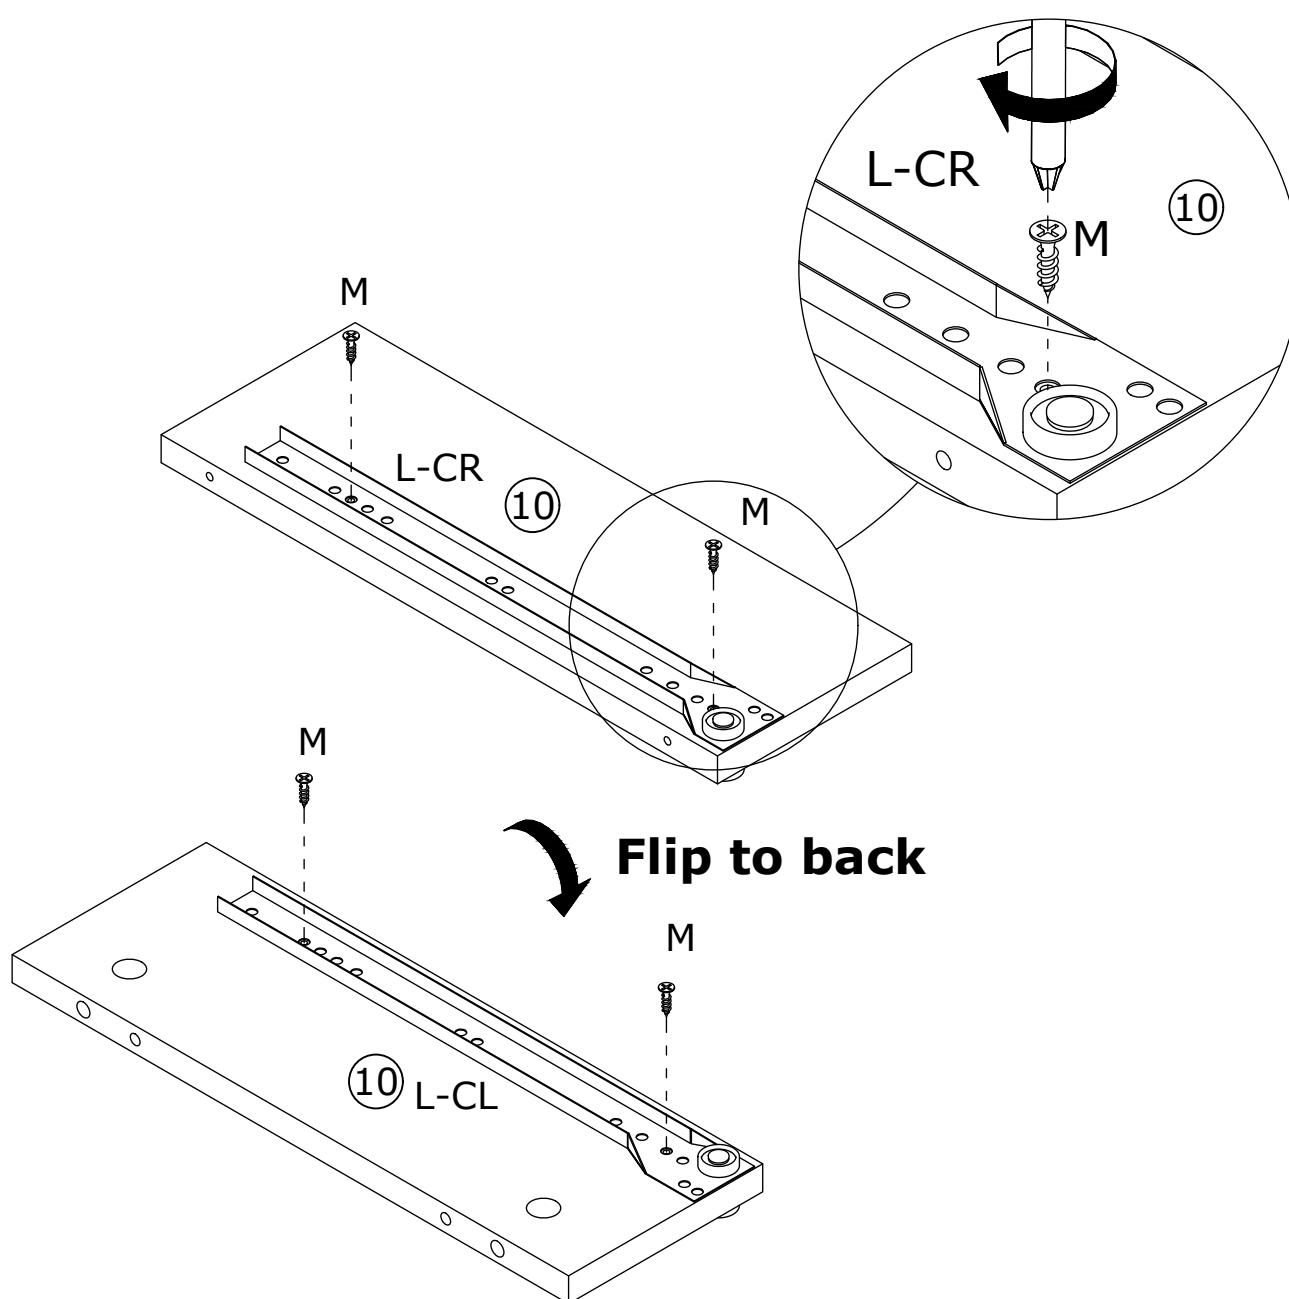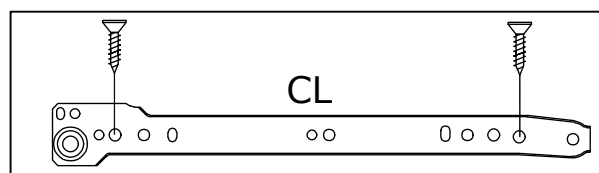


11

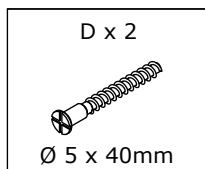  

 
Attach panel 10 to panel 8 using screws (D) as shown.

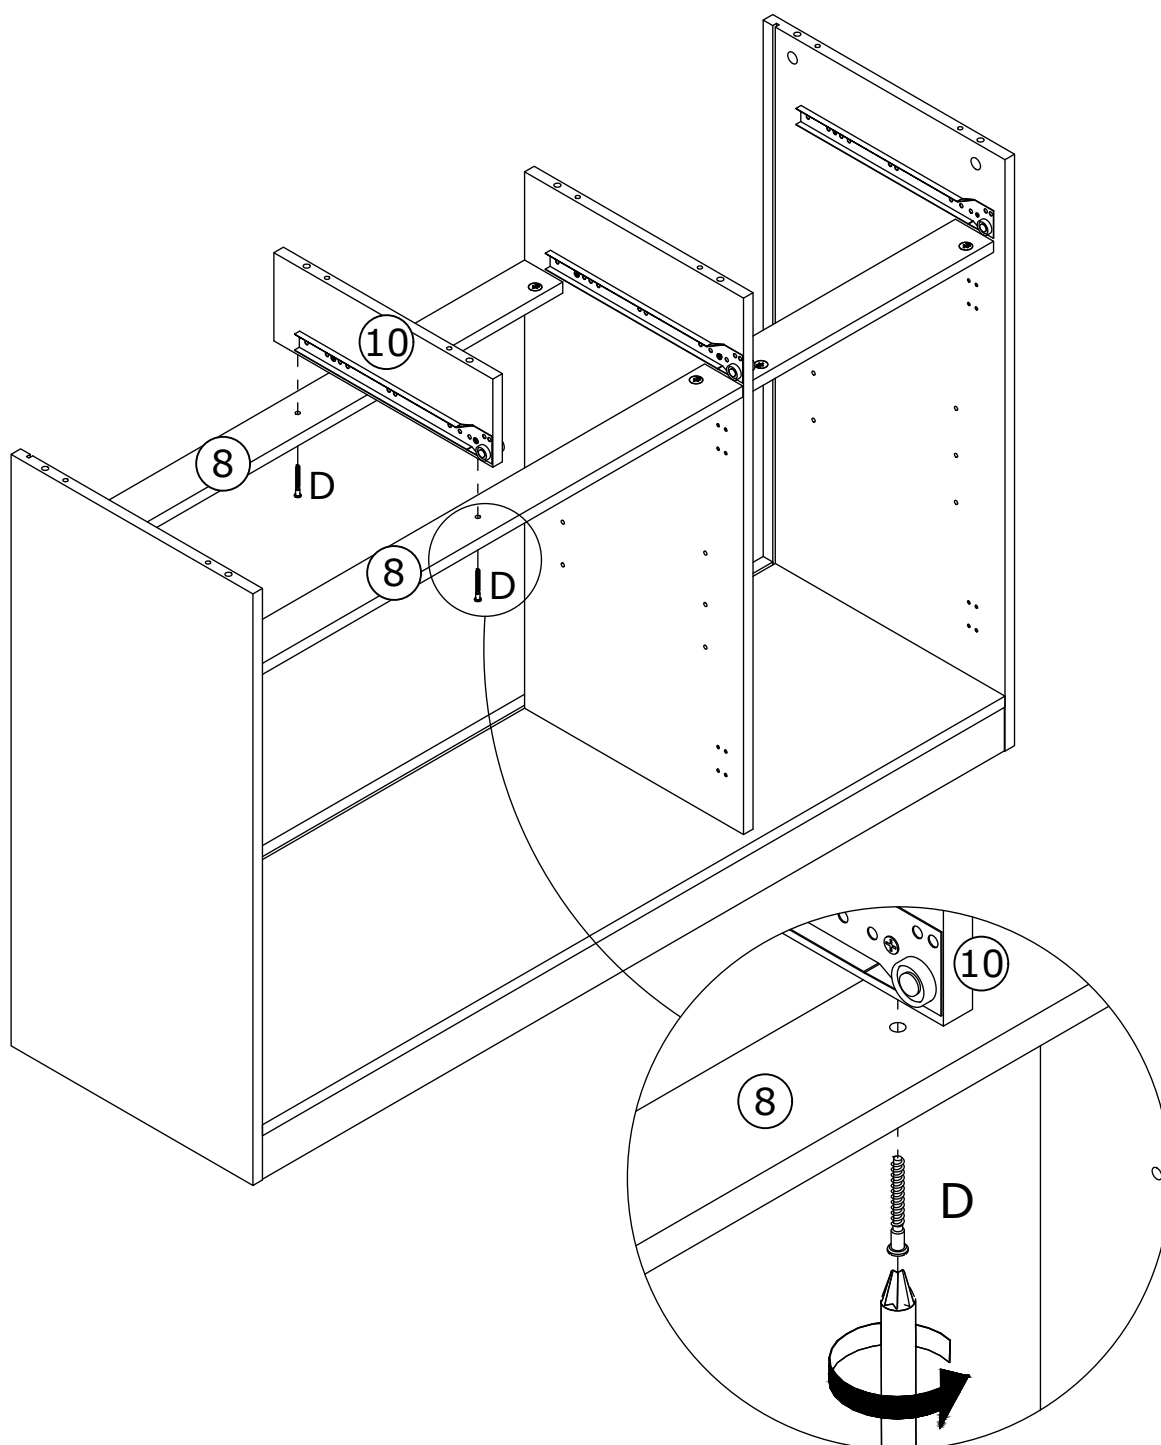



12

 


 
Connect panel 11 and 12 to plank 14 and inserted them along the available grooves.

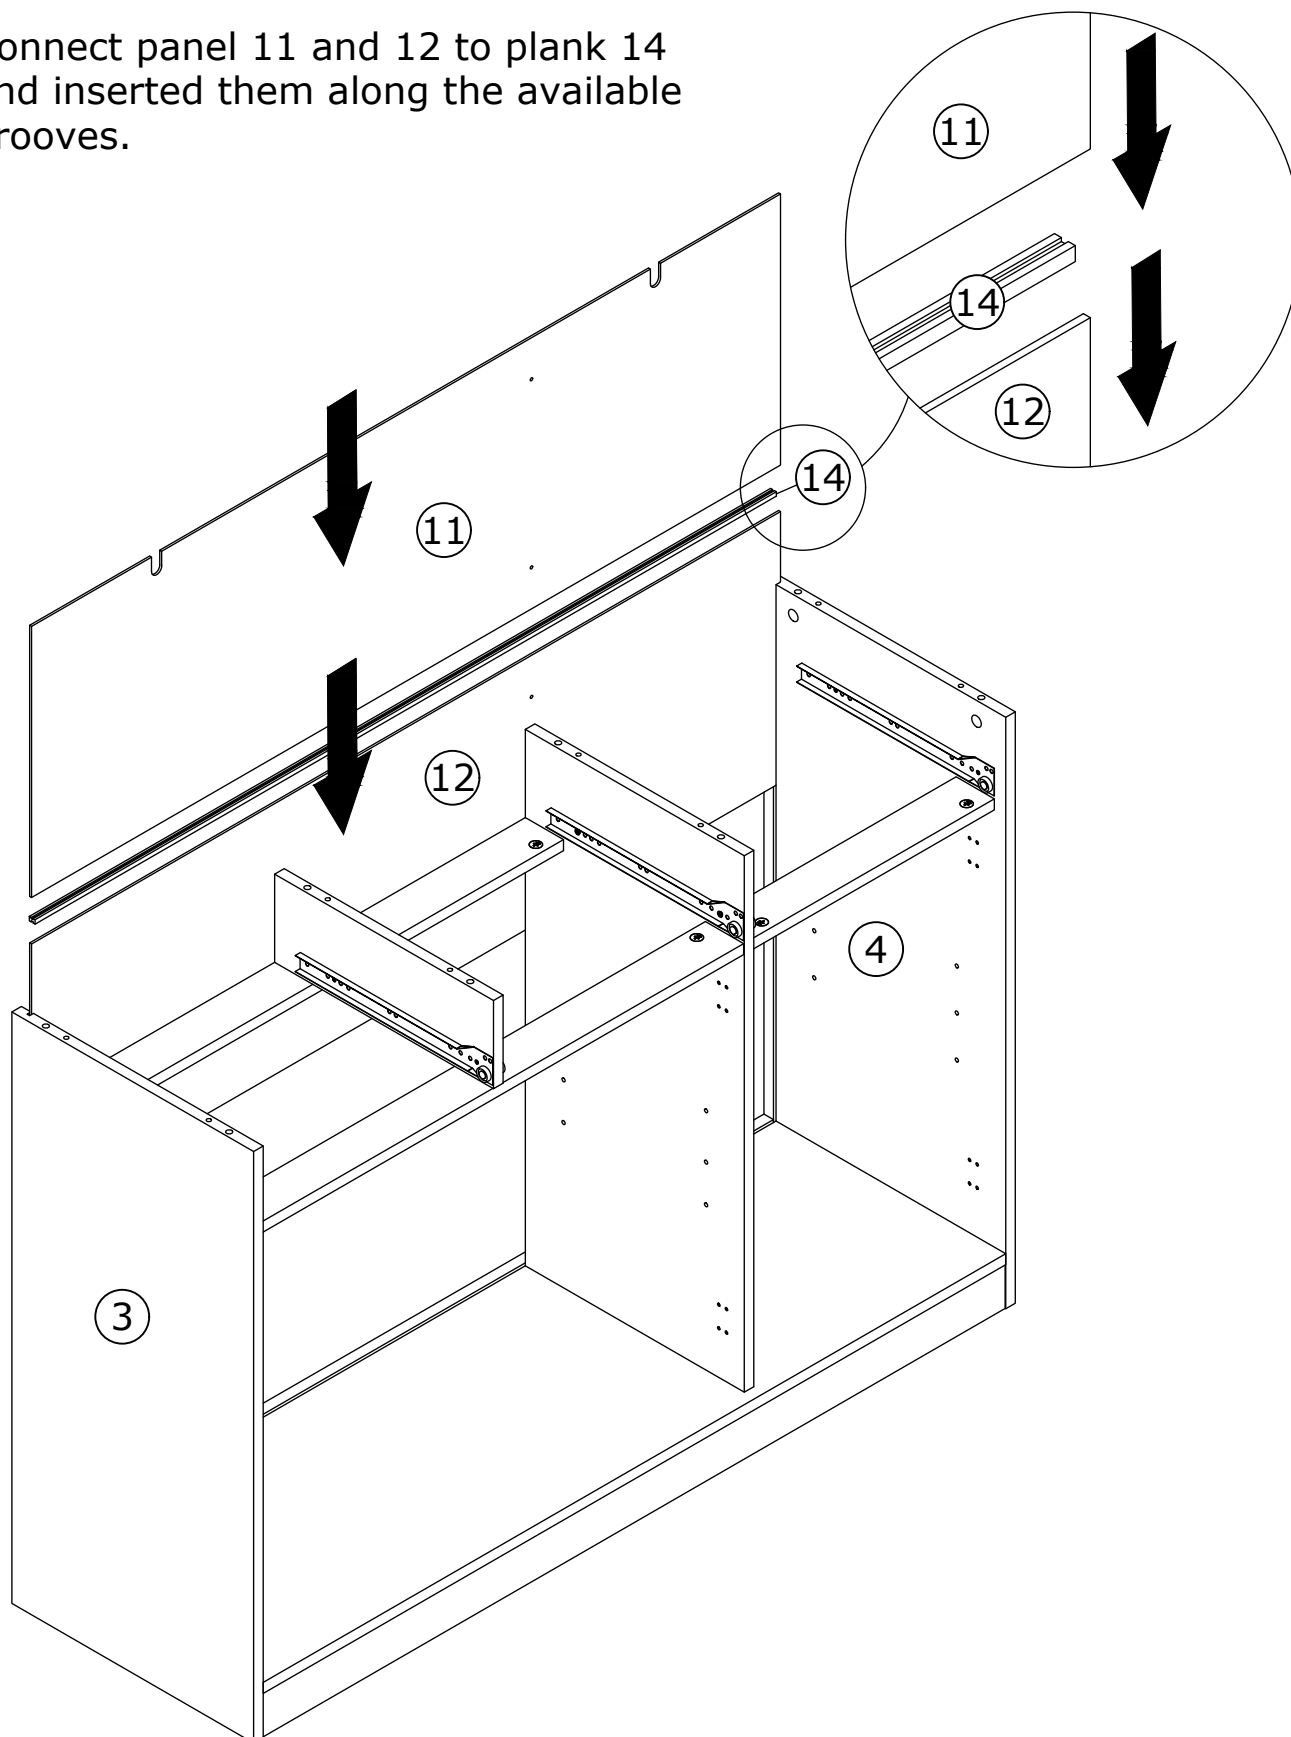


13

  A x 8  Ø 6 x 35mm	M x 2  Ø 3.5 x 12mm	N x 2 	
--	--	--	---

 
 
Attach parts (N) to panel 1 using screws (M) as shown, screw eccentric rod (A) into panel 1.

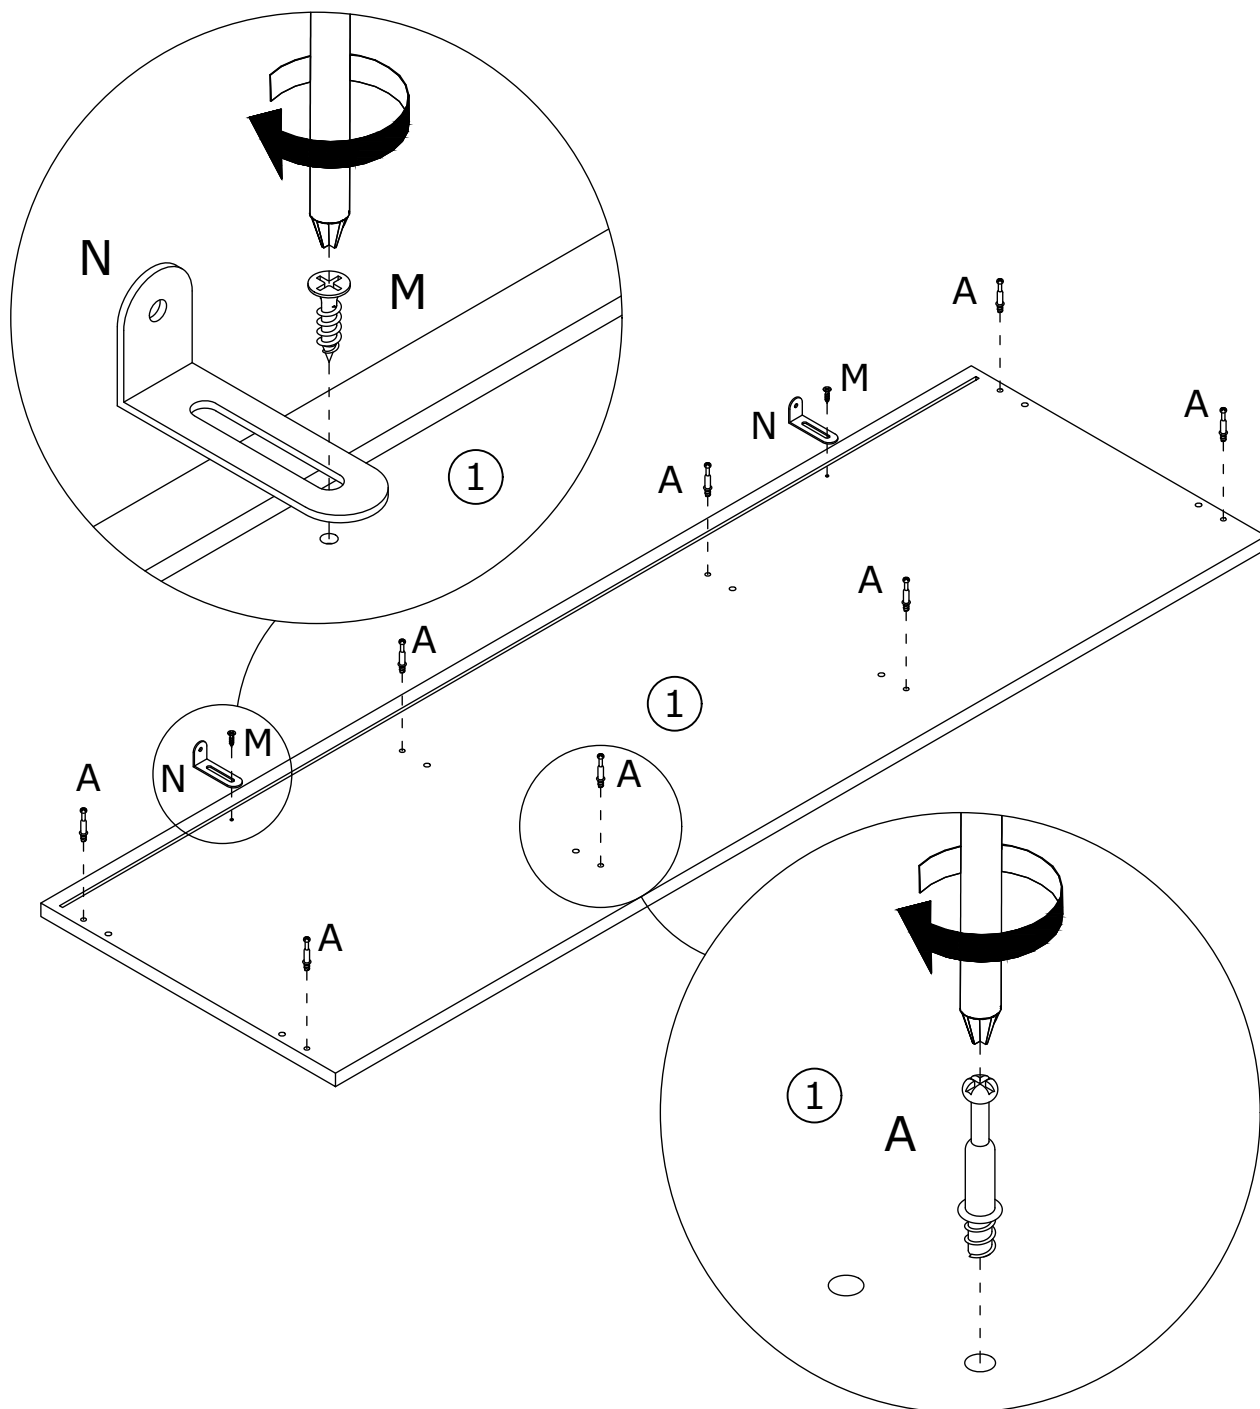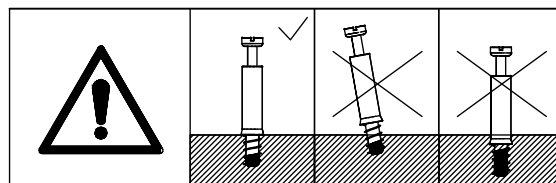

14

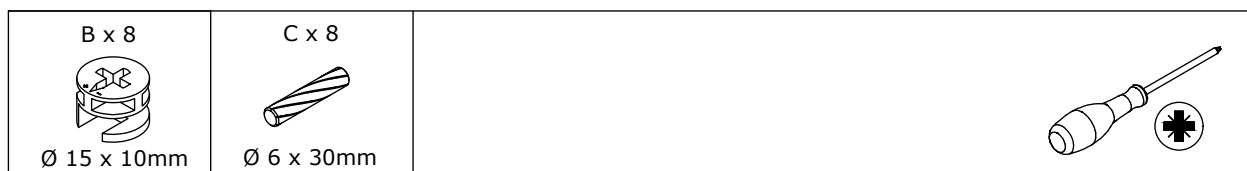 

  Attach panel 1 to the mounting unit using the wooden dowel (C) and add the cam lock (B) to tighten in a clockwise rotation.

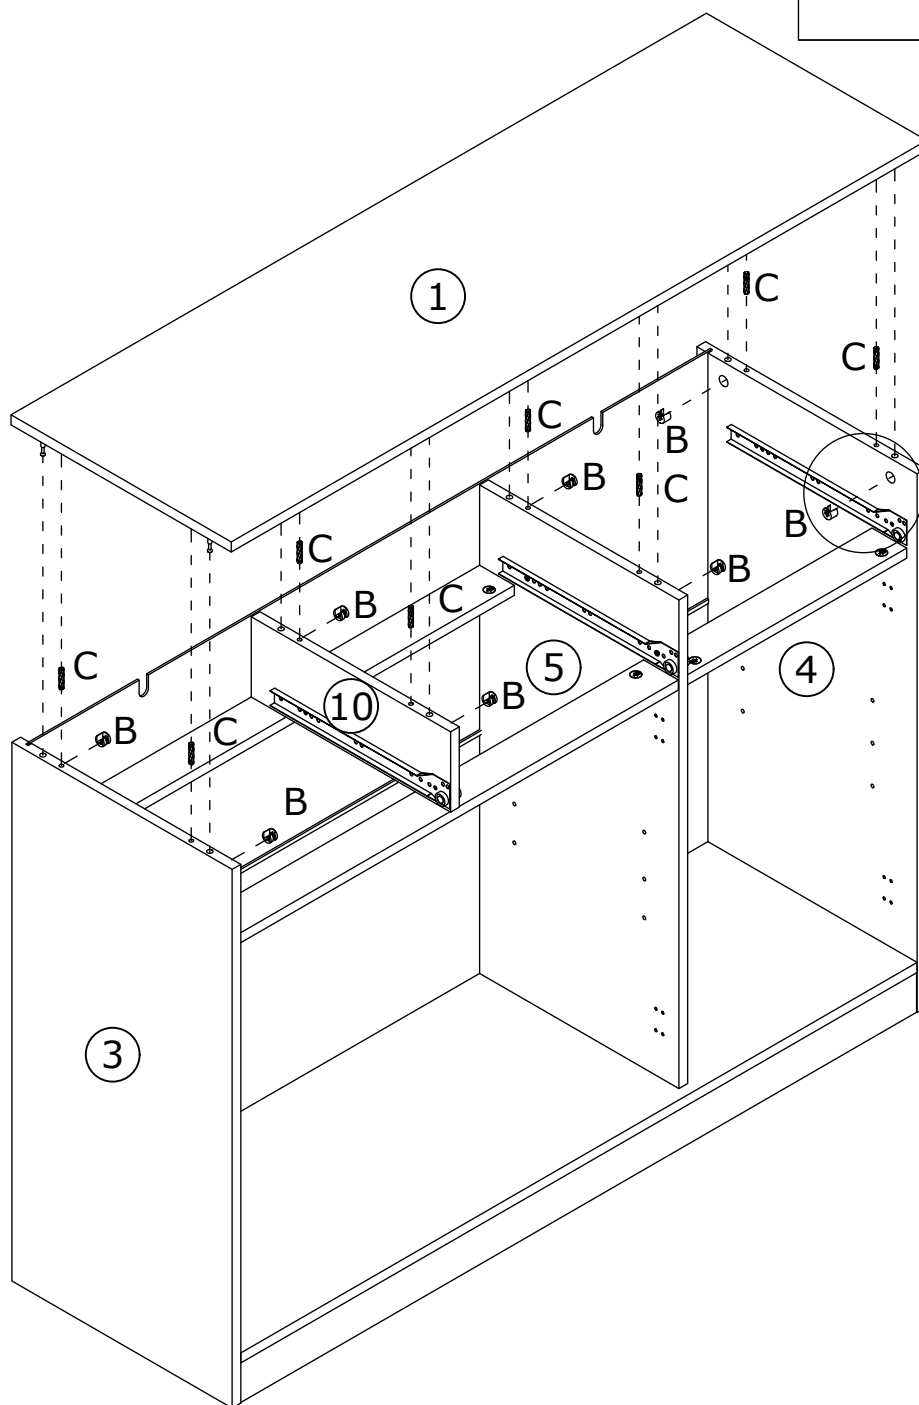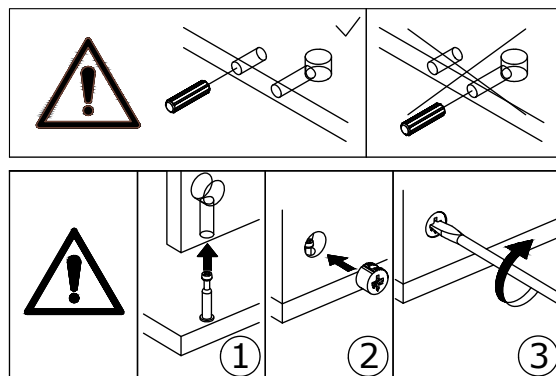


15



R x 4




 
Ø 3 x 14mm



  
Attach panel 11 and panel 12 to panel 5 using screws (R).

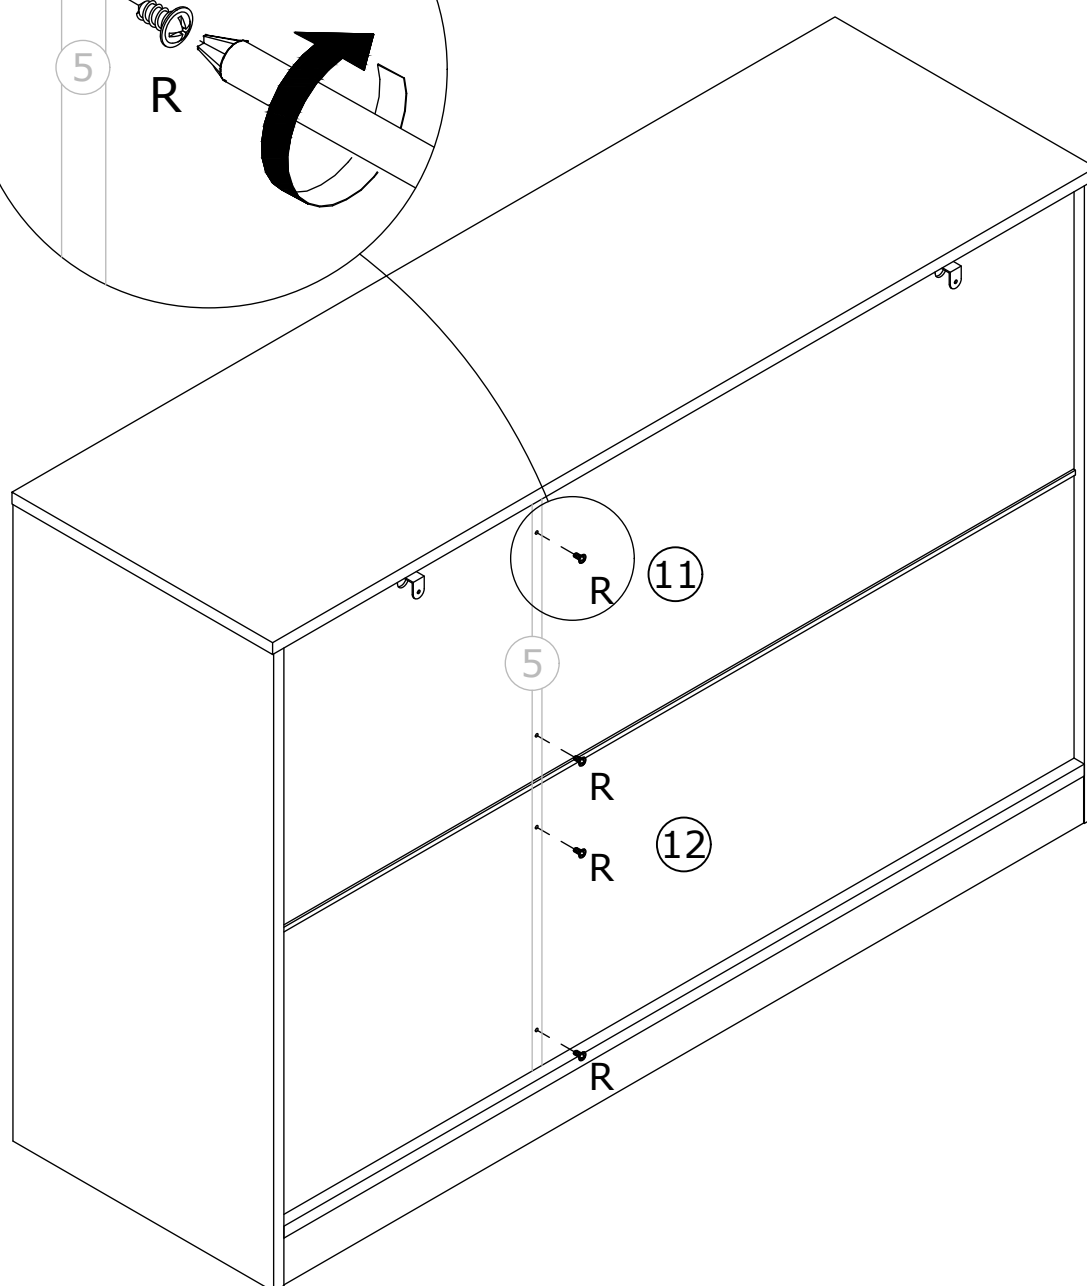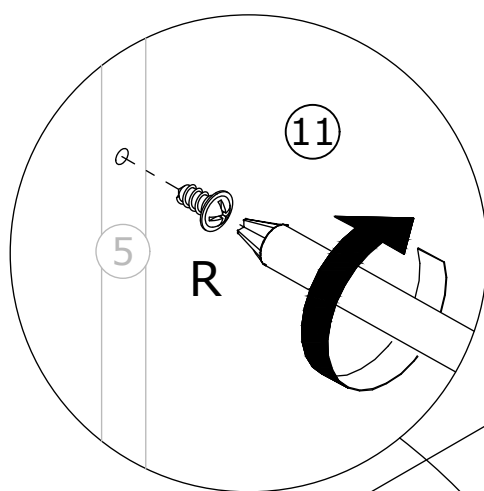

16

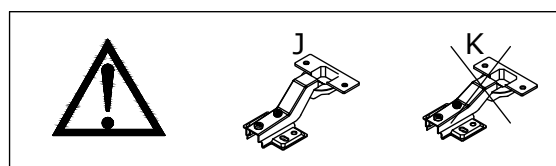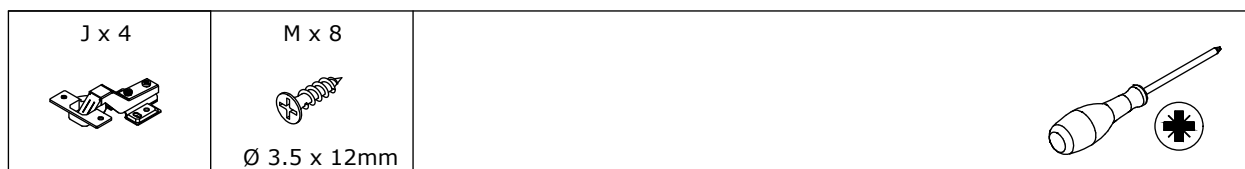  

 Fix hinge(J) to panel 15 using screw(M) as shown.
Please note, the product includes two types of hinges. Follow the steps to use the correct hinges, otherwise the door panels will not align.

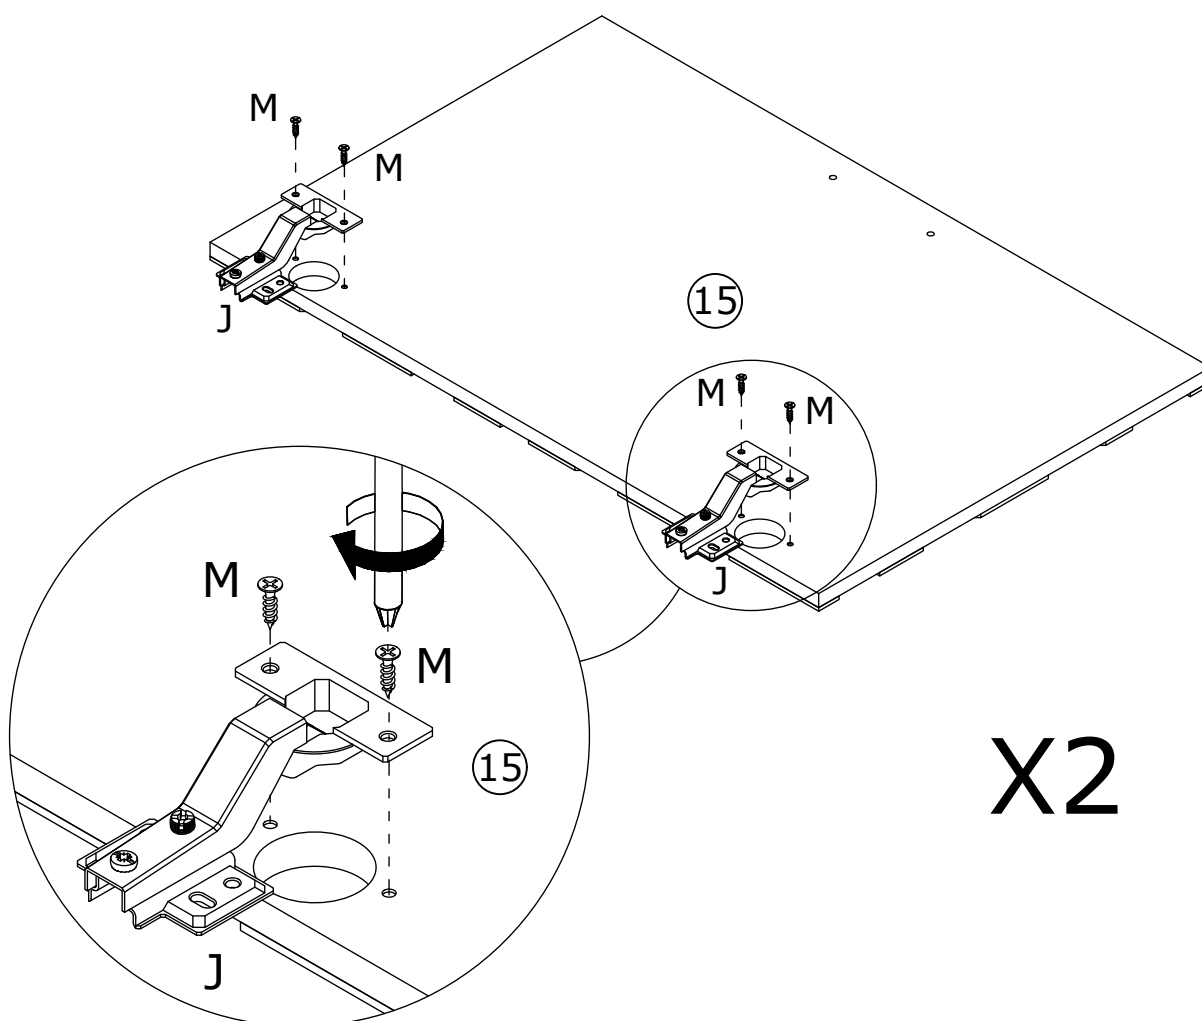

17

 
 
H x 8




M x 16




Ø 3.5 x 12mm

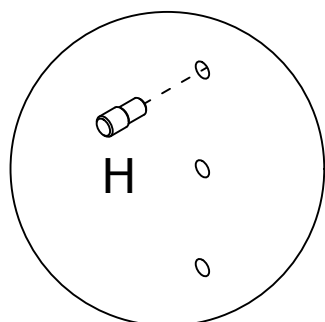


OR

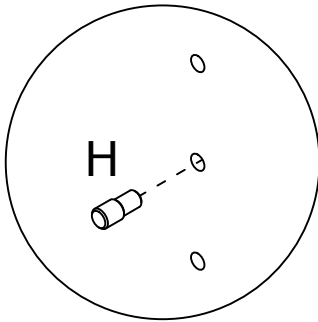 



OR

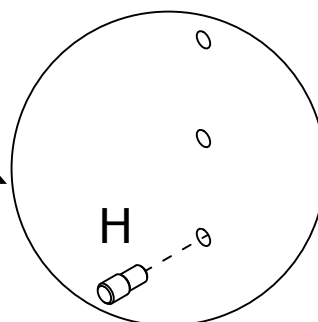 

 
Attach panel 15 to panel 3 and 4 by fixing hinges using screws (M) as shown.

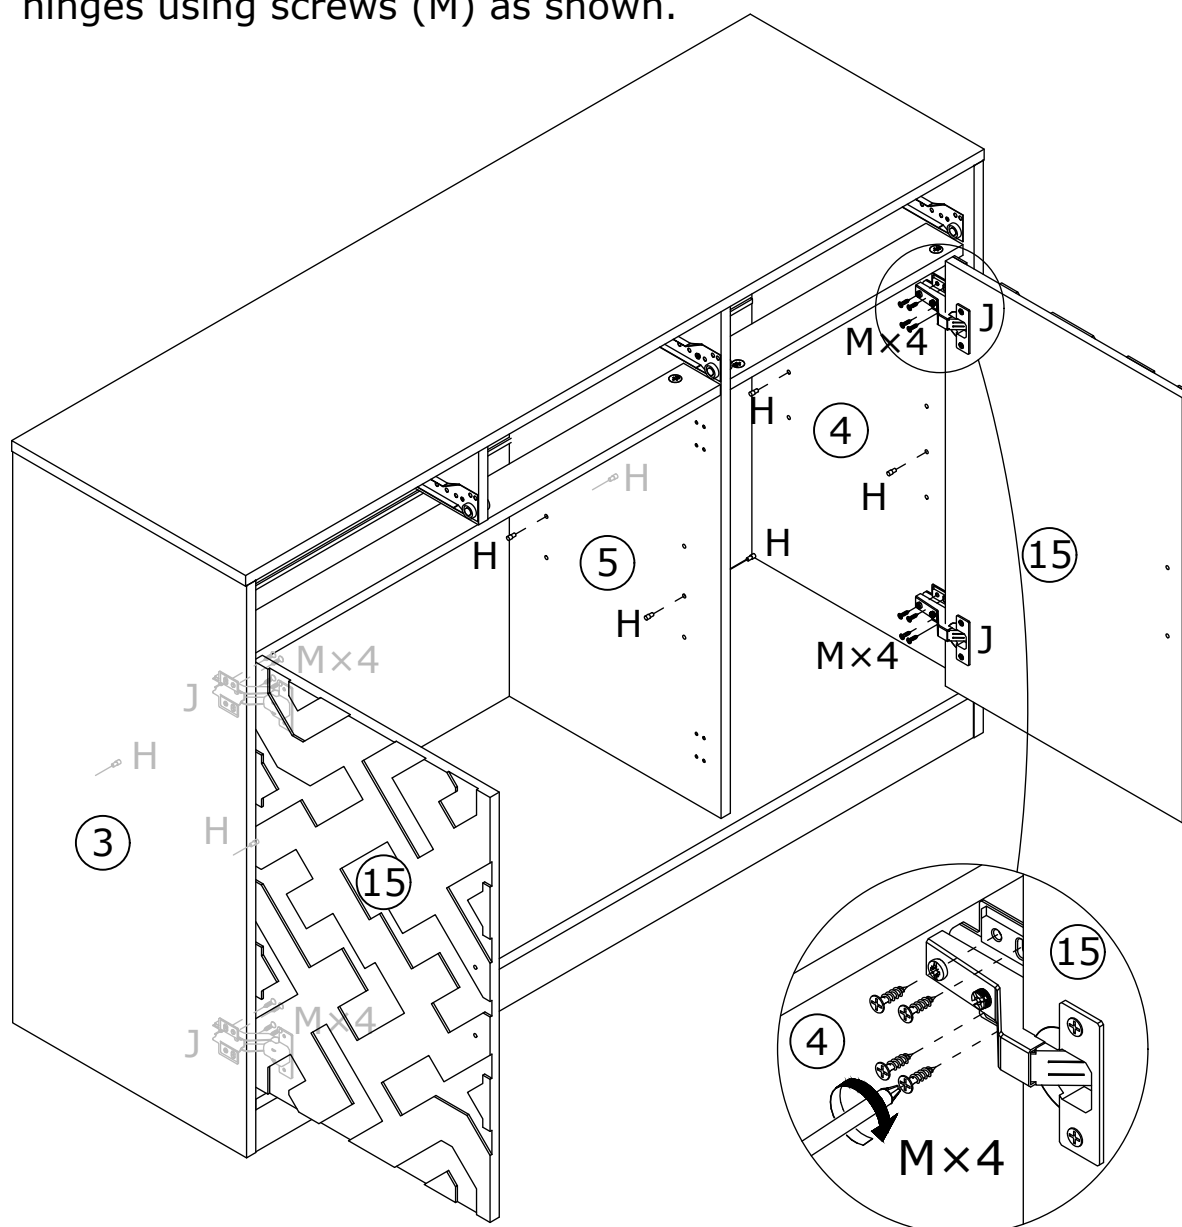

18

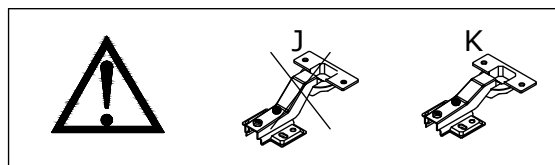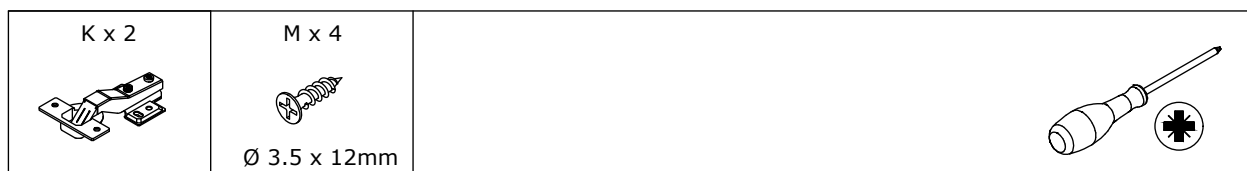  

 Fix hinge(K) to panel 15 with screws (K).

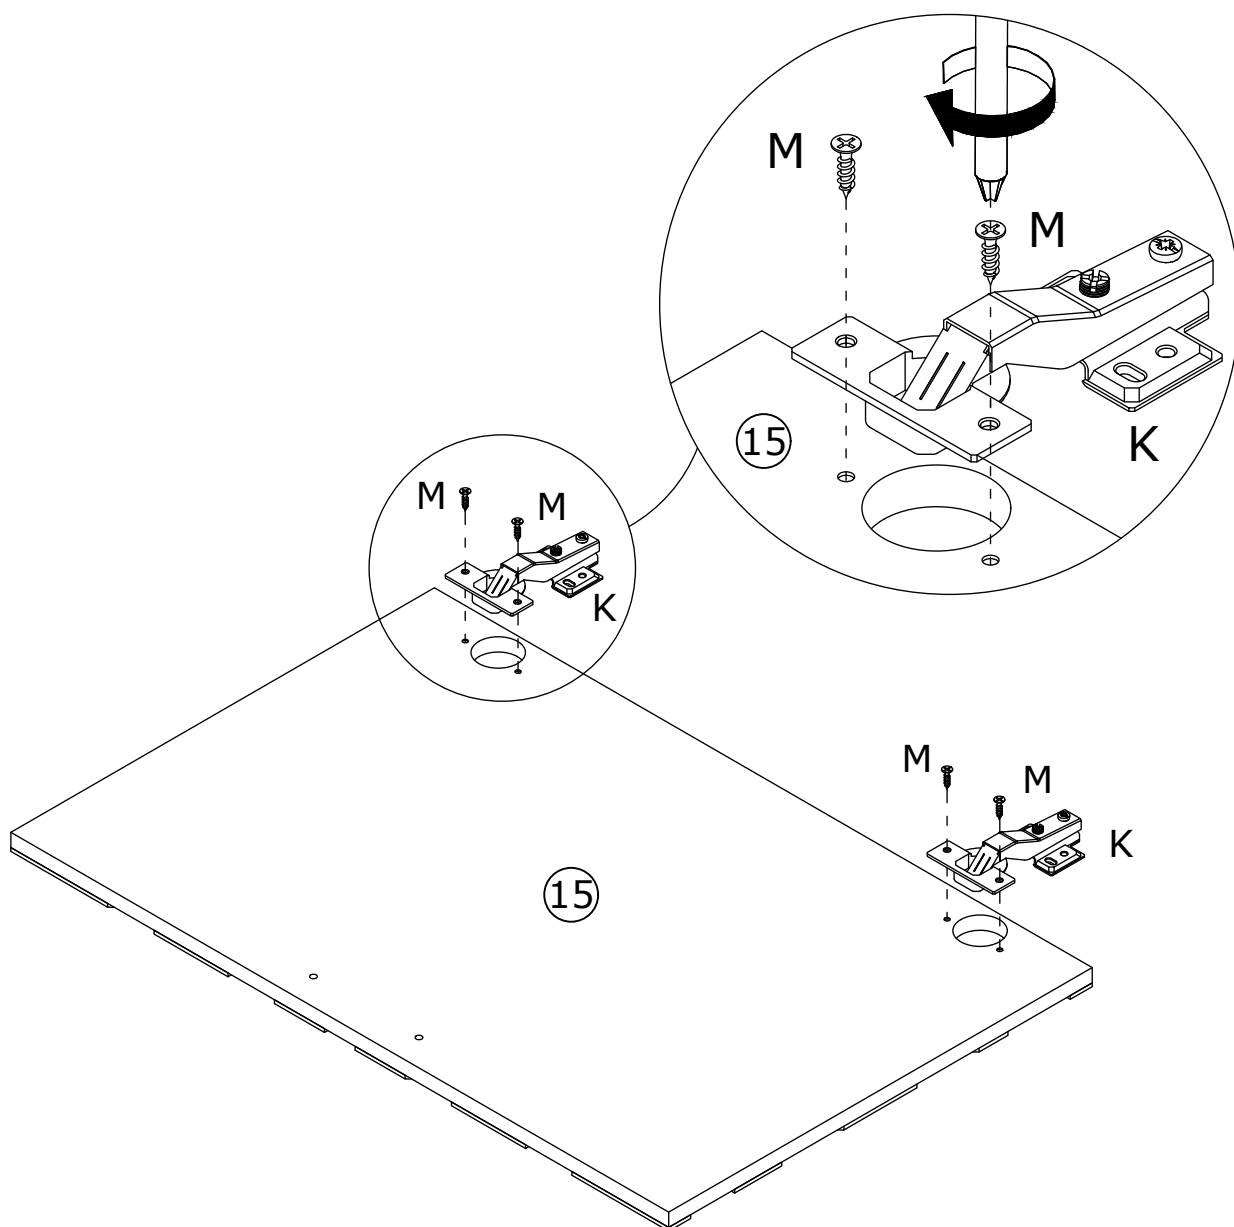


19


M x 8



 
Ø 3.5 x 12mm



 
Attach panel 15 to panel 5 by fixing hinges using screws (M) as shown.

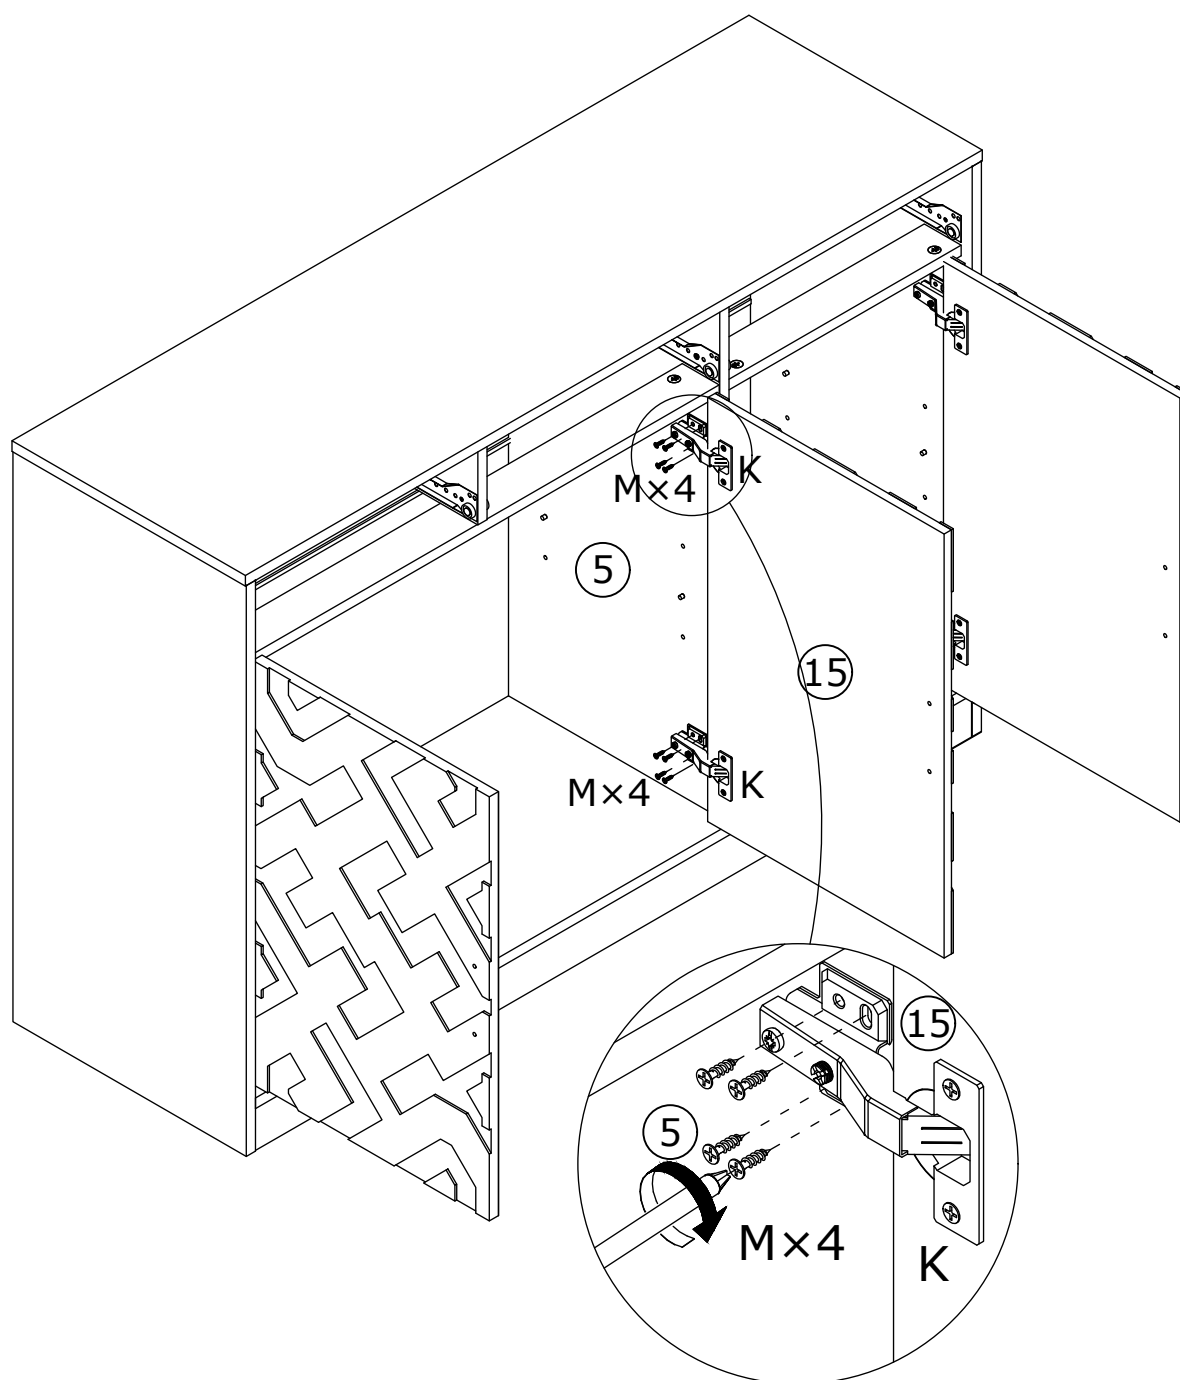

20

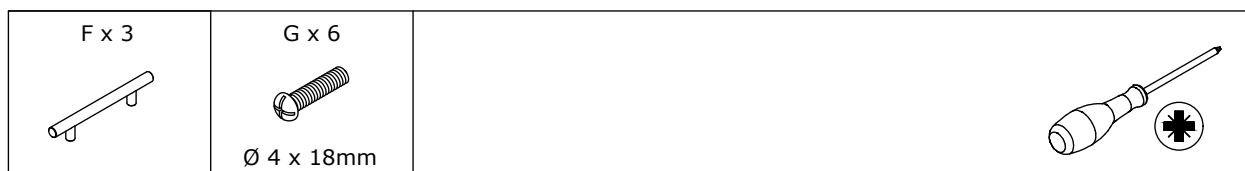 

 Fix handle(F) to door panels using screws (G) as shown.

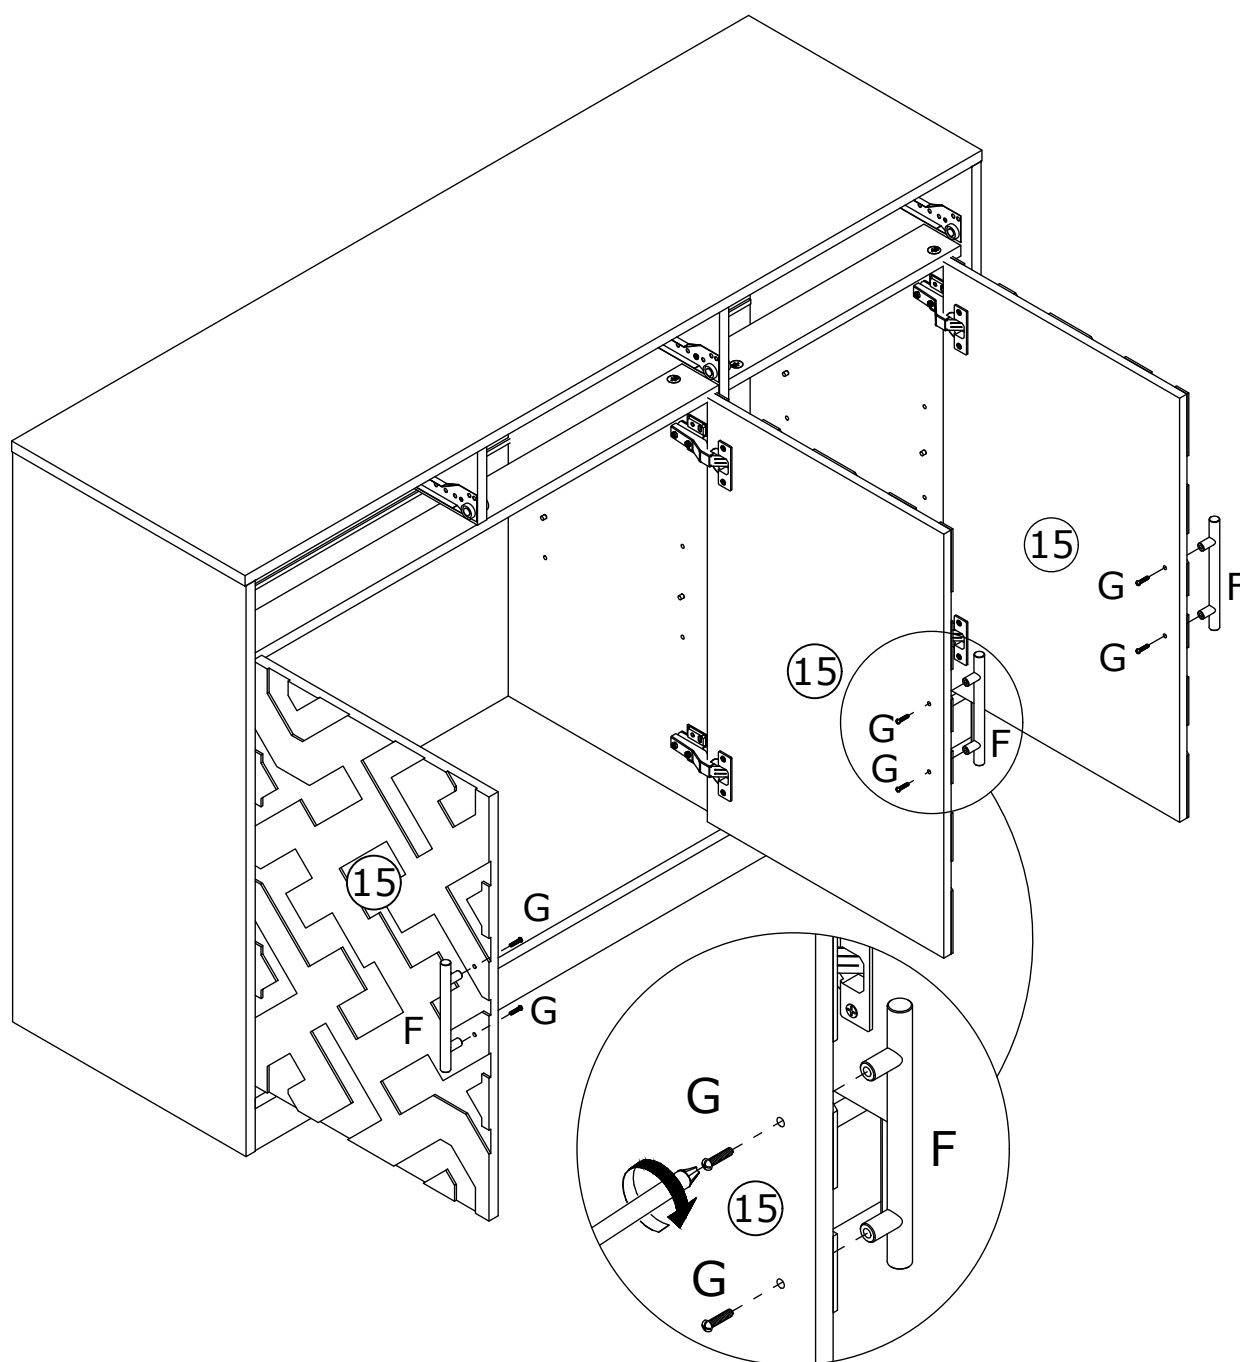

21

 
S x 8




T x 8



Ø 3 x 14mm



 Insert buckle(S) into back slots and fix with screw(T).

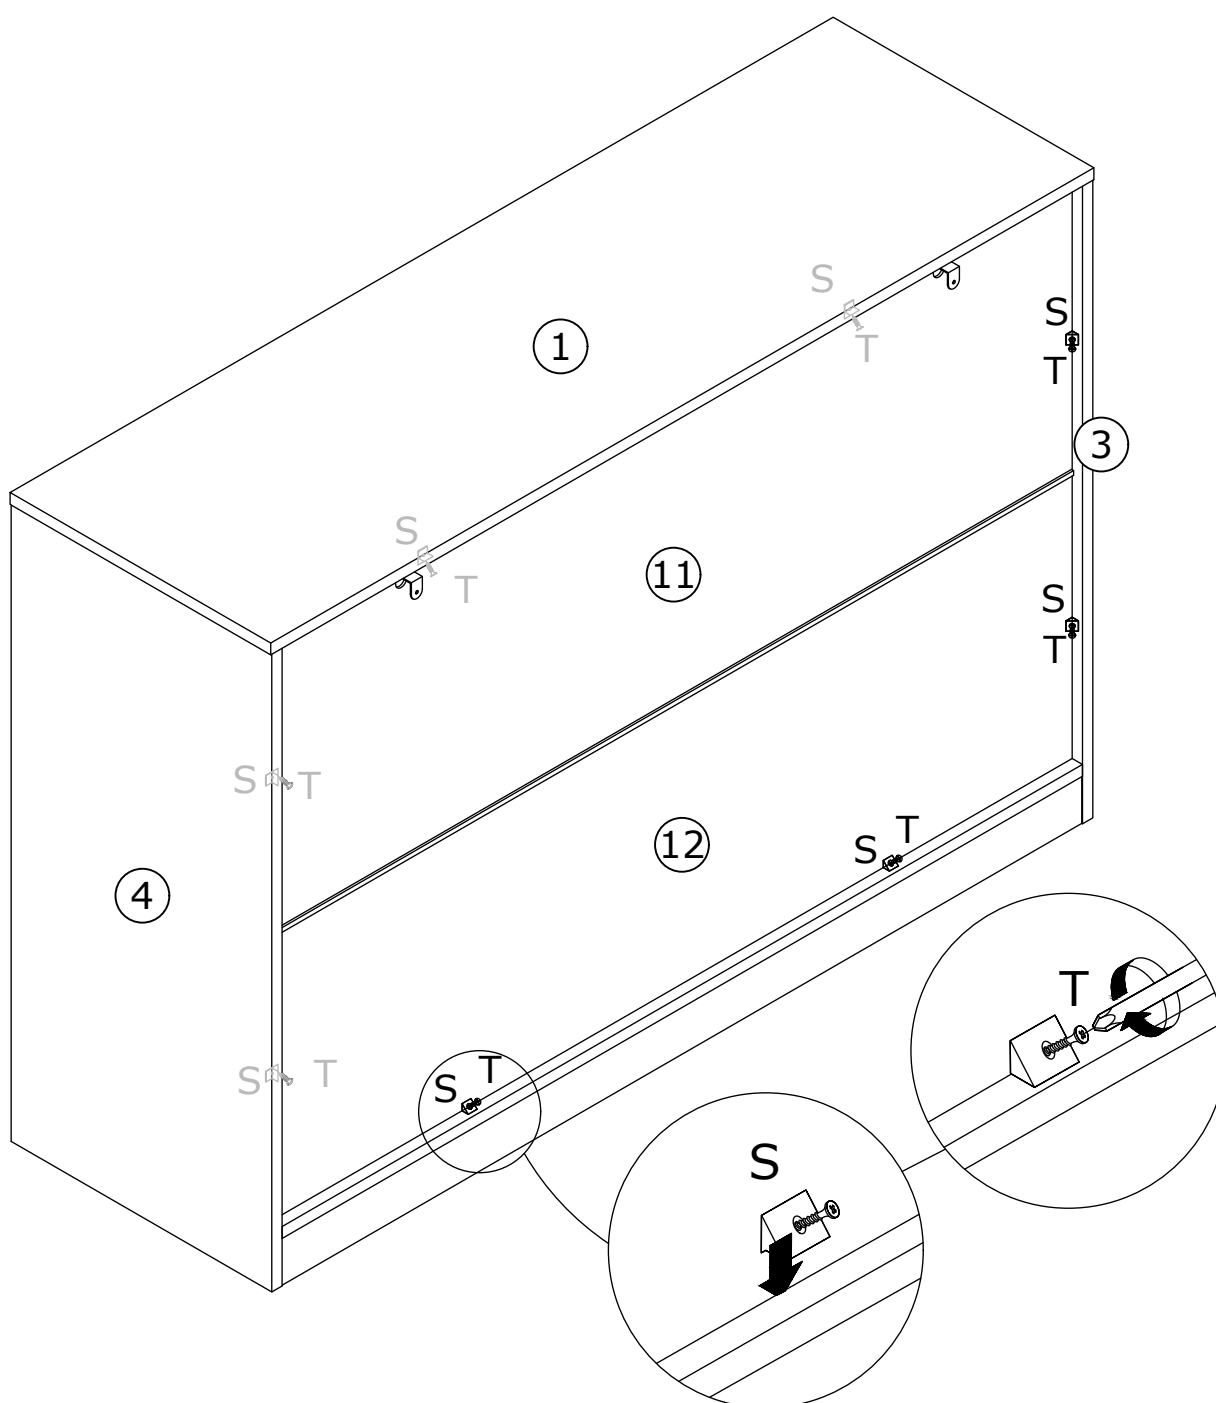


22





P x 2



 
Q x 2




Ø 3.5 x 35mm

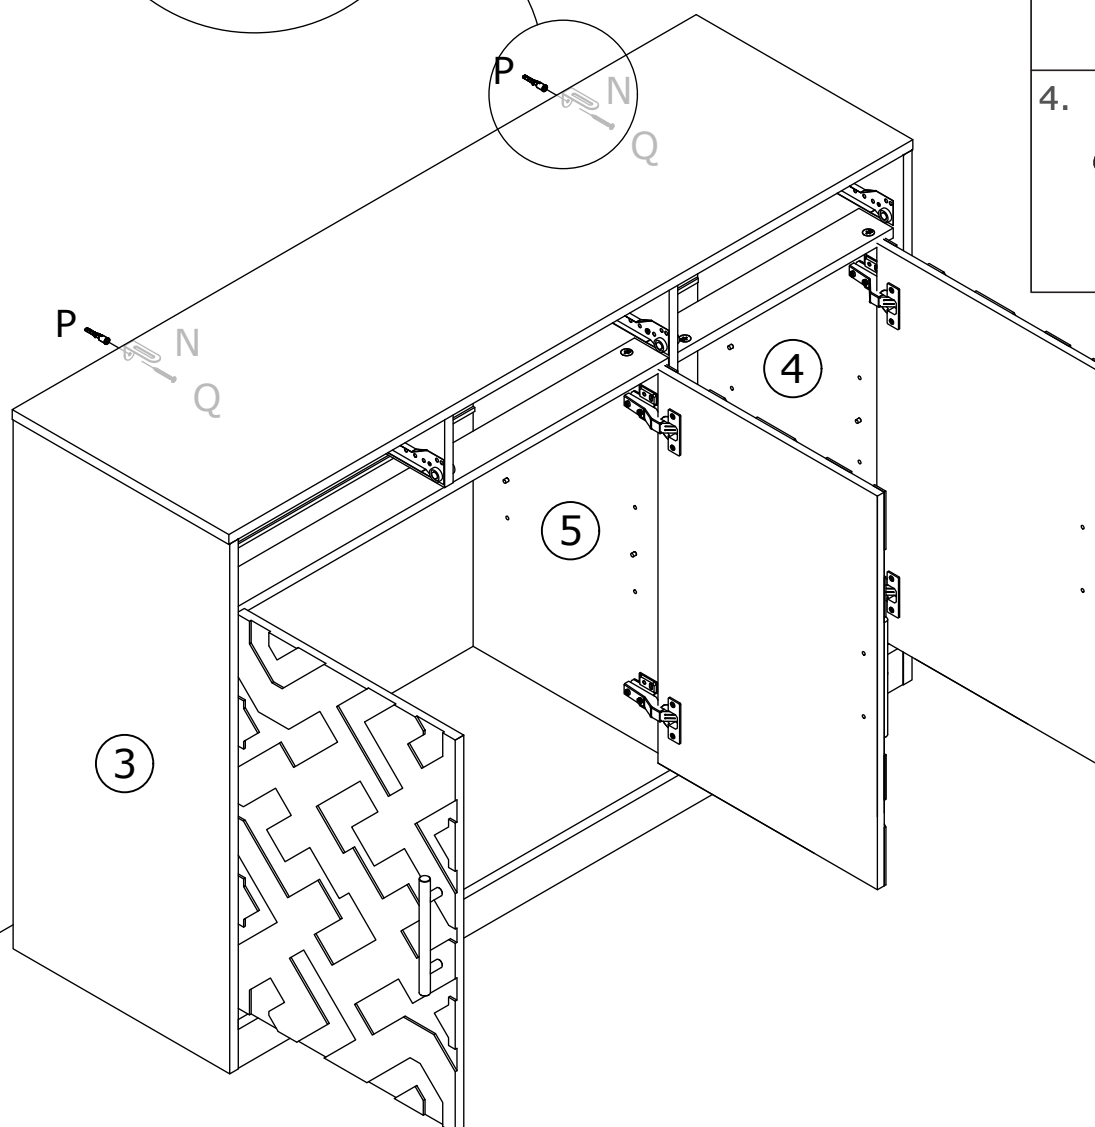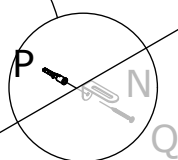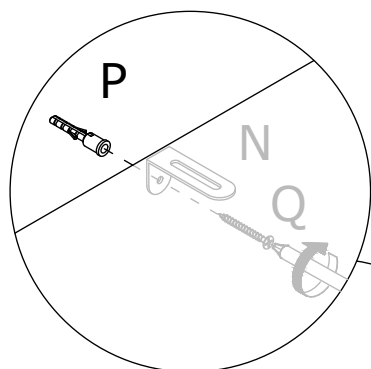    

 
1.

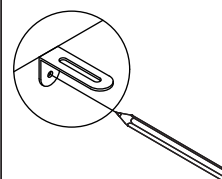

 
2.

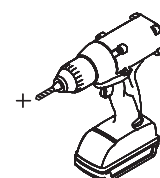


 3.

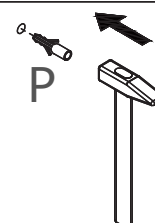


  
4.

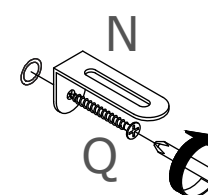

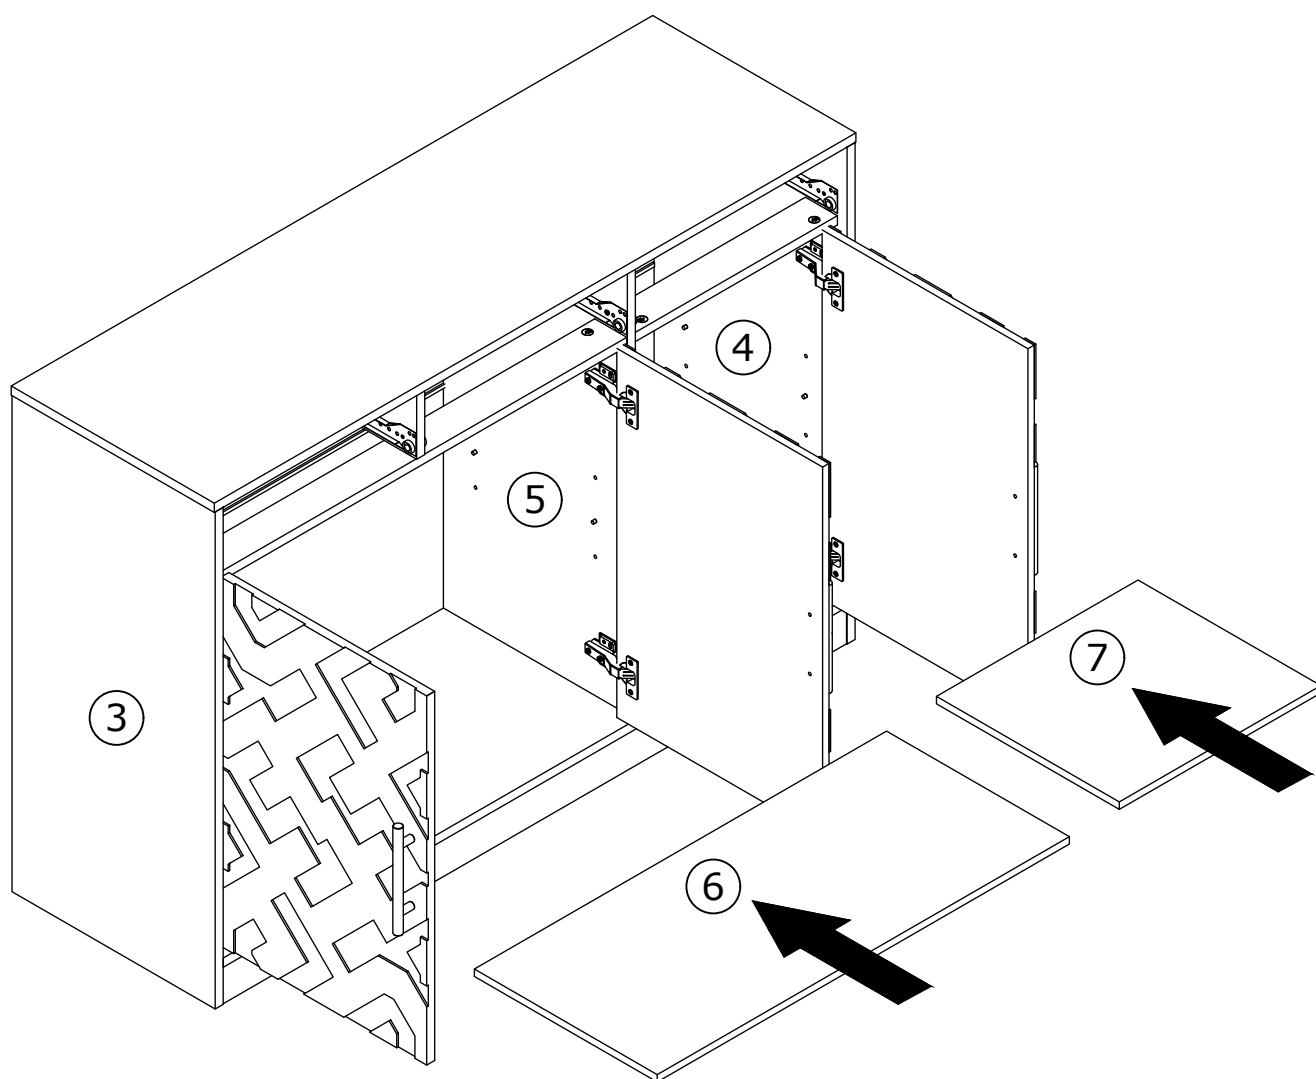



24

 D x 12

  Ø 5 x 40mm



  
Attach panel 19 and 20 to panel 21 using screws (D).

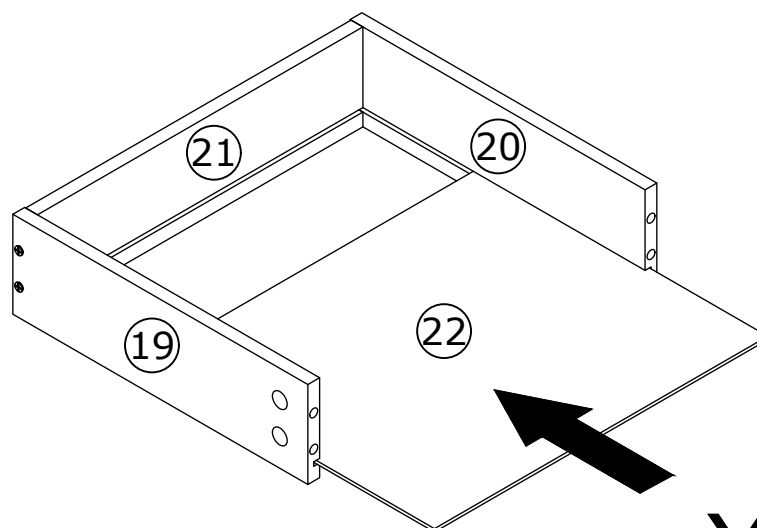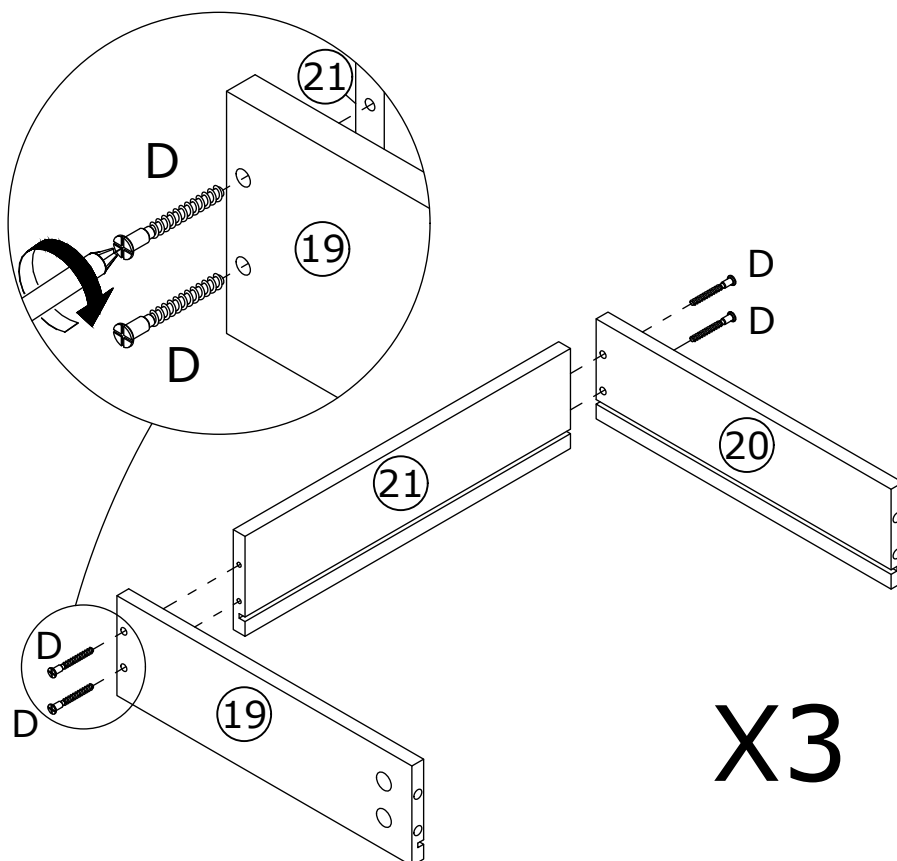Insert panel 22 along the available grooves as shown.




25





 
A x 12



Ø 6 x 35mm

 

    
 
Screw the eccentric rod (A) into panel 16, panel 17 and panel 18 as shown.

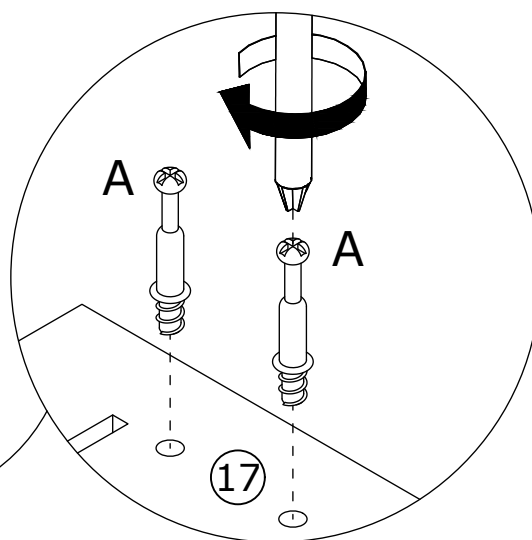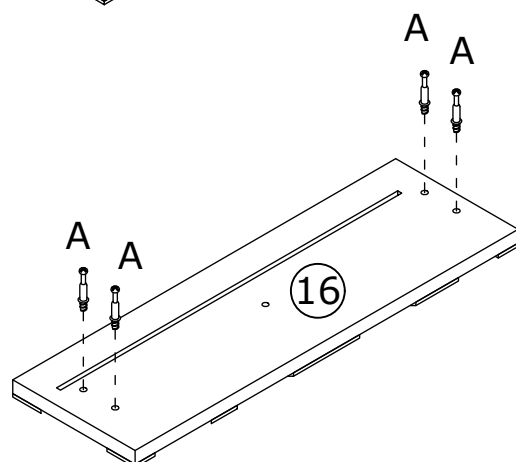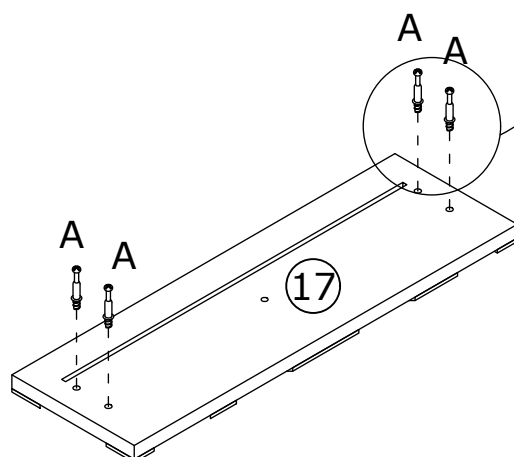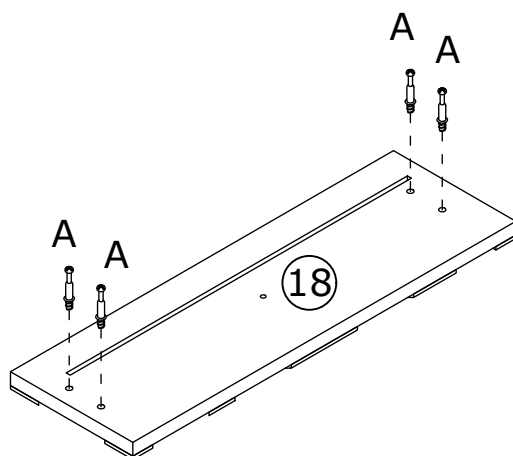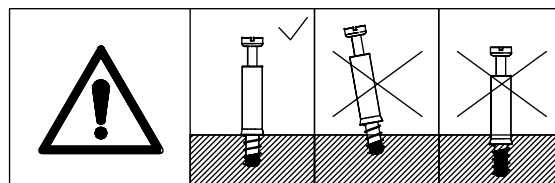


26

B x 12 Ø 15 x 10mm	E x 3	G x 3 Ø 4 x 18mm	
----------------------------------	--------------	--------------------------------	--




 
 
Attach panel 16, 17 and 18 to the drawer and add cam lock (B) to tighten in clockwise rotation.

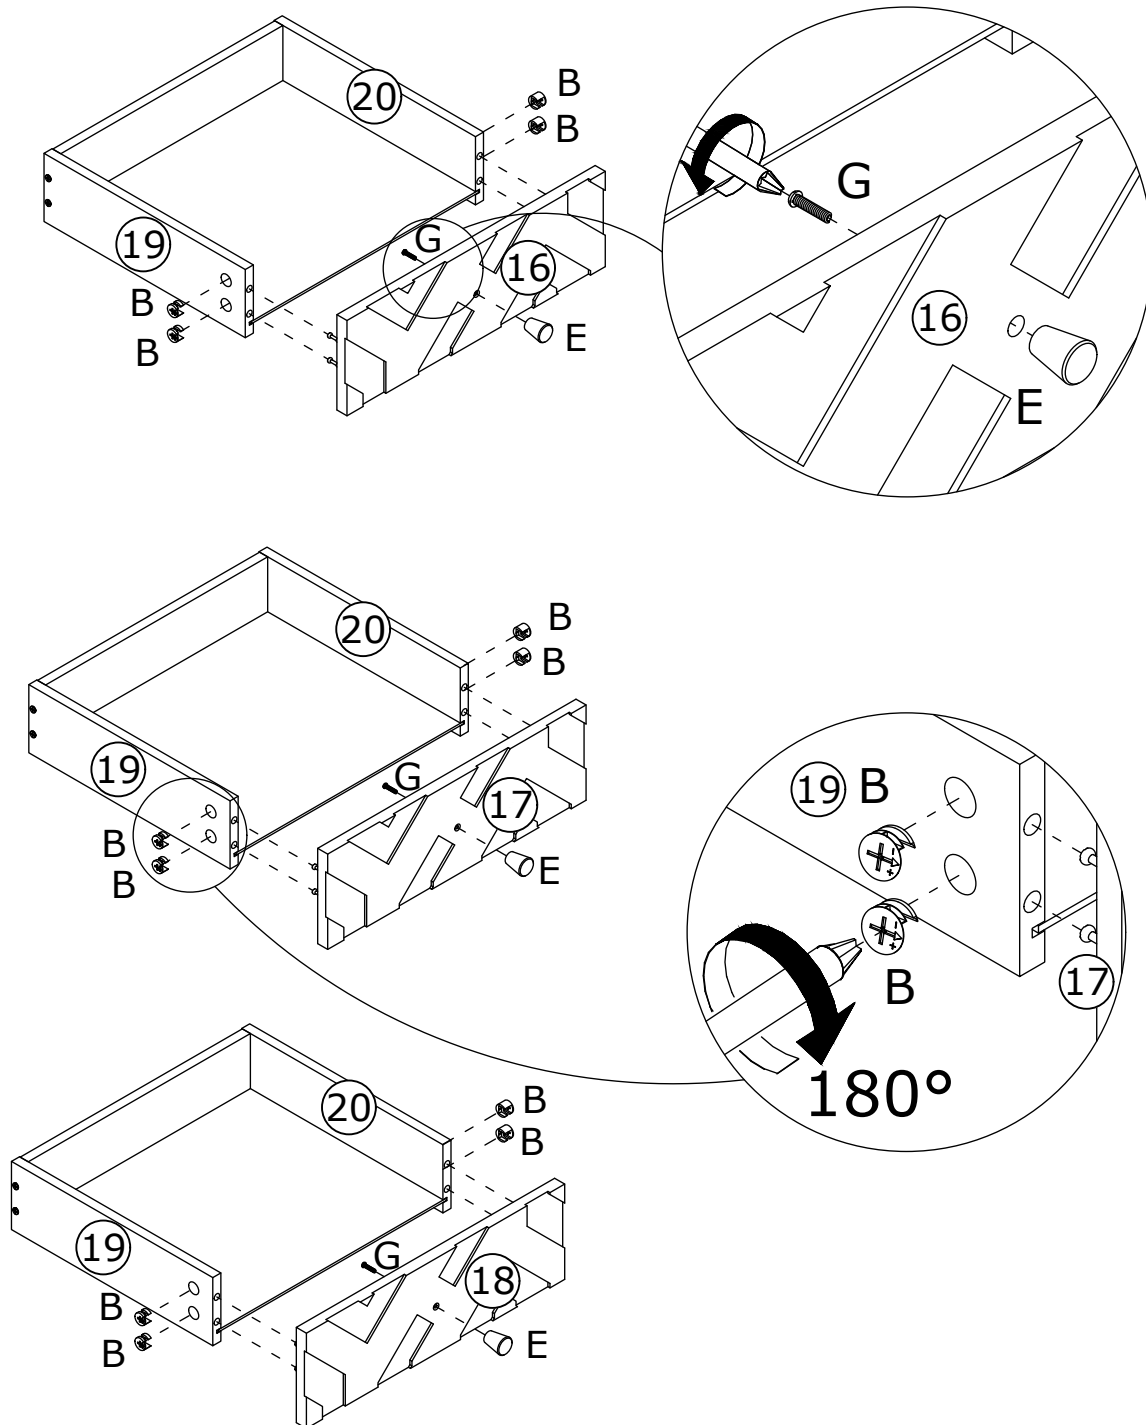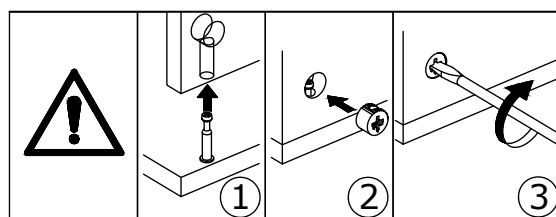



27

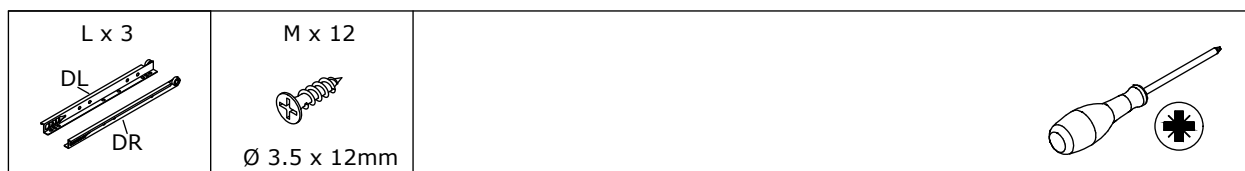 

       Fix slide rail (L-DR) (L-DL) to drawers using the screws (M) as shown.

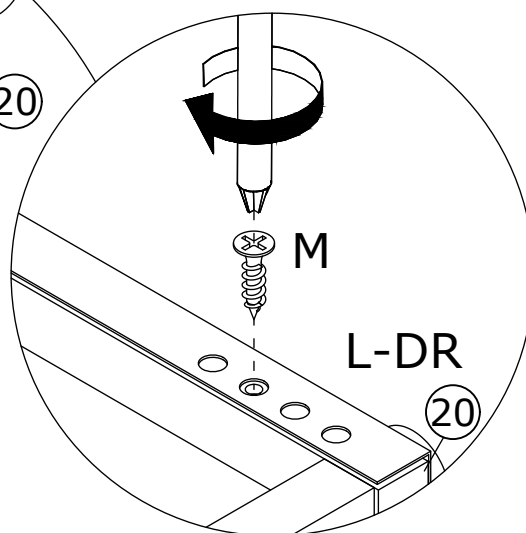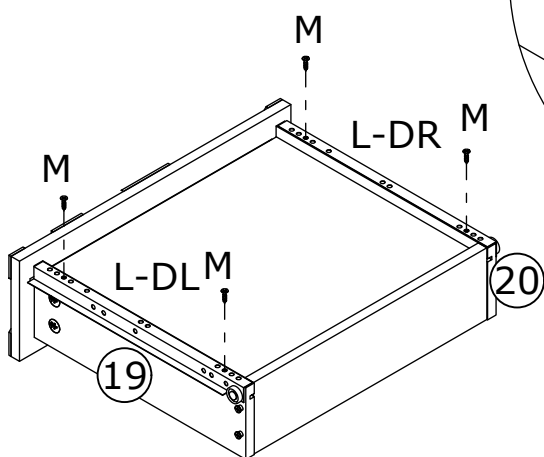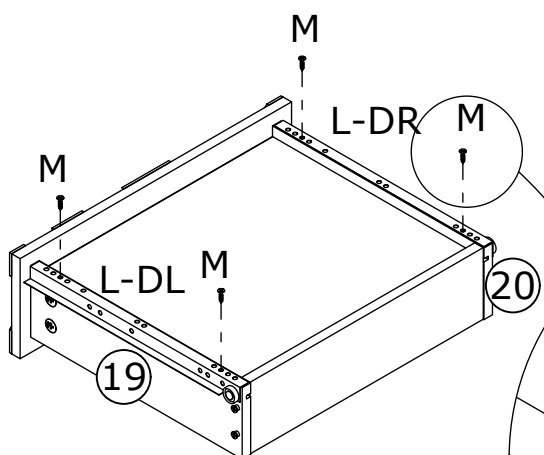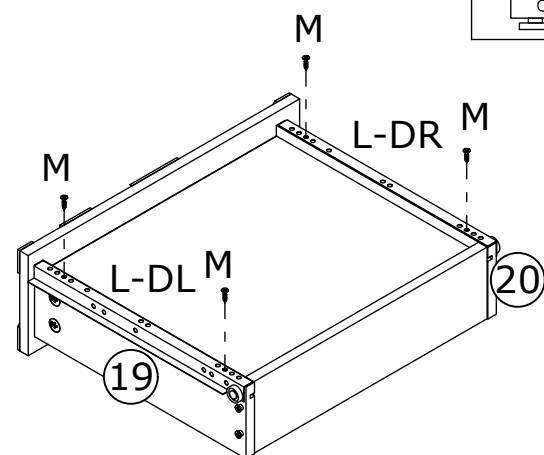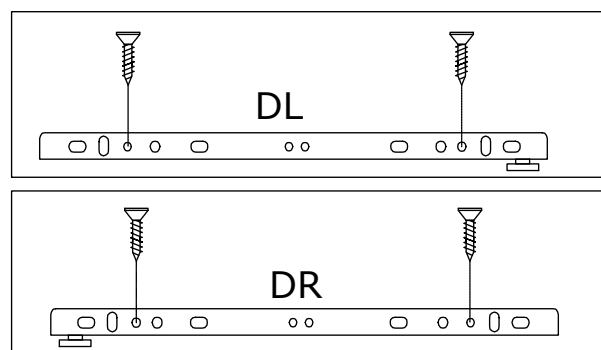


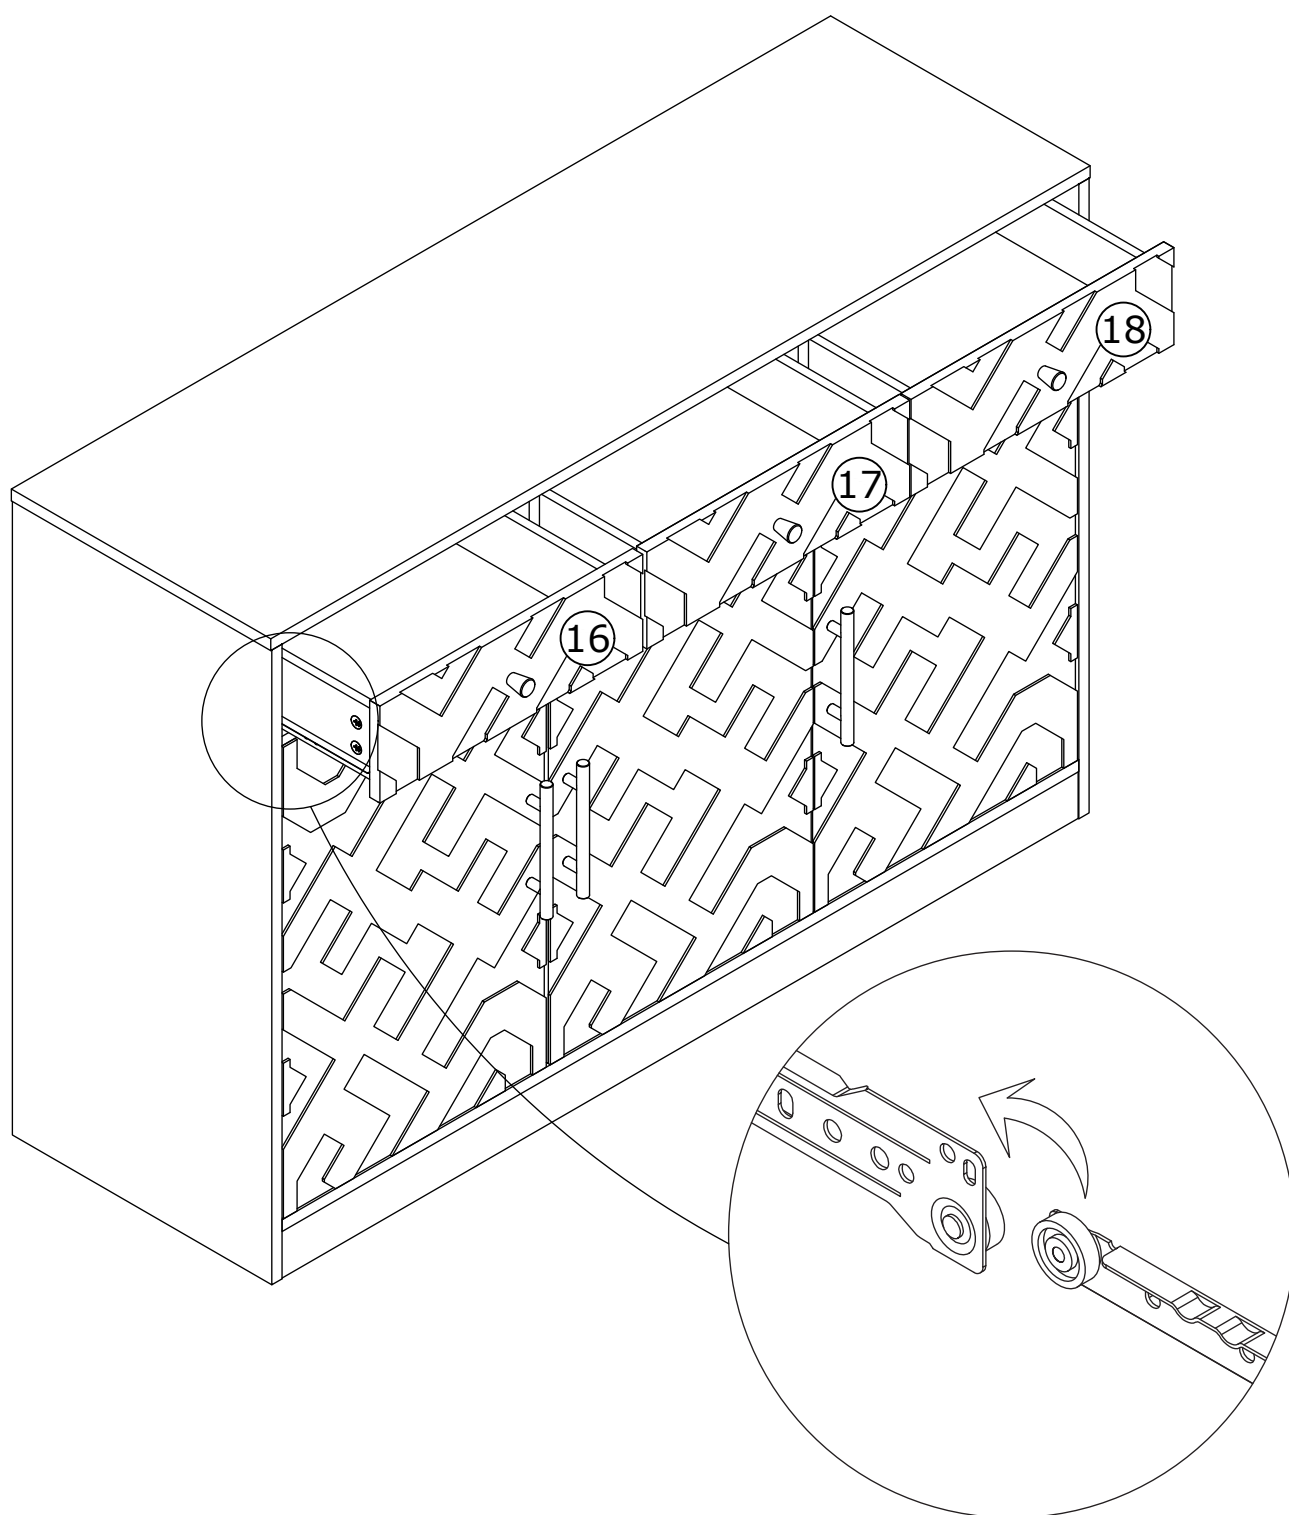





If doors are still not aligned if the hinges are properly correctly, please watch the video.

<https://youtu.be/n0Lb36SoODM>

  
If there is misalignment after you install, adjust the screw to the best condition

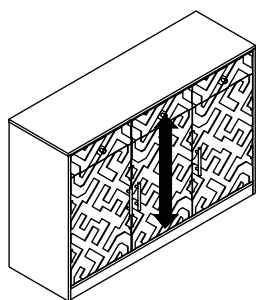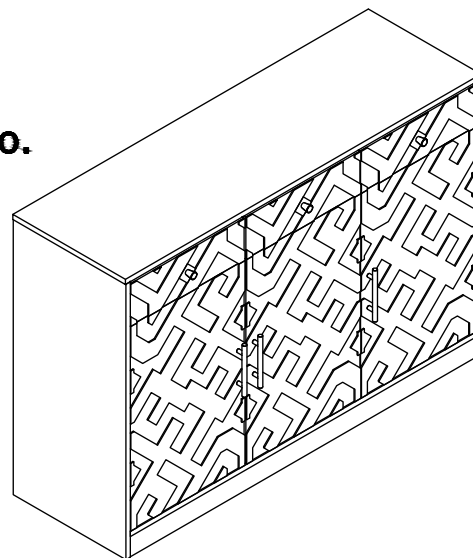



I

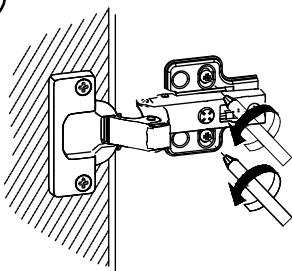 


II

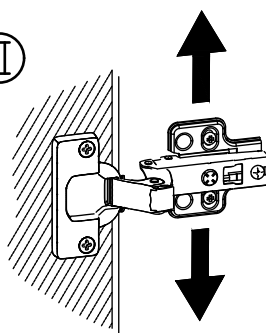 


III

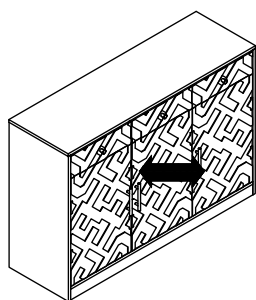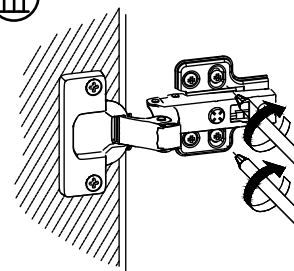  



I

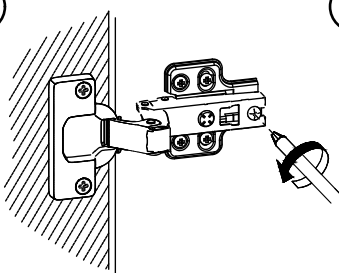 


II

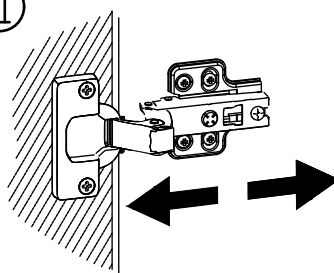 


III

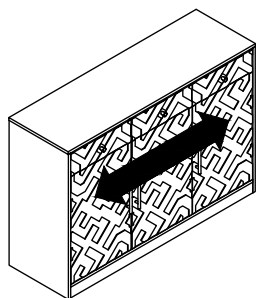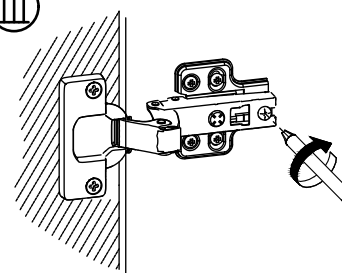  

I

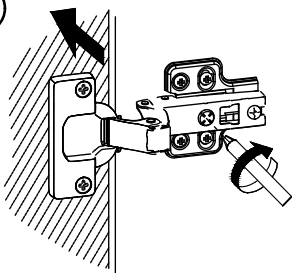 

II

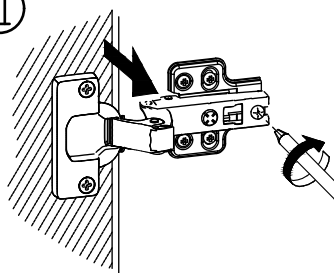 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068