 
 
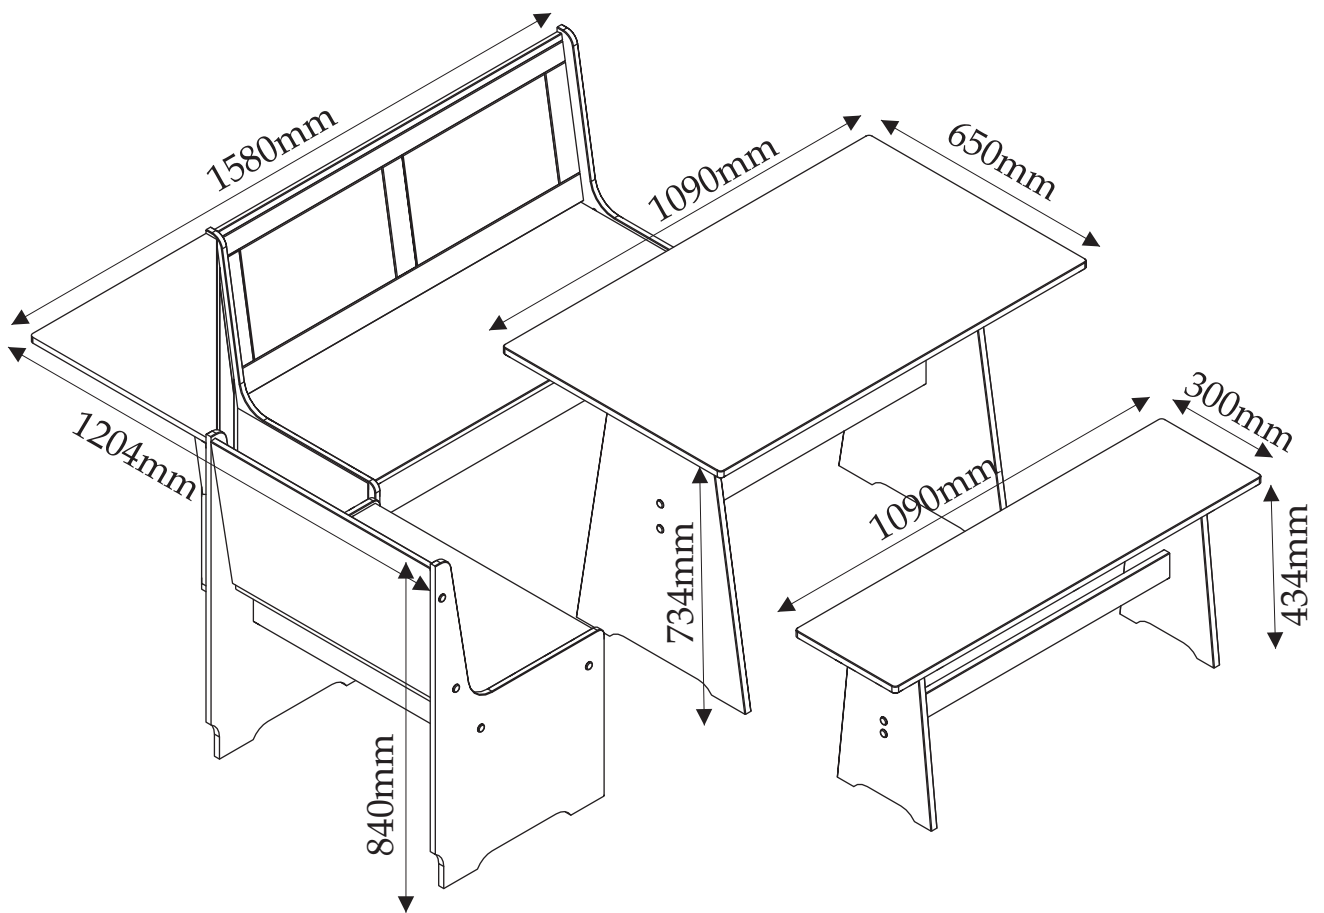 
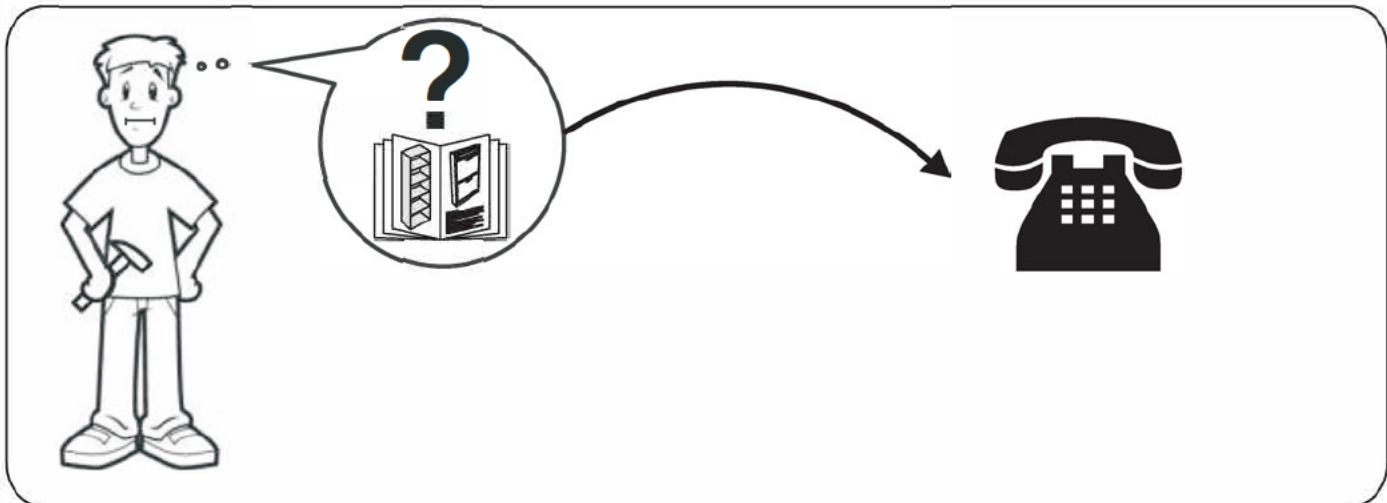 
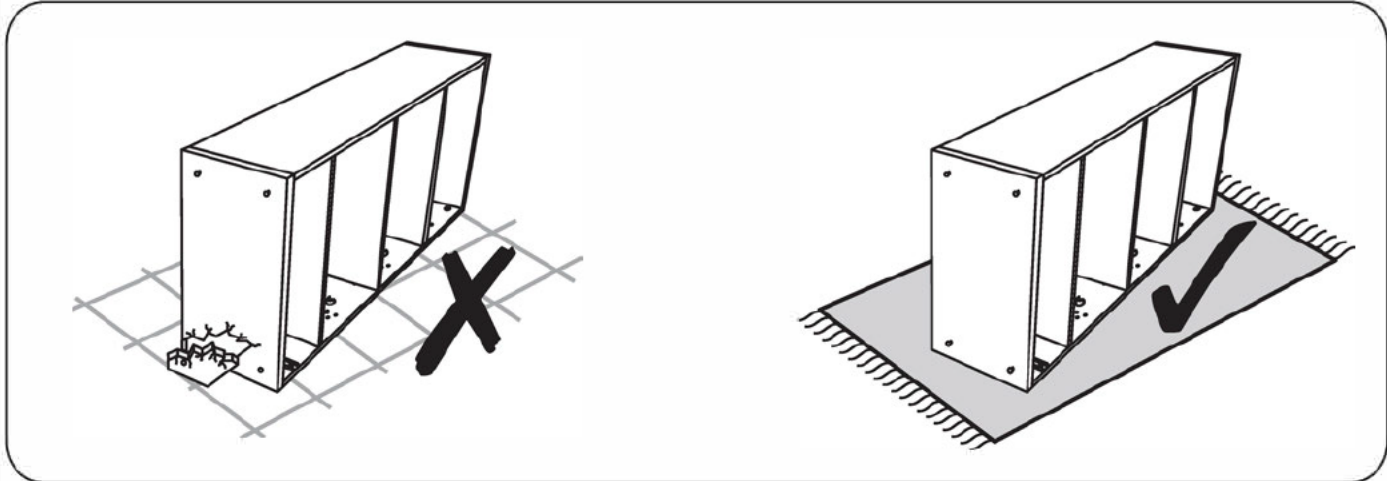 


Corner Dining Set

Assembly Instructions

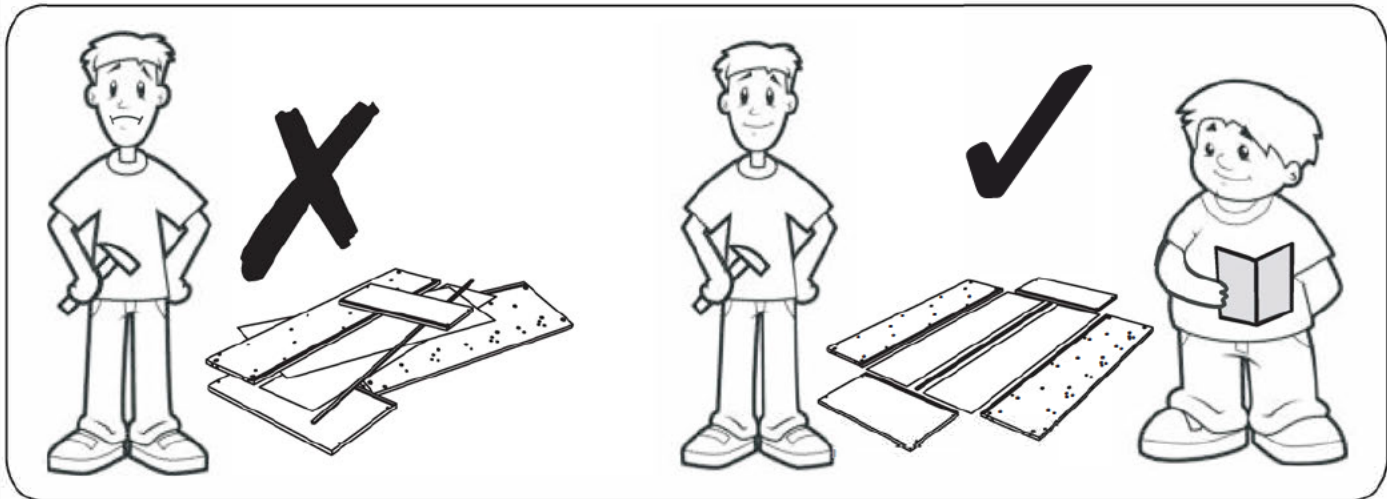

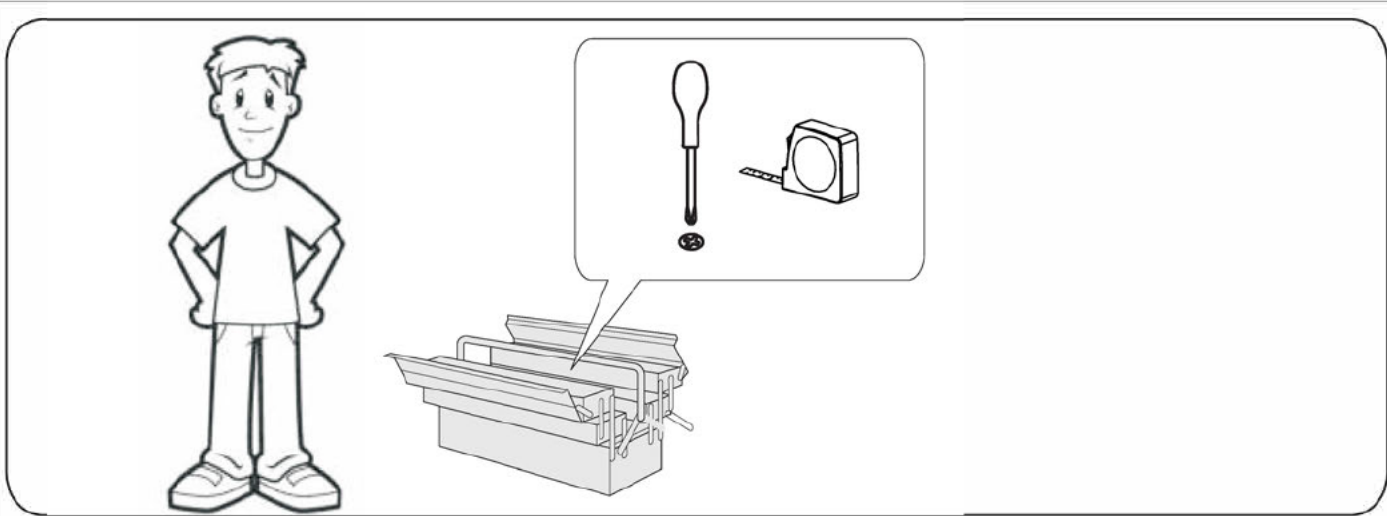

HARDWARE



 
A
3,5x14mm
10x




B
8x30mm
25x



C
18x18mm
5x




D
4x30mm
26x

 

E
7x50mm
24x



 
F
4x




G
10x30mm
4x



 
H
4x30mm
8x




I
4,5x60mm
4x

 

J
4,5x40mm
10x

 


K
4x20mm
10x

 

L
8x50mm
8x



 M
7x50mm
4x



N
4x

 
 
 


O
16x



P
4x40mm
1x

PARTS

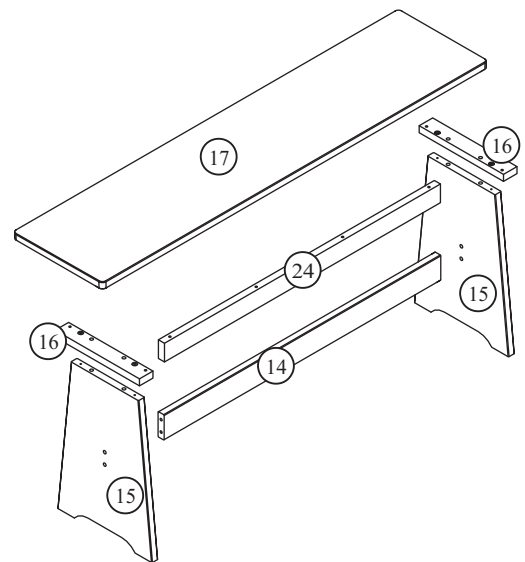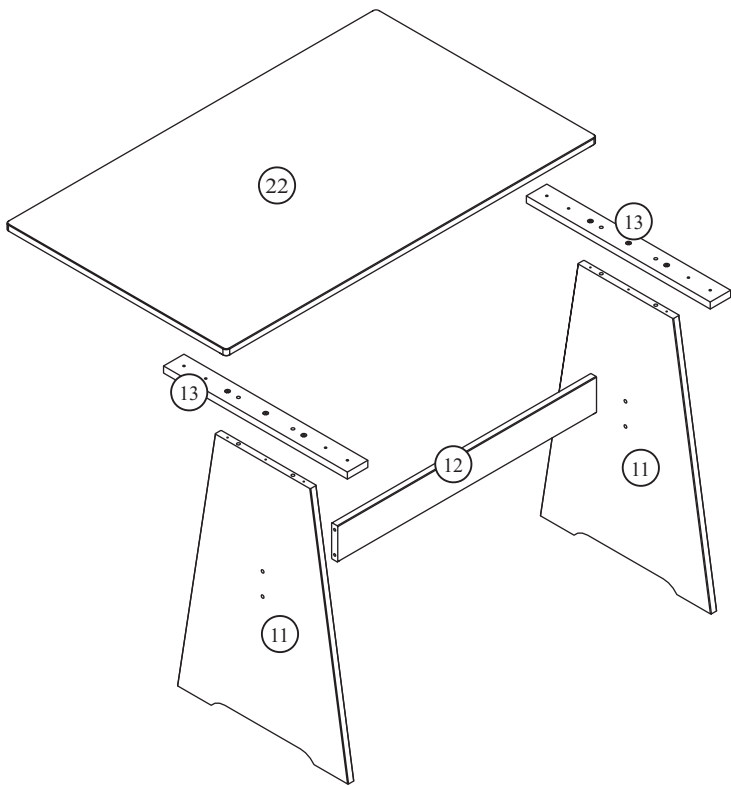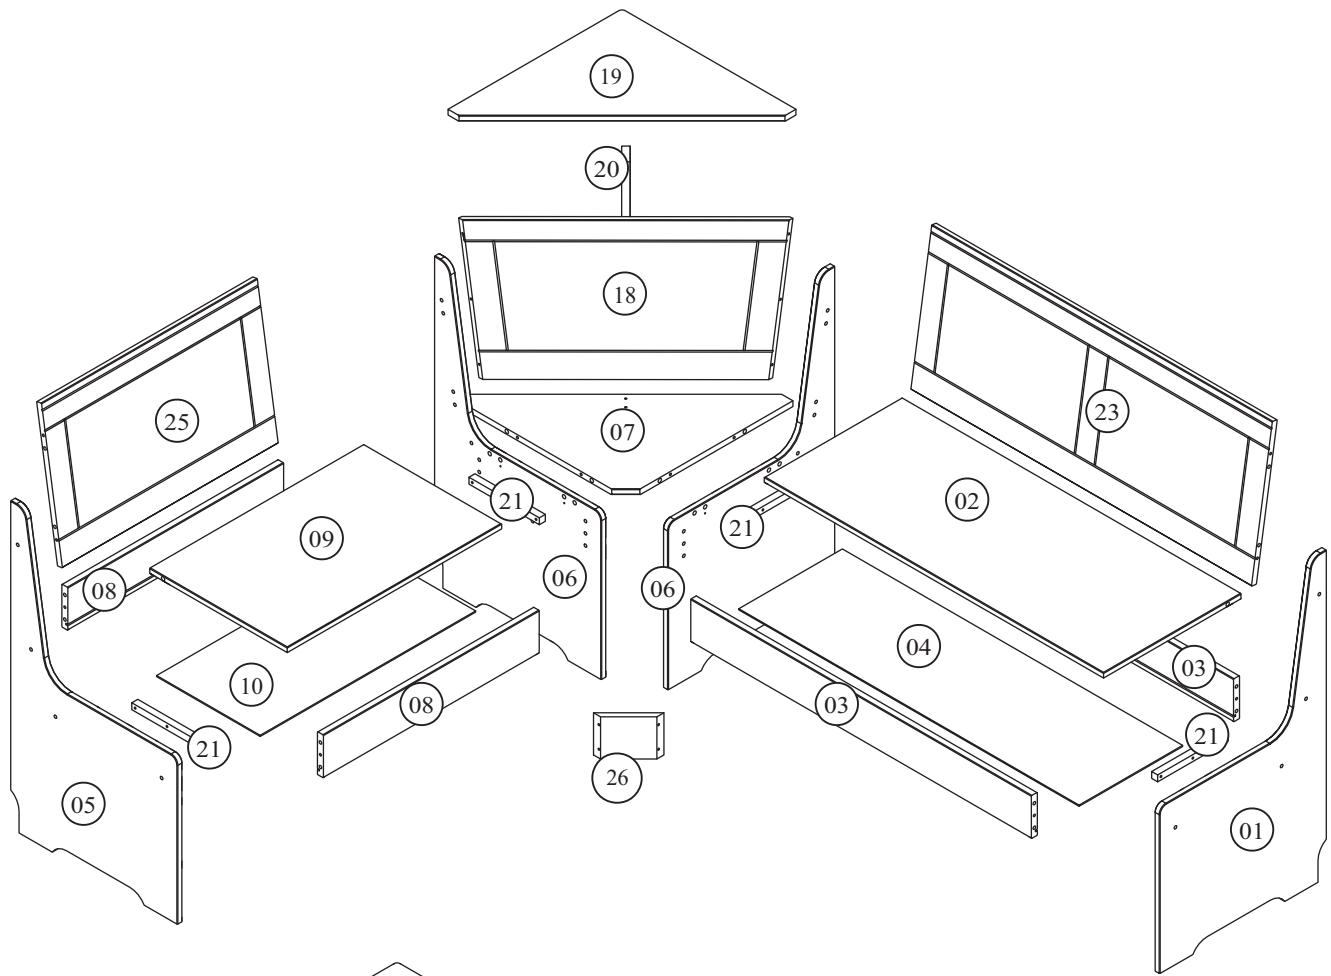


Safety Advice

Please take the time to carefully read through the whole of these instructions before you commence. Keep these instructions for future reference. Unpack, inspect and check off all of the contents. Please dispose of all packaging safely. Small component parts could choke a child if swallowed. We strongly recommend that you keep children well away from the work area. It would be sensible to lay a sheet or blanket on the floor where you intend to work to avoid scratching this product and to protect your floor. This product is heavy. Take extreme care when lifting to avoid personal injury or damage to the product. Assemble the product as close to its intended final position in the room as possible.

HANDY HINT: If you keep the hardware in a bowl during assembly you will be less likely to lose them.

We strongly urge that you do not use Power Tools, such as drills or electric screwdrivers during this assembly as this could cause irreparable damage to your product and will invalidate the warranty.

 1

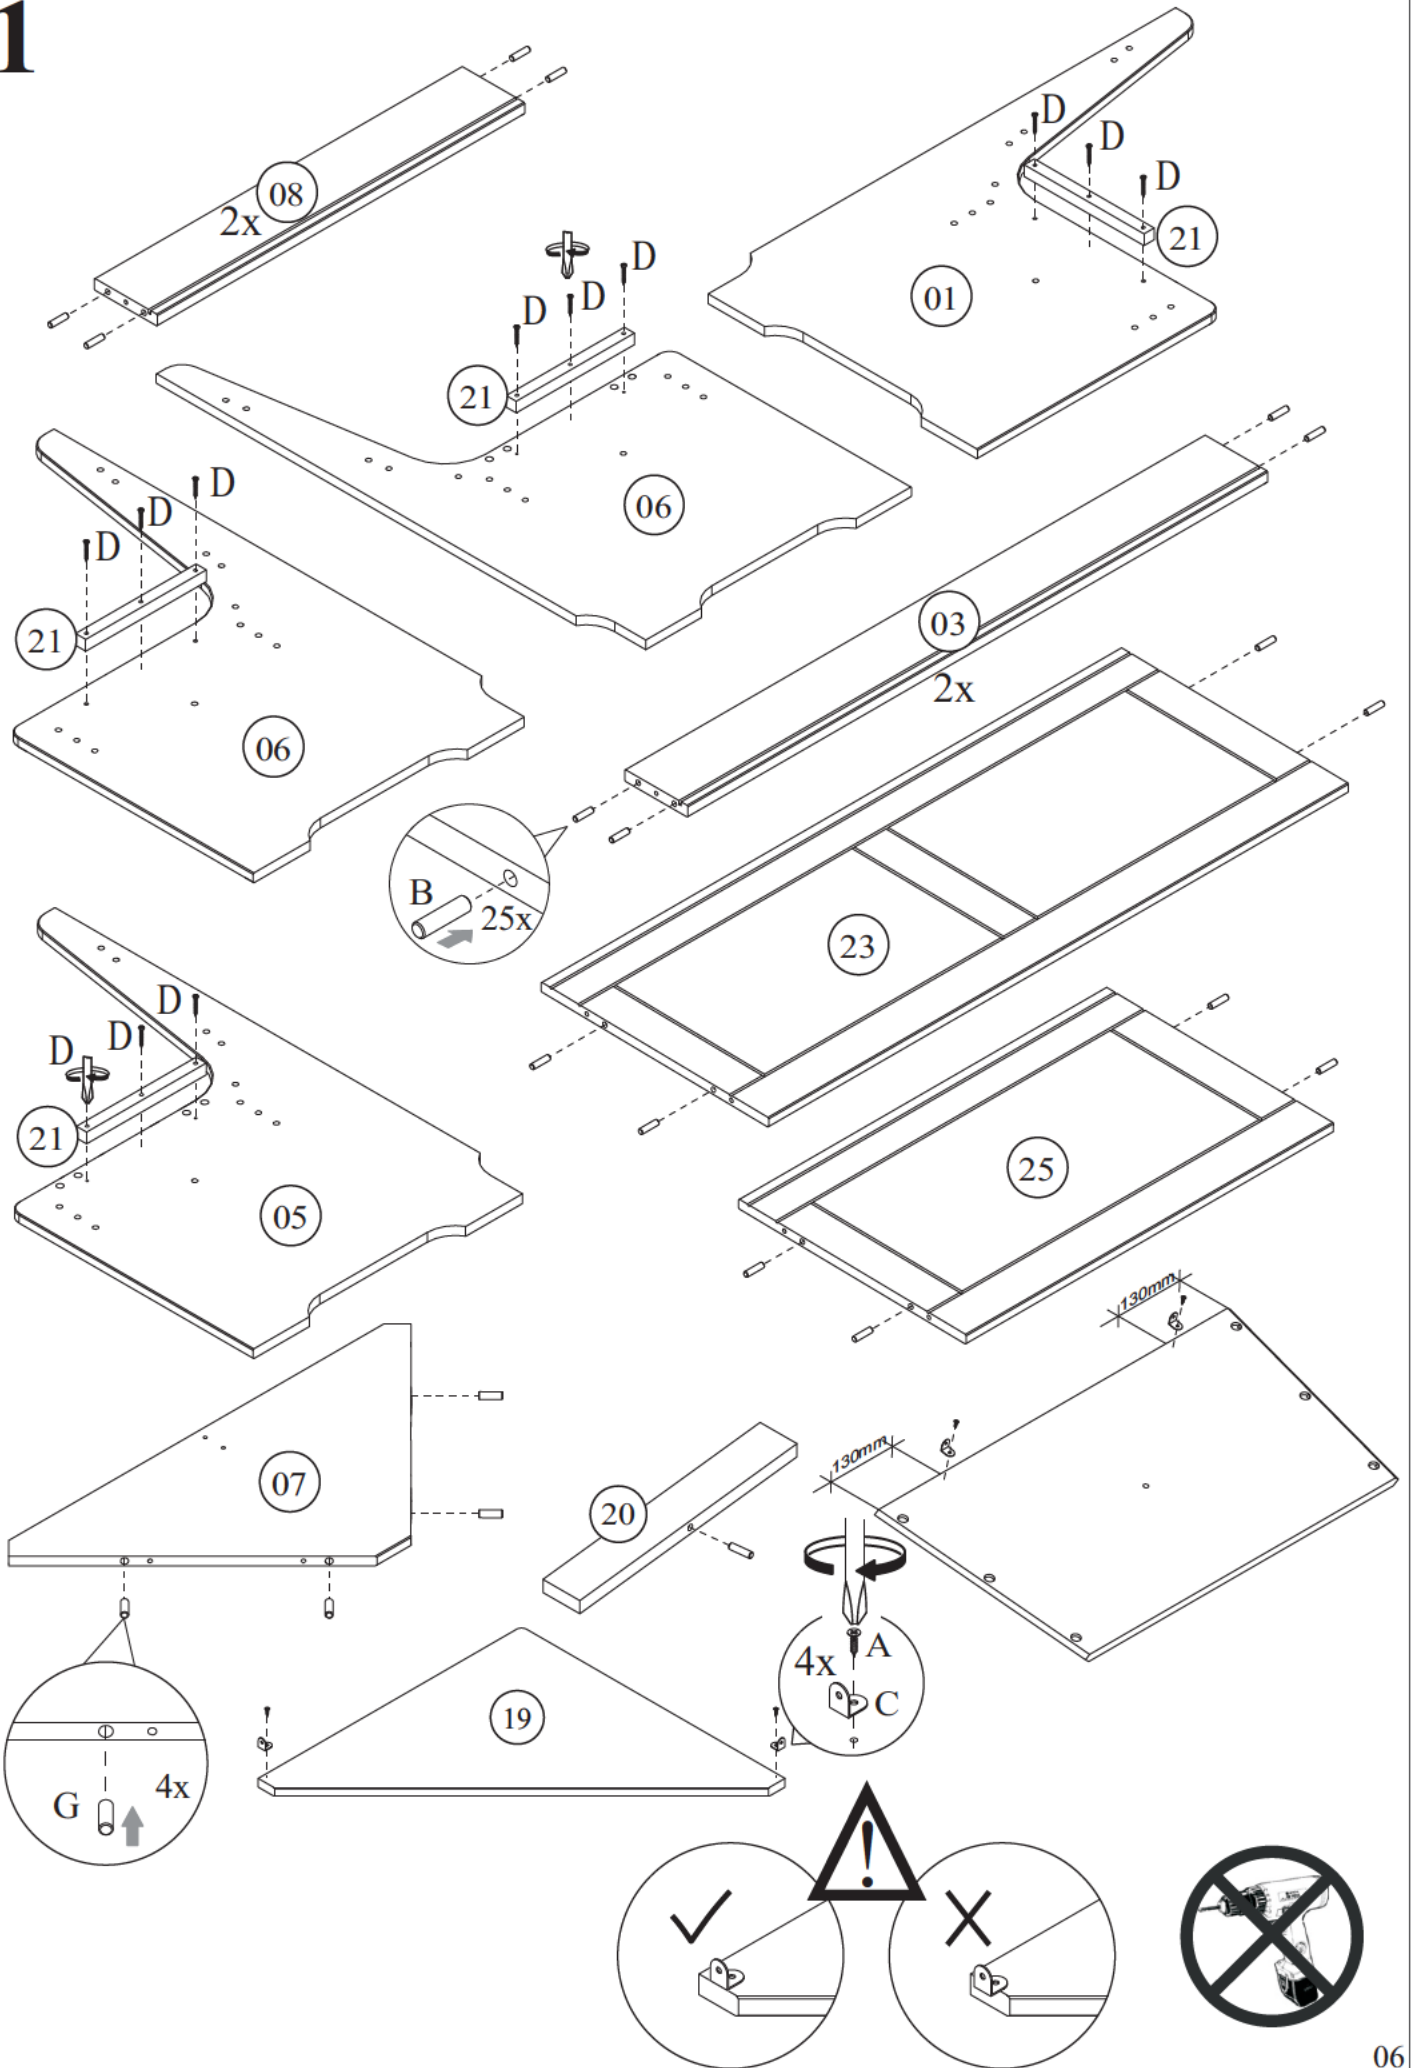




Attention!

Attention!!!


The product can be assembled left or right. Assembly instructions show option right side.

For **left side assembly**, swap panels (25) for (23), (09) for (02) and rails (08) as (03).

 
Right!

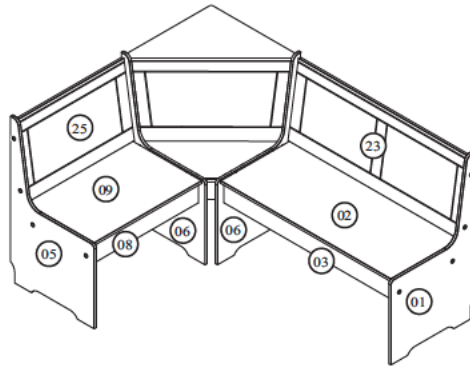


Left!

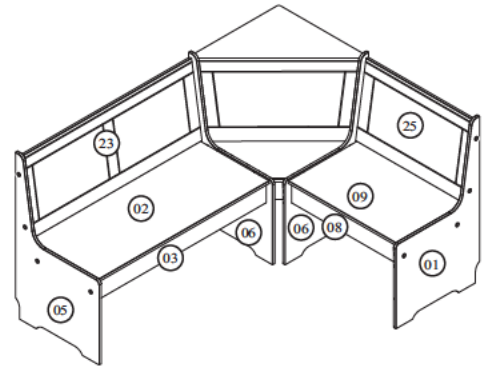 


2

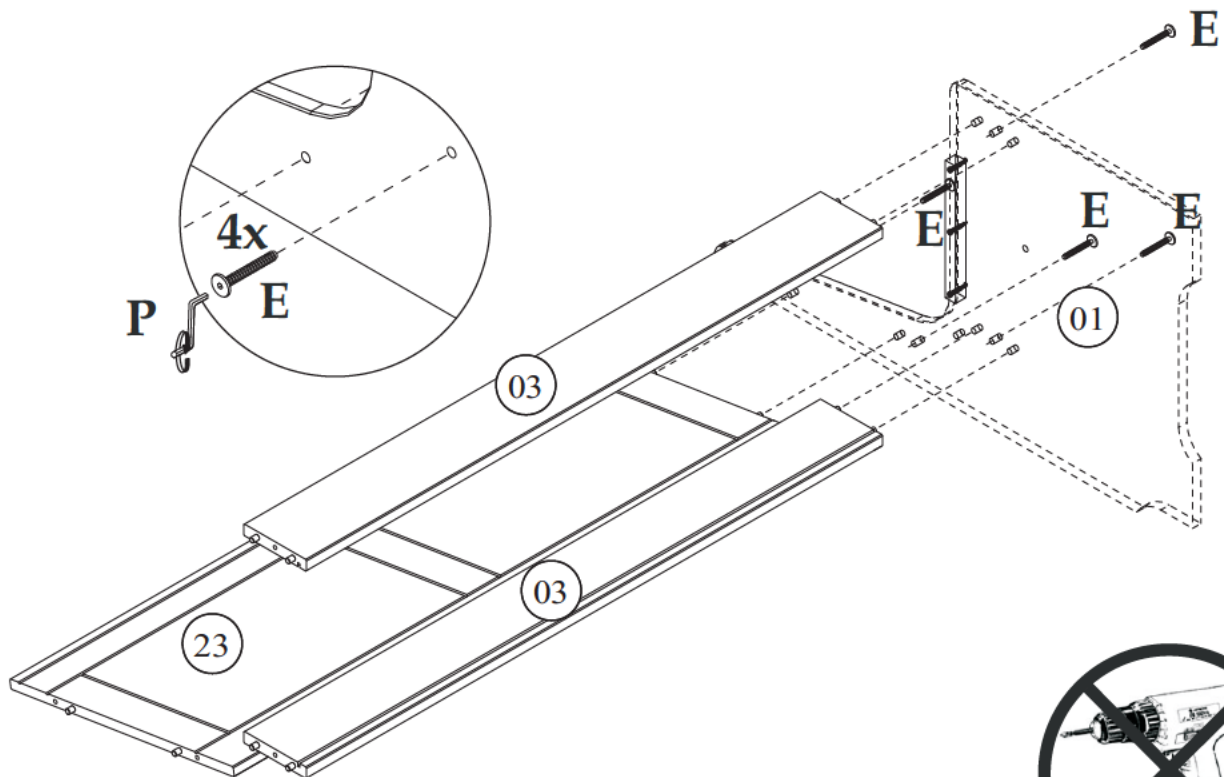 


3

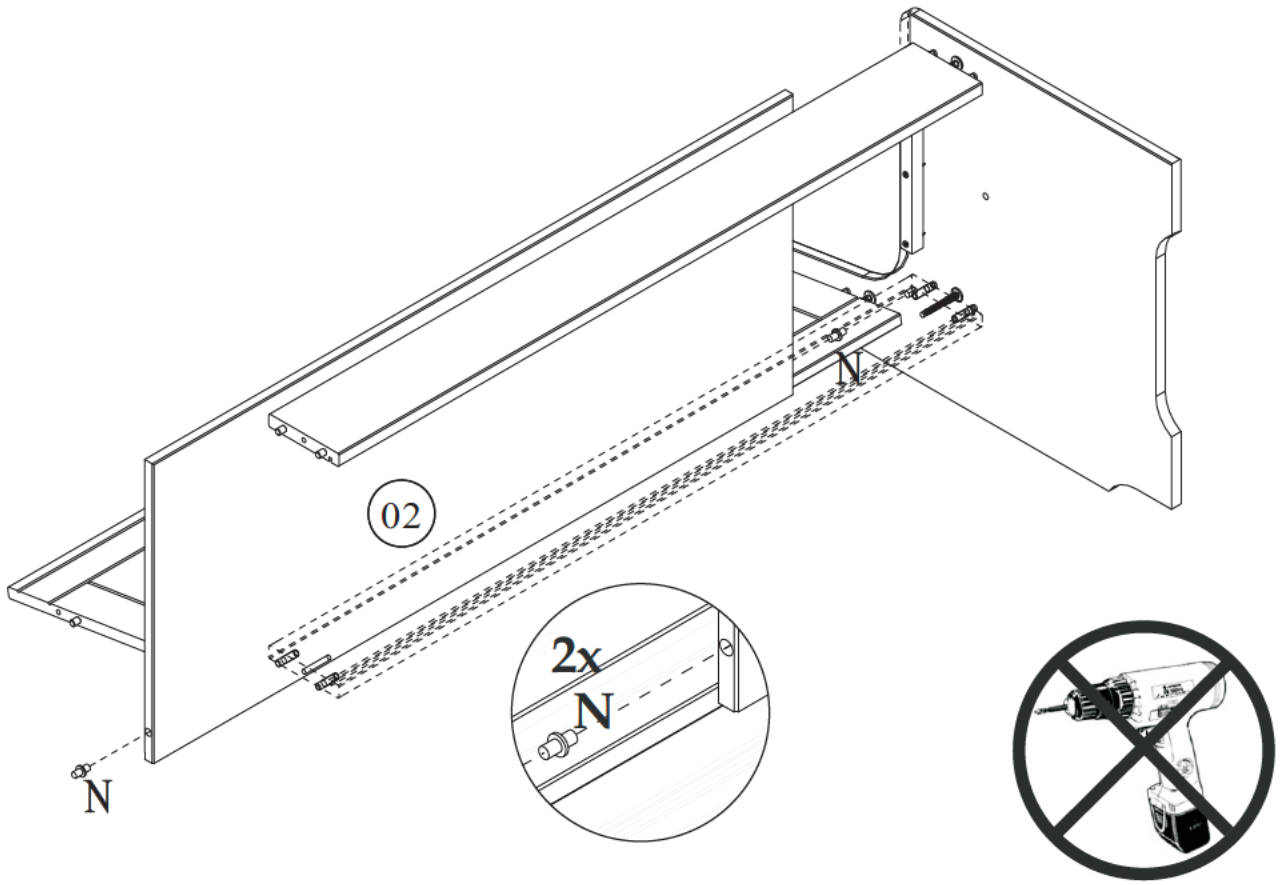 


4

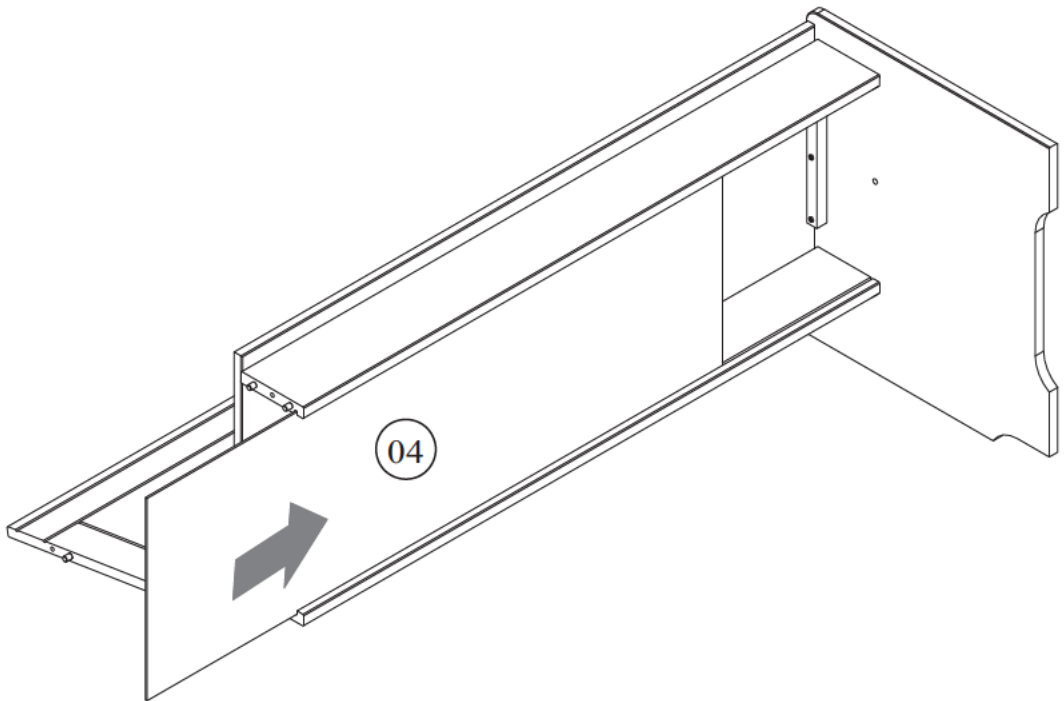 


5

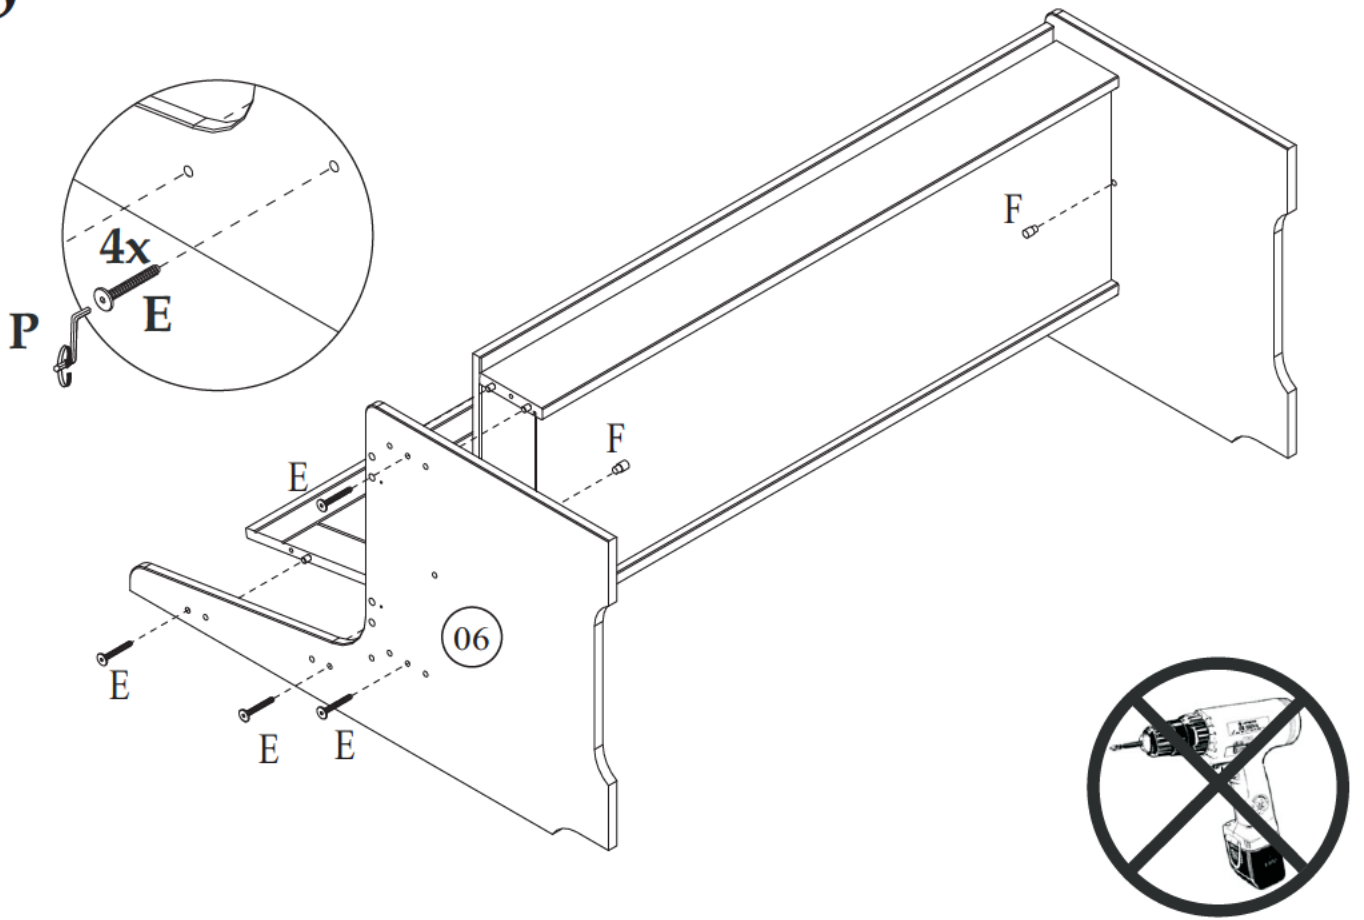 


6

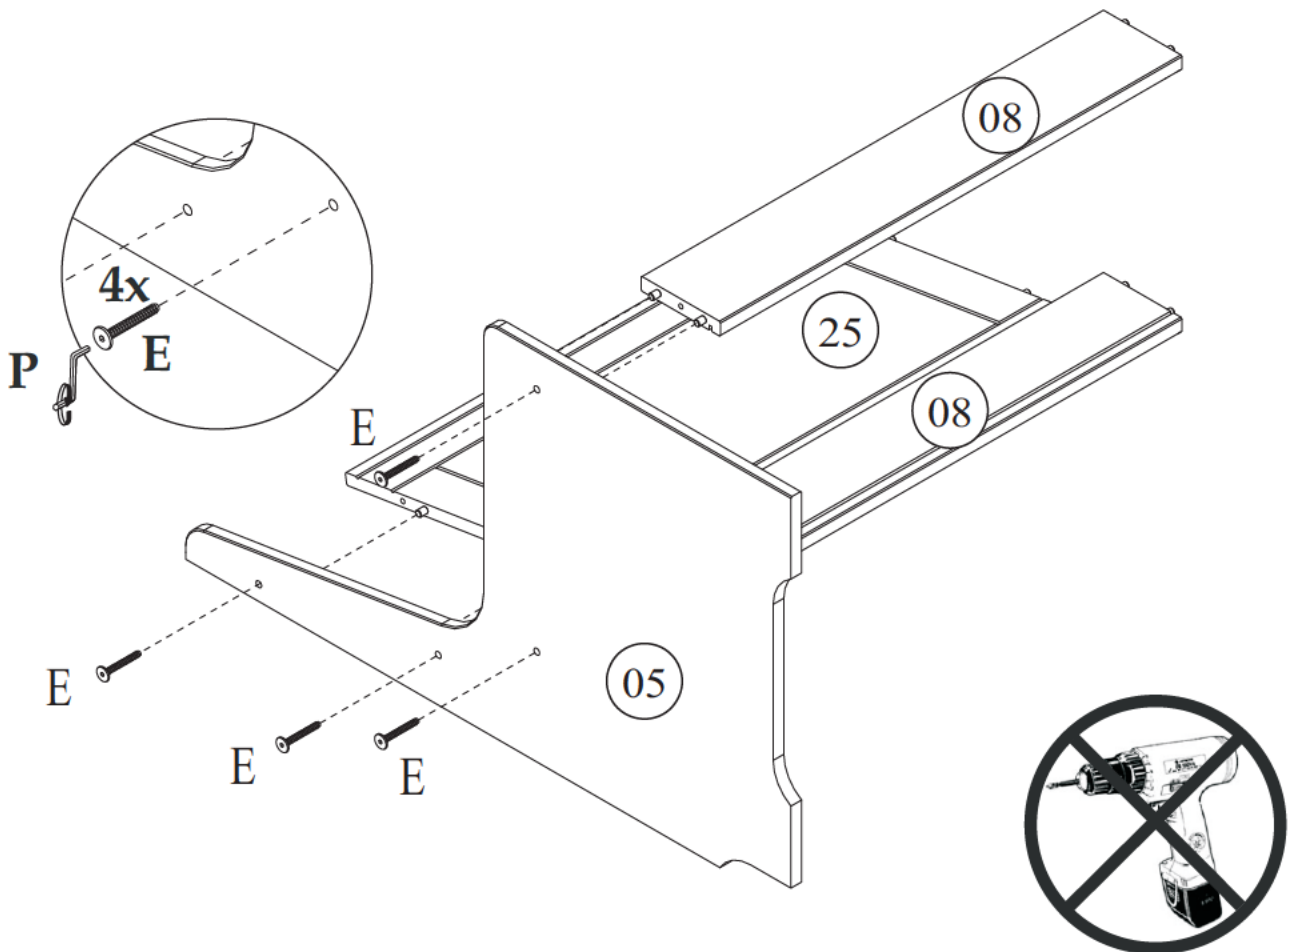 


7

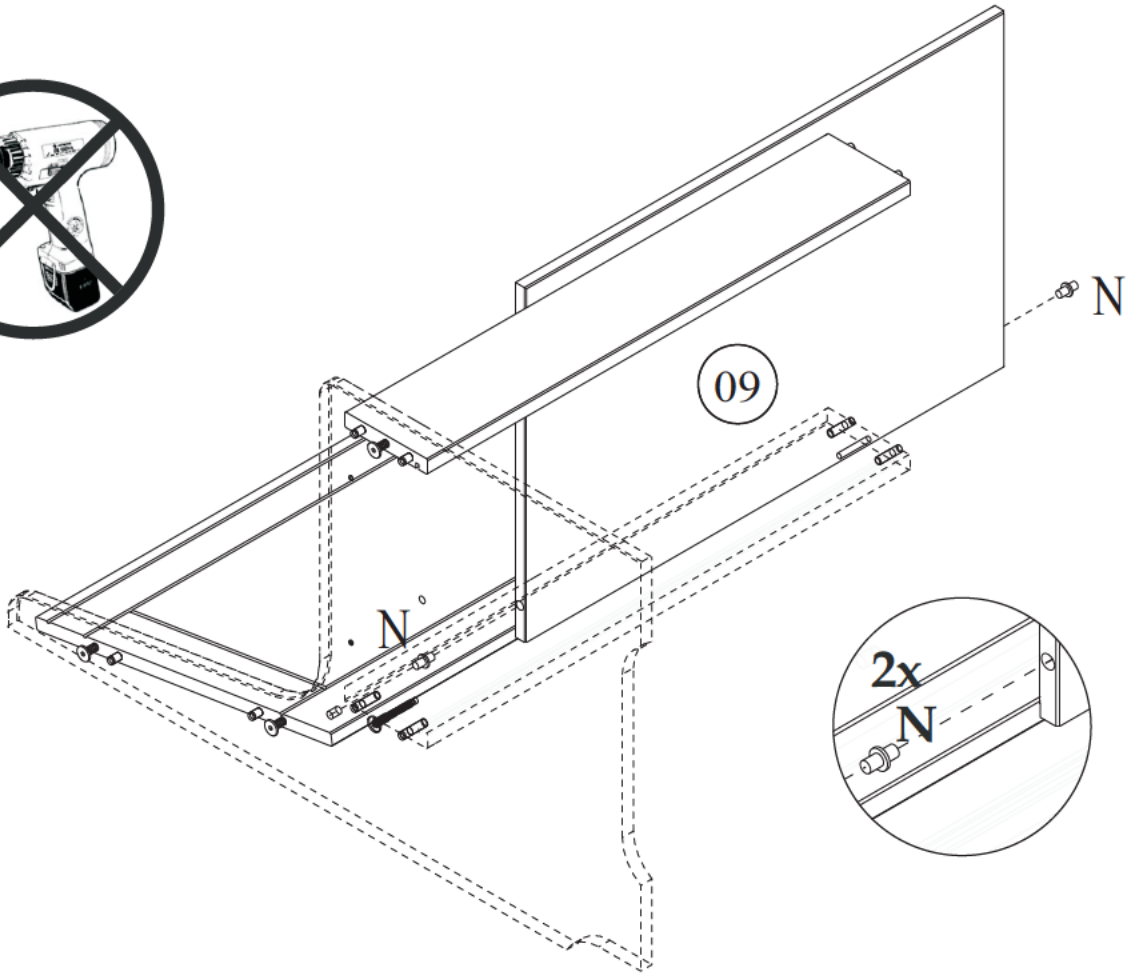 


8

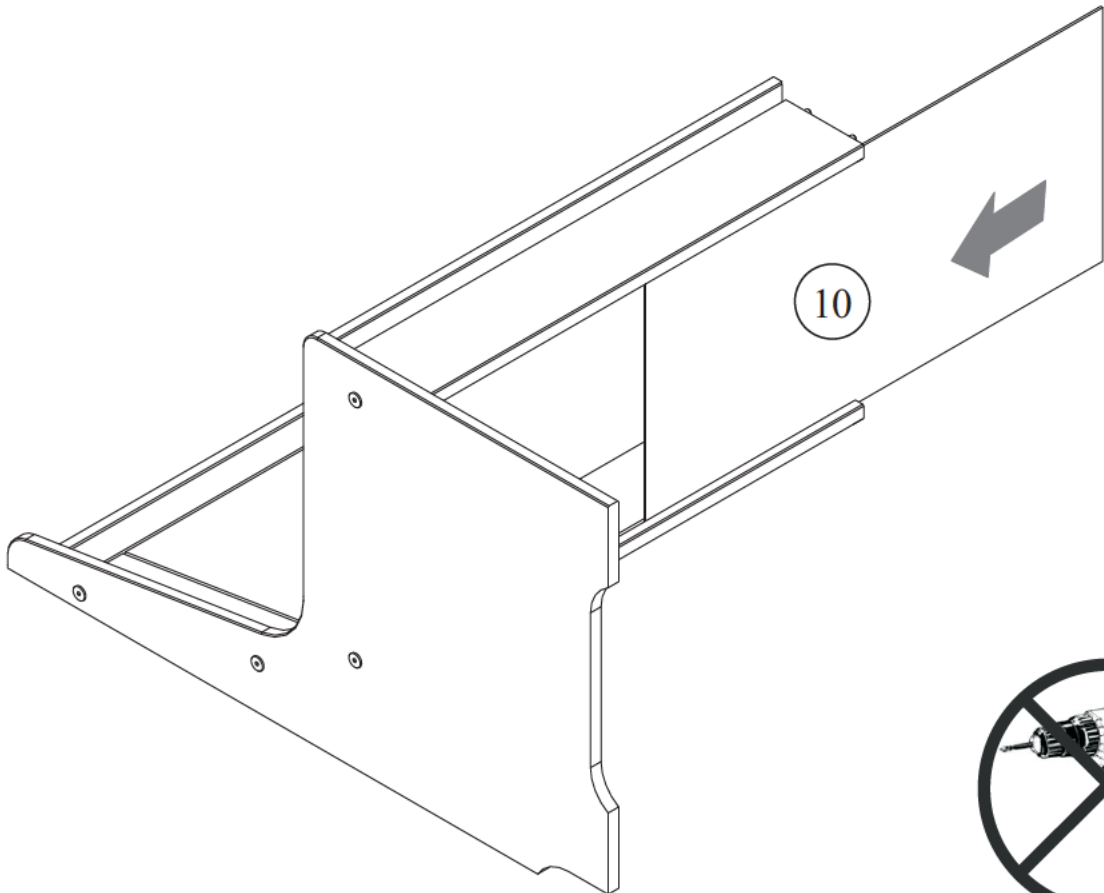 


9

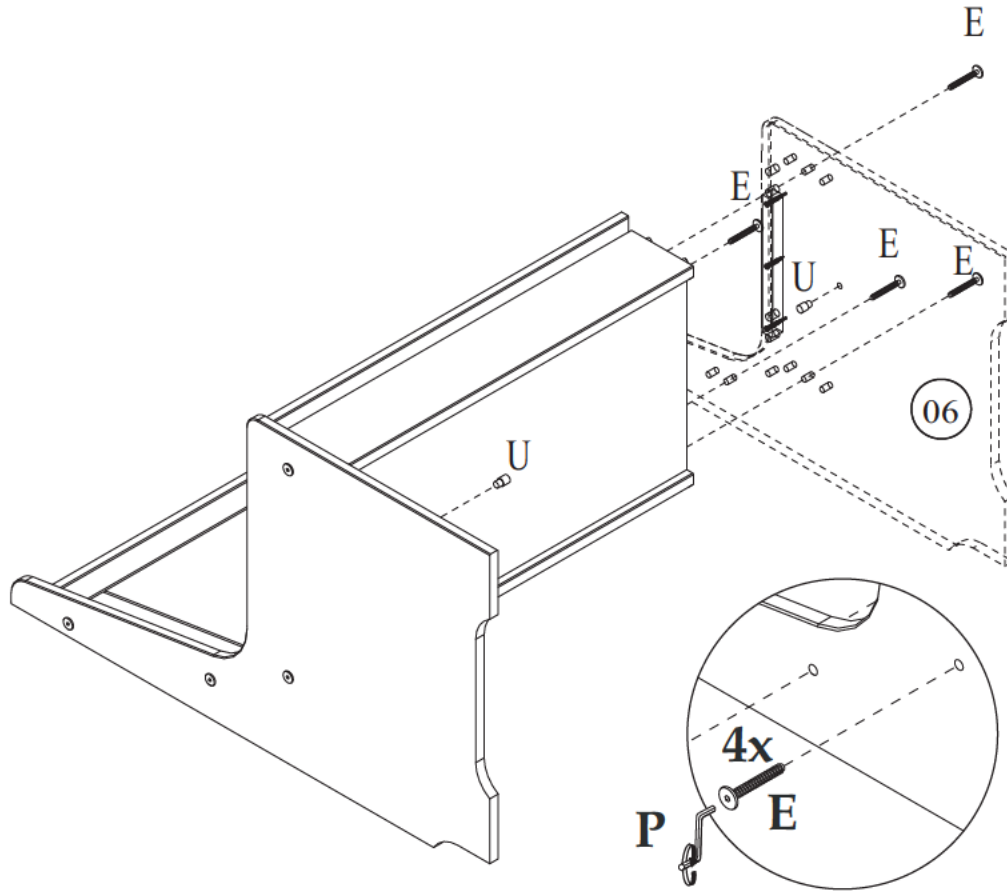 


10

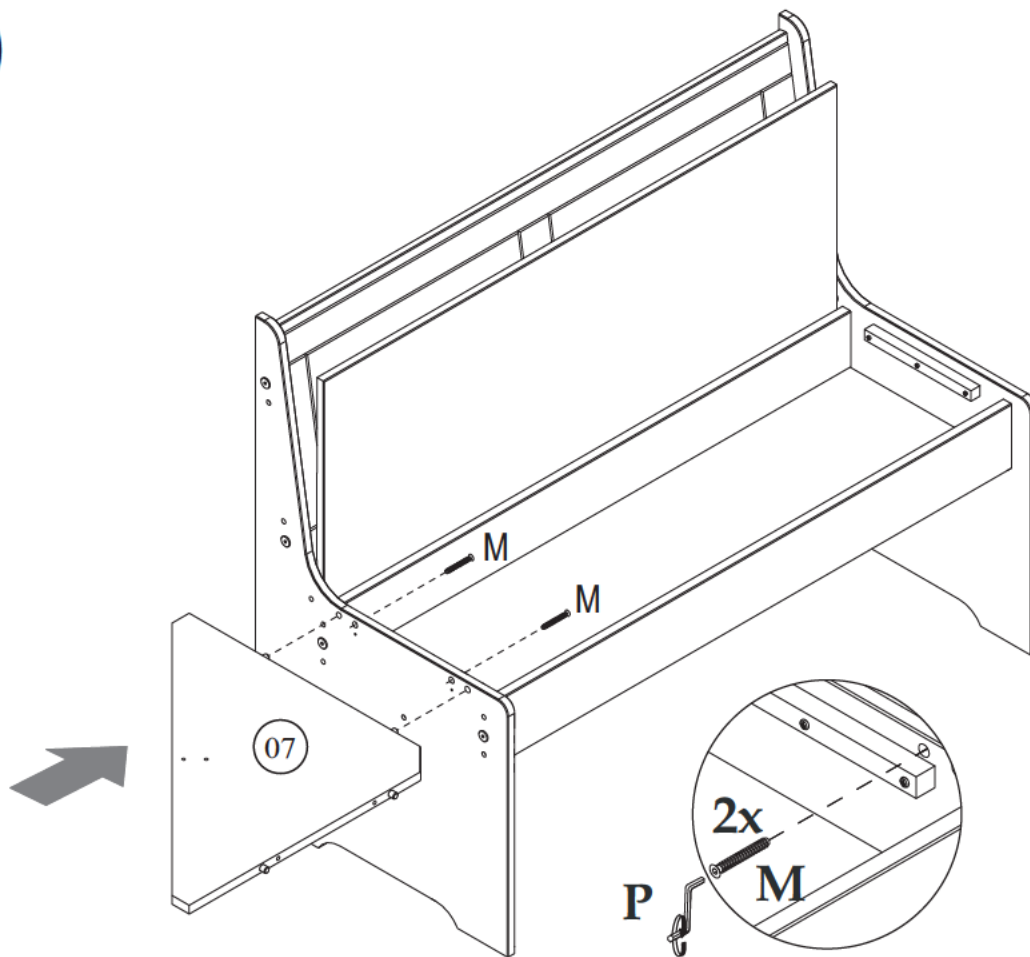 


11

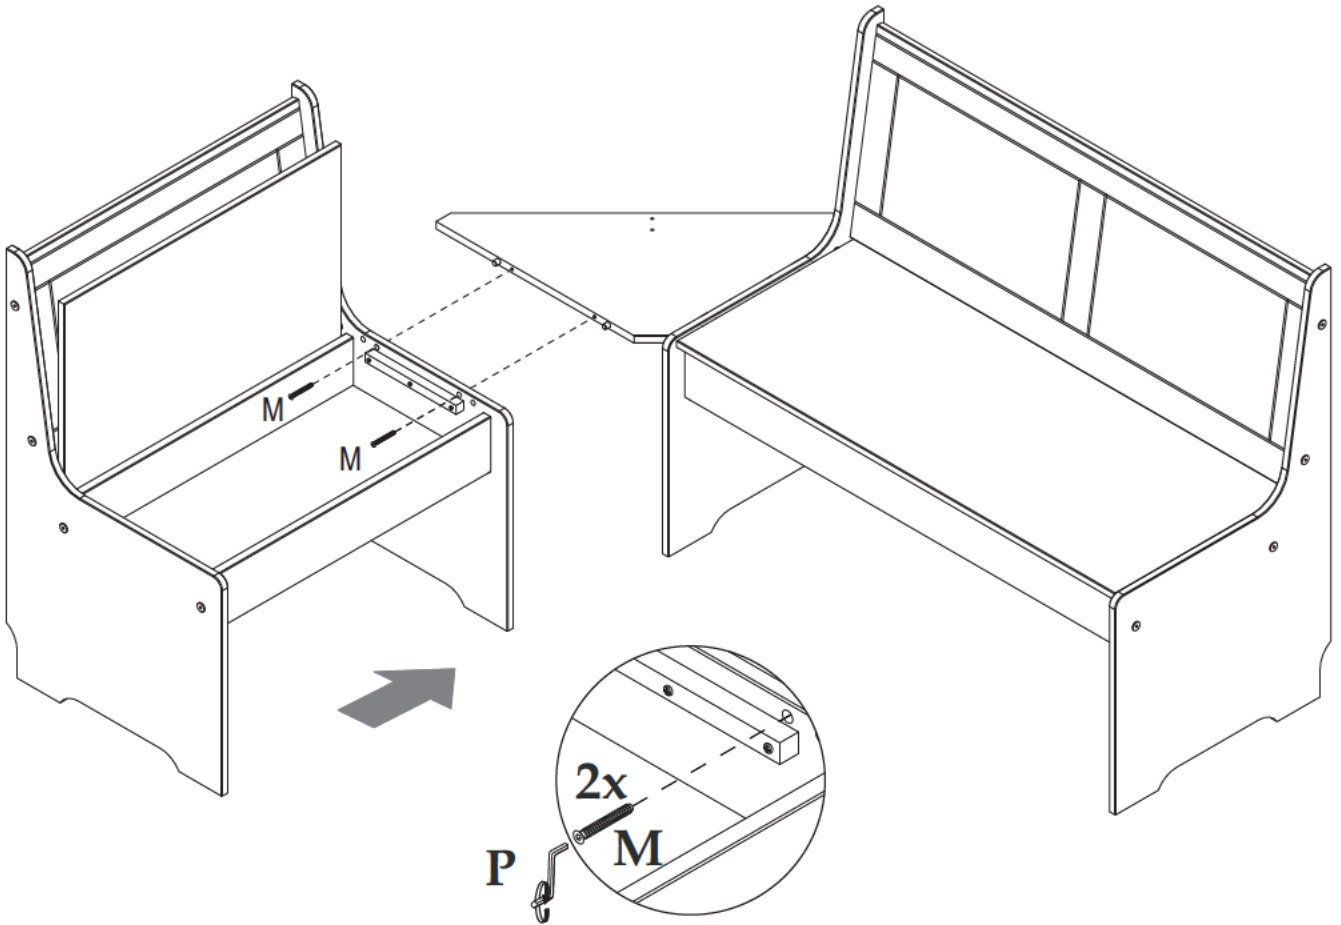 


12

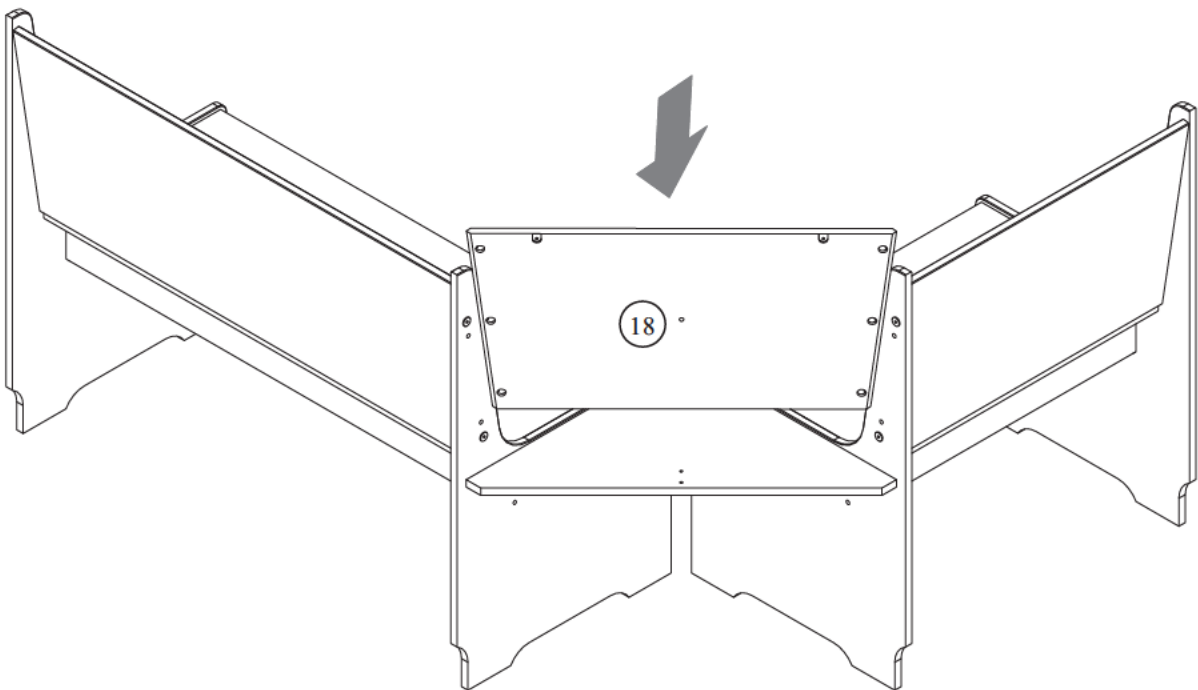 


13

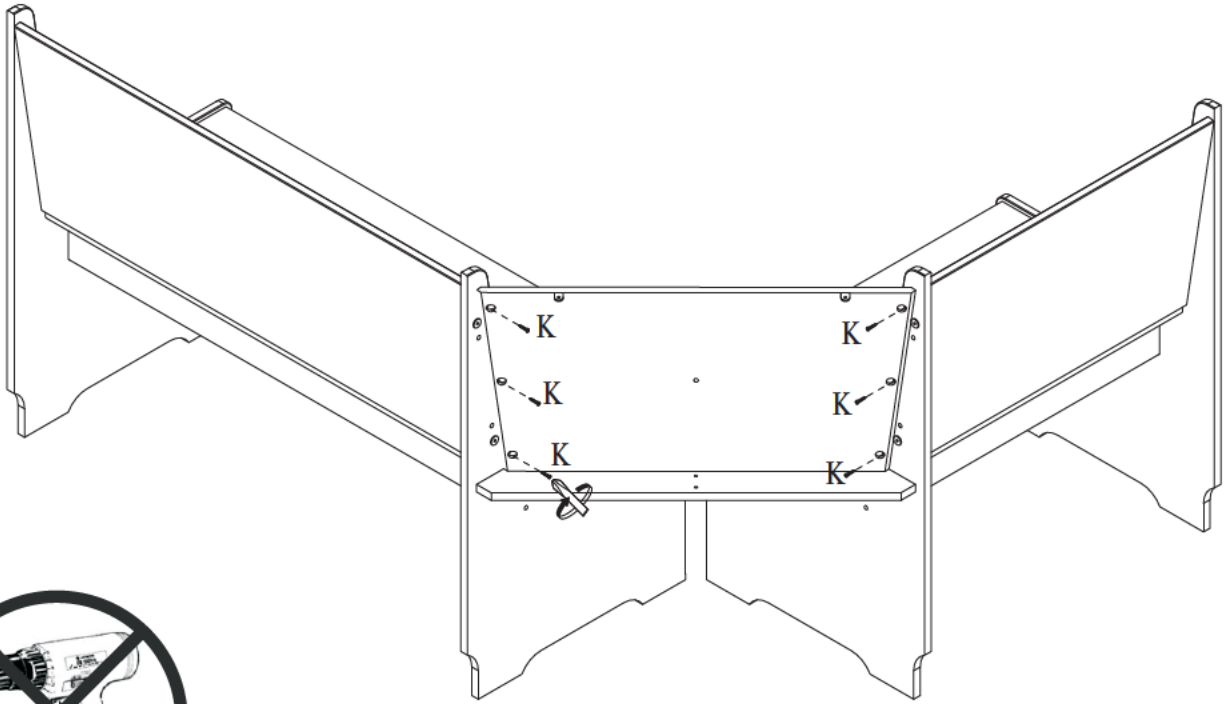 



14

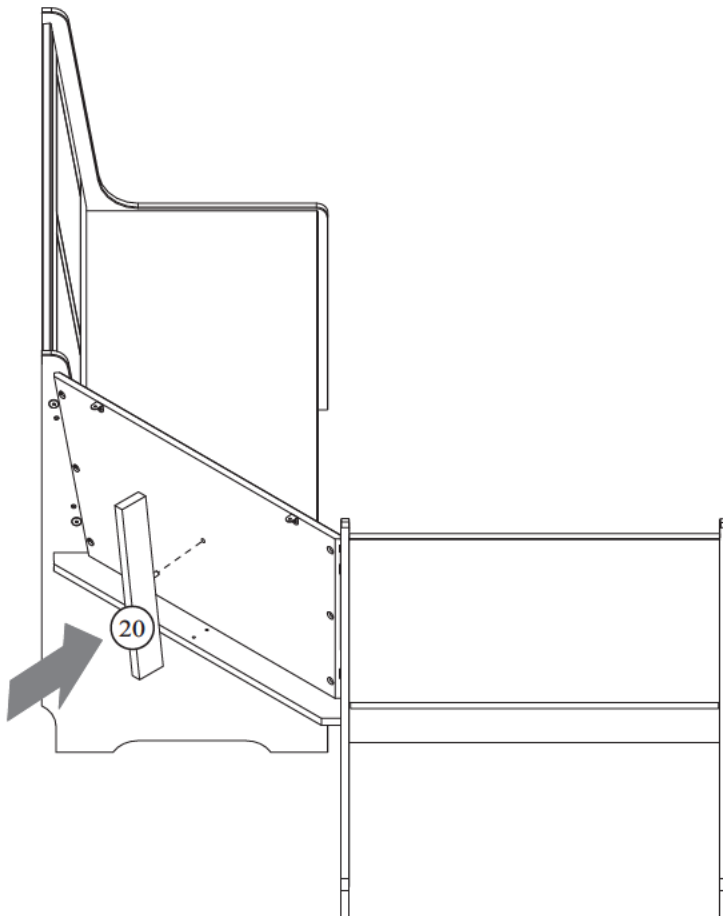 


15

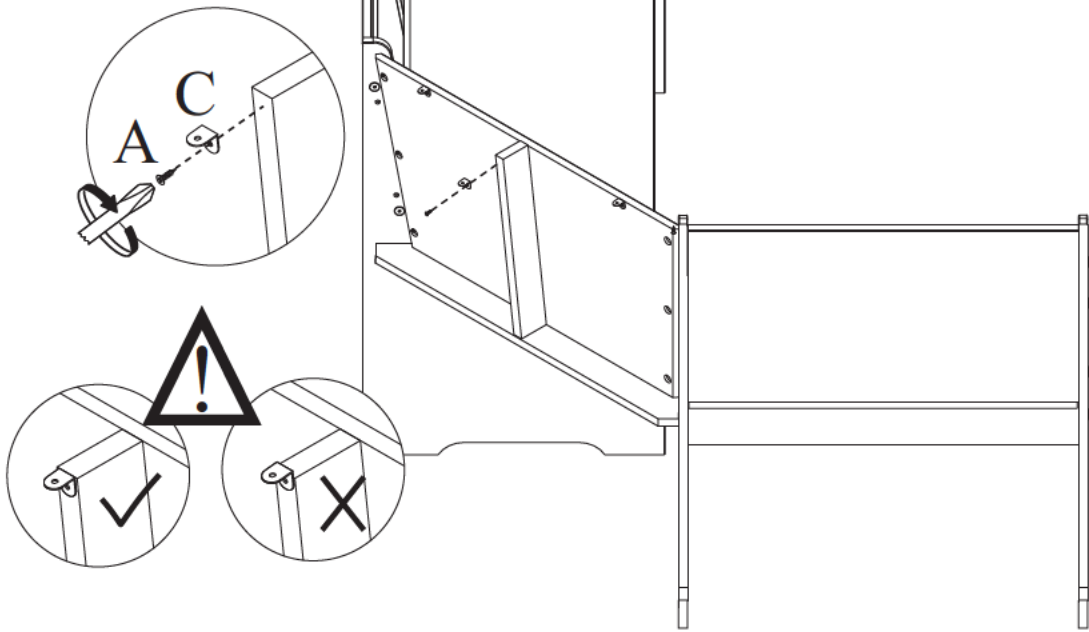 


16

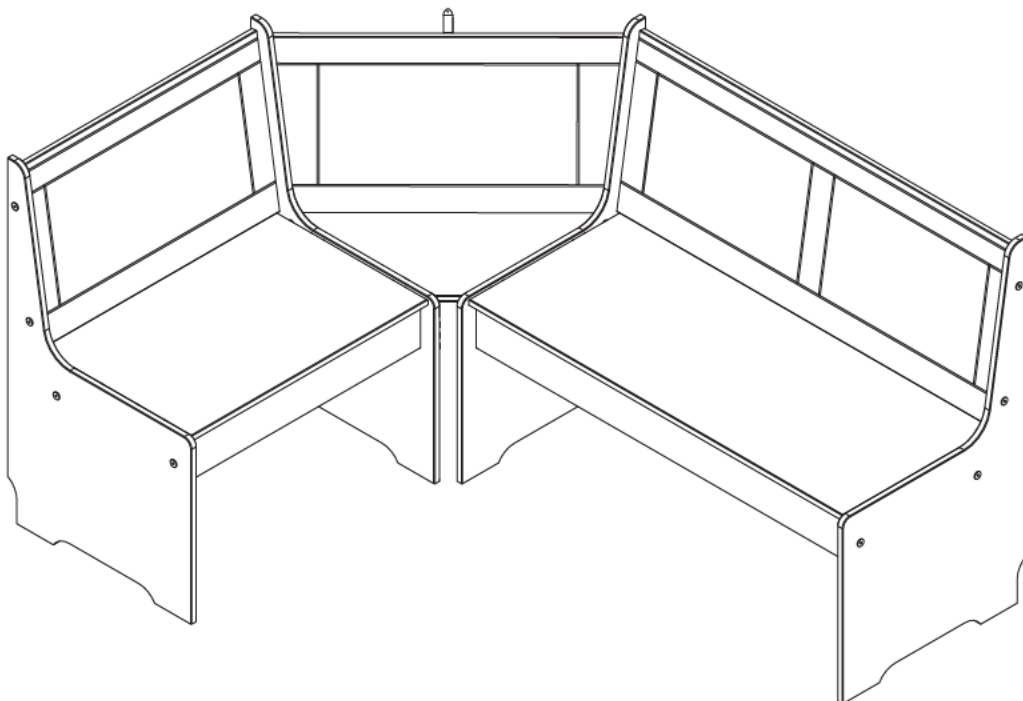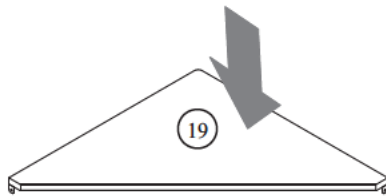  


17

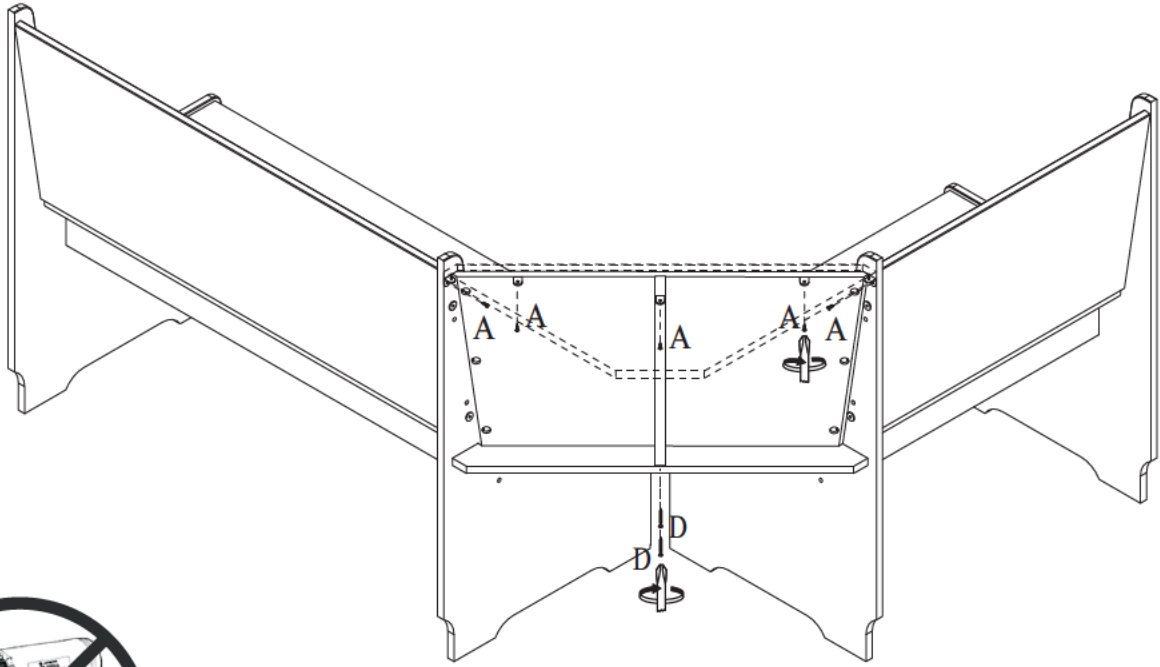 


18

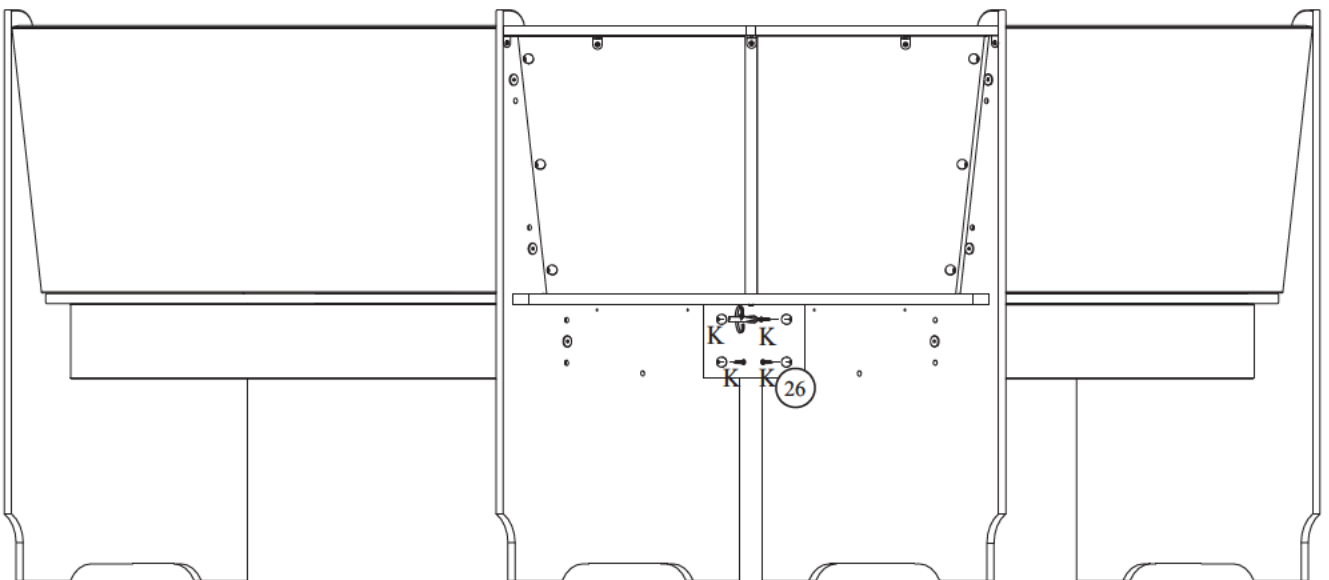 


19

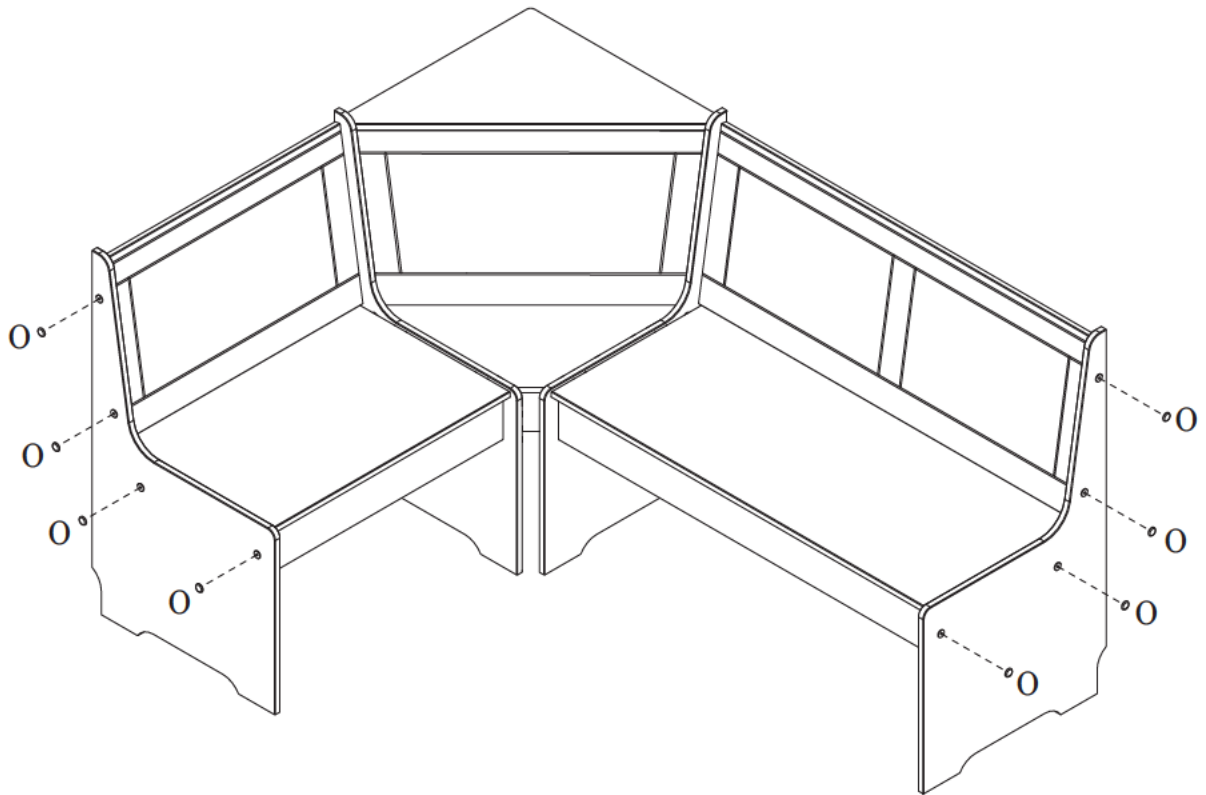 


20

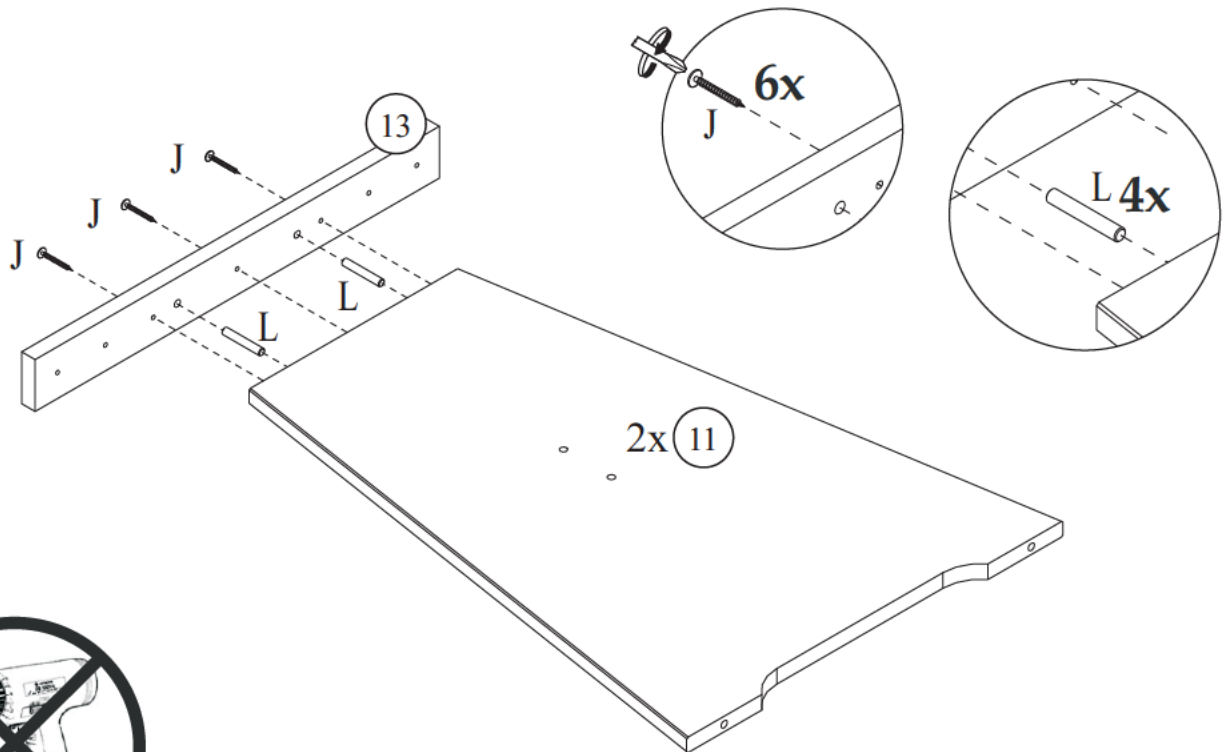 


21

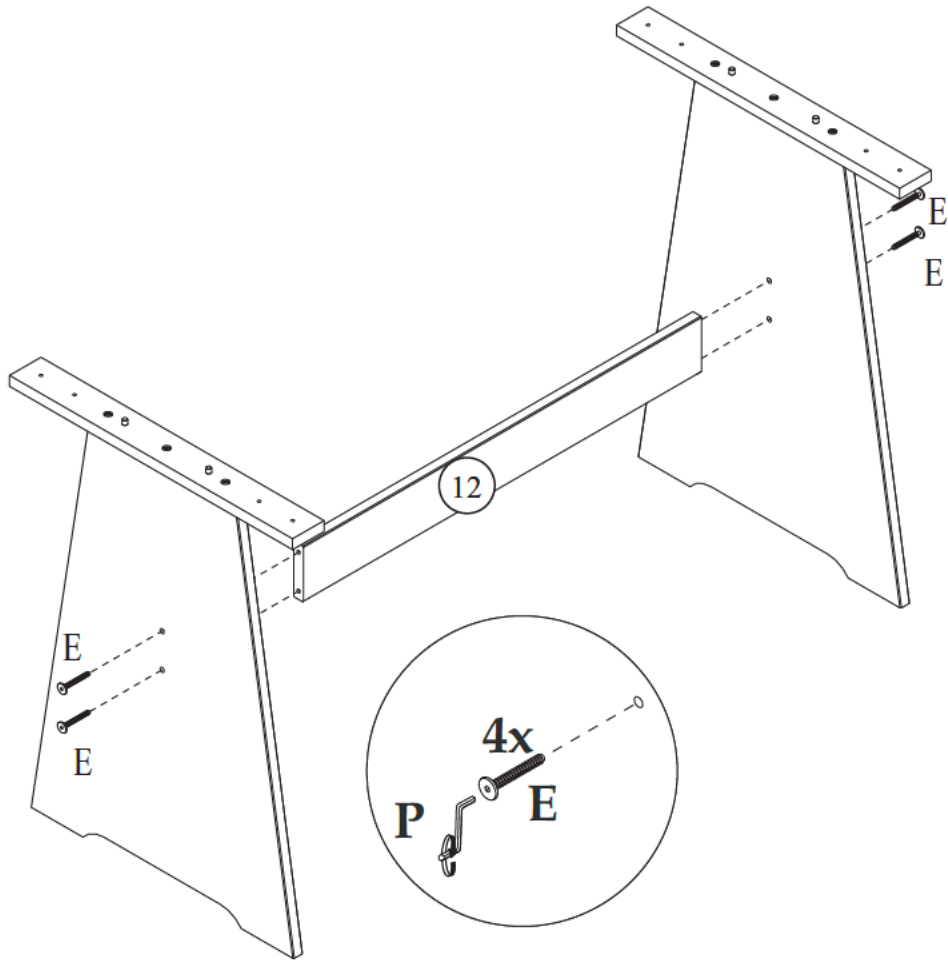 


22

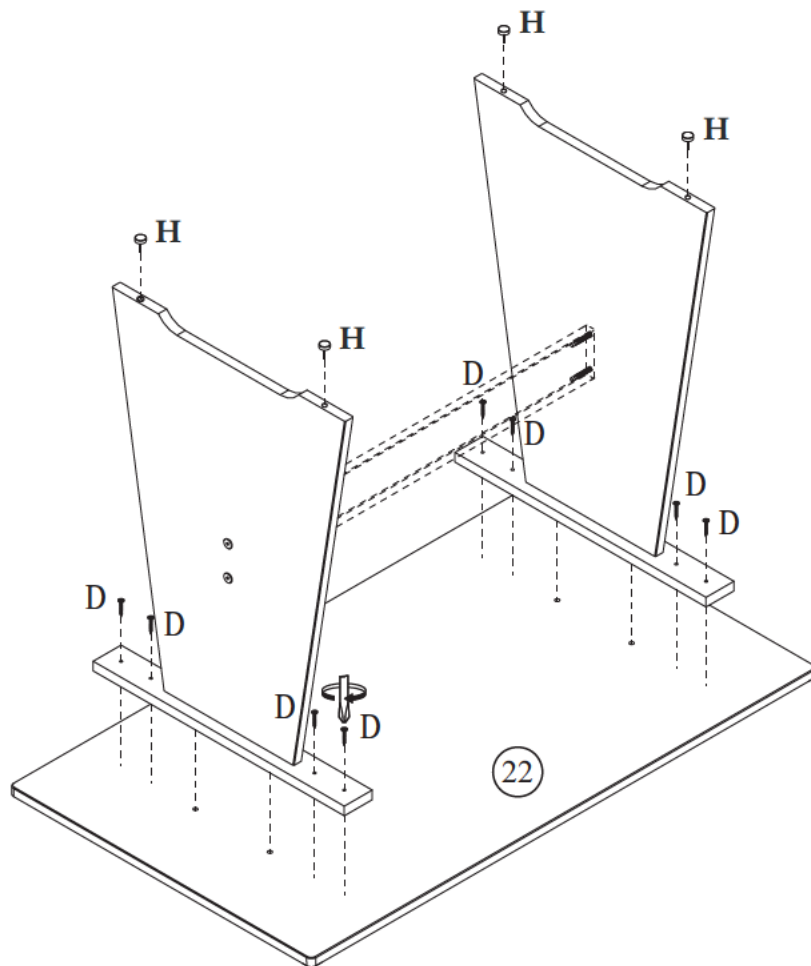 


23

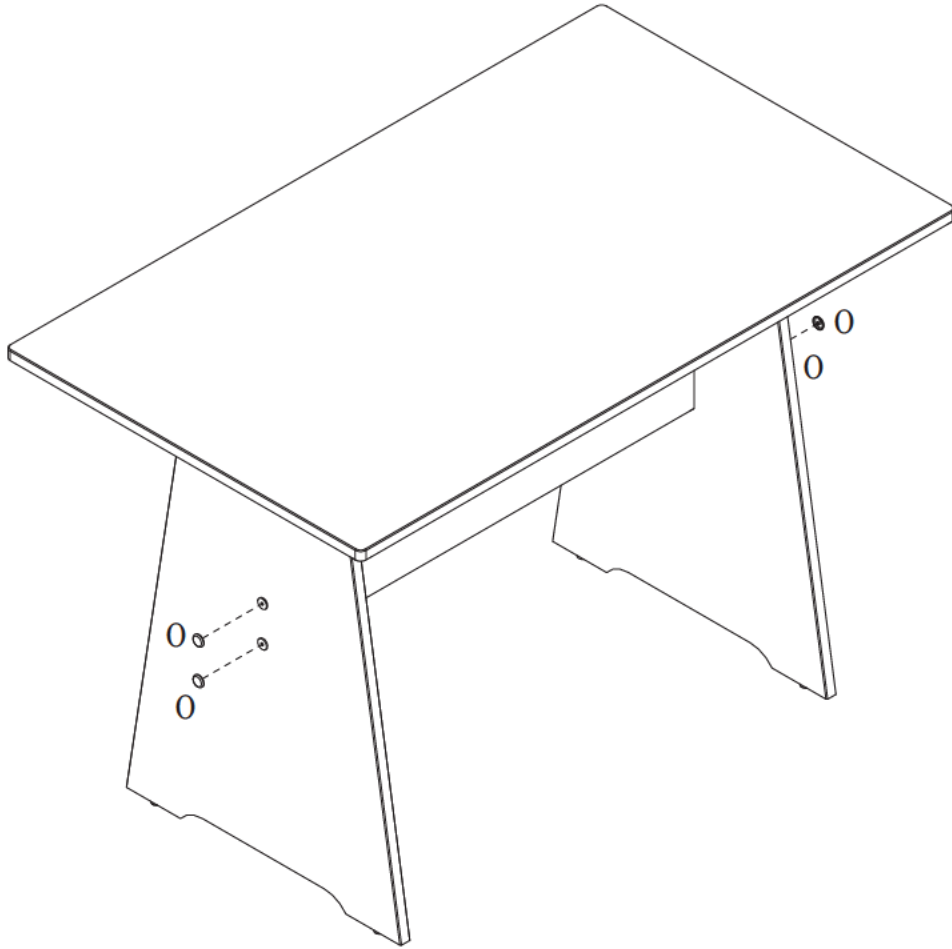 


24

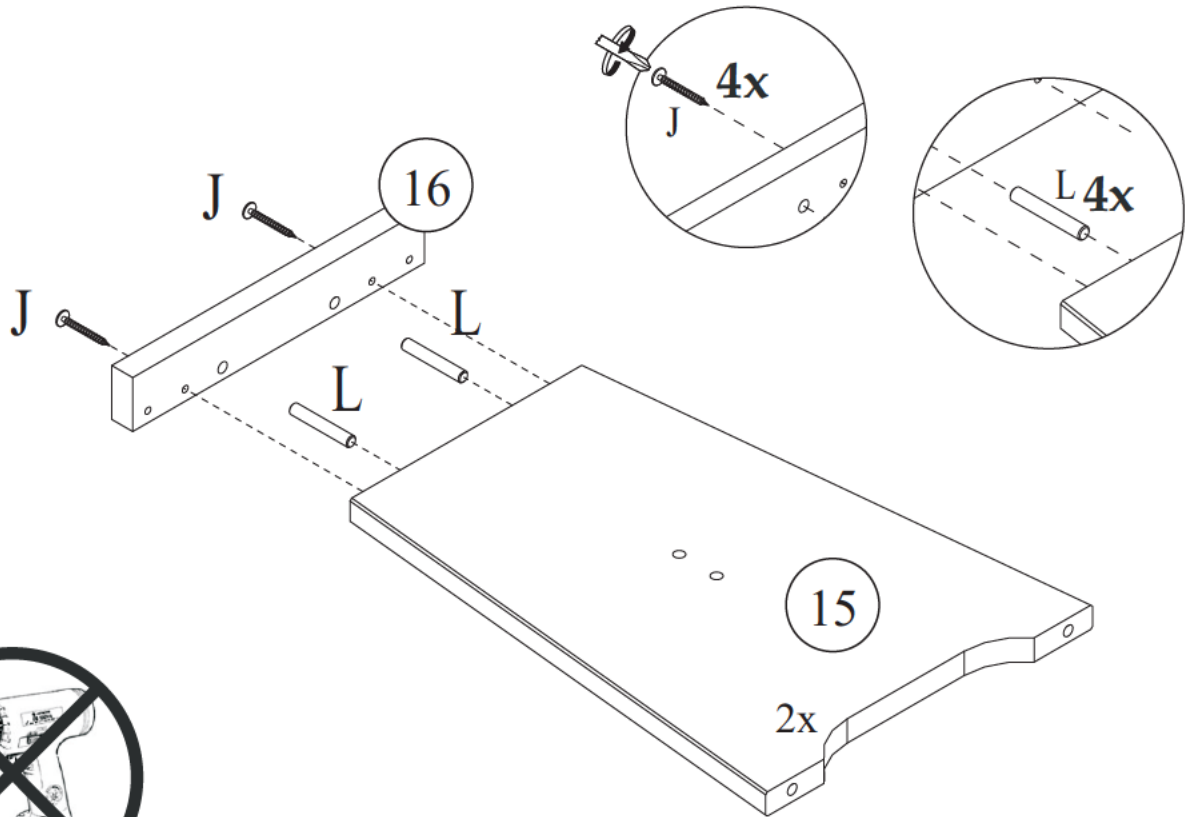 


25

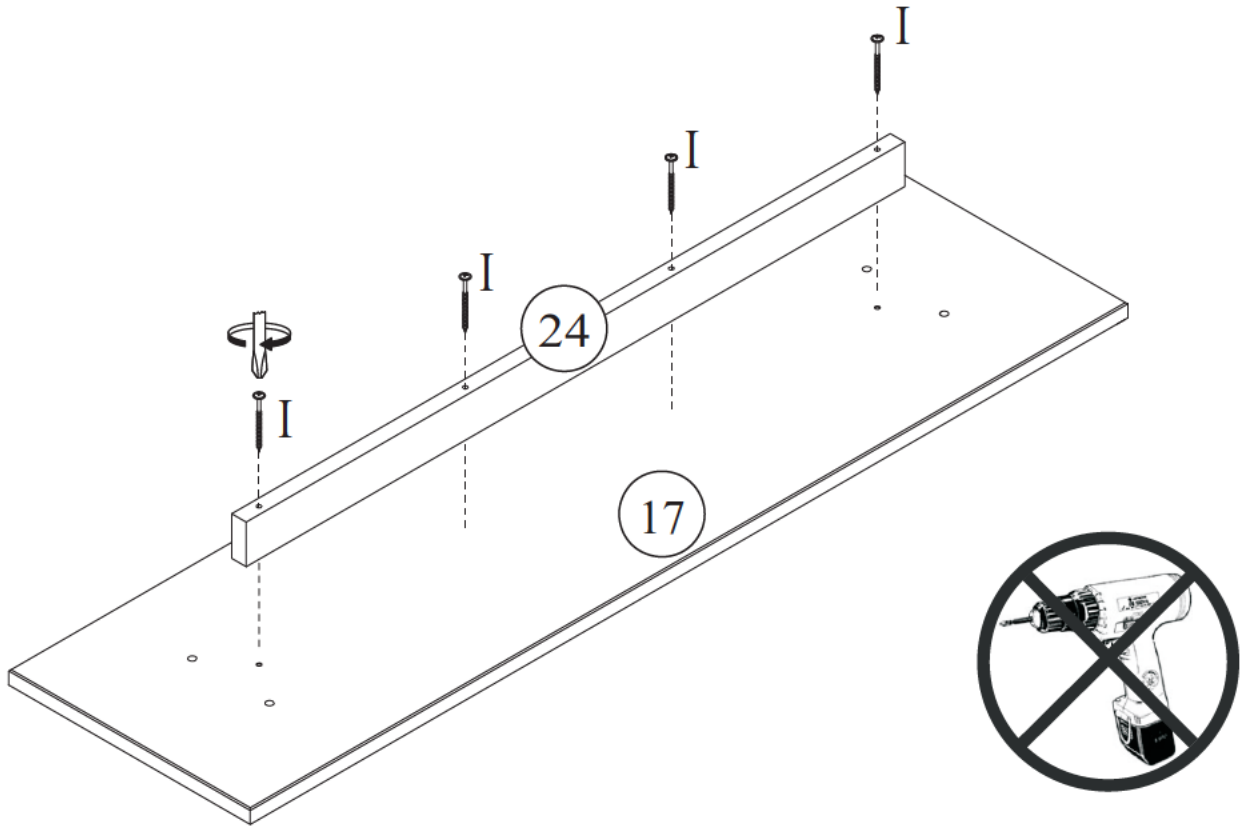 


26

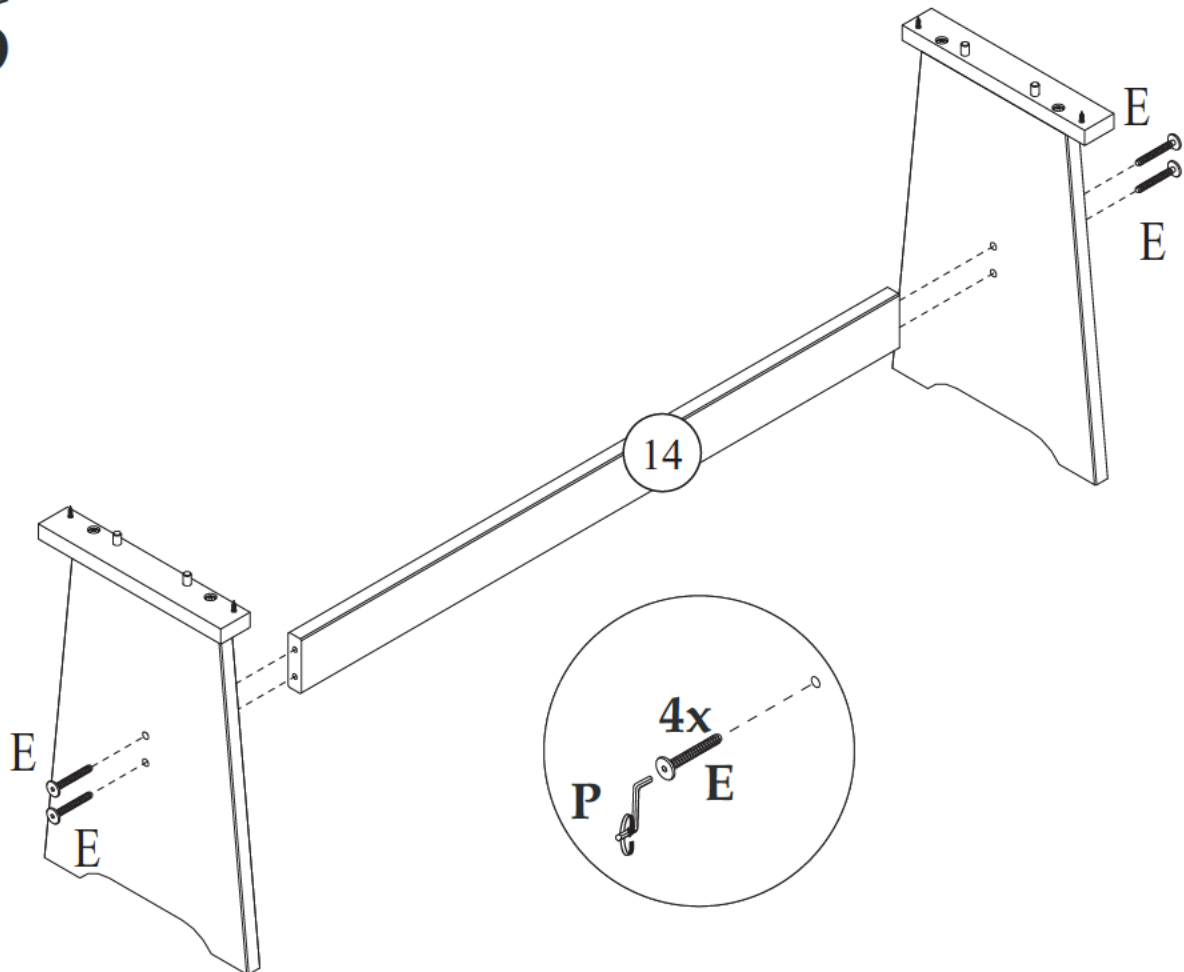 

27

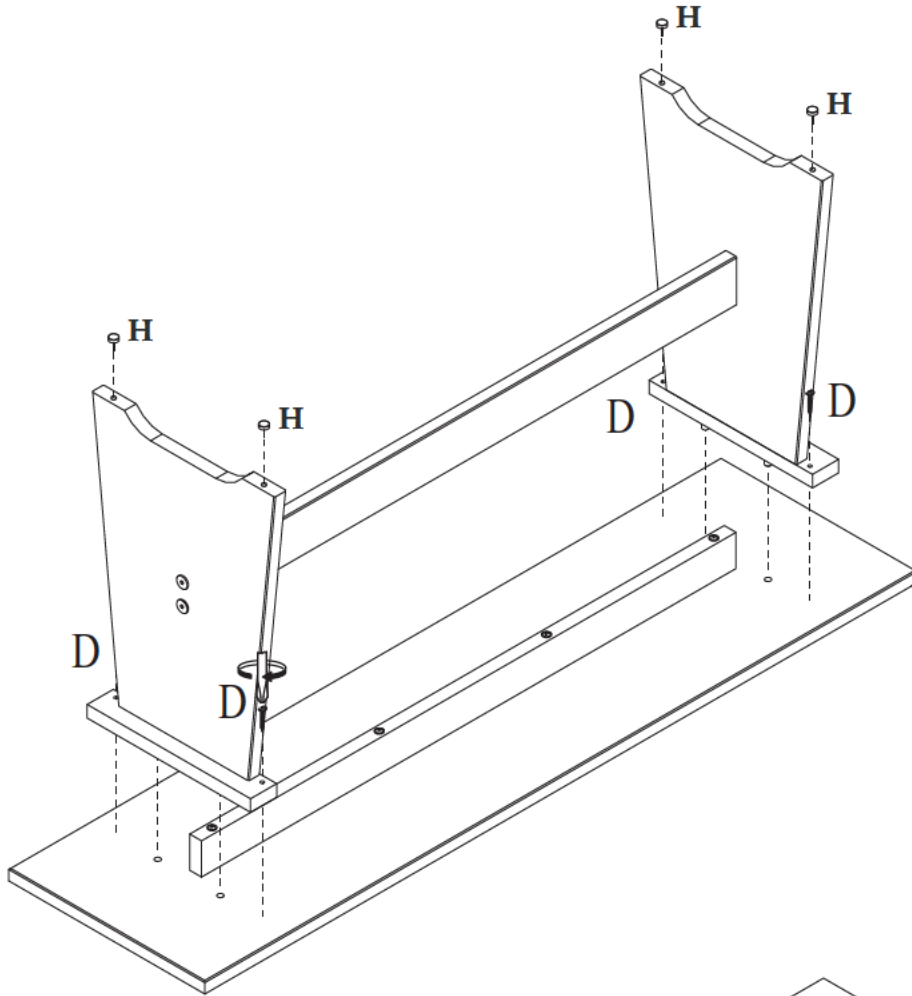 

28

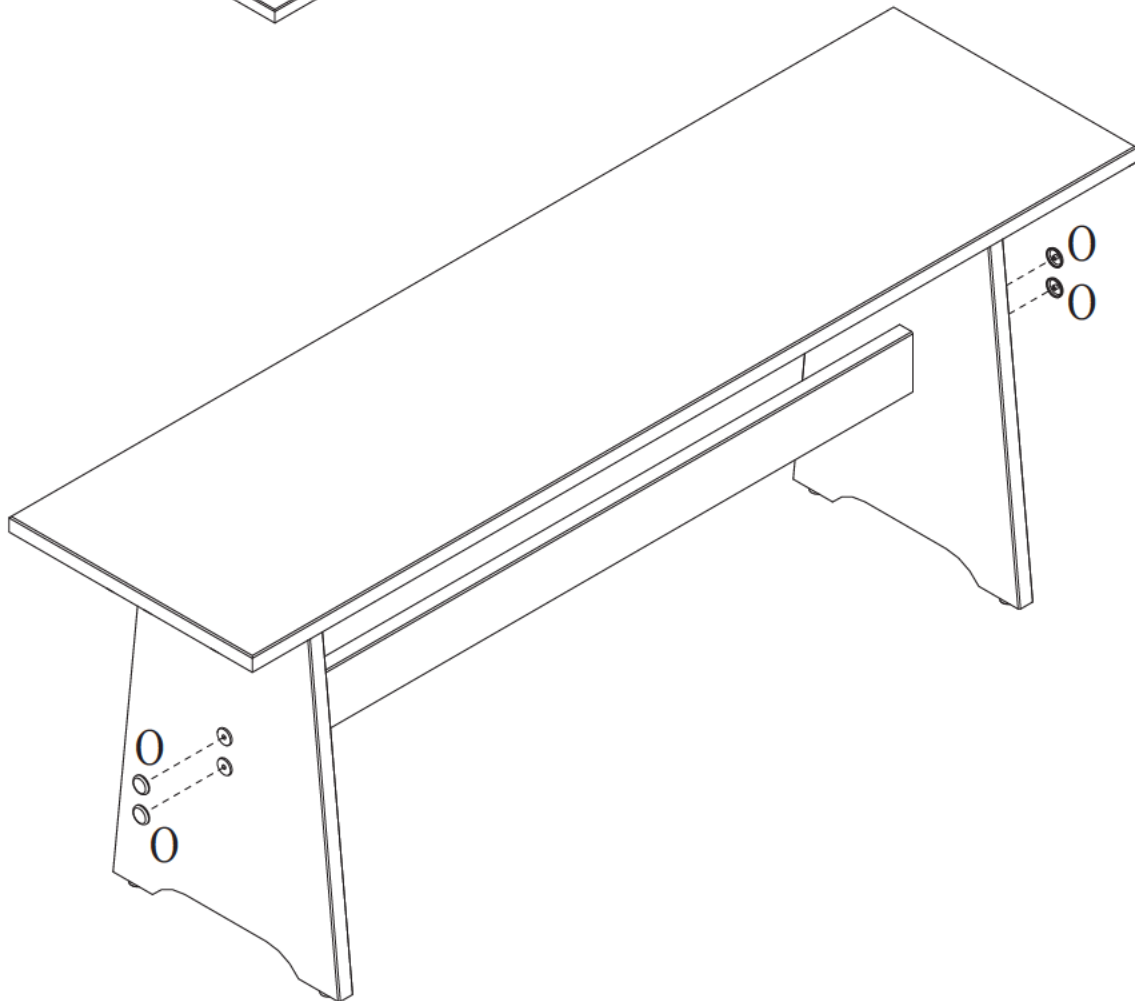 

General Care

Wipe clean with a slightly damp soft cloth.

Avoid the use of all household cleaners and abrasives.

When moving your furniture, carefully lift into place.

Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

Recommendations

Periodical re-tightening of fixings.

Warnings

This unit is heavy. Please use an assistant when lifting.