

ASSEMBLY INSTRUCTIONS CROSSBACK DINING CHAIR

30 MINUTES

APPROXIMATE ASSEMBLY TIME

 


2 PERSONS ASSEMBLY

**DO NOT USE
POWER TOOL**



TOOLS REQUIRED (NOT PROVIDED)



PHILLIPS SCREWDRIVER



HAMMER/MALLET

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped 2 or 3 days.

Tips for Assembly:


1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on surfaces that do not cause scratches to the exterior gloss and finish.
3. Please check all of the parts and quantities are included before assembly.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. Do not sit or stand on the partially assembled product; only use the product for which is intended.
7. This product is for indoor and household-use only.

IMPORTANT NOTE:

1. DO NOT COMPLETELY TIGHTEN SCREWS UNTIL AFTER STEP 6.

2. DO NOT USE POWER TOOL FOR ASSEMBLE.

IMPORTANT: IF YOU DO NOT ADHERE TO NOTE 1 & 2, IT WILL RESULT IN DAMAGES TO THE PRODUCT.

 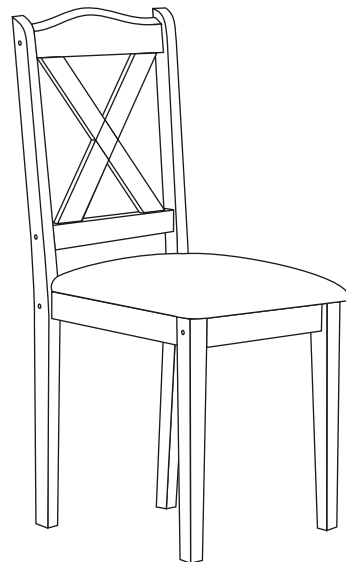


 














FULLY ASSEMBLED CHAIR

Care And Maintenance


1. Check all the fittings periodically and re-tighten as necessary. Do not over-tighten the fittings.
2. Use a damp cloth to wipe and clean the product.
3. Do not allow liquid to remain on the furniture. Liquid can cause damage to the furniture.
4. Do not place hot items(e.g hot drinks) directly on the wood surface.
5. Do not drag, pull or push the furniture.

ASSEMBLY INSTRUCTIONS CROSSBACK DINING CHAIR

PARTS LIST(FOR ONE CHAIR)		
NO	DESCRIPTION	QTY
1	CHAIR BACK 	1PC
2	LEFT & RIGHT BACK LEG 	2PCS
3	LEFT & RIGHT FRONT LEG 	2PCS
4	SIDE RAIL 	2PCS
5	FRONT RAIL 	1PC
6	BACK RAIL 	1PC
7	CUSHION SEAT 	1PC

HARDWARE LIST(FOR ONE CHAIR)			
NO	DESCRIPTION		QTY
A	JCBC WOOD(LONG)		2PCS
B	JCBC WOOD		6PCS
C	JCBC BOLT		6PCS
D	SPRING WASHER		6PCS
E	FLAT WASHER		6PCS
F	WOOD DOWEL		12PCS
G	WOOD SCREW		4PCS
H	ALLEN KEY		1PC
I	GLUE		1PC

STEP 1 Apply glue to Wood Dowels(F) and insert dowels to Side, Front & Back Rails(4,5 & 6) as shown.

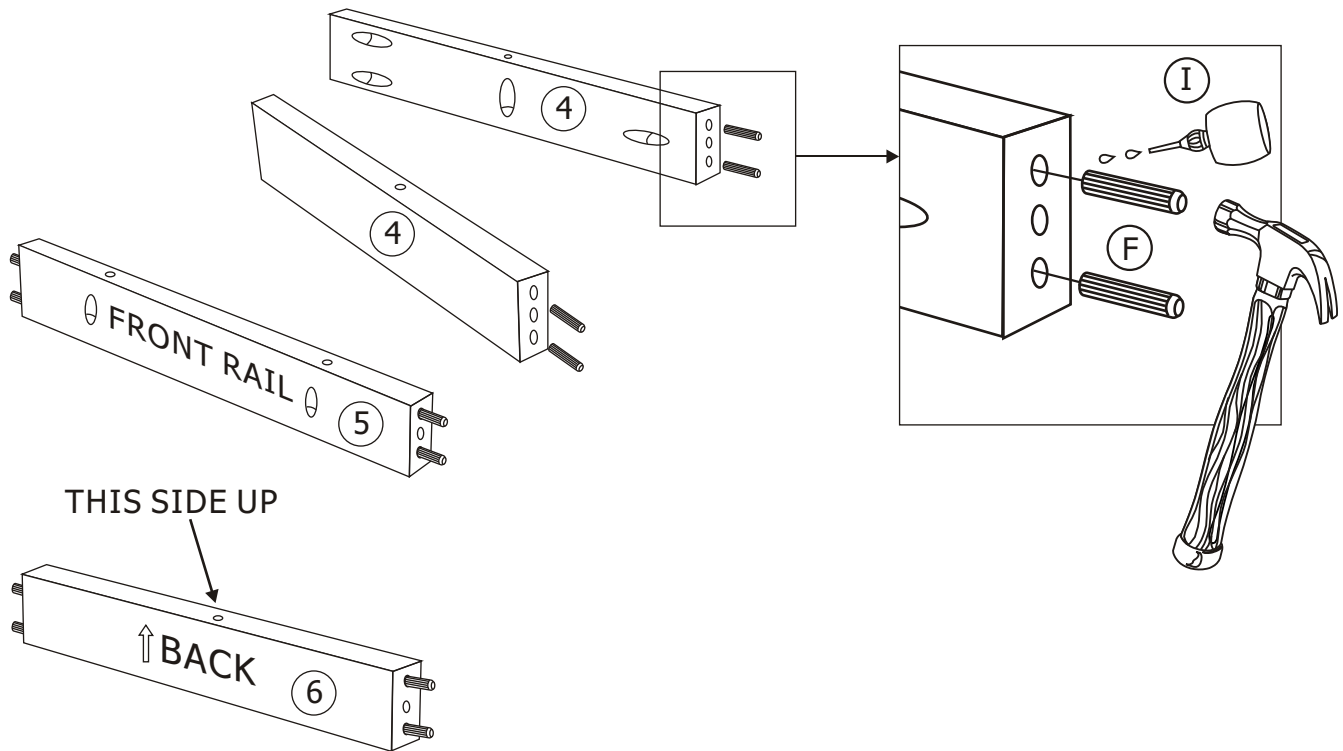

ASSEMBLY INSTRUCTIONS CROSSBACK DINING CHAIR


STEP 2

Apply glue to the holes on Right Back Leg(2) as shown.

Attach Chair Back (1) and Back Rail(6) to Right Back Leg(2).

Next, use Allen Key(H) to drive short JCBC Screw(B) to fasten Chair Back(1) and Back Rail(6) to Right Back Legs(2).

DO NOT COMPLETELY TIGHTEN SCREWS UNTIL AFTER STEP 6.

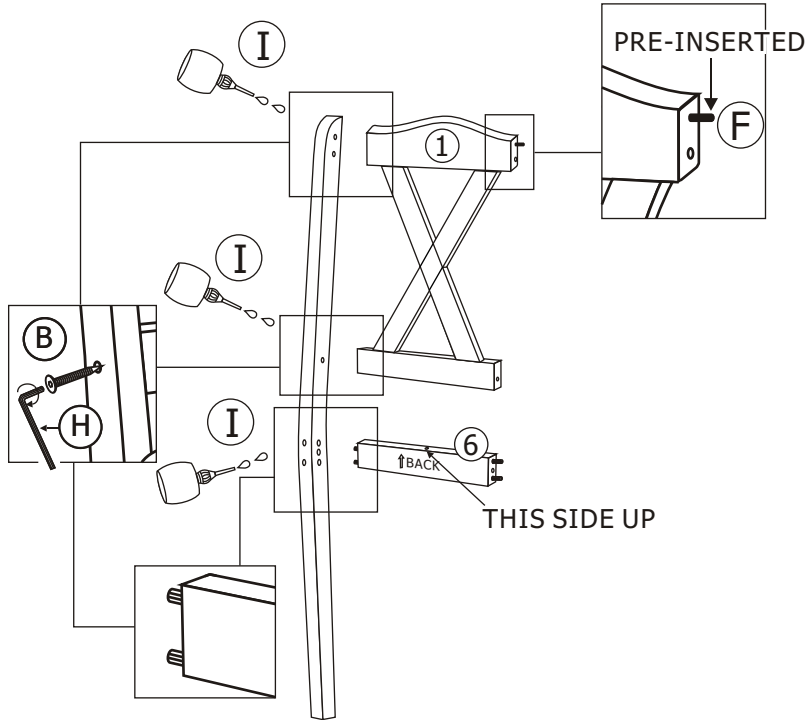


STEP 3

Apply glue to the holes on Left Back Leg(2) as shown.

Attach Left Back Leg(2) to Chair Back(1) and Back Rail(6).

Use Allen Key(H) to drive short JCBC Screw(B) to attach Left Back Leg(2) to Chair Back and Back Rail.

DO NOT COMPLETELY TIGHTEN SCREWS UNTIL AFTER STEP 6.

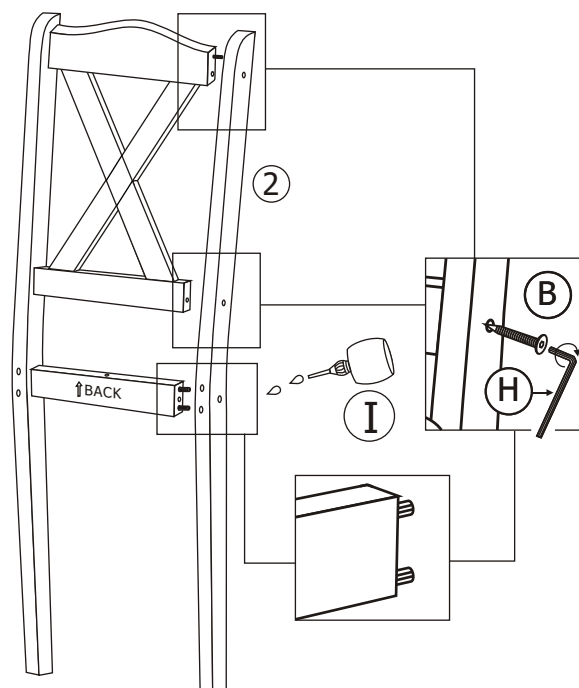


ASSEMBLY INSTRUCTIONS CROSSBACK DINING CHAIR

STEP 4

Apply glue to dowels on Front Rail(5), then attach to Front Leg(3).
Next, use Long JCBC Screw(A) to fasten the Front Rail(5) and Front Leg(3).

Do not completely tighten screws until after Step 6.

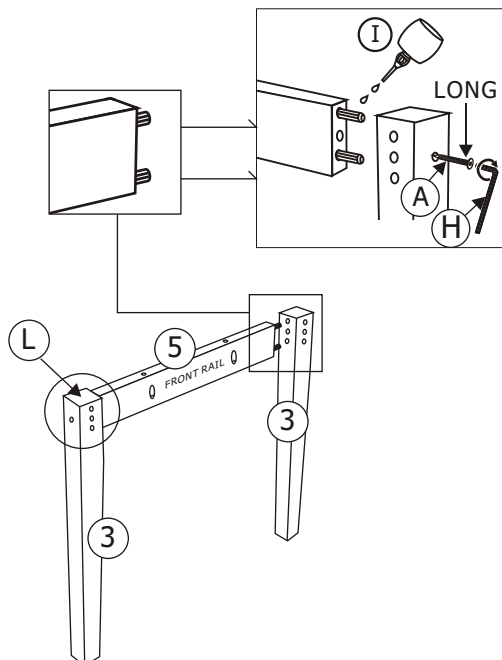


STEP 5

Attach Side Rails.

Apply glue to dowels on Side Rail(4) and attach to Front Leg assembly.

Next, fasten Side Rail(4) to Front Leg assembly using JCBC Bolt(C), Spring Washer(D) and Flat Washer(E).

Do not completely tighten screws until after Step 6.

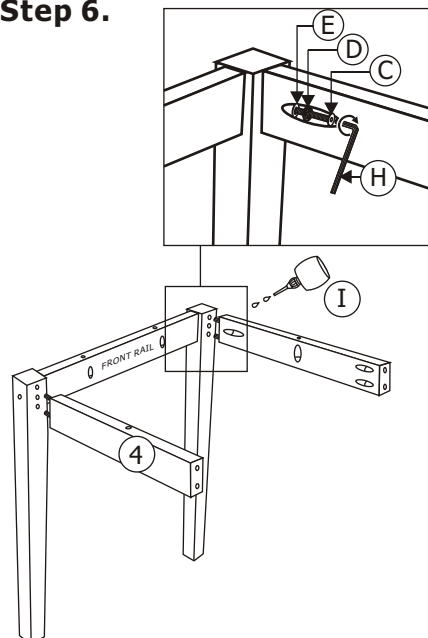

STEP 6


Attach Front Legs- Side Rail Assembly to Back Legs.

Fasten Side Rail to Back Legs using JCBC Bolt(C), Spring Washer(D) and Flat Washer(E).

Fully tighten all the screws & bolts after completing Step 6.

Do not use power tools.

Do not over tighten.

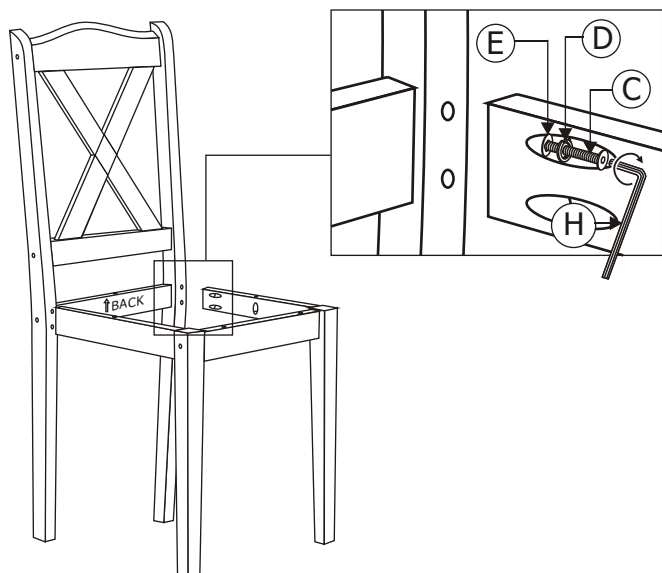

STEP 7

Seat Placement

Place the Cushion Seat(7) face down (Bottom-side up).

Next, center the chair frame to Cushion Seat(7).

Use Wood Screw(G) to fasten the Cushion Seat.

